Finding the System Hardware Key Code

INSTALLER GUIDE









INSTALLER GUIDE

Finding the System Firmware Version





NEC

93:Option Preferences

System Information

Next

Prev

Exit



4 The version number will display for 5 seconds and then return to the previous display





PRESS

Select Back

Help



NEC

6 After you've gotten the info you needed, press Back



Finding the System Ethernet Card MAC Address

INSTALLER GUIDE









Finding the System IP Address

Prev Next

Press Exit

Exit

Select Exit

PRESS





