

# ***SL2100***

## **Programming Manual**

# *Copyright*

NEC Platforms, Ltd. reserves the right to change the specifications, functions, or features at any time without notice.

NEC Platforms, Ltd. has prepared this document for use by its employees and customers. The information contained herein is the property of NEC Platforms, Ltd. and shall not be reproduced without prior written approval of NEC Platforms, Ltd.

Windows is a registered trademark of Microsoft Corporation.

Copyright 2017 - 2021

NEC Platforms, Ltd.

## TABLE OF CONTENTS

<b>Chapter 1</b>	<b><i>Introduction</i></b> .....	<b>10</b>
Section 1	BEFORE YOU START PROGRAMMING .....	10
Section 2	HOW TO USE THIS MANUAL .....	10
Section 3	HOW TO ENTER PROGRAMMING MODE .....	11
Section 4	HOW TO EXIT PROGRAMMING MODE .....	12
Section 5	USING KEYS TO MOVE AROUND IN THE PROGRAMS .....	12
Section 6	PROGRAMMING NAMES AND TEXT MESSAGES .....	13
Section 7	USING SOFTKEYS FOR PROGRAMMING .....	14
Section 8	WHAT THE SOFTKEY DISPLAY PROMPTS MEAN .....	14
Section 9	SYSTEM NUMBER PLAN/CAPACITIES .....	15
Section 10	CONCEPT OF SLOT NUMBER.....	17
<b>Chapter 2</b>	<b><i>Programming the SL2100</i></b> .....	<b>20</b>
Section 1	PROGRAMMING YOUR SYSTEM .....	20
Program 10	: System Configuration Setup.....	22
10-01	: Time and Date .....	22
10-02	: Location Setup .....	27
10-03	: ETU Setup .....	28
10-04	: Music On Hold Setup .....	34
10-08	: Pre-Ringing Setup .....	35
10-09	: DTMF, Dial Tone Detection Setup .....	36
10-12	: CPU Network Setup.....	37
10-13	: In-DHCP Server Setup .....	40
10-14	: Managed Network Setup .....	41
10-15	: Client Information Setup.....	42
10-16	: Option Information Setup.....	43
10-19	: VoIP DSP Resource Selection.....	46
10-20	: LAN Setup for External Equipment .....	47
10-23	: SIP System Interconnection Setup .....	49
10-27	: H.323 System Interconnection with Application Setup.....	50
10-28	: SIP System Information Setup .....	51
10-29	: SIP Server Information Setup.....	52
10-31	: Network Keep Alive Setup .....	54
10-33	: SIP Registrar/Proxy Information Basic Setup.....	55
10-36	: SIP Trunk Registration Information Setup .....	56
10-37	: UPnP Setup .....	57
10-39	: Fractional Setup .....	58
10-42	: Virtual Loop Back Port Setting.....	59
10-45	: IP Routing Table Setup .....	60
10-46	: IP MLT Server Information Setup .....	61
10-47	: Terminal License Server Information Setup .....	63
10-48	: License Activation .....	64
10-49	: License File Activation.....	65
10-50	: License Information .....	66
10-51	: PRI (PRI/T1) Mode Selection .....	67
10-52	: Free License Information .....	68
10-54	: License Configuration for Each Package.....	69
10-58	: Network Address.....	70
10-60	: Audio Port Setup.....	72
10-61	: Relay Port Setup.....	73
10-62	: NetBIOS Setting.....	74
10-63	: DHCP Client Setting.....	75
10-67	: SIP Stack Configuration Setup .....	76
10-68	: IP Trunk Availability.....	77
10-69	: UC Server General Settings.....	78
10-70	: UC Server Voicemail Interface Settings.....	80

10-72 : Network Security Setup .....	81
10-76 : Push Notification Service Basic Setup .....	82
10-81 : Terminal-ID Assignment Setup .....	83
10-83 : Location Information Setup (Future Use) .....	84
10-84 : Location Information Setup for Dispatchable Location for Emergency Calls (911) Service Provider .....	85
10-85 : Dispatchable Location for Emergency Calls (911) Service Provider .....	86
<b>Program 11 : System Numbering .....</b>	<b>87</b>
11-01 : System Numbering .....	87
11-02 : Extension Numbering .....	93
11-04 : Virtual Extension Numbering .....	94
11-07 : Department Group Pilot Numbers .....	95
11-09 : Trunk Access Code .....	96
11-10 : Service Code Setup (for System Administrator) .....	98
11-11 : Service Code Setup (for Setup/Entry Operation) .....	101
11-12 : Service Code Setup (for Service Access) .....	105
11-13 : Service Code Setup (for ACD) .....	109
11-14 : Service Code Setup (for Hotel) .....	111
11-15 : Service Code Setup, Administrative (for Special Access) .....	113
11-16 : Single Digit Service Code Setup .....	115
11-17 : ACD Group Pilot Number .....	116
11-19 : Remote Conference Pilot Number Setup .....	117
11-20 : Dial Extension Analyze Table .....	118
<b>Program 12 : Night Mode Setup .....</b>	<b>119</b>
12-01 : Night Mode Function Setup .....	119
12-02 : Automatic Night Service Patterns .....	120
12-03 : Weekly Night Service Switching .....	122
12-04 : Holiday Night Service Switching .....	123
12-05 : Night Mode Group Assignment for Extensions .....	124
12-06 : Night Mode Group Assignment for Trunks .....	125
12-07 : Text Data for Night Mode .....	126
12-08 : Night Mode Service Range .....	127
<b>Program 13 : Speed Dial .....</b>	<b>128</b>
13-01 : Speed Dialing Function Setup .....	128
13-02 : Group Speed Dialing Bins .....	129
13-03 : Speed Dialing Group Assignment for Extensions .....	130
13-04 : Speed Dialing Number and Name .....	131
13-05 : Speed Dial Trunk Group/Route .....	134
13-06 : Station Speed Dial Number and Name .....	135
13-11 : Speed Dial Group Name .....	136
<b>Program 14 : Trunk, Basic Setup .....</b>	<b>137</b>
14-01 : Basic Trunk Data Setup .....	137
14-02 : Analog Trunk Data Setup .....	141
14-04 : Behind PBX Setup .....	144
14-05 : Trunk Group .....	145
14-06 : Trunk Group Routing .....	146
14-07 : Trunk Access Map Setup .....	148
14-08 : Music on Hold Source for Trunks .....	150
14-09 : Conversation Recording Destination for Trunks .....	151
14-11 : ID Setup for IP Trunk .....	152
14-12 : SIP Register ID Setup for IP Trunk .....	153
14-18 : IP Trunk Data Setup .....	154
<b>Program 15 : Extension, Basic Setup .....</b>	<b>155</b>
15-01 : Basic Extension Data Setup .....	155
15-02 : Multiline Telephone Basic Data Setup .....	157
15-03 : Single Line Telephone Basic Data Setup .....	164
15-05 : IP Telephone Terminal Basic Data Setup .....	167
15-06 : Trunk Access Map for Extensions .....	171
15-07 : Programmable Function Keys .....	172
15-08 : Incoming Virtual Extension Ring Tone Setup .....	179
15-09 : Virtual Extension Ring Assignment .....	181
15-10 : Incoming Virtual Extension Ring Tone Order Setup .....	182
15-11 : Virtual Extension Delayed Ring Assignment .....	184
15-12 : Conversation Recording Destination for Extensions .....	185
15-13 : Loop Keys .....	186
15-14 : One-Touch Keys .....	187

15-16 : SIP Register ID Setup for Extension .....	188
15-17 : CO Message Waiting Indication .....	189
15-18 : Virtual Extension Key Enhanced Options .....	190
15-20 : LCD Line Key Name Assignment .....	192
15-22 : Mobile Extension Setup .....	193
15-24 : Registration of Standard SIP Terminal .....	194
15-25 : DESI-less Page Setup .....	195
15-28 : Trunk Incoming Ring Tone of Extension Setup .....	196
15-31 : Terminal-ID Assignment Setup .....	197
<b>Program 16 : Department Group Setup .....</b>	<b>198</b>
16-01 : Department Group Basic Data Setup .....	198
16-02 : Department Group Assignment for Extensions .....	200
16-03 : Secondary Department Group .....	201
16-04 : Call Restriction Between Department Groups .....	202
<b>Program 20 : System Option Setup .....</b>	<b>203</b>
20-01 : System Options .....	203
20-02 : System Options for Multiline Telephones .....	205
20-03 : System Options for Single Line Telephones .....	208
20-04 : System Options for Virtual Extensions .....	210
20-06 : Class of Service for Extensions .....	211
20-07 : Class of Service Options (Administrator Level) .....	212
20-08 : Class of Service Options (Outgoing Call Service) .....	214
20-09 : Class of Service Options (Incoming Call Service) .....	216
20-10 : Class of Service Options (Answer Service) .....	218
20-11 : Class of Service Options (Hold/Transfer Service) .....	220
20-12 : Class of Service Options (Charging Cost Service) .....	222
20-13 : Class of Service Options (Supplementary Service) .....	223
20-14 : Class of Service Options for DISA/E&M .....	227
20-15 : Ring Cycle Setup .....	229
20-16 : Selectable Display Messages .....	231
20-17 : Operator Extension .....	233
20-18 : Service Tone Timers .....	234
20-19 : System Options for Caller ID .....	235
20-20 : Message Setup for Non-Caller ID Data .....	237
20-21 : System Options for Long Conversation .....	238
20-23 : System Options for CTI .....	239
20-25 : ISDN Options .....	240
20-26 : Multiplier for Charging Cost .....	242
20-28 : Trunk to Trunk Conversation .....	243
20-29 : Timer Class for Extension .....	244
20-30 : Timer Class for Trunks .....	245
20-31 : Timer Class Timer Assignment .....	246
20-34 : Remote Conference Group Setup .....	249
20-35 : Extension's Operator Setting .....	251
20-36 : Trunk's Operator Setting .....	252
20-37 : Operator Extension Group Setup .....	253
20-38 : Operator Group Setting .....	254
20-42 : Night Mode for each package .....	255
20-43 : Power supply for each package .....	256
20-44 : Watch Mode Setup .....	257
20-45 : Remote Watch Setup .....	258
20-46 : Security Sensor Setup .....	259
20-47 : Time pattern setting for Watch Mode .....	261
20-48 : Time pattern setting for Security Sensor .....	262
20-55 : Delay Timer for Security Sensor .....	263
20-57 : UC User Information Setting .....	264
20-58 : UC Server Presence Settings .....	266
20-59 : UC Server User Settings .....	268
20-60 : UC Server Telephony Settings .....	270
20-61 : UC Server Call Alerts Feature Settings .....	271
20-62 : UC Exception Table .....	272
20-63 : Multi-Device Group Setup .....	273
20-64 : UC Web Application Setting .....	275
20-66 : STUN/TURN Server Setting .....	277
20-70 : Custom Presence Status Setting .....	278

Program 21 : Outgoing Call Setup .....	279
21-01 : System Options for Outgoing Calls.....	279
21-02 : Trunk Group Routing for Extensions .....	282
21-03 : Trunk Group Routing for Trunks .....	283
21-04 : Toll Restriction Class for Extensions .....	284
21-05 : Toll Restriction Class.....	285
21-06 : Toll Restriction Table Data Setup.....	287
21-07 : Toll Restriction Override Password Setup .....	289
21-08 : Repeat Dial Setup.....	290
21-09 : Dial Block Setup .....	291
21-10 : Dial Block Restriction Class Per Extension.....	292
21-11 : Extension Ringdown (Hotline) Assignment .....	293
21-12 : ISDN Calling Party Number Setup for Trunks .....	294
21-13 : ISDN Calling Party Number Setup for Extensions.....	295
21-14 : Walking Toll Restriction Password Setup .....	296
21-15 : Individual Trunk Group Routing for Extensions .....	297
21-16 : Trunk Group Routing for Networking .....	298
21-17 : IP Trunk (H.323/SIP) Calling Party Number Setup for Trunk .....	299
21-19 : IP Trunk (SIP) Calling Party Number Setup for Extension .....	300
21-20 : SIP Trunk Call Discernment Setup for Extension .....	301
21-21 : Toll Restriction for Trunks (Seized Trunk Basis Setting) .....	302
21-22 : CO Message Waiting Indication - Call Back Settings.....	303
21-26 : Home NPA Setup .....	304
21-27 : HNPAs Exceptions Setup .....	305
21-28 : Foreign NPA Locals Setup .....	306
Program 22 : Incoming Call Setup .....	307
22-01 : System Options for Incoming Calls .....	307
22-02 : Incoming Call Trunk Setup.....	309
22-03 : Trunk Ring Tone Range .....	310
22-04 : Incoming Extension Ring Group Assignment.....	312
22-05 : Incoming Trunk Ring Group Assignment .....	313
22-06 : Normal Incoming Ring Mode .....	314
22-07 : DIL Assignment.....	315
22-08 : DIL/IRG No Answer Destination .....	316
22-09 : DID Basic Data Setup.....	317
22-10 : DID Translation Table Setup .....	319
22-11 : DID Translation Table.....	320
22-12 : DID Intercept Ring Group.....	323
22-13 : DID Trunk Group to Translation Table Assignment.....	324
22-14 : VRS Delayed Message for IRG .....	325
22-15 : VRS Delayed Message for Department Group .....	326
22-16 : Private Call Refuse Target Area Setup .....	327
22-17 : Dial-In Conversion Table Area Setup for Time Pattern .....	328
22-18 : Private Call Assignment Setup.....	329
22-20 : Flexible Ringing by Caller ID Setup .....	331
Program 23 : Answer Features Setup.....	332
23-02 : Call Pickup Groups .....	332
23-03 : Universal Answer/Auto Answer .....	333
23-04 : Ringing Line Preference for Virtual Extensions .....	334
Program 24 : Hold/Transfer Setup .....	335
24-01 : System Options for Hold .....	335
24-02 : System Options for Transfer .....	336
24-03 : Park Group .....	338
24-04 : Automatic Trunk-to-Trunk Transfer Target Setup.....	339
24-05 : Department Group Transfer Target Setup.....	340
24-09 : Call Forward Split Settings .....	341
Program 25 : VRS/DISA Setup.....	343
25-01 : VRS/DISA Line Basic Data Setup.....	343
25-02 : DID/DISA VRS Message .....	344
25-03 : VRS/DISA Transfer Ring Group With Incorrect Dialing .....	345
25-04 : VRS/DISA Transfer Ring Group With No Answer/Busy .....	346
25-05 : VRS/DISA Error Message Assignment.....	347
25-06 : VRS/DISA One-Digit Code Attendant Setup .....	348
25-07 : System Timers for VRS/DISA .....	350
25-08 : DISA User ID Setup.....	352

25-09 : Class of Service for DISA Users.....	353
25-10 : Trunk Group Routing for DISA.....	354
25-11 : DISA Toll Restriction Class.....	355
25-12 : Alternate Trunk Group Routing for DISA.....	356
25-13 : System Option for DISA.....	357
25-15 : DISA Transfer Target Setup.....	358
25-16 : DUD/DISA Single Digit Timer.....	359
<b>Program 26 : ARS Service &amp; Least Cost Routing.....</b>	<b>360</b>
26-01 : Automatic Route Selection (ARS/F-Route) Service.....	360
26-02 : Dial Analysis Table for ARS/LCR.....	361
26-03 : ARS Dial Treatments.....	362
26-04 : ARS Class of Service.....	363
26-11 : Transit Network ID Table.....	364
26-12 : Network Specific Parameter Table for ARS.....	365
<b>Program 30 : DSS/DLS Console Setup.....</b>	<b>366</b>
30-01 : DSS Console Operating Mode.....	366
30-02 : DSS Console Extension Assignment.....	367
30-03 : DSS Console Key Assignment.....	368
30-04 : DSS Console Alternate Answer.....	373
30-05 : DSS Console Lamp Table.....	374
30-10 : DSS Console IP Terminal Setup.....	376
<b>Program 31 : Paging Setup.....</b>	<b>377</b>
31-01 : System Options for Internal/External Paging.....	377
31-02 : Internal Paging Group Assignment.....	379
31-03 : Internal Paging Group Settings.....	380
31-04 : External Paging Zone Group.....	382
31-05 : Universal Night Answer/Ring Over Page.....	383
31-06 : External Speaker Control.....	384
31-07 : Combined Paging Assignments.....	385
31-08 : Back Ground Music on External Paging.....	386
31-10 : External Paging Group Basic Setting.....	387
<b>Program 32 : Door Box and Sensor Setup.....</b>	<b>388</b>
32-01 : Door Box Timers Setup.....	388
32-02 : Door Box Ring Assignment.....	389
32-03 : Door Box Basic Setup.....	390
32-04 : Door Box Name Setup.....	391
<b>Program 34 : Tie Line Setup.....</b>	<b>392</b>
34-01 : E&M Tie Line Basic Setup.....	392
34-02 : E&M Tie Line Class of Service.....	393
34-03 : Trunk Group Routing for E&M Tie Lines.....	394
34-04 : E&M Tie Line Toll Restriction Class.....	395
34-05 : Tie Line Outgoing Call Restriction.....	396
34-06 : Add/Delete Digit for E&M Tie Line.....	397
34-07 : E&M Tie Line Timer.....	398
34-08 : Toll Restriction Data for E&M Tie Lines.....	399
34-09 : ANI/DNIS Service Options.....	400
34-10 : Digit Delete for T1 ANI.....	403
<b>Program 35 : SMDR Account Code Setup.....</b>	<b>404</b>
35-01 : SMDR Options.....	404
35-02 : SMDR Output Options.....	405
35-05 : Account Code Setup.....	407
35-06 : Verified Account Code Table.....	409
<b>Program 40 : Voice Recording System.....</b>	<b>410</b>
40-07 : Voice Prompt Language Assignment for VRS.....	410
40-10 : Voice Announcement Service Option.....	411
40-11 : Preamble Message Assignment.....	413
<b>Program 41 : ACD Setup.....</b>	<b>414</b>
41-01 : System Options for ACD.....	414
41-02 : ACD Group and Agent Assignments.....	415
41-03 : Incoming Ring Group Assignment for ACD Group.....	416
41-04 : Group Supervisory Station Setup.....	417
41-05 : ACD Agent Work Schedules.....	418
41-06 : Trunk Work Schedules.....	419
41-07 : ACD Weekly Schedule Setup.....	420

41-08 : ACD Overflow Options .....	421
41-09 : ACD Overflow Table Setting .....	423
41-11 : VRS Delay Announcement .....	424
41-12 : Night Announcement Setup .....	426
41-13 : VRS Message Number for Night Announcement .....	427
41-14 : ACD Options Setup .....	428
41-16 : ACD Threshold Overflow .....	430
41-17 : ACD Login Mode Setup .....	431
41-18 : ACD Agent Identity Code Setup .....	432
41-19 : ACD Voice Mail Delay Announcement .....	433
41-20 : ACD Queue Display Settings .....	434
<b>Program 42 : Hotel Setup .....</b>	<b>435</b>
42-01 : System Options for Hotel/Motel .....	435
42-02 : Hotel/Motel Telephone Setup .....	437
42-03 : Class of Service Options (Hotel/Motel) .....	438
42-04 : Hotel Mode One-Digit Service Codes .....	440
42-05 : Hotel Room Status Printer .....	441
42-06 : PMS Service Setting .....	442
42-07 : PMS Restriction Level Conversion Table .....	444
42-08 : Text Message Setup for Hotel Room Status .....	445
42-09 : Flexible Setup for Room Status .....	447
<b>Program 44 : ARS/F-Route Setup .....</b>	<b>448</b>
44-01 : System Options for ARS/F-Route .....	448
44-02 : Dial Analysis Table for ARS/F-Route Access .....	449
44-03 : Dial Analysis Extension Table .....	451
44-04 : ARS/F-Route Selection for Time Schedule .....	453
44-05 : ARS/F-Route Table .....	454
44-06 : Additional Dial Table .....	456
44-07 : Gain Table for ARS/F-Route Access .....	457
44-08 : Time Schedule for ARS/F-Route .....	458
44-09 : Weekly Schedule for ARS/F-Route .....	460
44-10 : Holiday Schedule for ARS/F-Route .....	461
<b>Program 45 : Voice Mail Integration .....</b>	<b>462</b>
45-01 : Voice Mail Integration Options .....	462
45-02 : NSL Option Setup .....	464
45-04 : Voice Mail Digit Add Assignment .....	465
45-05 : Voice Mail Send Protocol Signal Without Additional Digits .....	466
<b>Program 47 : InMail .....</b>	<b>467</b>
47-01 : InMail System Options .....	467
47-02 : InMail Station Mailbox Options .....	471
47-03 : InMail Group Mailbox Options .....	475
47-06 : Group Mailbox Subscriber Options .....	476
47-07 : InMail Routing Mailbox Options .....	480
47-08 : Call Routing Mailbox Options .....	482
47-09 : Announcement Mailbox Options .....	484
47-10 : InMail Trunk Options .....	486
47-11 : InMail Answer Table Options .....	488
47-12 : InMail Answer Schedules .....	491
47-13 : InMail Dial Action Tables .....	495
47-15 : Routing Directory Mailbox Options .....	498
47-17 : Routing Distribution Mailbox Options .....	499
47-18 : SMTP Setup .....	500
47-19 : POP3 Setup .....	501
47-20 : Station Mailbox Message Notification Options .....	502
47-21 : Station Mailbox Find-Me Follow-Me Options .....	504
47-22 : Group Mailbox Message Notification Options .....	505
47-23 : Group Mailbox Find-Me Follow-Me Options .....	507
<b>Program 80 : Basic Hardware Setup for System .....</b>	<b>508</b>
80-01 : Service Tone Setup .....	508
80-02 : DTMF Tone Setup .....	513
80-03 : DTMF Tone Receiver Setup .....	514
80-04 : Call Progress Tone Detector Setup .....	516
80-05 : Date Format for SMDR and System .....	518
80-07 : Call Progress Tone Detector Frequency Setup .....	519
80-09 : Short Ring Setup .....	520



80-10 : MF Tone Receiver Setup.....	522
80-12 : Caller ID Receiver Setup .....	524
80-13 : DTMF Tone Receiver Setup 2 .....	525
80-14 : DTMF Tone Receiver Setup 3 .....	526
<b>Program 81 : Basic Hardware Setup for Trunk .....</b>	<b>527</b>
81-01 : CO Initial Data Setup .....	527
81-05 : ISDN BRI & PRI Layer 2 (T-Point) Initial Data Setup .....	529
81-06 : ISDN BRI & PRI Layer 3 (T-Point) Timer Setup.....	530
81-07 : CODEC Filter Setup for Analog Trunk Port.....	532
81-08 : T1 Trunk Timer Setup .....	533
81-09 : COT CODEC (QSLAC) Filter Setting .....	536
81-19 : Operation For Market Setup .....	538
81-20 : ISDN PRI Function Setup .....	539
<b>Program 82 : Basic Hardware Setup for Extension.....</b>	<b>541</b>
82-01 : Incoming Ring Tone.....	541
82-04 : SLIU Initial Data Setup.....	543
82-05 : ISDN PRI Layer2 (S-Point) Initial Data Setup .....	544
82-06 : ISDN PRI Layer3 (S-point) Timer Setup.....	545
82-07 : CODEC Filter Setup for Analog Station Port .....	547
82-08 : Sidetone Volume Setup.....	548
82-09 : SLIU CODEC Filter Data Setup .....	549
82-14 : Handset/Headset Gain Setup for Multiline Telephone.....	552
82-21 : Sensor Setup .....	553
<b>Program 84 : Hardware Setup for VoIPDB .....</b>	<b>554</b>
84-02 : H.225 and H.245 Information Basic Setup .....	554
84-07 : Firmware Download Setup.....	556
84-09 : VLAN Setup .....	557
84-10 : ToS Setup .....	558
84-12 : Networking CODEC Information Basic Setup.....	559
84-13 : SIP Trunk CODEC Information Basic Setup.....	561
84-14 : SIP Trunk Basic Information Setup.....	564
84-15 : H.323/SIP Phone Keep Alive Setup .....	566
84-16 : VoIPDB Limiter Control Gain Setup .....	567
84-19 : SIP Extension CODEC Information Basic Setup.....	569
84-20 : SIP Extension Basic Information Setup.....	572
84-22 : IP MLT Logon Information Setup.....	573
84-23 : IP MLT Basic Information Setup .....	574
84-24 : IP MLT CODEC Basic Information Setup.....	576
84-26 : VoIP Basic Setup (DSP) .....	579
84-27 : VoIP Basic Setup .....	580
84-28 : IP MLT Firmware Name Setup.....	581
84-29 : IP MLT Multicast Codec Setup.....	582
84-31 : VoIPDB Echo Canceller Setup .....	583
84-33 : FAX over IP Setup .....	586
84-34 : VoIPDB DTMF Setup .....	588
84-35 : VoIPDB RFC2833 Payout Setup .....	589
84-36 : VoIPDB DTMF Transmit Setup .....	590
84-37 : VoIPDB DTMF Detection Setup .....	591
84-38 : VoIPDB Network Side Echo Canceller Setup.....	592
84-39 : SIP Trunk message customize.....	594
<b>Program 90 : Maintenance Program .....</b>	<b>595</b>
90-01 : Installation Date.....	595
90-02 : Programming Password Setup.....	596
90-03 : Save Data .....	598
90-04 : Load Data .....	599
90-05 : Slot Control .....	600
90-06 : Trunk Control .....	601
90-07 : Station Control .....	602
90-08 : System Reset.....	603
90-09 : Automatic System Reset Time Setup .....	604
90-10 : System Alarm Setup .....	605
90-11 : System Alarm Report Setup.....	617
90-12 : System Alarm Output.....	619
90-16 : Main Software Information .....	620
90-17 : Firmware Information.....	621

90-19 : Dial Block Release .....	622
90-20 : Traffic Report Data Setup .....	623
90-21 : Traffic Report Output .....	625
90-23 : Deleting Registration of IP Telephones.....	626
90-24 : System Alarm Report Notification Time Setup .....	627
90-25 : System Alarm Report CC Mail Setup .....	628
90-26 : Program Access Level Setup .....	629
90-28 : User Programming Password Setup.....	630
90-31 : DIM Access over Ethernet .....	631
90-34 : Firmware Information.....	632
90-36 : Software Update Time Setting .....	633
90-38 : User Programming Data Level Setup .....	635
90-39 : Virtual Loop Back Port Reset .....	637
90-41 : Server Setting to Update Terminal Local Data .....	638
90-42 : IP MLT Version Information .....	640
90-43 : Deleting Terminal License of IP MLT .....	641
90-44 : Deleting Terminal License of TCP Interface.....	642
90-45 : Temporary Password Change for Multiline.....	643
90-50 : System Alarm Display Setup.....	644
90-51 : Alarm Setup for Maintenance Exchange.....	645
90-52 : System Alarm Save.....	647
90-53 : System Alarm Clear .....	648
90-54 : PC/Web Programming Setting .....	649
90-55 : Free License Select.....	650
90-56 : NTP Setup .....	651
90-60 : T1/ISDN Layer Status Information .....	652
90-62 : Security ID Information.....	653
90-63 : IP MLT Control.....	654
90-64 : SNMP Setup .....	655
90-65 : 1st Party CTI Authentication Password Setup .....	656
90-67 : Backup Data Auto-save Interval Time Set .....	657
90-68 : Side Tone Auto Setup .....	658
90-77 : LAN Link Speed Information .....	659
90-81 : SIP Access Reject Setting .....	660
90-82 : SIP Access Reject Table .....	661
Program 92 : Copy Program .....	662
92-01 : Copy Program .....	662
92-02 : Delete All Extension Numbers.....	665
92-03 : Copy Program by Port Number .....	666
92-04 : Extension Data Swap.....	667
92-05 : Extension Data Swap Password .....	669
92-06 : Fill Command .....	670
92-07 : Delete Command .....	671
Program 93 : System Information .....	672
93-01 : Day/Night Mode Information .....	672
93-02 : Trunk Information .....	673
93-03 : Extension Information .....	674
93-04 : Redial List .....	676
93-05 : Department Group Information.....	677
93-06 : IP Address list for 1st Party CTI connection.....	678

*MEMO*

# Chapter 1 Introduction

## Section 1 BEFORE YOU START PROGRAMMING



Before customizing your system be sure to read this chapter first.



This chapter provides you with detailed information about the system programs. By changing a program, you change the way the feature associated with that program works. In this chapter, you find out about each program, the features that the program affects and how to enter the program data into system memory.

This Manual is created for System : SL2100

## Section 2 HOW TO USE THIS MANUAL

This section lists each program in numerical order. For example, Program 10-01 is at the beginning of the section and Program 92-01 is at the end. The information on each program is subdivided into the following headings :

**Description** describes what the program options control. The Default Settings for each program are also included. When you first install the system, it uses the Default Setting for all programs. Along with the Description are the **Conditions** which describe any limits or special considerations that may apply to the program.

The program access level is just above the Description heading. You can only use the program if your access level meets or exceeds the level the program requires. Refer to [How to Enter Programming Mode](#) for a list of the system access levels and passwords.

**Feature Cross Reference** provides you with a table of all the features affected by the program. You will want to keep the referenced features in mind when you change a program. Customizing a feature may have an effect on another feature that you did not intend.

**Telephone Programming Instructions** shows how to enter the program data into system memory. For example :

1. Enter the programming mode.
2. 15-07-01

```

15-07-01    TEL
KY01 = *01
  ←      -      +      →
  
```

Digital (2W) Multiline Terminal

```

15-07-01    TEL
KY01 = *01
  ←      -      +      →

```


### IP Multiline Terminal

tells you to enter the programming mode, dial 150701 from the telephone dial pad. After you do, you will see the message “15-07-01 TEL” on the first line of the telephone display. This indicates the program number (15-07), item number (01), and that the options are being set for the extension. The second row of the display “KY01 = \*01” indicates that Key 01 is being programmed with the entry of \*01. The third row allows you to move the cursor to the left or right, depending on which arrow is pressed. To learn how to enter the programming mode, refer to [How to Enter Programming Mode](#).

## Section 3 HOW TO ENTER PROGRAMMING MODE

### To enter programming mode :

1. Go to any working display telephone.

 *In a newly installed system, use extension (port 1).*

2. Do not lift the handset.
3. Press **Speaker**.
4. # \* # \*.

### Password

5. Dial the system password + **Hold**.  
Refer to the following table for the default system passwords. To change the passwords, use [90-02 : Programming Password Setup](#).

```

Program Mode
Base Service OP1  OP2

```

### Digital (2W) Multiline Terminal, IP Multiline Terminal

Password	User Name	Level	Programs at this Level
12345678	tech	2 (IN)	Installation (IN) : IN, SA and SB levels defined by 90-26 are available.
0000	ADMIN1	3 (SA)	System Administrator - Level 1 (SA) : 10-01, 10-02, 10-12, 10-13, 10-14, 10-15, 10-16, 10-23, 10-28, 10-29, 10-45, 10-67, 12-02, 12-03, 12-04, 12-08, 15-01, 15-07, 15-09, 15-10, 15-11, 20-16, 20-34, 20-57, 20-63, 20-64, 20-66, 20-70, 21-07, 21-14, 22-04, 22-11, 22-17, 25-08, 30-03, 30-04, 32-02, 41-02, 41-03, 41-04, 41-05, 41-06, 41-07, 41-08, 41-09, 41-11, 41-12, 41-13, 41-14, 41-16, 41-17, 41-18, 41-19, 41-20, 45-02, 84-16, 84-22, 90-03, 90-04, 90-06, 90-07, 90-16, 90-19, 90-65, 93-01, 93-02, 93-03, 93-04, 93-05, 93-06
9999	ADMIN2	4 (SB)	System Administrator - Level 2 (SB) : 13-04, 13-05, 13-06, 13-11, 15-14, 21-20

## Section 4 HOW TO EXIT PROGRAMMING MODE

To exit the programming mode :

When you are done programming, you must be out of a program option to exit (pressing the **Mute** key will exit the program option).


1. Press **Mute** key to exit the program options, if needed.


```

Program Mode
Base Service OP1  OP2
  
```

Digital (2W) Multiline Terminal, IP Multiline Terminal

2. Press **Speaker**. If changes were to the system programming, "Saving System Data" is displayed.
3. The display shows "Complete Data Save" when completed and exits the telephone to an idle mode.

 To save a customer's database, a blank SD Card is required. Insert the SD Card into the CPU and, using Program 90-03, save the software to the SD Card. (Program 90-04 is used to reload the customer data if necessary.) Note that a SD Card can only hold one customer database. Each database to be saved requires a separate drive.

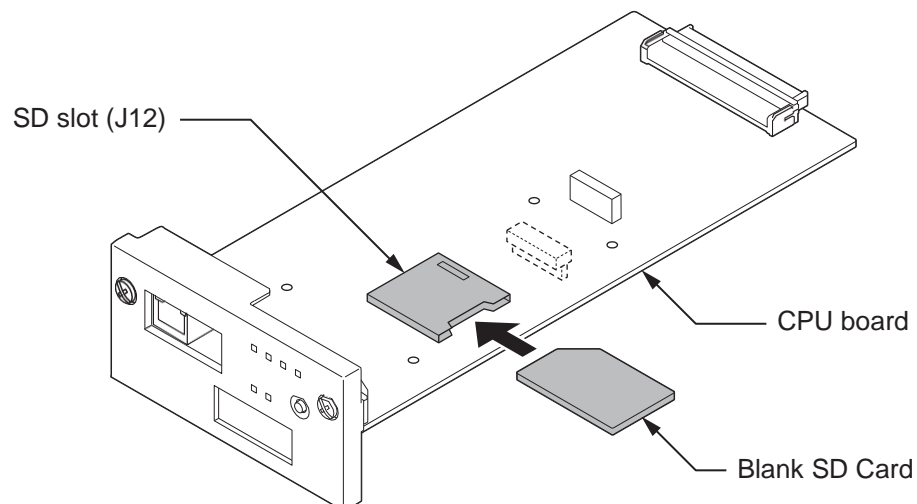

## Section 5 USING KEYS TO MOVE AROUND IN THE PROGRAMS

Once you enter the programming mode, use the keys in the following chart to enter data, edit data and move around in the menus.

**Table 1-1 Keys for Entering Data (Digital (2W) Multiline Terminal, IP Multiline Terminal)**

When you want to ...	Telephone Programming
Enter Data into program	0 ~ 9, *, # Line Key (1 ~ 6)
Next Index	Cursor Key (Up)
Prior Index	Cursor Key (Down)
Select Data	Line Key (1 ~ 6)
All Clear	Flash

When you want to ...	Telephone Programming
Apply	Hold Enter
Go Back to Prior Screen	Mute Clear / Back
Move Cursor Jump Up/Down	DND
Delete single character	Clear / Back
Next Page	Help
Toggle between Number/Character	
While in a Entering Number	
Prior Page	Transfer
Quit the programming	Speaker Exit
Move Cursor to Left	Cursor Key (Left) Soft Key1
Change Program Number	Soft Key2
Change Index Number	
Change Program Number	Soft Key3
Change Index Number	
Move Cursor to Right	Cursor Key (Right) Soft Key4

## Section 6 PROGRAMMING NAMES AND TEXT MESSAGES

Several programs (e.g., Program 20-16 : Selectable Display Messages) require you to enter text. Use the following chart when entering and editing text. When using the keypad digits, press the key once for the first character, twice for the second character, etc. For example, to enter a C, press the key **2** three times. Press the key six times to display the lower case letter. The name can be up to 12 digits long.

**Table 1-2 Keys for Entering Names**


Use this keypad digit ...	When you want to ...
1	Enter characters : 1 @ [ ¥ ] ^ _ ` {   } → ← Á À Ã Ä Å Æ Ç È É Ê Ì Í Ö Ø
2	Enter characters : <b>A-C, a-c, 2.</b>
3	Enter characters : <b>D-F, d-f, 3.</b>
4	Enter characters : <b>G-I, g-i, 4.</b>
5	Enter characters : <b>J-L, j-l, 5.</b>
6	Enter characters : <b>M-O, m-o, 6.</b>
7	Enter characters : <b>P-S, p-s, 7.</b>
8	Enter characters : <b>T-V, t-v, 8.</b>
9	Enter characters : <b>W-Z, w-z, 9.</b>
0	Enter characters : 0 ! " # \$ % & ' ( ) ò ó ú á ä å ø ö ü α ε θ Β
*	Enter characters : * + , - . / : ; < = > ? π Σ σ Ω ∞ φ £
#	# = Accepts an entry (only required if two letters on the same key are needed - ex : TOM). Pressing # again = Space. (In system programming mode, use the right arrow Softkey instead to accept and/or add a space.)
<b>Clear/Back</b> or <b>DND</b> (2W Digital/IP Multiline Terminal)	Clear the character entry one character at a time.

Use this keypad digit ...	When you want to ...
Flash	Clear all the entries from the point of the flashing cursor and to the right.

## Section 7 USING SOFTKEYS FOR PROGRAMMING

(This Feature is available for Digital (2W) Multiline Terminal and IP Multiline Terminal Only.)

Each Display telephone with Softkeys provides interactive Softkeys for intuitive feature access. The options for these keys will automatically change depending on where you are in the system programming. Simply press the Softkey located below the option you wish and the display will change accordingly.

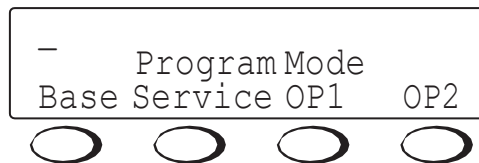

Pressing the Cursor key Up or Down will scroll between the menus.



## Section 8 WHAT THE SOFTKEY DISPLAY PROMPTS MEAN

(This Feature is available for Digital (2W) Multiline Terminal and IP Multiline Terminal Only.)


When using a display telephone in programming mode, various Softkey options are displayed. These keys will allow you to easily select, scan, or move through the programs.

**Table 1-3 Softkey Display Prompts**

Softkey Display Prompts	
If you press this Soft-key ...	The system will ...
back	Go back one step in the program display. You can press Cursor Key (UP) or Cursor Key (Down) to scroll forward or backward through a list of programs.
↑	Scroll down through the available programs.
↓	Scroll up through the available programs.
select	Select the currently displayed program.
←	Move the cursor to the left.
→	Move the cursor to the right.
- 1	Move back through the available program options.
+ 1	Move forward through the available program options.



## Section 9 SYSTEM NUMBER PLAN/CAPACITIES

 The following table provides the capacities for the SL2100 system.

**Table 1-4 System Number Plan/Capacities**

System Number Plan/Capacities			Note
System Type	Number Plan/Capacities	Related Program	
<b>System</b>			
Analog Caller ID Detector (detected by DSP)	136 Channels (CPU(24) + EXIFB(48) + EXIFE(32) + EXIFE(32)) (Digital (2W) Multiline Terminal Mode)		
Classes of Service	15	20-06	
Day/Night Mode Numbers	8	12-07	
Day/Night Service Patterns	4	12-07	
Dial Tone Detector DTMF Receiver	136 Channels (CPU(24) + EXIFB(48) + EXIFE(32) + EXIFE(32)) (Digital (2W) Multiline Terminal Mode)		
Toll Restriction Classes	15		
Verifiable Account Code Table	800	35-06	
<b>Trunk</b>			
Trunk Port Number	128		
Trunk Ports (Total) :	128		
• Analog Trunks	36		
• BRI Trunk Ports	64		
• T1/E1/PRI Trunk Ports (1.5M/2M)	72/90 (1.5M/2M)		
• VoIPDB Trunk Ports (VoIPDB is required. Need license to be Max.)	48		
External Paging	3		
External MOH	1		
BGM	1		
DID Translation Tables	20	22-10	
DID Translation Table Entries	1000	22-10	
DISA :			
• Classes of Service	15	20-14	
• Users	15	25-09	
Ring Groups	50	22-04	
Trunk Access Maps	128	14-07	
Trunk Group Numbers	50	14-05	
Trunk Routes	50	14-06	
<b>Extension</b>			
Telephone Extension Ports	128		
• Multiline Terminals	72		
• Single Line Phones/Analog Devices	96		
• VoIPDB Extensions (SIP-MLT/ Std) (VoIPDB is required. Need license to be Max. (SIP-Std))	112		

System Number Plan/Capacities			Note
System Type	Number Plan/Capacities	Related Program	
Digital Extension Ports • Physical Ports	1 ~ 8		082U-B1
Telephone Extension Number Range	1 ~ 89999999* (*Extension cannot start with 0 or 9)	11-02	
Virtual Extension Ports	50	11-04	
Virtual Extension Number Range	1 ~ 89999999* (*Extension cannot start with 0 or 9)	11-04	
Door Boxes	6	32-02	
Door Box Numbers	1 ~ 6	32-02	
DSS Consoles Numbers : • 60 Button DSS Console	12	30-01	
Operator Access Number	One digit from 0~9, *, #		
Operator Extension	10		
<b>Speed Dialing</b>			
Speed Dialing Groups	50	13-02	
Speed Dialing Bins	0 ~ 999	13-02	
Speed Dialing Table-Common	900	13-01-03	
<b>Automated Attendant</b>			
VRS Message Numbers	1 ~ 100 (Built-in) 1 ~ 100 (With SD)	25-06	
<b>Conference</b>			
Conference Circuits	32 : maximum (16 Parties Per Conference)		
<b>Department and Pickup Groups</b>			
Department (Extension) Group Numbers	1 ~ 50	16-01	
Call Pickup Group Numbers	1 ~ 50	23-02	
<b>Hotline</b>			
Internal Hotline	128		
External Hotline	128		
<b>Paging and Park</b>			
Internal Page Group Numbers	1 ~ 50	31-02	
External Page Group Numbers	1 ~ 3	31-04	
External Speakers	1 ~ 3	31-04	
Park Group Numbers	1 ~ 50	24-03	
Park Orbits	1 ~ 50	24-03	
<b>SMDR</b>			
SMDR Ports	1	35-03	
<b>VRS/VM InMail</b>			
VRS/VM InMail	1		
VRS/VM Ports	16		CPU: built-in 4ch CPU+EXIFB: 16ch
VRS Recordable Messages	100	40-10-02	
<b>VoIPDB</b>			


System Number Plan/Capacities			Note
System Type	Number Plan/Capacities	Related Program	
RTP Ports		0 ~ 65534	
RTCP Ports		0 ~ 65535	
DSP Resources	Built-in VoIP	16	Initially bundled 8
	VOIPDB	128	Initially bundled 16
<b>Passwords</b>			
Programming Password Users		8	
Extension numbers can be one to eight digits long. Refer to the Flexible System Numbering feature in the SL2100 Features and Specifications Manual.			

## Section 10 CONCEPT OF SLOT NUMBER

Each 4KSU-C1 has Five slots, in the Main Chassis, the CPU-C1 must be installed in the first slot (Slot-0).

Slot Locations in the 4KSU-C1:

- Slot 0 - dedicated for CPU (VoIPDB)
- Slot 1-4 - Universal Slot

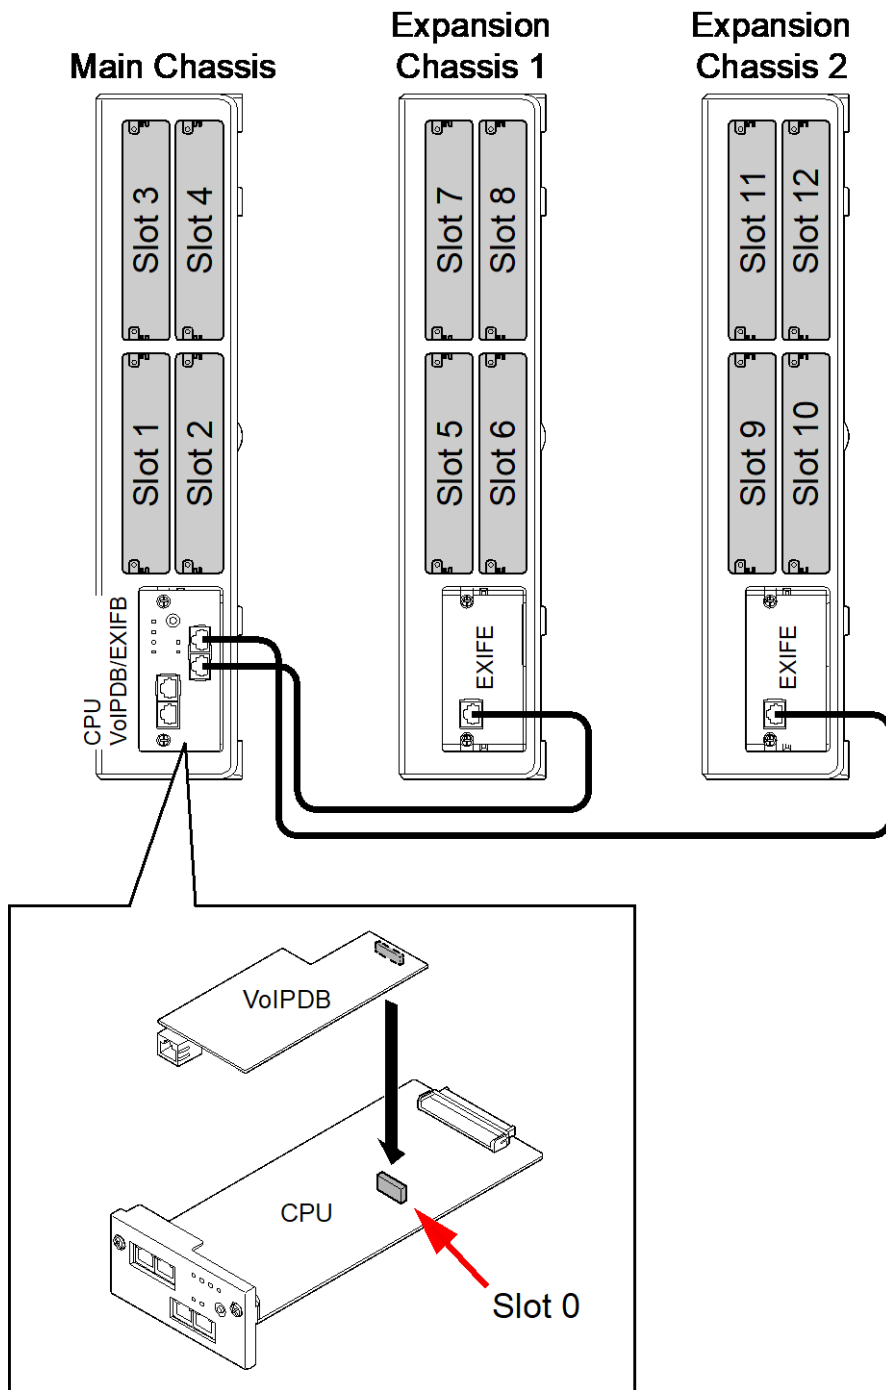

*MEMO*

# Chapter 2 Programming the SL2100

## Section 1 PROGRAMMING YOUR SYSTEM

The information contained in this chapter provides the information necessary to properly program your system.

The programming blocks are organized into the following programming modes.

Program Number : Program Name
Program 10 : System Configuration Setup
Program 11 : System Numbering
Program 12 : Night Mode Setup
Program 13 : Speed Dialing
Program 14 : Trunk, Basic Setup
Program 15 : Extension, Basic Setup
Program 16 : Department Group Setup
Program 20 : System Option Setup
Program 21 : Outgoing Call Setup
Program 22 : Incoming Call Setup
Program 23 : Answer Features Setup
Program 24 : Hold/Transfer Setup
Program 25 : VRS/DISA Setup
Program 26 : ARS Service
Program 30 : DSS/DLS Console Setup
Program 31 : Paging Setup
Program 32 : Door Box and Sensor Setup
Program 34 : Tie Line Setup
Program 35 : SMDR Account Code Setup
Program 40 : Voice Recording System
Program 41 : ACD Setup
Program 42 : Hotel Setup
Program 44 : ARS/F-Route Setup
Program 45 : Voice Mail Integration
Program 47 : InMail
Program 80 : Basic Hardware Setup for System
Program 81 : Basic Hardware Setup for Trunk
Program 82 : Basic Hardware Setup for Extension
Program 84 : Hardware Setup for VoIP
Program 90 : Maintenance Program
Program 92 : Copy Program

<b>Program Number : Program Name</b>
<a href="#">Program 93 : System Information</a>

# Program 10 : System Configuration Setup

## 10-01 : Time and Date

Level:

**SA**

### Description

Use **Program 10-01 : Time and Date** to change the system Time and Date through system programming. Extension users can also dial Service Code 728 to change the time if allowed by an extension Class of Service.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Year	16 ~ 35	Enter the year.	17
02	Month	1 ~ 12	Enter the month.	1
03	Day	1 ~ 31	Enter the day.	1
05	Hour	0 ~ 23	Enter the hour.	0
06	Minute	0 ~ 59	Enter the minute.	0
07	Second	0 ~ 59	Enter the second.	0
09	Time Zone	Refer to Input Data for Time Zone.		152

### Input Data for Time Zone

Data	Region/City	Data	Region/City	Data	Region/City
0	Africa/Abidjan	150	America/Montserrat	300	Australia/Adelaide
1	Africa/Accra	151	America/Nassau	301	Australia/Brisbane
2	Africa/Addis_Ababa	152	America/New_York	302	Australia/Broken_Hill
3	Africa/Algiers	153	America/Nipigon	303	Australia/Currie
4	Africa/Asmara	154	America/Nome	304	Australia/Darwin
5	Africa/Bamako	155	America/Noronha	305	Australia/Eucla
6	Africa/Bangui	156	America/North_Dakota/Beulah	306	Australia/Hobart
7	Africa/Banjul	157	America/North_Dakota/Center	307	Australia/Lindeman
8	Africa/Bissau	158	America/North_Dakota/ New_Salem	308	Australia/Lord_Howe
9	Africa/Blantyre	159	America/Ojinaga	309	Australia/Melbourne
10	Africa/Brazzaville	160	America/Panama	310	Australia/Perth
11	Africa/Bujumbura	161	America/Pangnirtung	311	Australia/Sydney
12	Africa/Cairo	162	America/Paramaribo	312	Europe/Amsterdam
13	Africa/Casablanca	163	America/Phoenix	313	Europe/Andorra
14	Africa/Ceuta	164	America/Port_of_Spain	314	Europe/Astrakhan
15	Africa/Conakry	165	America/Port-au-Prince	315	Europe/Athens
16	Africa/Dakar	166	America/Porto_Velho	316	Europe/Belgrade



Data	Region/City	Data	Region/City	Data	Region/City
17	Africa/Dar_es_Salaam	167	America/Puerto_Rico	317	Europe/Berlin
18	Africa/Djibouti	168	America/Rainy_River	318	Europe/Bratislava
19	Africa/Douala	169	America/Rankin_Inlet	319	Europe/Brussels
20	Africa/El_Aaiun	170	America/Recife	320	Europe/Bucharest
21	Africa/Freetown	171	America/Regina	321	Europe/Budapest
22	Africa/Gaborone	172	America/Resolute	322	Europe/Busingen
23	Africa/Harare	173	America/Rio_Branco	323	Europe/Chisinau
24	Africa/Johannesburg	174	America/Santarem	324	Europe/Copenhagen
25	Africa/Juba	175	America/Santiago	325	Europe/Dublin
26	Africa/Kampala	176	America/Santo_Domingo	326	Europe/Gibraltar
27	Africa/Khartoum	177	America/Sao_Paulo	327	Europe/Guernsey
28	Africa/Kigali	178	America/Scoresbysund	328	Europe/Helsinki
29	Africa/Kinshasa	179	America/Sitka	329	Europe/Isle_of_Man
30	Africa/Lagos	180	America/St_Barthelemy	330	Europe/Istanbul
31	Africa/Libreville	181	America/St_Johns	331	Europe/Jersey
32	Africa/Lome	182	America/St_Kitts	332	Europe/Kaliningrad
33	Africa/Luanda	183	America/St_Lucia	333	Europe/Kiev
34	Africa/Lubumbashi	184	America/St_Thomas	334	Europe/Kirov
35	Africa/Lusaka	185	America/St_Vincent	335	Europe/Lisbon
36	Africa/Malabo	186	America/Swift_Current	336	Europe/Ljubljana
37	Africa/Maputo	187	America/Tegucigalpa	337	Europe/London
38	Africa/Maseru	188	America/Thule	338	Europe/Luxembourg
39	Africa/Mbabane	189	America/Thunder_Bay	339	Europe/Madrid
40	Africa/Mogadishu	190	America/Tijuana	340	Europe/Malta
41	Africa/Monrovia	191	America/Toronto	341	Europe/Mariehamn
42	Africa/Nairobi	192	America/Tortola	342	Europe/Minsk
43	Africa/Ndjamena	193	America/Vancouver	343	Europe/Monaco
44	Africa/Niamey	194	America/Whitehorse	344	Europe/Moscow
45	Africa/Nouakchott	195	America/Winnipeg	345	Europe/Oslo
46	Africa/Ouagadougou	196	America/Yakutat	346	Europe/Paris
47	Africa/Porto-Novo	197	America/Yellowknife	347	Europe/Podgorica
48	Africa/Sao_Tome	198	Antarctica/Casey	348	Europe/Prague
49	Africa/Tripoli	199	Antarctica/Davis	349	Europe/Riga
50	Africa/Tunis	200	Antarctica/DumontDURville	350	Europe/Rome
51	Africa/Windhoek	201	Antarctica/Macquarie	351	Europe/Samara
52	America/Adak	202	Antarctica/Mawson	352	Europe/San_Marino
53	America/Anchorage	203	Antarctica/McMurdo	353	Europe/Sarajevo
54	America/Anguilla	204	Antarctica/Palmer	354	Europe/Simferopol
55	America/Antigua	205	Antarctica/Rothera	355	Europe/Skopje
56	America/Araguaina	206	Antarctica/Syowa	356	Europe/Sofia
57	America/Argentina/ Buenos_Aires	207	Antarctica/Troll	357	Europe/Stockholm
58	America/Argentina/Catamarca	208	Antarctica/Vostok	358	Europe/Tallinn
59	America/Argentina/Cordoba	209	Arctic/Longyearbyen	359	Europe/Tirane

Data	Region/City	Data	Region/City	Data	Region/City
60	America/Argentina/Jujuy	210	Asia/Aden	360	Europe/Ulyanovsk
61	America/Argentina/La_Rioja	211	Asia/Almaty	361	Europe/Uzhgorod
62	America/Argentina/Mendoza	212	Asia/Amman	362	Europe/Vaduz
63	America/Argentina/Rio_Gallegos	213	Asia/Anadyr	363	Europe/Vatican
64	America/Argentina/Salta	214	Asia/Aqtau	364	Europe/Vienna
65	America/Argentina/San_Juan	215	Asia/Aqtobe	365	Europe/Vilnius
66	America/Argentina/San_Luis	216	Asia/Ashgabat	366	Europe/Volgograd
67	America/Argentina/Tucuman	217	Asia/Baghdad	367	Europe/Warsaw
68	America/Argentina/Ushuaia	218	Asia/Bahrain	368	Europe/Zagreb
69	America/Aruba	219	Asia/Baku	369	Europe/Zaporozhye
70	America/Asuncion	220	Asia/Bangkok	370	Europe/Zurich
71	America/Atikokan	221	Asia/Barnaul	371	Indian/Antananarivo
72	America/Bahia	222	Asia/Beirut	372	Indian/Chagos
73	America/Bahia_Banderas	223	Asia/Bishkek	373	Indian/Christmas
74	America/Barbados	224	Asia/Brunei	374	Indian/Cocos
75	America/Belem	225	Asia/Chita	375	Indian/Comoro
76	America/Belize	226	Asia/Choibalsan	376	Indian/Kerguelen
77	America/Blanc-Sablon	227	Asia/Colombo	377	Indian/Mahe
78	America/Boa_Vista	228	Asia/Damascus	378	Indian/Maldives
79	America/Bogota	229	Asia/Dhaka	379	Indian/Mauritius
80	America/Boise	230	Asia/Dili	380	Indian/Mayotte
81	America/Cambridge_Bay	231	Asia/Dubai	381	Indian/Reunion
82	America/Campo_Grande	232	Asia/Dushanbe	382	Pacific/Apia
83	America/Cancun	233	Asia/Gaza	383	Pacific/Auckland
84	America/Caracas	234	Asia/Hebron	384	Pacific/Bougainville
85	America/Cayenne	235	Asia/Ho_Chi_Minh	385	Pacific/Chatham
86	America/Cayman	236	Asia/Hong_Kong	386	Pacific/Chuuk
87	America/Chicago	237	Asia/Hovd	387	Pacific/Easter
88	America/Chihuahua	238	Asia/Irkutsk	388	Pacific/Efate
89	America/Costa_Rica	239	Asia/Jakarta	389	Pacific/Enderbury
90	America/Creston	240	Asia/Jayapura	390	Pacific/Fakaofu
91	America/Cuiaba	241	Asia/Jerusalem	391	Pacific/Fiji
92	America/Curacao	242	Asia/Kabul	392	Pacific/Funafuti
93	America/Danmarkshavn	243	Asia/Kamchatka	393	Pacific/Galapagos
94	America/Dawson	244	Asia/Atyrau	394	Pacific/Gambier
95	America/Dawson_Creek	245	Asia/Kathmandu	395	Pacific/Guadalcanal
96	America/Denver	246	Asia/Khandyga	396	Pacific/Guam
97	America/Detroit	247	Asia/Kolkata	397	Pacific/Honolulu
98	America/Dominica	248	Asia/Krasnoyarsk	398	Pacific/Johnston
99	America/Edmonton	249	Asia/Kuala_Lumpur	399	Pacific/Kiritimati
100	America/Eirunepe	250	Asia/Kuching	400	Pacific/Kosrae
101	America/El_Salvador	251	Asia/Kuwait	401	Pacific/Kwajalein
102	America/Fort_Nelson	252	Asia/Macau	402	Pacific/Majuro

Data	Region/City	Data	Region/City	Data	Region/City
103	America/Fortaleza	253	Asia/Magadan	403	Pacific/Marquesas
104	America/Glace_Bay	254	Asia/Makassar	404	Pacific/Midway
105	America/Godthab	255	Asia/Manila	405	Pacific/Nauru
106	America/Goose_Bay	256	Asia/Muscat	406	Pacific/Niue
107	America/Grand_Turk	257	Asia/Nicosia	407	Pacific/Norfolk
108	America/Grenada	258	Asia/Novokuznetsk	408	Pacific/Noumea
109	America/Guadeloupe	259	Asia/Novosibirsk	409	Pacific/Pago_Pago
110	America/Guatemala	260	Asia/Omsk	410	Pacific/Palau
111	America/Guayaquil	261	Asia/Oral	411	Pacific/Pitcairn
112	America/Guyana	262	Asia/Phnom_Penh	412	Pacific/Pohnpei
113	America/Halifax	263	Asia/Pontianak	413	Pacific/Port_Moresby
114	America/Havana	264	Asia/Pyongyang	414	Pacific/Rarotonga
115	America/Hermosillo	265	Asia/Qatar	415	Pacific/Saipan
116	America/Indiana/Indianapolis	266	Asia/Qyzylorda	416	Pacific/Tahiti
117	America/Indiana/Knox	267	Asia/Rangoon	417	Pacific/Tarawa
118	America/Indiana/Marengo	268	Asia/Riyadh	418	Pacific/Tongatapu
119	America/Indiana/Petersburg	269	Asia/Sakhalin	419	Pacific/Wake
120	America/Indiana/Tell_City	270	Asia/Samarkand	420	Pacific/Wallis
121	America/Indiana/Vevay	271	Asia/Seoul	421	GMT+0
122	America/Indiana/Vincennes	272	Asia/Beijing	422	GMT+1
123	America/Indiana/Winamac	273	Asia/Singapore	423	GMT+2
124	America/Inuvik	274	Asia/Srednekolymsk	424	GMT+3
125	America/Iqaluit	275	Asia/Taipei	425	GMT+4
126	America/Jamaica	276	Asia/Tashkent	426	GMT+5
127	America/Juneau	277	Asia/Tbilisi	427	GMT+6
128	America/Kentucky/Louisville	278	Asia/Tehran	428	GMT+7
129	America/Kentucky/Monticello	279	Asia/Thimphu	429	GMT+8
130	America/Kralendijk	280	Asia/Tokyo	430	GMT+9
131	America/La_Paz	281	Asia/Tomsk	431	GMT+10
132	America/Lima	282	Asia/Ulaanbaatar	432	GMT+11
133	America/Los_Angeles	283	Asia/Urumqi	433	GMT+12
134	America/Lower_Princes	284	Asia/Ust-Nera	434	GMT-11
135	America/Maceio	285	Asia/Vientiane	435	GMT-10
136	America/Managua	286	Asia/Vladivostok	436	GMT-9
137	America/Manaus	287	Asia/Yakutsk	437	GMT-8
138	America/Marigot	288	Asia/Yekaterinburg	438	GMT-7
139	America/Martinique	289	Asia/Yerevan	439	GMT-6
140	America/Matamoros	290	Atlantic/Azores	440	GMT-5
141	America/Mazatlan	291	Atlantic/Bermuda	441	GMT-4
142	America/Menominee	292	Atlantic/Canary	442	GMT-3
143	America/Merida	293	Atlantic/Cape_Verde	443	GMT-2
144	America/Metlakatla	294	Atlantic/Faroe	444	GMT-1
145	America/Mexico_City	295	Atlantic/Madeira		

Data	Region/City	Data	Region/City	Data	Region/City
146	America/Miquelon	296	Atlantic/Reykjavik		
147	America/Moncton	297	Atlantic/South_Georgia		
148	America/Monterrey	298	Atlantic/St_Helena		
149	America/Montevideo	299	Atlantic/Stanley		

## Conditions

None

---

## Feature Cross Reference

- Clock/Calendar Display/Time and Date

# Program 10 : System Configuration Setup

## 10-02 : Location Setup

Level:

**SA**

---

### Description

Use **Program 10-02 : Location Setup** to define the location of the installed system.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Country Code	Dial (up to four digits) : 0 ~ 9, *, #	Enter the country code.	1
02	International Access Code	Dial (up to four digits) : 0 ~ 9, *, #	Enter the international access code.	No Setting
03	Other Area Access Code	Dial (up to two digits) : 0 ~ 9, *, #	Enter the other area access code.	9
04	Area Code	Dial (up to six digits) : 0 ~ 9, *, #	Enter the local area code.	No Setting
05	Trunk Access Code	Dial (up to eight digits) : 0 ~ 9, *, #	Enter the trunk access code digits required to place an outgoing call.	No Setting

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-03 : ETU Setup

Level:

**IN**

### Description

Use **Program 10-03 : ETU Setup** to setup and confirm the Basic Configuration data for each board. When changing a defined terminal type, first set the type to 0 and then plug the new device in to have the system automatically define it or you may have to reseat the board.



*The items highlighted in gray are read only and cannot be changed.*

### Input Data

Slot No.	1 ~ 12
----------	--------

### For HBI PKG Setup

Physical Port Number	1 ~ 8
----------------------	-------

Item No.	Item	Input Data	Default
01	<b>Terminal Type</b>	0 = No Setting 1 = Multi-Line Telephone 2 = SLT 8 = Door Phone 10 = DSS Console 3 ~ 7, 9, 11, 12 = Not Used	2
02	<b>Logical Port Number</b>	[Terminal Type = 0] : 0 [Terminal Type = 1] : 1 ~ 128 [Terminal Type = 2] : 1 ~ 128 [Terminal Type = 8] : 1 ~ 2 [Terminal Type = 10] : 1 ~ 12	0
03	<b>Transmit Gain level for SLT</b>	1 ~ 57 (- 15.5 ~ + 12.5 dB)	32
04	<b>Receive Gain level for SLT</b>	1 ~ 57 (- 15.5 ~ + 12.5 dB)	32
05	<b>Select port type</b>	0 = Hybrid Port 1 = Door Phone	0
06	<b>Multi-Line Telephone Line</b>	0 = None 1 = 12 Line 2 = 24 Line	0

### For ESI PKG Setup

Physical Port Number	1 ~ 8
----------------------	-------

Item No.	Item	Input Data	Description	Default
01	Terminal Type	0 = No Setting 1 = Multiline Telephone 10 = DSS Console		0
02	Logical Port Number	0 = No Setting 1 = Multiline Telephone (1 ~ 128) 10 = DSS Console (1 ~ 12)		0
08	Multiline Telephone Type	0 = DT3** 1 = DT4** 3 = SL1100 2W 4 = SL2100 2W		0
09	Item Side option information	0 = No Option 4 = EHS		0
10	Bottom option information	0 = None 4 = WHA 5 = BCA		0

### For SLI PKG Setup

Physical Port Number	1 ~ 8
----------------------	-------

Item No.	Item	Input Data	Description	Default
01	Logical Port Number	0 ~ 128		0
03	Transmit Gain Level (S-Level)	1 ~ 57 (- 15.5 ~ + 12.5 dB)		32 (0 dB)
04	Receive Gain Level (R-Level)	1 ~ 57 (- 15.5 ~ + 12.5 dB)		32 (0 dB)
05	Select port type	0 = SLT 1 = Door Phone	HW switch can be change SLT or Door Phone.	0

### For COI PKG Setup



Physical Port Number	1 ~ 3
----------------------	-------

Item No.	Item	Input Data	Default
01	Logical Port Number	0 ~ 128	0

### For BRI PKG Setup



ISDN Line Number	1 ~ 2
------------------	-------

Item No.	Item	Input Data	Description	Default
01	ISDN Line Mode	0 = No Setting 1 = T-Point 2 = S-Point 3 ~ 5 = Not Used 6 = S-Point (Leased Line)		1

Item No.	Item	Input Data	Description	Default
02	Logical Port Number	[0 : No Setting] = 0 [1 : T-Point] = 1 ~ 128 [2 : S-Point] = 1 ~ 128 [3 ~ 5] = Not Used [6 : S-Point (Leased Line)] = 1 ~ 128	 The starting port number of a BRI line is displayed. Two logic ports are automatically assigned to a BRI line.	0
03	Connection Type	0 = Point-to-Multipoint 1 = Point-to-Point		0
04	Layer 3 Timer Type	1 ~ 5	 Each timer value of Layer 3 is set up for every type using Program 81-06 (T-Bus).	1
05	Calling Party Number	0 = No 1 = Yes	Based on this setting, the system includes a Presentation Allowed (1) or Presentation Restricted (0) in the Setup message to allow or deny the Calling Party Number. Program 15-01-04 must also be set to 1 if this option is enabled.	1
06	Connection Bus Mode	0 = Extended passive bus 1 = Short passive bus		0
07	S-point DDI digits	0 ~ 4		0
08	Dial Sending Mode	0 = Enblock Sending 1 = Overlap Sending	ISDN Protocol definition	1
09	Dial Information Element	0 = Keypad Facility 1 = Called Party Number	ISDN Protocol definition [Only when Dial Sending Mode (10-03-08) is set for 1 (Overlap Sending)]	1
10	Master/Slave System	0 = Slave System 1 = Master System	If set to 0, system is synchronized to network clock. If set to 1, system is not synchronized to the network clock.	0
14	Service Protocol for S-point	0 = Keypad facility 1 = Specified Protocol		0
15	Call Busy Mode for S-point	0 = Alerting 1 = Disconnect		0
17	ISDN Line Ringback Tone	0 = Disable 1 = Enable	System can provide ringback tone, if set to 1 : Enable.	0
18	Type of Number	0 = Unknown 1 = International number 2 = National number 3 = Network specific number 4 = Subscriber number 5 = Speed Dial number	ISDN Protocol definition	0
19	Numbering Plan Identification	0 = Unknown 1 = ISDN numbering plan 2 = Data numbering plan 3 = Telex numbering plan 4 = National standard numbering plan 5 = Private numbering plan	ISDN Protocol definition	0
25	Layer 1 Supervision	0 = Disable 1 = Enable		0
26	Screening Indicator (V1.5 added)	0 = user-provided (not screened) 1 = user-provided (verified and passed) 2 = user-provided (verified and failed)	Calling Party Number information element Screening indicator (octet 3a)	0



## For PRI PKG Setup

SLOT Number		1 ~ 12		
Item No.	Item	Input Data	Description	Default
01	<b>ISDN Line Mode</b>	0 = No Setting 1 = T-Point 2 = S-Point 6 = S-Point (Leased Line)		1
02	<b>Logical Port Number</b>	[0 : No Setting] = 0 [1 : T-Point] = 1 ~ 128 [2 : S-Point] = 1 ~ 128 [6 : S-Point (Leased Line)] = 1 ~ 128	 <i>The start port number of a PRI line is displayed.</i>	0
03	<b>CRC Multi-frame (CRC4)</b>	0 = off 1 = on		1
04	<b>Layer 3 Timer Type</b>	1 ~ 5	 <i>Each timer value of Layer 3 is set up for each type in Program 81-06 (T-Bus)</i>	1
05	<b>CLIP Information</b>	0 = No 1 = Yes	Based on this setting, the system includes a Presentation Allowed (1) or Presentation Restricted (0) in the Setup message to allow or deny the Calling Party Number. Program 15-01-04 must also be set to 1 if this option is enabled.	1
06	<b>Length of Cable</b>	0 = Level 1 1 = Level 2 2 = Level 3 3 = Level 4 4 = Level 5		2
07	<b>S-point DDI digits</b>	0 - 4		0
08	<b>Dial Sending Mode</b>	0 = Enbloc Sending 1 = Overlap Sending	ISDN Protocol definition	0
09	<b>Dial Information Element</b>	0 = Keypad Facility 1 = Called Party Number	ISDN Protocol definition Only when Dial Sending Mode (10-03-08) is set for 1 (Overlap Sending).	0
10	<b>Master/Slave System</b>	0 = Slave System 1 = Master System	If set to 0, system is synchronized to network clock. If set to 1, system is not synchronized to the network clock.	0
13	<b>Loss-Of-Signal Detection Limit</b>	0 = Level 0 (lowest sensitivity) 1 = Level 1 2 = Level 2 3 = Level 3 4 = Level 4 5 = Level 5 6 = Level 6 7 = Level 7 (highest sensitivity)	If the transmit/receive voltage is less than the setting in 10-03-13, the system considers this as Loss-Of-Signal and the PRI does not come up. Note that there are different values based on the setting in 10-03-12 for the PRI.	2
14	<b>Service Protocol for S-point</b>	0 = Keypad facility 1 = Specified Protocol for Aspire system		0
15	<b>Call Busy Mode for S-point</b>	0 = Alerting 1 = Disconnect		0

Item No.	Item	Input Data	Description	Default
16	<b>Two B-Channel Transfer for PRI Service</b>	0 = off 1 = on		0
18	<b>Type of Number</b>	0 = Unknown 1 = International number 2 = National number 3 = Network Specific number 4 = Subscriber number 5 = Speed Dial number	ISDN Protocol definition. Select the number type for the ISDN circuit.	2
19	<b>Numbering Plan Identification</b>	0 = Unknown 1 = ISDN numbering plan 2 = Data numbering plan 3 = Telex numbering plan 4 = National standard numbering plan 5 = Private numbering plan	ISDN Protocol definition. Select the Numbering Plan used for the ISDN circuit.	1
20	<b>Network Exchanger Selection</b>	0 = Standard 1 = reserved 2 = reserved 3 = DMS (A211) 4 = 5ESS 5 = DMS (A233) 6 = 4ESS 7 = NI-2	Select the ISDN protocol for the ISDN circuit	7
21	<b>Number of Ports</b>	0 = Auto 1 = 4 Ports 2 = 8 Ports 3 = 12 Ports 4 = 16 Ports 5 = 20 Ports		0
26	<b>Screening Indicator (V1.5 added)</b>	0 = user-provided (not screened) 1 = user-provided (verified and passed) 2 = user-provided (verified and failed)	Calling Party Number information element Screening indicator (octet 3a)	0

### For PRI (T1) PKG Setup

SLOT Number	1 ~ 12
-------------	--------

Item No.	Item	Input Data	Description	Default
01	<b>Logical Port Number</b>	0 ~ 128	The start port number of a T1 line is displayed, and 24 logic ports are automatically assigned to a DT1 (T1) line.	0
02	<b>T1 Signal Format Selection</b>	0 = D4 (12 Multi Frame) 1 = ESF (24 Multi Frame)		0
03	<b>Zero Code Suppression</b>	0 = B8ZS 1 = AMI/ZCS		0
04	<b>Line Length Selection</b>	0 = 0 feet ~ 133 feet 1 = 133 feet ~ 266 feet 2 = 266 feet ~ 399 feet 3 = 399 feet ~ 533 feet 4 = 533 feet ~ 655 feet		0
05	<b>T1 Clock Source</b>	0 = Internal 1 = External		1

Item No.	Item	Input Data	Description	Default
06	Number of Ports	0 = Auto 1 = 4 Ports 2 = 8 Ports 3 = 12 Ports 4 = 16 Ports 5 = 20 Ports		0

### For VoIP PKG Setup

SLOT Number	0
-------------	---

Item No.	Item	Input Data	Default
01	VoIP Type	4 = Built-in VoIP 5 = VoIPDB	
02	Number of Channel	8 = Built-in VoIP (Initially bundled) 16 = Built-in VoIP (License controlled, V.4.00 or higher) 16 ~ 128 = VoIPDB	
03	Number of Voice Channel	0 ~ 128	0

### Conditions

- When changing a defined terminal type, first set the type to 0 and then plug the new device in to have the system automatically define it, or redefine the type manually.
- The system must have a board installed to view/change the options for that type of board.

---

## Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-04 : Music On Hold Setup

Level:

**IN**

---

### Description

Use **Program 10-04 : Music on Hold Setup** to set the Music on Hold (MOH) source.

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>Music on Hold Source Selection</b>	0 = Internal MOH (Tone is fixed by one music) 1 = External MOH (Tone set by PRG 10-60-01: Audio Port No.2) 2 = Service Tone (Tone set by PRG 80-01, tone 64) 3 = VRS (Tone set by PRG 10-04-02)	<ul style="list-style-type: none"> <li>Internal Music Tune - The tune is fixed by one music tune.</li> <li>External Source - ACI input via 082U (J4) audio connector (Program10-60-01).</li> <li>Silence - Callers on hold hear silence.</li> </ul>	1
02	<b>Music on Hold Tone Selection</b>	[In case Item 1 is 3.] 1 ~ 100 = VRS Message Number		1
03	<b>Audio Gain Setup</b>	1 ~ 57 (- 15.5 ~ + 12.5 dB)		32 (0 dB)

### Conditions

None

---

### Feature Cross Reference

- Background Music
- Music on Hold

# Program 10 : System Configuration Setup

## 10-08 : Pre-Ringing Setup

Level:

**IN**

---

### Description

Use **Program 10-08 : Pre-Ringing Setup** to enable or disable pre-ringing for trunk calls. This sets how a trunk initially rings a telephone. With pre-ringing, a burst of ringing occurs as soon as the trunk LED flashes. The call then continues ringing with the normal ring cadence cycle. Without pre-ringing, the call starts ringing only when the normal ring cadence cycle occurs. This may cause a ring delay, depending on when call detection occurs in reference to the ring cycle.

### Input Data

Item No.	Item	Input Data	Default
01	Pre-Ringing	0 = Disabled 1 = Enabled	0

### Conditions

- Used with Analog Trunks only.

---

### Feature Cross Reference

- Central Office Calls, Answering

# Program 10 : System Configuration Setup

## 10-09 : DTMF, Dial Tone Detection Setup

Level:

**IN**

---

### Description

Use **Program 10-09 : DTMF, Dial Tone Detection Setup** to allocate the circuits on the CPU for either DTMF receiving or dial tone detection.

Use the following as a guide when allocating DTMF receivers:

- In light traffic sites, allocate one DTMF receiver for every 8 devices that use them.
- In heavy traffic sites, allocate one DTMF receiver for every 3 devices that use them.

### Input Data

Circuit/Resource Number	1 ~ 140
-------------------------	---------

Item No.	Item	Input Data	Default
01	<b>DTMF, Dial Tone Detection</b>	0 = Common use for both analog extensions and trunks 1 = Use for analog extensions (DTMF receivers) 2 = Use for analog trunks (DTMF receivers/Dial tone Detection/Caller ID detection)	Resource 1 ~ 140 = 0

### Conditions

- CPU has 28 (Hybrid MLT Configuration) 24 (Digital MLT Configuration) Channel DSP resources (receivers) only for basic CPU Board. EXIFB-C1 has additional 48 DSP resources which you can add to CPU. Addition to that EXIFE also each has 32 DSP resource (receivers) only for expand board.
- In case of 0 (= Common) is selected, and if 14-02-10 (Caller ID receive ability) is set to "Yes", DSP resources are always allocated to analog trunk only, not for analog extension. If 14-02-10 is set to "No", the DSP resources can be used for both analog trunk and analog extension commonly.
- You can define the figure for the resource number from 25 to 28, but you can't use the resources due to the DSP specifications.

---

### Feature Cross Reference

- Caller ID
- Central Office Calls, Placing
- Direct Inward Dialing (DID)
- Direct Inward System Access (DISA)

# Program 10 : System Configuration Setup

## 10-12 : CPU Network Setup

Level:

**SA**

### Description


Use **Program 10-12 : CPU Network Setup** to setup the IP Address, Subnet-Mask, and Default Gateway addresses.

**Caution!**

*If any IP Address or NIC settings are changed, the system must be reset for the changes to take affect.*

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>IP Address</b>	0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254	Set for CPU.	192.168.0.10
02	<b>Subnet Mask</b>	128.0.0.0   192.0.0.0   224.0.0.0   240.0.0.0   248.0.0.0   252.0.0.0   254.0.0.0   255.0.0.0   255.128.0.0   255.192.0.0   255.224.0.0   255.240.0.0   255.248.0.0   255.252.0.0   255.254.0.0   255.255.0.0   255.255.128.0   255.255.192.0   255.255.224.0   255.255.240.0   255.255.248.0   255.255.252.0   255.255.254.0   255.255.255.0   255.255.255.128   255.255.255.192   255.255.255.224   255.255.255.240   255.255.255.248   255.255.255.252   255.255.255.254   255.255.255.255	The setting of Subnet Mask is invalid when all Host Addresses are 0. If the network section is: 0, 127, 128.0, 191.255, 192.0.0, 223.255.255 The setting of Subnet Mask is invalid.	255.255.255.0
03	<b>Default Gateway</b>	0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254	Assign the default gateway IP address.	0.0.0.0

Item No.	Item	Input Data	Description	Default
05	<b>NIC Interface</b>	0 = Auto Detect 1 = 100Mbps, Full Duplex 2 = Reserved 3 = Reserved 4 = Reserved 5 = Reserved	NIC Auto Negotiate (CPU)  When this programming was changed, the LAN cable must be unplugged and then reconnected.	0
07	<b>NAPT Router IP Address</b>	0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254	Set the IP address on the WAN side of router.	0.0.0.0
08	<b>ICMP Redirect</b>	0 = Enable 1 = Disable	When receiving ICMP redirect message, this determines if the IP Routing Table updates automatically or not.	0
09	<b>VoIP IP Address</b>	0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254	Assign the IP Address for the VoIPDB.	172.16.0.10
10	<b>VoIP Subnet Mask</b>	128.0.0.0   192.0.0.0   224.0.0.0   240.0.0.0   248.0.0.0   252.0.0.0   254.0.0.0   255.0.0.0   255.128.0.0   255.192.0.0   255.224.0.0   255.240.0.0   255.248.0.0   255.252.0.0   255.254.0.0   255.255.0.0   255.255.128.0   255.255.192.0   255.255.224.0   255.255.240.0   255.255.248.0   255.255.252.0   255.255.254.0   255.255.255.0   255.255.255.128   255.255.255.192   255.255.255.224   255.255.255.240   255.255.255.248   255.255.255.252   255.255.255.254   255.255.255.255	Assign the subnet mask for the VoIPDB.	255.255.0.0
11	<b>NIC Setup</b>	0 = Auto Detect 1 = 100 Mbps, Full Duplex 2 = Not Used 3 = Not Used 4 = Not Used 5 = 1 Gbps, Full Duplex	Set for VoIPDB.	0
13	<b>DNS Primary Address</b>	0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254	In the future, use this system data when add a function with DNS.	0.0.0.0



Item No.	Item	Input Data	Description	Default
14	<b>DNS Secondary Address</b>	0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254	In the future, use this system data when add a function with DNS.	0.0.0.0
15	<b>DNS Port</b>	1 ~ 65535	In the future, use this system data when add a function with DNS.	53
17	<b>VoIP NIC Port Setting</b>	0 = MDI 1 = MDI-X		0
18	<b>CPU MTU</b>	1000 ~ 1500	The MTU value of CPU NIC.	1450
19	<b>VoIP MTU</b>	1000 ~ 1500	The MTU value of VoIP NIC.	1450
20	<b>SSLv3 Setting</b>	0 = Disable 1 = Enable	Set whether to use the SSLv3 in SMTP. 0 (Disable) is encrypted with TLSv1. This data requires a reset to apply changed data to the system.	1

### Conditions

- The system must be reset for these changes to take affect.

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-13 : In-DHCP Server Setup

Level:


**SA**

---

### Description

Use Program 10-13 : In-DHCP Server Setup to setup the DHCP Server built into the CPU.

### Input Data

Item No.	Item	Input Data	Description	Default
01	DHCP Server Mode	0 = Disable 1 = Enable	Enable or disable the use of the built-in DHCP Server. This program cannot be enabled if PRG10-63-01 is enabled.	0
02	Lease Time	Days 0 ~ 255	Lease Time of the IP address to a client.  Pressing the <b>Hold</b> Key increments to the next setting data.	0 day
		Hour 0 ~ 23		0 hour
		Minutes 0 ~ 59		30 minutes
05	Last DHCP Data	0 = Disable 1 = Enable	If 10-13-01 is enabled, this setting determines if DHCP resource is enabled or disabled.	1

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-14 : Managed Network Setup

Level:

**SA**

---

### Description

Use **Program 10-14 : Managed Network Setup** to set up the range of the IP address which the DHCP Server leases to a client.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	The Range of the IP address to Lease.	Minimum : 0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254	When Maximum has not been entered, the maximum value equals the minimum value.	172.16.0.100	10-13-04
		Maximum : 0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254		172.16.5.254	

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-15 : Client Information Setup

Level:

**SA**

---

### Description

Use **Program 10-15 : Client Information Setup** to set up the client information when the DHCP server needs to assign a fixed IP address to clients.

### Input Data

Client Number	1 ~ 128
---------------	---------

Item No.	Item	Input Data	Description	Default
01	MAC Address	MAC : 00-00-00-00-00-00 ~ FF-FF-FF-FF-FF-FF		00-00-00-00-00-00
	IP Address	1.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254	The IP address should be assigned out of the scope range set up in Program 10-14.	0.0.0.0

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-16 : Option Information Setup

Level:

**SA**

### Description

Use **Program 10-16 : Option Information Setup** to set up the option given from the DHCP server to each client.



*The items highlighted in gray are read only and cannot be changed.*

### Input Data

Item No.	Item	Input Data	Description	Default
01	Router	Code number 0 ~ 255	Set the Router IP address.	3 (Fixed)
		IP address 0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254		0.0.0.0
02	DNS Server	Code number 0 ~ 255	Set IP address of DNS Server.	6 (Fixed)
		IP address 0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254		0.0.0.0
03	TFTP Server Name	Code number 0 ~ 255	Set the name for the TFTP Server.	66 (Fixed)
		Maximum 64 character strings		No Setting
05	MGC IP Address	Code number 0 ~ 255		129 (Fixed)
		IP address 0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254		172.16.0.10
06	Client Host Name	Code number 0 ~ 255	Set the Client Host Name.	12 (Fixed)
		Maximum 64 character strings		No Setting
07	DNS Domain Name	Code number 0 ~ 255	Set the DNS Domain Name.	15 (Fixed)
		Maximum 20 character strings		No Setting
08	Download Protocol	Code number 0 ~ 255	Set Download Protocol used for AutoConfig (for 8IPLD-C1 Terminal).	43 (Fixed)
		Sub code number		163 (Fixed)
		1 = FTP 2 = HTTP		1
09	Encryption Information	Code number 0 ~ 255	Set an Encryption Information used for Auto-Config (for 8IPLD-C1 Terminal).	43 (Fixed)
		Sub code number		164 (Fixed)
		Fixed 128 character strings		No Setting

Item No.	Item	Input Data	Description	Default
10	<b>FTP Server Address</b>	Code number 0 ~ 255	Set a FTP Server Address used for AutoConfig.	43 (Fixed)
		Sub code number		141
		IP address 0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254		0.0.0.0
11	<b>Config File Name</b>	Code number 0 ~ 255	Set a File Name used for AutoConfig.	43 (Fixed)
		Sub code number		151
		Maximum 15 character strings		No Setting
12	<b>Vender Class ID</b>	Code number 0 ~ 255		60 (Fixed)
		Maximum 256 character strings		NEC DT700
13	<b>SNMP Server IP Address</b>	Code number 0 ~ 255		69 (Fixed)
		IP address 0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254		0.0.0.0
14	<b>POP3 Server IP Address</b>	Code number 0 ~ 255		70 (Fixed)
		IP address 0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254		0.0.0.0
16	<b>SIP Server (IP Address)</b>	Code number 0 ~ 255		120 (Fixed)
		IP address 0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254		172.16.0.10
17	<b>SIP Server (Domain Name)</b>	Code number 0 ~ 255	If there is setting in 10-16-16 this setting will be ignored	120 (Fixed)
		Maximum 20 character strings		No Setting
18	<b>FTP Server IP Address</b>	Code number 0 ~ 255		141 (Fixed)
		IP address 0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254		0.0.0.0
19	<b>Config File Name</b>	Code number 0 ~ 255		151 (Fixed)
		Maximum 15 character strings		No Setting
20	<b>LDS Server 1 IP Address</b>	Code number 0 ~ 255		162 (Fixed)
		IP address 0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254		0.0.0.0
21	<b>LDS Server 2 IP Address</b>	Code number 0 ~ 255		162 (Fixed)
		IP address 0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254		0.0.0.0
22	<b>LDS Server 3 IP Address</b>	Code number 0 ~ 255		162 (Fixed)
		IP address 0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254		0.0.0.0

Item No.	Item	Input Data	Description	Default
23	LDS Server 4 IP Address	Code number 0 ~ 255		162 (Fixed)
		IP address 0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254		0.0.0.0
24	Next Server IP Address	IP address 0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254		0.0.0.0
27	SIP Server Receive Port	Code number 0 ~ 255		168 (Fixed)
		Port: 1 ~ 65535		5080
28	Configuration File Name	Code number 0 ~ 255		43 (Fixed)
		Sub Code number 0 ~ 255		152
		Up to 15 characters		No Setting
29	Configuration File Name	Code number 0 ~ 255		43 (Fixed)
		Sub Code number 0 ~ 255		153
		Up to 15 characters		No Setting

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-19 : VoIP DSP Resource Selection

Level:

**IN**

---

### Description

Use **Program 10-19 : VoIP DSP Resource Selection** to define the criteria for each DSP resource on the VoIPDB.

### Input Data

Slot Number	0
DSP Resource Number	1 ~ 128

Item No.	Item	Input Data	Description	Default
01	<b>VoIP DSP Resource Selection</b>	0 = Common use for both IP extensions and trunks 1 = Use for IP extensions 2 = Use for SIP trunks 3 = Use for Networking 5 = Blocked 6 = Common without unicast paging 7 = Multicast paging 8 = Unicast paging	This program is used to assign the 128 resources of the VoIPDB. NEC recommends leaving the default settings as system default.	Resource 1 = 1 Resource 2 ~ 128 = 0

### Conditions

None

---

### Feature Cross Reference

None



# Program 10 : System Configuration Setup

## 10-20 : LAN Setup for External Equipment

Level:

**IN**

### Description

Use **Program 10-20 : LAN Setup for External Equipment** to define the TCP port/address/etc. for communicating to external equipment.

### Input Data

Type of External Equipment	1 = CTI Server 2 = ACD-MIS 4 = Networking System 5 = SMDR Output 6 = DIM Output 8 = UC Web Application 9 = 1st Party CTI 11 = O&M Server 12 = Traffic Report Output 13 = Room Data Output for Hotel Service 14 = IP-DECT Directory Access 15 = Presence
----------------------------	--

Item No.	Item	Input Data	Default
01	TCP Port	0 ~ 65535	External Device 1 (CTI Server) = 0 External Device 2 (ACD-MIS) = 4000 External Device 4 (Networking System) = 30000 External Device 5 (SMDR Output) = 0 External Device 6 (DIM Output) = 0 External Device 8 (UC Web Application) = 0 External Device 9 (1st Party CTI) = 0 External Device 11 (O&M Server) = 8010 External Device 12 (Traffic Report Output) = 0 External Device 13 (Room Data Output for Hotel Service) = 0 External Device 14 (IP-DECT Directory Access) = 0 External Device 15 (Presence) = 0
03	Keep Alive Time	1 ~ 255 seconds	30

**Conditions**

- When the connected TCP port is assigned to another external device, a system reset is required for new setting to take effect.

---

**Feature Cross Reference**

None

# Program 10 : System Configuration Setup

## 10-23 : SIP System Interconnection Setup

Level:

**SA**

### Description

Use **Program 10-23 : SIP System Interconnection Setup** to determine if the system is interconnected and define the IP address of another system, call control port number and alias address for SL2100 system interconnection.

### Input Data

System Number	1 ~ 1000
---------------	----------

Item No.	Item	Input Data	Default
01	<b>System Interconnection</b>	0 = No (Disable) 1 = Yes (Enable)	0
02	<b>IP Address</b>	0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254	0.0.0.0
03	<b>Call Control Port</b>	1 ~ 65535	1720
04	<b>Dial Number</b>	Character (Max 12)	No Setting
05	<b>Keep Alive mode for SIP</b>	0 = Disable 1 = Option Keep Alive Mode	
06	<b>SIP Profile</b>	1 = Profile 1 2 = Profile 2 3 = Profile 3 4 = Profile 4 5 = Profile 5 6 = Profile 6	

### Conditions

None

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-27 : H.323 System Interconnection with Application Setup

Level:

**IN**

---

### Description

Use **Program 10-27 : IP System ID** to set the IP address of the networked IP systems.

### Input Data

Network System ID	1 ~ 50
-------------------	--------

Item No.	Item	Input Data	Description	Default
01	<b>IP Address</b>	0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254	System ID is related with the System ID in the Numbering Plan (Program 11-01-03). When the digits are analyzed and the system ID is determined from the System data set in the Numbering Plan, the networking call is sent to the IP Address set in this Program. The IP Address should be the IP Address of the peer CPU (Program 10-12-09).	0.0.0.0
02	<b>Call Procedure Port</b>	1 ~ 65535	The Port Number should be set with the same value as the H.225 setup port in Program 84-02-33.	1730

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-28 : SIP System Information Setup

Level:

**SA**

### Description

Use **Program 10-28 : SIP System Information Setup** to set up basic SIP trunking.

### Input Data

Profile	1 ~ 6
---------	-------

Item No.	Item	Input Data	Description	Default
01	<b>Domain Name</b>	Up to 64 Characters (ex. : UserID@Host-Name.DomainName)	Set the domain name of the SIP-URL.	No Setting
02	<b>Host Name</b>	Up to 48 Characters (ex. : UserID@Host-Name.DomainName)	Set the host name of the SIP-URL.	No Setting
03	<b>Transport Protocol</b>	0 = UDP 1 = TCP 2 = TLS (V2.0 or higher)	Set the protocol for the connection.	0
05	<b>Domain Assignment</b>	0 = IP Address 1 = Domain Name	If the information from Telco was a domain name (siptrunk@sip.com) then set to domain. If the information for Telco was a IP address then set to IP Address.	0
06	<b>IP Trunk Port Binding</b>	0 = Disable 1 = Enable	Trunk port binding is only used for SIP trunks to the provider in Non-Registration Mode only. When this is disabled, an inbound call comes in and follows your DID routing but it comes in on the first available trunk. When enabled, the inbound call comes in and follows your normal DID routing but maps to that specified trunk. If that trunk is busy, it sends back a busy unless you build a hunt group. To build the hunt group, it references command 14-12-02 (pilot register ID). This then points you to command 10-36-02. All the numbers with the same pilot are in the same hunt group.	0

### Conditions

None

### Feature Cross Reference

None

# Program 10 : System Configuration Setup


## 10-29 : SIP Server Information Setup

Level:

**SA**

### Description

Use **Program 10-29 : SIP Server Information Setup** to define the SIP Proxy setup for outbound/inbound. The 10-29 commands are not used in non-registration mode.

 If entries are made in Program 10-29-xx for a SIP Server and the SIP Server is then removed or not used, the entries in Program 10-29-xx must be set back to their default settings. Even if 10-29-01 is set to 0 (off), the system still checks the settings in the remaining 10-29 programs.

### Input Data

Profile	1 ~ 6
---------	-------

Item No.	Item	Input Data	Description	Default
01	<b>Outbound Default Proxy</b>	0 = Off 1 = On	This sets whether the SIP message is always sent through the Default Proxy.	0
02	<b>Inbound Default Proxy</b>	0 = Off 1 = On	Need to be registered in registration mode. This sets whether the SIP message is always received through the Default Proxy.	0
03	<b>Default Proxy IP Address</b>	0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254	This is optional and used if the provider gives you a proxy address that is different than the registration address. If the provider is using domain names instead of IP addresses, leave this at default.	0.0.0.0
04	<b>Default Proxy Port Number</b>	0 ~ 65535	The port number of the Default Proxy is set.	5060
05	<b>Registrar Mode</b>	0 = None 1 = Manual	The mode registered in the registration server is set.	0
06	<b>Registrar IP Address</b>	0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254	IP address of the SIP registration server is set.	0.0.0.0
07	<b>Registrar Port Number</b>	0 ~ 65535	The port number of the SIP registration server is set.	5060
11	<b>Registrar Domain Name</b>	Up to 128 Characters	This sets the domain name of the registration server.	No Setting
12	<b>Proxy Domain Name</b>	Up to 64 Characters	This specifies the domain name of the SIP server.	No Setting
13	<b>Proxy Host Name</b>	Up to 48 Characters (SIP Profile:1-2)	This specifies the host name of the SIP server.	No Setting

Item No.	Item	Input Data	Description	Default
14	<b>SIP Carrier Choice</b>	0 = Default 1 = Carrier A : 7 = Carrier G 8 = Carrier H : 26 = Carrier Z	This selects the carrier type of the SIP server. When Carrier A, B, or C is selected in PRG10-29-14, PRG10-29-16 Register Sub Mode is set "On" automatically.	0
15	<b>Registration Expiry (Expire) Time</b>	120 ~ 65535 seconds	This sets the expiration time when the SIP trunk registers to the Sip server. When half the time set here passes, the registration update is automatically done.	3600
16	<b>Register Sub Mode</b>	0 = Off (Allow invalid Invite message) 1 = On (Deny invalid Invite message)	Prevents an invalid Invite message. If the "register information that system send to SIP server" and the "Invite information that system receive" are different, system sends "404 Not Found" message. If PRG10-29-05 Register Mode is 0; Off, it is necessary to set 0; Off in PRG10-29-16.	0
19	<b>Keep Alive by Option Message</b>	0 = Disable 1 = Enable	Enabling this program will receive SIP OPTION request message from SL2100 once the SIP Trunk Keep Alive Interval Timer has expired.	0
20	<b>Authentication Trial</b>	0 ~ 9	This is how many times it will try an authenticate before timing out and not registering.	1
21	<b>Network Address Port Translation (NAPT) Router Setup</b>	0 = No (Disable) 1 = Yes (Enable)	If using an external NAPT Router or not.	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-31 : Network Keep Alive Setup

Level:

**IN**

---

### Description

Use **Program 10-31 : Network Keep Alive Setup** to set the interval and retry count of the SLNet networking keep alive message. The keep alive is used for IP networking.

The keep alive message is automatically responded to by the destination system, if the response is not received the retry count will start. If a response is not received within the number of retries, the networking link will be taken out of service.

When the link is taken out of service:

- Any calls that are in progress will be released.
- Park Hold orbits will be released.
- No further Park Hold information will be sent until the link is active.

The link will automatically become active when the next keep alive response is received.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Keep Alive Interval	0 ~ 65535 seconds	This program is used to set the interval of the Keep Alive timer. The system does not send Keep Alive when this item is set to 0.	0
02	Keep Alive Retry Timer	1 ~ 255	Set how many times the system resends Keep Alive.	5

### Conditions

- The Keep Alive message must be sent and a response not received for the retry count, for the link to be taken out of service and the calls in progress and Park Hold orbits to be released.

---

### Feature Cross Reference

None



# Program 10 : System Configuration Setup

## 10-33 : SIP Registrar/Proxy Information Basic Setup

Level:

**IN**

---

### Description

Use **Program 10-33 : SIP Registrar/Proxy Information Basic Setup** to set the registrar/proxy options for SIP extensions.

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>Registration Expire Time</b>	60 ~ 65535	After this time expires, the UA's are forced to reregister with the CPU. This allows the CPU to keep a current location of the entire end UA's.	3600
02	<b>Authentication Mode</b>	0 = Disable 1 = Enable	Check here if a password is desired for the IP SIP phones to register. When checked, 15-05-16 must have a password entered and also the SIP phone must have the same password. When using Authentication, the station number is the authorization name.	1
03	<b>Registrar/Proxy Domain Name</b>	Up to 64 Characters	Set the domain name of the SIP proxy.	No Setting
04	<b>Registrar/Proxy Host Name</b>	Up to 48 Characters	Set the domain name of the SIP proxy.	No Setting
05	<b>NAT Mode</b>	0 = Disable 1 = Enable	Enable this Mode if the System controls the SIP Phone by the NAT router.	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-36 : SIP Trunk Registration Information Setup

Level:

**IN**

### Description

Use **Program 10-36 : SIP Trunk Registration Information Setup** to set the SIP trunk registration information.

### Input Data

Profile	1 ~ 6
---------	-------

Register ID	0 ~ 31
-------------	--------

Item No.	Item	Input Data	Description	Default
01	<b>Registration</b>	0 = Disable 1 = Enable	This setting determines if the SIP trunk information is registered.	0
02	<b>User ID</b>	Up to 32 Characters When assigning the User ID, the ID may contain only alpha characters. (A space and/or special characters are not allowed in the User ID field). (ex. : UserID@Host-Name.DomainName)	User ID in the SIP Invite Setup message. Use it for outbound caller ID information if no information is assigned in commands 21-17, 21-19, 15-16, 14-12 and 10-36. A call cannot be completed across the span if there is no outbound CID info. The reason for this is: the from and display portion of the invite message would be blank, and it would not know where the call originated from.	No Setting
03	<b>Authentication User ID</b>	Up to 64 Characters		No Setting
04	<b>Authentication Password</b>	Up to 64 Characters		No Setting

### Conditions

None

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-37 : UPnP Setup

Level:


**IN**

---

### Description

Use **Program 10-37 : UPnP Setup** to set the UPnP (Universal Plug and Play) options for SIP trunks.

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>UPnP Mode</b>	0 = Disable 1 = Enable	If the system controls the SIP phone through the NAT Router this program should be 1: Enable.   Router must support UPnP.	0
02	<b>Retry Time</b>	0, 60 ~ 3600 (1 ~ 59 cannot be input)	Set interval time to re-check the Router for the WAN IP address. When this set as 0 it will not retry.	60

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-39 : Fractional Setup

Level:

**IN**

---

### Description

Use **Program 10-39 : Fractional Setup** to enable or disable the ability to use fractional T1 or PRI.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Fractional Support	0 = Disable (when disabled the system will assign the PRI as a full PRI trunks.) 1 = Enable (when enabled the system will not assign any trunks to the PRI, the trunks must be manually configured.)	This program is used to enable/disable the system's ability to use a fractional PRI or T1.	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-42 : Virtual Loop Back Port Setting

Level:

**IN**

---

### Description

Use **Program 10-42 : Virtual Loop Back Port Setting** to set the data for the Virtual Loop Back Port.

### Input Data

Item No.	Item	Input Data	Default
01	Number of Loop Back Ports	0 ~ 30 (0 = No Setting)	0
02	Logical Trunk Port Number	1 ~ 128	0
03	Logical Telephone Port	1 ~ 128	0
04	Layer 3 Timer Type	1 ~ 5	1
05	Calling Party Number Announcement	0 = No 1 = Yes	1
06	S-point DDI digits	0 ~ 4	0
07	S-point Call Busy Mode	0 = Alerting Message 1 = Disconnect Message	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-45 : IP Routing Table Setup

Level:

**SA**

### Description

Use **Program 10-45 : IP Routing Table Setup** to set up the IP Routing Table.

### Input Data

Route Table Number	1 ~ 100
--------------------	---------

Item No.	Item	Input Data	Default
01	Network Address	0.0.0.0 ~ 126.255.255.254 128.0.0.0 ~ 191.255.255.254 192.0.0.0 ~ 223.255.255.254	0.0.0.0
02	Subnet Mask	128.0.0.0   192.0.0.0   224.0.0.0   240.0.0.0   248.0.0.0   252.0.0.0   254.0.0.0   255.0.0.0   255.128.0.0   255.192.0.0   255.224.0.0   255.240.0.0   255.248.0.0   255.252.0.0   255.254.0.0   255.255.0.0   255.255.128.0   255.255.192.0   255.255.224.0   255.255.240.0   255.255.248.0   255.255.252.0   255.255.254.0   255.255.255.0   255.255.255.128   255.255.255.192   255.255.255.224   255.255.255.240   255.255.255.248   255.255.255.252   255.255.255.254   255.255.255.255	0.0.0.0
03	Default Gateway	0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254	0.0.0.0

### Conditions

None

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-46 : IP MLT Server Information Setup


Level:

**IN**

### Description

Use **Program 10-46 : IP MLT Server Information Setup** to set up the information of SIP Multiline Server.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Register Mode</b>	0 = Plug and Play 1 = Auto 2 = Manual	<b>Plug and Play:</b> When the phone boots up, it reports the ext. assigned in the phone or chooses the next available extension in the system. Password is not required. <b>Auto:</b> If set to Auto, the SIP user name and password must be entered on the actual IP phone. These settings must match 84-22/15-05-27, or the phone does not come on-line. <b>Manual:</b> When the phone boots up, it prompts user to enter a user ID and password before logging in. It checks this user ID/password against 84-22/15-05-27. If there is no match, the phone does not come online.	0	
04	<b>Server Name</b>	Up to 32 characters	Assign the Server name to be used in the SIP URL.	sipphd	
06	<b>Register Port</b>	0 ~ 65535	Assign the port number in which the SIP messages are sent to on the VoIPDB. This same port number must be assigned in the SIP Multiline terminals.	5080	
07	<b>Encryption Mode</b>	0 = Off 1 = All	If this command is changed, it requires a CPU reset.	0	
08	<b>Encryption Type</b>	0 = Mode 1		0	
09	<b>One Time Password</b>	Up to 10 characters (0 ~ 9, *, #)	 <i>Web pro indicates password with * mark.</i>	No Setting	10-46-07
10	<b>1st IP MLT to register</b>	1 ~ 128		1	10-46-01
11	<b>Multicast IP Address</b>	224.0.0.0 ~ 239.255.255.255	This sets the Multicast IP address so that two or more main devices don't overlap on the same network, or if Multicast is used by other IP services.	224.0.0.10	
12	<b>Multicast Port</b>	0 ~ 65535		30000	
13	<b>Subscribe Session Port</b>	0 ~ 65535		5081	

Item No.	Item	Input Data	Description	Default	Related Program
14	<b>NAT Mode</b>	0 = Off 1 = On	When the system controls the SIP multiline terminal via the NAT router, this system data is set to On.	0	

### Conditions

None

---

### Feature Cross Reference

None



# Program 10 : System Configuration Setup

## 10-47 : Terminal License Server Information Setup

Level:

**IN**

---

### Description

Use **Program 10-47 : Terminal License Server Information Setup** to setup the information of Terminal License Server.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Register Port of TCP I/F	0 ~ 65535	This set the register port number of TCP I/F.	6080
02	TCP Keep Alive Time	1~255 seconds	This set the TCP keep alive time.	5

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-48 : License Activation

Level:

**IN**

---

### Description

Use **Program 10-48 : License Activation** to turn on the license issued from the license server.

### Input Data

Item No.	Item	Input Data	Default
01	Software Key Code	20-digit character	No Setting
02	Activation Code	8-digit hexadecimal number	No Setting
03	Feature Code	7-digit number	No Setting

### Conditions

The Key Operation for input item 03 is as follows;

<b>Hold</b>	Edit next feature code <ul style="list-style-type: none"> <li>• Up to 10 feature code is possible to input at once.</li> <li>• Register the license when 10th feature code is edited.</li> </ul>
<b>Soft Key2 (BACK)</b>	Edit previous feature code
<b>Soft Key3 (SUBMIT)</b>	Register the license

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-49 : License File Activation

Level:

**IN**

---

### Description

Use **Program 10-49 : License File Activation** to enable the command to save the license file via SD card which is issued from the license server.

### Input Data

Item No.	Item	Input Data	Default
01	Save License File on SD card	Dial 1 + Hold (Press Hold to cancel.)	-

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-50 : License Information

Level:

**IN**

---

### Description

Use **Program 10-50 : License Information** to confirm license information that is stored in a system.

### Input Data

Feature Code Number	0000 ~ 9999
---------------------	-------------

Item No.	Item	Input Data	Default
01	License Name	Character	-
02	Feature Code License Qty	0 ~ 32767	-
03	Campaign License Qty	0 ~ 32767	-
04	Campaign License Remaining Days	0 ~ 9999	-

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-51 : PRI (PRI/T1) Mode Selection

Level:

**IN**

---

### Description

#### Input Data

Slot Number	1 ~ 12
-------------	--------

Item No.	Item	Input Data	Description	Default
01	PRI/T1 Selection	0 = PRI 1 = T1	Chose whether the board works as PRI or T1.	0 = PRI

#### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-52 : Free License Information

Level:

**IN**

---

### Description

Use Program 10-52 : Free License Information to display information on free of charge license.

### Input Data

Item No.	Item	Input Data	Default
01	Free License remain days	0 ~ 9999	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-54 : License Configuration for Each Package

Level:

**IN**

---

### Description

Use **Program 10-54 : License Configuration for Each Package** to set the license information for each board.

### Input Data

Slot Number	0 ~ 12
-------------	--------

License Index Number	1 ~ 32
----------------------	--------

Item No.	Item	Input Data	Default
01	License Code	0000 ~ 9999	No Setting
02	License Quantity	0 ~ 128	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-58 : Network Address

Level:

**IN**

### Description

Use **Program 10-58 : Network Address** to set the local network address when the SIP Terminal connects the system via a local router.

### Input Data

Area Table	1 ~ 8
------------	-------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>IP Address</b>	0.0.0.0 ~ 126.255.255.254   128.0.0.1 ~191.255.255.254   192.0.0.1 ~ 223.255.255.254	Sets local network address. If the system uses both the Intranet and NAT router please input the IP Network address of the terminal connected to the Internet.	0.0.0.0	10-46-14
02	<b>Subnet Mask</b>	248.0.0.0   252.0.0.0   254.0.0.0   255.0.0.0 255.128.0.0   255.192.0.0   255.224.0.0 255.240.0.0   255.248.0.0   255.252.0.0 255.254.0.0   255.255.0.0   255.255.128.0 255.255.192.0   255.255.224.0 255.255.240.0   255.255.248.0 255.255.252.0   255.255.254.0 255.255.255.0   255.255.255.128 255.255.255.192   255.255.255.224 255.255.255.240   255.255.255.248 255.255.255.252   255.255.255.254	Sets local subnet mask.	0.0.0.0	10-46-14

### Conditions

None



---

## Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-60 : Audio Port Setup

Level:

**IN**

---

### Description

Use **Program 10-60 : Audio Port Setup** to defines which audio port on the 082U board is used for BGM/External MOH/External Speaker. Each cabinet can be set except 4th slot (4, 8, 12).

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>BGM Channel</b>	0 ~ 3, 5 ~ 7, 9 ~ 11	This item sets for BGM. It's impossible to set same as External MOH.	0
02	<b>External MOH Channel</b>	0 ~ 3, 5 ~ 7, 9 ~ 11	This item sets for External MOH. It's impossible to set same as BGM.	0
03	<b>External Speaker Channel 1</b>	0 ~ 3, 5 ~ 7, 9 ~ 11	This item sets for External Speaker 1. It's impossible to set same as External Speaker.	0
04	<b>External Speaker Channel 2</b>	0 ~ 3, 5 ~ 7, 9 ~ 11	This item sets for External Speaker 2. It's impossible to set same as External Speaker.	0
05	<b>External Speaker Channel 3</b>	0 ~ 3, 5 ~ 7, 9 ~ 11	This item sets for External Speaker 3. It's impossible to set same as External Speaker.	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-61 : Relay Port Setup

Level:

**IN**

### Description

Use Program 10-61 : Relay Port Setup to defines the relay port type on the 082U.

### Input Data

SLOT No.	1 ~ 12
----------	--------

Item No.	Item	Input Data	Description	Default
01	Relay Port 1	0 = No Setting 1 = External MOH 2 = BGM resource 3 = External Speaker 4 = Door Phone	This item sets kind of device per Slot for Relay port 1.	0
02	Device Index 1	[In case Item 01 is 1 or 2.] Not Use [In case Item 01 is 3.] 1 ~ 3 External Speaker message No. [In case Item 01 is 4.] 1 ~ 6 Door Phone No.	This item sets device index for Relay port 1. It's impossible to set both External Speaker or Door Phone to Relay 1 and 2.	0 (Not Used)
03	Relay Port 2	0...No Setting 1 = External MOH 2 = BGM resource 3 = External Speaker 4 = Door Phone	This item sets kind of device per Slot for Relay port 2.	0
04	Device Index 2	[In case Item 03 is 1 or 2.] Not Use [In case Item 03 is 3.] 1 ~ 3 External Speaker message No. [In case Item 03 is 4.] 1 ~ 6 Door Phone No.	This item sets device index for Relay port 2. It's impossible to set both External Speaker or Door Phone to Relay 1 and 2.	0 (Not Used)

### Conditions

None

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-62 : NetBIOS Setting

Level:


**IN**

---

### Description

Use Program 10-62 : NetBIOS Setting to set the data of NetBIOS.

### Input Data

Item No.	Item	Input Data	Description	Default
01	NetBIOS Mode	0 = Disabled 1 = Enabled		1
02	NetBIOS Name	Maximum 15 characters	 Please avoid using Space between the words. Also when you create name please use all upper letters.	SL2100

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-63 : DHCP Client Setting

Level:

**IN**

---

### Description

Use Program 10-63 : DHCP Client Setting to set the data of DHCP Client.

### Input Data

Item No.	Item	Input Data	Description	Default
01	DHCP Client Mode	0 = Disabled 1 = Enabled	If you are using IP phones/trunks it is recommended to not use the DHCP client function, a static IP address would be preferred. If you are going to still use the DHCP client function then the DHCP server should be setup so that the same IP address is always provided to the system.	1

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-67 : SIP Stack Configuration Setup

Level:

**SA**

---

### Description

Use Program 10-65 :SIP Stack Configuration Setup to setup SIP system base setting.

### Input Data

Item No.	Item	Input Data	Default	Related Program
01	DNS Mode	0 = off 1 = on	0	
02	DNS IP Address	0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254	0.0.0.0	10-67-01
03	DNS Port	0 ~ 65535	53	10-67-01
04	DNS Source Port	0 ~ 65535	53	10-67-01
05	Request ReTx Start time	0 ~ 65535 (0 ms ~ 6553.5 sec)	5 (500 ms)	
06	Request Max ReTx Interval	0 ~ 65535 (0 ms ~ 6553.5 sec)	40 (4000 ms)	

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-68 : IP Trunk Availability

Level:

**IN**

---

### Description

Use **Program 10-68: IP Trunk Availability** to set the availability of SIP Trunk in this program.

### Input Data

Setting	1 ~ 10
---------	--------

Item No.	Item	Input Data	Default
01	Trunk Type	0 = None 1 = SIP 2 = H.323 3 = Reserved	0
02	Start Port	0 ~ 128	0
03	Number of Port	0 ~ 64	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-69 : UC Server General Settings

Level:

**IN**

### Description

Use **Program 10-69: UC Server General Settings** to set the general settings for the UC Server.

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>UC Server Availability</b>	0 = Disable 1 = Enable	Enable the UC Server Application	0 = Disable
02	<b>UC Server IP Address</b>	0.0.0.0 ~ 126.255.255.254, 128.0.0.1 ~ 191.255.255.254, 192.0.0.1 ~ 223.255.255.254		0.0.0.0
03	<b>UC Server Hostname</b>	Up to 255 characters	ComputerName where the SharedsServices is installed	NECUCSvr
04	<b>UC Server Port Number</b>	0 ~ 65535		0
05	<b>UC Server Trace</b>	0 = Disable 1 = Enable	To enable the trace capture	0 = Disable
06	<b>UC Server Use Name for Communication</b>	0 = Disable 1 = Enable	To use the ComputerName where the SharedsServices is installed	0 = Disable
07	<b>UC Server Large System Mode</b>	0 = Disable 1 = Enable	To enable large number of clients	0 = Disable
08	<b>UC Server Auto Restart</b>	0 = Disable 1 = Enable	UC Server to be restarted at regular intervals. Enable this and choose the month/day and time to restart automatically	0 = Disable
09	<b>UC Server Auto restart frequency</b>	0 = Weekly 1 = Monthly	UC Server to be restarted at regular intervals. Choose Monthly or Weekly	0 = Weekly
10	<b>UC Server Auto Restart : Day of the Week</b>	0 = Sun 1 = Mon 2 = Tue 3 = Wed 4 = Thu 5 = Fri 6 = Sat	UC Server to be restarted at regular intervals. Choose the day it wants to be restarted	0 = Sun
11	<b>UC Server Auto Restart Week</b>	0 = First 1 = Second 2 = Third 3 = Fourth	UC Server to be restarted at regular intervals. Choose the week day pattern	0 = First
12	<b>UC Server Auto Restart Day</b>	0 = Sun 1 = Mon 2 = Tue 3 = Wed 4 = Thu 5 = Fri 6 = Sat	UC Server to be restarted at regular intervals. Choose the day of the week	0 = Sun



Item No.	Item	Input Data	Description	Default
13	UC Server Auto Re-start Time	0000 ~ 2359	UC Server to be restarted at regular intervals. Choose the time the server to be restarted	0000

**Conditions**

None

---

**Feature Cross Reference**

None

# Program 10 : System Configuration Setup

## 10-70 : UC Server Voicemail Interface Settings

Level:

**IN**

---

### Description

Use **Program 10-70: UC Server Voicemail Interface Settings** to configure the VoiceMail Integration for the UC Server.

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>UC Server Voicemail Intergration</b>	0 = Disable 1 = Enable	Enable UM8000 integration with the UC Client	1 = Enable
02	<b>UM8000 IP Address</b>	IP Address 0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254		0.0.0.0
03	<b>UM8000 Port Number</b>	0~65535	TCP Port Number	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 10 : System Configuration Setup

## 10-72 : Network Security Setup

Level:

**IN**

---

### Description

Use **Program 10-72: Network Security Setup** to define the Server Certificate and the Private Key for TLS connection when the SL2100 receives a TLS request.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Server Certificate	Up to 32 characters	Set the Sever Certificate file's name for SL2100.	No setting
02	Private Key	Up to 32 characters	Set the Private Key file's name for SL2100.	No setting

### Conditions

None

---

### Feature Cross Reference

- STD SIP-TLS Connection Support

# Program 10 : System Configuration Setup

## 10-76 : Push Notification Service Basic Setup

Level:

**IN**

(This Program is available for V2.00 or higher)


### Description

Use **Program 10-76: Push Notification Service Basic Setup** to enable Push Proxy Server access for PUSH Notification to the VoIP Application.



*In Program 24-02-15 change the initial value to 8 sec when using the Push Notification service.*

### Input Data

Item No.	Item	Input Data	Description	Default
01	Domain Name	Maximum 128 characters	Set Domain Name of Push Proxy Server.	Refer below
02	Access Key	Read Only		Refer below
03	Server Certificate	Maximum 32 characters	Enter Server Certificate file name.  <i>In SL2100 Ver 2.00, this program is only enter the Server Certificate file name "AmazonRootC1.pem" which is included in the system.</i>	-
04	HTTPS proxy server address	0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254	Set HTTPS Proxy Server IP Address.	0.0.0.0
05	HTTPS proxy server port	1 ~ 65535	Set HTTPS Proxy Server port number.	8080

**Table 2-1 Default**

Item No.	Default
01	usa01.nec-pushproxy.com
02	A2Hi123s>Y=RBx4u5DI7wO9?70M<2@JMsCD8QErfX:N96GyDBLsK6NsJZ;P2V63

### Conditions

None

### Feature Cross Reference

- IP Single Line Telephone (SIP) - PUSH Notification

# Program 10 : System Configuration Setup

## 10-81 : Terminal-ID Assignment Setup

Level:

**IN**

---

### Description

Use **Program 10-81: Terminal-ID Assignment Setup** to set the terminal ID for each MAC address of the IP device.

### Input Data

Table Number	1 ~ 960
--------------	---------

Item No.	Item	Input Data	Description	Default
01	MAC Address	MAC address 00-00-00-00-00-00 ~ FF-FF-FF-FF-FF-FF		00-00-00- 00-00-00
02	Terminal-ID	0-999		0

### Conditions

None

---

### Feature Cross Reference

E-911 Compatibility

# Program 10 : System Configuration Setup

## 10-83 : Location Information Setup (Future Use)

Level:

**IN**

### Description

Use **Program 10-83: Location Information Setup (Future Use)** is used to assign a Location Information (address) to each Terminal ID you wish to send on Location by Value (Future Use) function. This Program is available from V3.10 or later.

### Input Data

Terminal-ID	0 ~ 999
-------------	---------

Item No.	Item	Input Data	Description	Default
01	<b>State (For Future Use)</b>	Maximum of 32 characters per alphanumeric string		No Setting
02	<b>City (For Future Use)</b>	Maximum of 32 characters per alphanumeric string		No Setting
03	<b>Street (For Future Use)</b>	Maximum of 32 characters per alphanumeric string		No Setting
04	<b>House Number (For Future Use)</b>	Maximum of 8 digits		No Setting
05	<b>Additional Location (For Future Use)</b>	Maximum of 32 characters per alphanumeric string		No Setting
06	<b>ZIP Code (For Future Use)</b>	Maximum of 9 digits		No Setting
07	<b>Floor (For Future Use)</b>	Maximum of 3 digits (0-999)		No Setting

### Conditions

None

### Feature Cross Reference

E-911 Compatibility

## Program 10 : System Configuration Setup

### 10-84 : Location Information Setup for Dispatchable Location for Emergency Calls (911) Service Provider

Level:

**IN**

---

#### Description

Use **Program 10-84: Location Information Setup for Dispatchable Location for Emergency Calls (911) Service Provider** to set location information from Dispatchable Location for Emergency Calls (911) Service Provider to each terminal ID in case of Location by Reference function.

#### Input Data

Terminal-ID	0 ~ 999
-------------	---------

Item No.	Item	Input Data	Description	Default
01	Location ID	Up to 32 characters		No Setting
02	Location Notice	0 = Disable 1 = Enable	Specifies whether to notify the location information to NG911 service provider.	1
03	Location Name	Up to 12 characters	The name set here is displayed in the pull-down list when changing the setting of Program 15-31-01 in User Programming.	No Setting

#### Conditions

None

---

#### Feature Cross Reference

E-911 Compatibility

# Program 10 : System Configuration Setup


## 10-85 : Dispatchable Location for Emergency Calls (911) Service Provider

Level:


**IN**

### Description

Use **Program 10-85: Dispatchable Location for Emergency Calls (911) Service Provider** to set an Account URL from Dispatchable Location for Emergency Calls (911) Service Provider. A maximum of six Account URLs can be set from each NG911 Service Provider.

 *The URL address from the service provider for Bandwidth may not contain a / at the end. When entering the address a / must be added at the end.  
Example:https://emergency.bandwidth.com/locations/customer1234/  
If the service provider is other than Bandwidth, NEC will specify detailed information after the connection confirmation is completed.*

### Input Data

Profile		1 ~ 6		
Item No.	Item	Input Data	Description	Default
01	<b>Service (For Future Use)</b>	0 = By Value 1 = By Reference	This Program selects the information notification method of Dispatchable Location for Emergency Calls (911).  <i>This program is available from V3.10 or later.</i>	1
02	<b>ACCOUNT URL</b>	Maximum 128 characters	Location by Reference function only.	No Setting

### Conditions

None

### Feature Cross Reference

E-911 Compatibility



# Program 11 : System Numbering

## 11-01 : System Numbering

Level:

**IN**

### Description

Use **Program 11-01 : System Numbering** to set the system numbering plan. The numbering plan assigns the first and second digits dialed and affects the digits an extension user must dial to access other extensions and features, such as service codes and trunk codes. If the default numbering plan does not meet the site requirements, use this program to tailor the system numbering to the site.

**Caution!**


*Improperly programming this option can adversely affect system operation. Make sure you thoroughly understand the default numbering plan before proceeding. If you must change the standard numbering, use the chart for [Table 2-2 System Numbering Default Settings](#) to keep careful and accurate records of your changes. Before changing your numbering plan, use PC Pro to make a backup copy of your system data.*


Changing the numbering plan consists of three steps:

#### Step 1 : Enter the digit (s) you want to change

You can make either single or two digit entries. In the Dialed Number column in the [Table 2-2 System Numbering Default Settings](#), the nX rows (e.g., 1X) are for single digit codes. The remaining rows (e.g., 11, 12, etc.) are for two digit codes.

- Entering a single digit affects all the Dialed Number entries beginning with that digit. For example, entering 6 affects all number plan entries beginning with 6. The entries you make in step 2 and step 3 below affect the entire range of numbers beginning with 6. (For example, if you enter 3 in step 2 the entries affected are 600 ~ 699. If you enter 4 in step 2 below, the entries affected are 6000 ~ 6999.)
- Entering two digits lets you define codes based on the first two digits a user dials. For example, entering 60 allows you to define the function of all codes beginning with 60. In the default program, only \* and # use 2-digit codes. All the other codes are single digit. If you enter a two digit code between 0 and 9, be sure to make separate entries for all the other two digit codes within the range as well. This is because in the default program all the two digit codes between 0 and 9 are undefined.

 *Defining codes based on more than 2 digits require a secondary program (Program 11-20) to define the codes.*

 *When you enter two digits (e.g., 11, 12, etc.) in the system numbering plan, you must enter the following settings to single digit (e.g., 1X, 2X, etc.).*

*Number of Digits: 0  
Dial Type: 0*


#### Step 2 : Specify the length of the code you want to change

After you specify a single or two digit code, you must tell the system how many digits comprise the code. This is the **Number of Digits Required** column in the [Table 2-2 System Numbering Default Settings](#).

#### Step 3: Assign a function to the code selected

After entering a code and specifying its length, you must assign its function. This is the Dial Type column in the [Table 2-2 System Numbering Default Settings](#). The choices are:

Dial Types	Dial Type Description	Related Program	Note
0	--- Not Used ---		
1	<b>Service Code</b>	11-10 : Service Code Setup (for System Administrator) 11-11 : Service Code Setup (for Setup/Entry Operation) 11-12 : Service Code Setup (for Service Access) 11-14 : Service Code Setup (for Hotel) 11-15 : Service Code Setup, Administrative (for Special Access) 11-16 : Single Digit Service Code Setup	
2	<b>Extension Number</b>	11-02 : Extension Numbering 11-04 : Virtual Extension Numbering 11-07 : Department Group Pilot Numbers	
3	<b>Trunk Access Code</b>	11-09-01 : Trunk Access Code	
4	<b>Special Trunk Access</b>	11-09-02 : Trunk Access Code	
5	<b>Operator Access</b>	20-17 : Operator Extension	
6	<b>F-Route Access</b>	44-xx	
8	<b>Networking Access (Network ID : 0 ~ 50)</b>		
9	<b>Dial Extension Analyze</b>	11-20 : Dial Extension Analyze Table	

 Changing the Dial Type for a range of codes can have a dramatic affect on how your system operates. Assume, for example, the site is a hotel that has room numbers from 100 ~ 399. To make extension numbers correspond to room numbers, you should use Program 11-02 to reassign extension numbers on each floor from 100 to 399. (Other applications might also require you to change entries in Program 11-10 ~ 11-16.)

## Default

See the following tables for default settings.

**Table 2-2 System Numbering Default Settings**

Dial Types : 1 = Service Code, 2 = Extension Number, 3 = Trunk Access, 4 = Special Trunk Access, 5 = Operator Access, 6 = Flexible Routing, 8 = Networking Access, 9 = Dial Extension Analyze, 0 = Not Used				
Dialed	Number of Digits Required		Dial Type	
	Default	New	Default	New
1X	3		2	
11	0		0	
12	0		0	
13	0		0	
14	0		0	
15	0		0	
16	0		0	
17	0		0	
18	0		0	
19	0		0	
10	0		0	
1*	0		0	
1#	0		0	

**Dial Types : 1 = Service Code, 2 = Extension Number, 3 = Trunk Access, 4 = Special Trunk Access, 5 = Operator Access, 6 = Flexible Routing, 8 = Networking Access, 9 = Dial Extension Analyze, 0 = Not Used**

Dialed	Number of Digits Required		Dial Type	
	Default	New	Default	New
2X	3		2	
21	0		0	
22	0		0	
23	0		0	
24	0		0	
25	0		0	
26	0		0	
27	0		0	
28	0		0	
29	0		0	
20	0		0	
2*	0		0	
2#	0		0	
3X	4		2	
31	0		0	
32	0		0	
33	0		0	
34	0		0	
35	0		0	
36	0		0	
37	0		0	
38	0		0	
39	0		0	
30	0		0	
3*	0		0	
3#	0		0	
4X	3		1	
41	0		0	
42	0		0	
43	0		0	
44	0		0	
45	0		0	
46	0		0	
47	0		0	
48	0		0	
49	0		0	
40	0		0	
4*	0		0	
4#	0		0	

<b>Dial Types : 1 = Service Code, 2 = Extension Number, 3 = Trunk Access, 4 = Special Trunk Access, 5 = Operator Access, 6 = Flexible Routing, 8 = Networking Access, 9 = Dial Extension Analyze, 0 = Not Used</b>				
<b>Dialed</b>	<b>Number of Digits Required</b>		<b>Dial Type</b>	
	<b>Default</b>	<b>New</b>	<b>Default</b>	<b>New</b>
5X	3		1	
51	0		0	
52	0		0	
53	0		0	
54	0		0	
55	0		0	
56	0		0	
57	0		0	
58	0		0	
59	0		0	
50	0		0	
5*	0		0	
5#	0		0	
6X	3		1	
61	0		0	
62	0		0	
63	0		0	
64	0		0	
65	0		0	
66	0		0	
67	0		0	
68	0		0	
69	0		0	
60	0		0	
6*	0		0	
6#	0		0	
7X	3		1	
71	0		0	
72	0		0	
73	0		0	
74	0		0	
75	0		0	
76	0		0	
77	0		0	
78	0		0	
79	0		0	
70	0		0	
7*	0		0	

<b>Dial Types : 1 = Service Code, 2 = Extension Number, 3 = Trunk Access, 4 = Special Trunk Access, 5 = Operator Access, 6 = Flexible Routing, 8 = Networking Access, 9 = Dial Extension Analyze, 0 = Not Used</b>				
<b>Dialed</b>	<b>Number of Digits Required</b>		<b>Dial Type</b>	
	<b>Default</b>	<b>New</b>	<b>Default</b>	<b>New</b>
7#	0		0	
<b>8X</b>				
8X	1		1	
81	0		0	
82	0		0	
83	0		0	
84	0		0	
85	0		0	
86	0		0	
87	0		0	
88	0		0	
89	0		0	
80	0		0	
8*	0		0	
8#	0		0	
<b>9X</b>				
9X	1		3	
91	0		0	
92	0		0	
93	0		0	
94	0		0	
95	0		0	
96	0		0	
97	0		0	
98	0		0	
99	0		0	
90	0		0	
9*	0		0	
9#	0		0	
<b>0X</b>				
0X	1		5	
01	0		0	
02	0		0	
03	0		0	
04	0		0	
05	0		0	
06	0		0	
07	0		0	
08	0		0	
09	0		0	
00	0		0	

<b>Dial Types : 1 = Service Code, 2 = Extension Number, 3 = Trunk Access, 4 = Special Trunk Access, 5 = Operator Access, 6 = Flexible Routing, 8 = Networking Access, 9 = Dial Extension Analyze, 0 = Not Used</b>				
<b>Dialed</b>	<b>Number of Digits Required</b>		<b>Dial Type</b>	
	<b>Default</b>	<b>New</b>	<b>Default</b>	<b>New</b>
0*	0		0	
0#	0		0	
<b> </b>				
*X	2		1	
*1	0		0	
*2	0		0	
*3	0		0	
*4	0		0	
*5	0		0	
*6	0		0	
*7	0		0	
*8	0		0	
*9	0		0	
*0	0		0	
**	0		0	
*#	0		0	
<b> </b>				
#X	0		0	
#1	2		1	
#2	2		1	
#3	2		1	
#4	2		1	
#5	2		1	
#6	2		1	
#7	2		1	
#8	2		1	
#9	2		1	
#0	2		1	
#*	4		1	
##	2		1	

### Conditions

None

---

### Feature Cross Reference

- Flexible System Numbering

# Program 11 : System Numbering

## 11-02 : Extension Numbering

Level:


**IN**

### Description

Use **Program 11-02 : Extension Numbering** to set the extension number. The extension number can have up to eight digits. The first/second digit (s) of the number should be assigned in Program 11-01 or Program 11-20. This allows an employee to move to a new location (port) and retain the same extension number.

### Input Data

Extension Port Number	1 ~ 128
-----------------------	---------

Item No.	Item	Input Data	Description	Default
01	Extension Number	Dial (Up to 8 digits)	Set up extension numbers for multiline telephones, single line telephones and IP telephones.  <i>Extension number assignments cannot be duplicated in Programs 11-02, and 11-07.</i>	Extension Port Number : Extension Number 1 ~ 128 : 101 ~ 228

### Conditions

None

### Feature Cross Reference

- Department Calling
- Flexible System Numbering
- Intercom

# Program 11 : System Numbering

## 11-04 : Virtual Extension Numbering

Level:


**IN**

### Description

Use **Program 11-04 : Virtual Extension Numbering** to define the virtual extension numbers. The extension number can have up to eight digits. The first/second digit (s) of the number should be assigned in Program 11-01 or Program 11-20.

### Input Data

Virtual Extension Numbers	1 ~ 50
---------------------------	--------

Item No.	Item	Input Data	Description	Default
01	Extension Number	Dial (Up to 8 digits)	Set up Virtual Extension numbers.  <i>The extension number cannot be duplicated in Programs 11-02 and 11-07.</i>	Virtual Port Number : Extension Number 1 ~ 50 : 250 ~ 299

### Conditions

None

### Feature Cross Reference

- Flexible System Numbering



# Program 11 : System Numbering

## 11-07 : Department Group Pilot Numbers

Level:

**IN**

### Description

Use **Program 11-07 : Department Group Pilot Numbers** to assign a pilot number to each Department Group set up in Program 16-02. The pilot number is the number users dial for Department Calling and Department Step Calling. The pilot number can have up to eight digits. The first and second digits of the number should be assigned in Program 11-01 or Program 11-20 as type 2.

### Input Data

Department (Extension) Group Number	1 ~ 50
-------------------------------------	--------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Extension Group Pilot Number</b>	Dial (Up to 8 digits)	Use this program to assign department group pilot numbers. The number set up by Program 11-02 (Extension Numbering) cannot be used. The extension number cannot be duplicated in Programs 11-02 and 11-07.	Group Number : Pilot Number 1 ~ 49 : 3101 ~ 3149 50 : 3999	<ul style="list-style-type: none"> <li>• 16-01 : Department (Extension) Group Basic Data Setup</li> <li>• 16-02 : Department Group Assignment for Extensions</li> <li>• 16-03 : Secondary Department Group</li> </ul>

### Conditions

None

### Feature Cross Reference

- Department Calling
- Department Step Calling

# Program 11 : System Numbering

## 11-09 : Trunk Access Code

Level:

**IN**

### Description

Use **Program 11-09 : Trunk Access Code** to assign the trunk access code. The trunk access code can be set from 1 ~ 4 digits which is defined to type 3 and 4 in Program 11-01. This is the code extension users dial to access Automatic Route Selection (ARS/F-Route). The Individual Trunk Access Code is used when Trunk Group Routing is desired for an outgoing line.

**Caution!**

*The digit 9 is defined in Program 11-01 as Dial Type ( ) with the Number of Digits Required set to ( ). If you change the trunk access code in Program 11-09, you must make the corresponding changes in Program 11-01.*

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Trunk Access Code (for Type 3)</b>	Dial (Up to four digits)	Use this program to assign the trunk access code. This is the code extension users dial to access Automatic Route Selection (ARS/F-Route).	9	<ul style="list-style-type: none"> <li>• 11-01 : System Numbering</li> <li>• 14-01 ~ 07 : Basic Trunk Data Setup</li> <li>• 14-05 : Trunk Group</li> <li>• 14-06 : Trunk Group Routing</li> </ul>

Item No.	Item	Input Data	Description	Default	Related Program
02	<b>Individual Trunk Access Code (for Type 4)</b>	Dial (Up to four digits)	Use this program to define additional trunk access codes. When a user dials the Alternate Trunk Route Access Code, the system routes their call to the Alternate Trunk Route.	No Setting	<ul style="list-style-type: none"> <li>• 11-01 : System Numbering</li> <li>• 14-01 ~ 07: Basic Trunk Data Setup</li> <li>• 14-05 : Trunk Group</li> <li>• 14-06 : Trunk Group Routing</li> <li>• 21-02 : Trunk Group Routing for Extensions</li> </ul>

### Conditions

None

---

### Feature Cross Reference

- Automatic Route Selection (ARS/F-Route)
- Central Office Calls, Placing
- Trunk Group Routing

# Program 11 : System Numbering

## 11-10 : Service Code Setup (for System Administrator)

Level:

**IN**

### Description

Use **Program 11-10 : Service Code Setup (for System Administrator)** to customize the Service Codes for the System Administrator. You can customize additional Service Codes in Programs 11-11 ~ 11-16. The following chart shows:

- The number of each code (01 ~ 54).
- The function of the Service Code.
- The type of telephones that can use the Service Code.
- The default entry. For example, dialing item 26 allows users to force a trunk line to disconnect.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	Night Mode Switching (Own Group)	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	718	12-xx 20-07-01
03	Time setting	0~9, *, # Maximum of 8 digit	Terminal: MLT	728	
04	Entry Common Speed Dial	0~9, *, # Maximum of 8 digit	Terminal: MLT	753	
05	Entry Group Speed Dial	0~9, *, # Maximum of 8 digit	Terminal: MLT	754	
06	Set Trunk to Trunk Transfer per Trunk	0~9, *, # Maximum of 8 digit	Terminal: MLT	733	24-04-01
07	Cancel Trunk to Trunk Transfer per Trunk	0~9, *, # Maximum of 8 digit	Terminal: MLT	734	24-04-01
08	Set Trunk to Trunk Transfer Destination per Trunk	0~9, *, # Maximum of 8 digit	Terminal: MLT	735	24-04-01
09	Charging Cost Display by the Supervisor	0~9, *, # Maximum of 8 digit	Terminal: MLT	No Setting	
11	Entry Credit for Toll Restriction	0~9, *, # Maximum of 8 digit	Terminal: MLT	No Setting	
12	Night Mode Switching (Other Group)	0~9, *, # Maximum of 8 digit	Terminal: MLT	618	12-xx 20-07-01
16	Leave Message Waiting (by F-code + Extension No.)	0~9, *, # Maximum of 8 digit	Terminal: MLT	626	11-11-09
17	Dial Blocking by the Supervisor	0~9, *, # Maximum of 8 digit	Terminal: MLT	601	90-19

Item No.	Item	Input Data	Description	Default	Related Program
18	Call Forward Off-Premise by Doorphone	0~9, *, # Maximum of 8 digit	Terminal: MLT	722	13-05
20	Record, Erase VAU message	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Define Service Code for VRS message recording or erasing.	616	20-07-13
21	General message play back (VRS)	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	611	20-07-14
22	Record and Erase general message (VRS)	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	612	20-07-15
23	Extension accumulated printout code	0~9, *, # Maximum of 8 digit	Terminal: MLT	621	20-07-18
24	Group accumulated printout code	0~9, *, # Maximum of 8 digit	Terminal: MLT	622	20-07-19
25	Account Code Accumulated Printout Code	0~9, *, # Maximum of 8 digit	Terminal: MLT	623	20-07-20
26	Forced trunk disconnect (Only analogue trunk)	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	No Setting	20-07-11
27	Trunk port disable	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	645	20-07-12
32	Set Private Call Refuse	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	646	14-01-27 20-07-24
33	Entry Caller ID Refuse	0~9, *, # Maximum of 8 digit	Terminal: MLT	647	20-07-25
34	Set Caller ID Refuse	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	748	14-01-27 20-07-25
35	Dial-In Mode Switching	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	609	20-07-26
41	Date Setting	0~9, *, # Maximum of 8 digit	Terminal: MLT	789	20-07-30
42	Maintenance Service	0~9, *, # Maximum of 8 digit	Terminal: MLT	643	
43	VRS Incoming	0~9, *, # Maximum of 8 digit	Terminal: MLT	778	13-04 15-02-55
44	Cutting the telephone power	0~9, *, # Maximum of 8 digit	Sets the Service Code for power cutting. (for Administrator)	731	
45	Remote Monitor Permit Remote Monitor Permit	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Sets Service Code (SC) for Room monitor on/off to terminal. SC+1+Extension Number ; Room Monitor enable SC+0+Extension Number ; Room Monitor disable	610	
46	Watch Message Setting	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Service Code setting for Watching message recording to VRS.	614	
47	Warning Message Setting	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Service Code setting for Warning message recording to VRS.	615	
48	Auto Dial Setting for Sensor	0~9, *, # Maximum of 8 digit	Terminal: MLT Service Code setting for destination number when Warning mode detected.	617	

Item No.	Item	Input Data	Description	Default	Related Program
49	<b>Auto Dial Setting for Remote Watch</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT Service Code setting for destination number when remote inspection detects no answer.	619	
50	<b>Night-mode Skip (Own Group)</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	787	
53	<b>Clear Alarm Report</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	No Setting	
54	<b>Save Store Statistical Information of RTP</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT RTP statistical information is saved on SD Card. * Although it usually saves every 1000 telephone calls, save instancy at the time of this service code input.	671	



*MLT = Multiline Terminal*  
*SLT = Single Line Telephone*

### Conditions

None

---

### Feature Cross Reference

None

# Program 11 : System Numbering

## 11-11 : Service Code Setup (for Setup/Entry Operation)

Level:

**IN**

### Description

Use **Program 11-11 : Service Code Setup (for Setup/Entry Operation)** to customize the Service Codes which are used for registration and setup. You can customize additional Service Codes in Programs 11-10, and 11-12 ~ 11-16.

The following chart shows:

- The number of each code (01 ~ 76).
- The function of the Service Code.
- What type of telephones can use the Service Code.
- The default entry. For example, users to turn on or turn off Background Music by dialing the number set at item 18.

### Input Data


Item No.	Item	Input Data	Description	Default	Related Program
01	Call Forward - All	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	741	
02	Call Forward - Busy	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	742	
03	Call Forward - No Answer	0~9, *, # Maximum of 8 digit	Terminal: MLT	743	
04	Call Forward - Busy/No Answer	0~9, *, # Maximum of 8 digit	Terminal: MLT	744	
05	Call Forward - Both Ring	0~9, *, # Maximum of 8 digit	Terminal: MLT	745	
07	Follow - Me	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	746	
08	Do Not Disturb	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	747	
09	Answer Message Waiting	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	*0	11-10-16
10	Cancel All Messages Waiting	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	773	
11	Cancel Message Waiting	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	771	
12	Alarm Clock	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	727	20-01-06
13	Display Language Selection	0~9, *, # Maximum of 8 digit	Terminal: MLT	678	15-02
14	Text Message Setting	0~9, *, # Maximum of 8 digit	Terminal: MLT	No Setting	

Item No.	Item	Input Data	Description	Default	Related Program
15	Enable Hands-free Incoming Intercom Calls	0~9, *, # Maximum of 8 digit	Terminal: MLT	721	20-09-05 20-02-12
16	Force Ringing of Incoming Intercom Calls	0~9, *, # Maximum of 8 digit	Terminal: MLT	723	20-09-05 20-02-12
17	Programmable function key programming (Normal Function Level)	0~9, *, # Maximum of 8 digit	Terminal: MLT	751	15-07 11-11-38
18	BGM On/Off	0~9, *, # Maximum of 8 digit	Terminal: MLT	No Setting	
19	Key Touch Tone On/Off	0~9, *, # Maximum of 8 digit	Terminal: MLT	724	
20	Select Incoming Ring Tones	0~9, *, # Maximum of 8 digit	Terminal: MLT	720	15-02
21	Listen to Incoming Ring Tones	0~9, *, # Maximum of 8 digit	Terminal: MLT	711	
22	Extension name program	0~9, *, # Maximum of 8 digit	Terminal: MLT	700	15-01
23	Second Call for DUD/DISA/DDI/DIL	0~9, *, # Maximum of 8 digit	Terminal: MLT	679	
24	Change Station Class of Service	0~9, *, # Maximum of 8 digit	Terminal: MLT Allows an extension user to change the COS of another extension. Must be allowed in Program 20-13-28.	677	20-13-28
25	Set Automatic transfer at Department Group call	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	602	20-11-17 24-05
26	Cancel Automatic transfer at Department Group call	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	603	
27	Set destination number for automatic transfer at Department Group call	0~9, *, # Maximum of 8 digit	Terminal: MLT	604	20-11-17 24-05
28	Set Delayed transfer at Department Group call	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	605	20-11-17 24-05 24-02-08
29	Cancel Delayed transfer at Department Group call	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	606	20-11-17
30	Set DND at Department Group call	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	607	
31	Cancel DND at STG call	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	608	
33	Dial Block	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	600	
34	Temporary Toll restriction override	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	775	21-07



Item No.	Item	Input Data	Description	Default	Related Program
35	Pilot group with-drawing	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	650	
36	Walking Toll Restriction	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	663	21-14
37	Adjust of Ring Volume	0~9, *, # Maximum of 8 digit	Terminal: MLT	729	
38	Programmable function key programming (Appearance Level)	0~9, *, # Maximum of 8 digit	Terminal: MLT	752	15-07 11-11-17
39	One-touch dial number entry	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	755	
41	Tandem Ringing	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	No Setting	15-07 30-03
42	Transfer Dial Setting for Out of Range	0~9, *, # Maximum of 8 digit	-	689	13-06
43	Headset Ringing Mode Switching	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	688	
45	Set or Cancel Call Forwarding All Call Split	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	682	24-09
46	Set or Cancel Call Forwarding Busy Split	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	683	24-09
47	Set or Cancel Call Forwarding No Answer Split	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	684	24-09
48	Set or Cancel Call Forwarding Busy/No Answer Split	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	685	24-09
49	Set or Cancel Call Forwarding Both Ring Split	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	686	24-09
50	Set Message Waiting Indication	0~9, *, # Maximum of 8 digit	Terminal: SLT	No Setting	
51	Cancel Message Waiting Indication	0~9, *, # Maximum of 8 digit	Terminal: SLT	No Setting	
52	Set or Cancel Call Forward All Call at Destination Station [No Split]	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	790	24-09
53	Set or Cancel Call Forward Busy at Destination Station [No Split]	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	791	24-09
54	Set or Cancel Call Forward No Answer at Destination Station [No Split]	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	792	24-09

Item No.	Item	Input Data	Description	Default	Related Program
55	Set or Cancel Call Forward Busy/No Answer at Destination Station [No Split]	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	793	24-09
58	Call Forward with Personal Greeting (VAU)	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	713	
59	Call Attendant – Busy	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	696	15-01-08
60	Call Attendant – No Answer	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	697	15-01-09
62	Adjust of Headset Ring Volume	0~9, *, # Maximum of 8 digit	Terminal: MLT	662	11-11-37 15-02-12 15-02-41 15-02-42
65	Headset Mode Switching	0~9, *, # Maximum of 8 digit	Terminal: MLT	No Setting	
68	IntraMail Language Selection for own extension	0~9, *, # Maximum of 8 digit	Terminal: MLT,SLT	664	47-02-16
69	IntraMail Language Selection for specific extension	0~9, *, # Maximum of 8 digit	Terminal: MLT,SLT	665	20-13-53 47-02-16
70	Backlight Brightness	0~9, *, # Maximum of 8 digit	Terminal: MLT	705	15-02-61 ~ 15-02-63
72	Headset V.Announce	0~9, *, # Maximum of 8 digit	Terminal: MLT	714	
73	Select Incoming Ring Tones at trunk	0~9, *, # Maximum of 8 digit	Terminal: MLT	761	15-28-01
75	Multi Device Support (ON)	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	No Setting	
76	Multi Device Support (OFF)	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	No Setting	
79	Terminal-ID Setting	0~9, *, # Maximum of 8 digit	Terminal: MLT,SLT	781	15-31-01

 *MLT = Multiline Terminal*  
*SLT = Single Line Telephone*

## Conditions

None

---

## Feature Cross Reference

None

# Program 11 : System Numbering

## 11-12 : Service Code Setup (for Service Access)

Level:

**IN**

### Description

Use **Program 11-12 : Service Code Setup (for Service Access)** to customize the Service Codes which are used for service access. You can customize additional Service Codes in Programs 11-10, 11-11, and 11-14 through 11-16.

The following chart shows:

- The number of each code (01 ~ 64).
- The function of the Service Code.
- The type of telephones that can use the Service Code.
- The default entry. For example, dialing (Item 05) cancels a previously set Camp- On.
- Programs that may be affected with the changing the code.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Call Forward/Do Not Disturb Override</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Activating Call Forwarding/Do Not Disturb Override. This code is available only if you disable the voice mail Single Digit dialing code in Program 11-16-09.	707	
02	<b>Conference</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	#1	
03	<b>Call waiting (off-hook signaling)</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	709	
04	<b>Camp on/Call waiting call back</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	750	
05	<b>Cancel Camp-On</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	770	
06	<b>Switching of Voice Call and Signal Call</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	712	
07	<b>Step Call</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	708	
08	<b>Barge-In</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	710	
09	<b>Change to STG (Department Group) All Ring</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	No Setting	16-02
10	<b>Speed Dial Common/Station</b>	0~9, *, # Maximum of 8 digit	Assign the service code used for accessing common speed dialing (system speed dialing) bins. The service code assigned must be within your valid numbering plan in PRG.	#2	

Item No.	Item	Input Data	Description	Default	Related Program
11	Group Speed Dialing	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	#4	
12	Last Number Dial	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	#5	
13	Saved number dialing	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	715	
14	Trunk Group Access (Placing central office calls)	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	704	
15	Specified Trunk Access (Placing central office call)	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	#9	
16	Trunk Access via Networking	0~9, *, # Maximum of 4 digit	Terminal: MLT, SLT	726	
17	Clear Last Number Dialing Data	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	776	
18	Clear Saved Number Dialing Data	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	785	
19	Internal Group Paging	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	701	31-01-01
20	External Paging	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	703	
21	Meet-Me Answer to Specified Internal Paging Group	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	764	31-02-01
22	Meet-Me Answer to External Paging	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	765	
23	Meet-Me Answer in Same Paging Group	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	763	31-02-01
24	Combined Paging	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	*1	31-02-01 31-07
25	Direct Call Pickup - Own Group	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	756	
26	Call Pickup for Specified Group	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	768	23-02
27	Call Pickup	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	*#	23-02
28	Call Pickup for Another Group	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	769	23-02
29	Direct Extension Call Pickup	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Customize the Service Codes for direct extension call pickup.	**	
30	Specified Trunk Answer	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	672	
31	Park Hold in orbit	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	#6	24-03
32	Answer for Park Hold	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	*6	24-03
33	Place a call on group hold	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	732	

Item No.	Item	Input Data	Description	Default	Related Program
34	Pick a call on group hold	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	762	
35	Station Park Hold	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	757	
36	Doorphone access	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	702	
37	Common Canceling Service Code	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	*9	
38	General Purpose Indication	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	783	15-07-56 15-07-57
40	Personal speed dial	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	#7	
41	Voice Over	0~9, *, # Maximum of 8 digit	Terminal: MLT	690	11-16-08
42	Flash on Trunk lines	0~9, *, # Maximum of 8 digit	Terminal: SLT	#3	
43	Universal answer page ring	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	#0	14-05 14-06
44	Callback Test for SLT	0~9, *, # Maximum of 8 digit	Terminal: SLT	799	
45	Enabled On Hook When Holding (SLT)	0~9, *, # Maximum of 8 digit	Terminal: SLT	749	15-03-07
46	Answer On Hook When Holding (SLT)	0~9, *, # Maximum of 8 digit	Terminal: SLT	759	15-03-08
47	Call waiting answer/Split answer for SLT	0~9, *, # Maximum of 8 digit	Terminal: SLT Splitting (switching) between calls	794	11-12-03
48	Account Code	0~9, *, # Maximum of 8 digit	Terminal: SLT	##	
51	Call own mailbox	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	*8	
52	Live Monitoring	0~9, *, # Maximum of 8 digit	Terminal: MLT	No Setting	
53	Live Recording at SLT	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	654	
54	ANI/DNIS Routing to VAU	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Use when setting up ANI/DNIS Routing to the VRS Automated Attendant. Using the Transfer feature, this also allows a call to be transferred to the VRS.	782	
56	Turning off the E911 alarm ring	0~9, *, # Maximum of 8 digit	Terminal: MLT Enter the Service Code that an extension user can dial to shut off the E911 Alarm Ring.	786	21-01-13 21-01-14
57	Tandem Trunking (Unsupervised Conference)	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	#8	
58	Transfer Into Conference	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Assign the Service Code a user dials to Transfer a call to a Conference call.	624	
59	Line Drop Operation for SLT	0~9, *, # Maximum of 8 digit	Terminal: SLT	660	

Item No.	Item	Input Data	Description	Default	Related Program
60	<b>Directory Dialing</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT	No Setting	
62	<b>Security Sensor Reset</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Service Code setting for cancel Warning message sending and emergency call.	716	
63	<b>Watch Mode Start</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Service Code (SC) setting for on/off watch mode. SC+1; Watch mode start SC+0; Watch mode end.	717	
64	<b>Security Sensor Mode Start</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Service Code (SC) setting for on/off security sensor. SC+1; Start sensor detection SC+0; Ignore sensor detection	719	



*MLT = Multiline Terminal*  
*SLT = Single Line Telephone*

### Conditions

None

---

### Feature Cross Reference

None

# Program 11 : System Numbering

## 11-13 : Service Code Setup (for ACD)

Level:

**IN**

### Description

Use **Program 11-13 : Service Code Setup (for ACD)** to customize the Service Codes which are used with the Automatic Call Distribution (ACD) feature. You can customize additional Service Codes in Programs 11-10 ~ 11-12 and 11-14 ~ 11-16. The following chart shows:

- The number of each code (01 ~ 13).
- The function of the Service Code.
- The type of telephones that can use the Service Code.
- The default entry.

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>ACD Log In/Log Out (for KTS)</b>	0~9, *, # Maximum of 8 digit	Assign the service code used to Login (MLT/SLT) and Logout (MLT/SLT) ACD Agents. The service code assigned must be within your valid numbering plan in PRG.	*5
02	<b>ACD Log Out (for SLT)</b>	0~9, *, # Maximum of 8 digit	Assign the service code used to Logout SLT ACD Agents. The service code assigned must be within your valid numbering plan in PRG.	655
03	<b>Set ACD temporary release (for SLT)</b>	0~9, *, # Maximum of 8 digit	Assign the service code used to set Wrap-Up on SLT ACD Agents. The service code assigned must be within your valid numbering plan in PRG.	656
04	<b>Cancel ACD temporary release (for SLT)</b>	0~9, *, # Maximum of 8 digit	Assign the service code used to cancel Wrap-Up on SLT ACD Agents. The service code assigned must be within your valid numbering plan in PRG.	657
05	<b>Set ACD Off Duty (for SLT)</b>	0~9, *, # Maximum of 8 digit	Assign the service code used to set Off Duty on SLT ACD Agents. The service code assigned must be within your valid numbering plan in PRG.	658
06	<b>Cancel ACD Off Duty (for SLT)</b>	0~9, *, # Maximum of 8 digit	Assign the service code used to cancel Off Duty on SLT ACD Agents. The service code assigned must be within your valid numbering plan in PRG.	659
08	<b>ACD AIC Login</b>	0~9, *, # Maximum of 8 digit	Assign the service code used to set an Agent Login ID code on MLT ACD Agents. The service code assigned must be within your valid numbering plan in PRG.	No Setting
09	<b>ACD AIC Logout</b>	0~9, *, # Maximum of 8 digit	Assign the service code used to set an Agent Logout ID code on MLT ACD Agents. The service code assigned must be within your valid numbering plan in PRG.	No Setting

Item No.	Item	Input Data	Description	Default
10	<b>ACD Agent login by Supervisor</b>	0~9, *, # Maximum of 8 digit	Assign the service code used to set an Agent Login ID code by Supervisor on MLT. The service code assigned must be within your valid numbering plan in PRG.	667
11	<b>ACD Agent logout by Supervisor</b>	0~9, *, # Maximum of 8 digit	Assign the service code used to set an Agent Logout ID code by Supervisor on MLT. The service code assigned must be within your valid numbering plan in PRG.	668
12	<b>Change agents ACD group by Supervisor</b>	0~9, *, # Maximum of 8 digit	Assign the service code used to change an agent ACD group by Supervisor on MLT. The service code assigned must be within your valid numbering plan in PRG.	669
13	<b>Agent change own ACD group</b>	0~9, *, # Maximum of 8 digit	Assign the service code used to ACD Agent changing to another ACD Group on MLT. The service code assigned must be within your valid numbering plan in PRG.	670



*MLT = Multiline Terminal*



*SLT = Single Line Telephone*

## Conditions

None

---

## Feature Cross Reference

- Automatic Call Distribution (ACD)



# Program 11 : System Numbering

## 11-14 : Service Code Setup (for Hotel)

Level:

**IN**

### Description

Use **Program 11-14 : Service Code Setup (for Hotel)** to customize the Service Codes which are used with the Hotel/Motel feature. You can customize additional Service Codes in Programs 11-10 ~ 11-12, 11-15 and 11-16. The Service Codes can be used only at telephones registered as hotel terminals in Program 42-02.

The following chart shows:

- The number of each code (01 ~ 19).
- The function of the Service Code.
- The type of telephones that can use the Service Code.
- The default entry.

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>Set DND for Own Extension</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Determine what the service code should be for an internal party to set DND for own extension.	627
02	<b>Cancel DND for Own Extension</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Determine what the service code should be for an internal party to cancel DND for own extension.	628
03	<b>Set DND for Other Extension</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Determine what the service code should be for an internal party to set DND for another extension.	629
04	<b>Cancel DND for Other Extension</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Determine what the service code should be for an internal party to cancel DND for another extension.	630
05	<b>Set Wake Up Call for Own Extension</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Determine what the service code should be for an internal party to set wake up call for own extension.	631
06	<b>Cancel Wake Up Call for Own Extension</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Determine what the service code should be for an internal party to cancel wake up call for own extension.	632
07	<b>Set Wake Up Call for Other Extension</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Determine what the service code should be for an internal party to set wake up call for another extension.	633
08	<b>Cancel Wake Up Call for Other Extension</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Determine what the service code should be for an internal party to cancel wake up call for another extension.	634

Item No.	Item	Input Data	Description	Default
09	<b>Set Room to Room Call Restriction</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Determine what the service code should be for an internal party to Set Room to Room Call Restriction.	635
10	<b>Cancel Room to Room Call Restriction (Hotel)</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Determine what the service code should be for an internal party to cancel Room to Room Call Restriction.	636
11	<b>Change Toll Restriction Class for Other Extension</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Determine what the service code should be for an internal party to change the toll restriction class for another extension.	637
12	<b>Check-In</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Determine what the service code should be for an internal party to check-in another extension.	638
13	<b>Check-Out</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Determine what the service code should be for an internal party to check-out another extension.	639
14	<b>Room Status Change for Own Extension</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Determine what the service code should be for an internal party to change room status on their extension.	640
15	<b>Room Status Change for Other Extension</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Determine what the service code should be for an internal party to change room status on another extension.	641
16	<b>Room Status Output</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT Determine what the service code should be for an internal party to output the status of hotel rooms via a printer.	642
17	<b>Hotel Room Monitor</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT Determine what the service code should be for initiating Hotel Room Monitor.	675
19	<b>Hotel Room Data Set</b>	0~9, *, # Maximum of 8 digit	Terminal: MLT, SLT	No Setting



*MLT = Multiline Terminal*  
*SLT = Single Line Telephone*

## Conditions

None

---

## Feature Cross Reference

- Hotel/Motel

# Program 11 : System Numbering

## 11-15 : Service Code Setup, Administrative (for Special Access)

Level:

**IN**

### Description

Use **Program 11-15 : Service Code Setup, Administrative (for Special Access)** to customize the special access Service Codes which are used by the administrator in the Hotel/Motel feature. You can customize additional Service Codes in Programs 11-10 ~ 11-14 and 11-16.

The following chart shows:

- The number of each code (01 ~ 14).
- The function of the Service Code.
- What type of telephones can use the Service Code.
- The default entry.
- Programs that may be affected when changing the code.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	Remote Maintenance	0~9, *, # Maximum of 8 digit		730	
02	ACD Access in Dialin Conversion Table	0~9, *, # Maximum of 8 digit		760	22-04 22-11
05	System Programming Mode, Log-On	0~9, *, # Maximum of 8 digit	Terminal: MLT	# * # *	11-01
09	Transfer to Incoming Ring Group	0~9, *, # Maximum of 8 digit		No Setting	
12	Extension Data Swap	0~9, *, # Maximum of 8 digit	Terminal: MLT	No Setting	92-04
13	Remote Access from DISA	0~9, *, # Maximum of 8 digit		No Setting	22-02
14	Modem Access	0~9, *, # Maximum of 8 digit		740	



*MLT = Multiline Terminal*  
*SLT = Single Line Telephone*

### Conditions

None

---

## Feature Cross Reference

None

# Program 11 : System Numbering

## 11-16 : Single Digit Service Code Setup

Level:

**IN**

### Description

Use **Program 11-16 : Single Digit Service Code Setup** to customize the one-digit Service Codes used when a busy or ring back signal is heard. You can customize additional Service Codes in Programs 11-10 ~ 11-15.

The following chart shows:

- The number of each code (01 ~ 11).
- The function of the Service Code.
- The default entry. For example, dialing 1 (Item 03) when calling an extension switches the call from either a voice or signal call (depending on how it is currently defined).
- Programs that may be affected by changing these codes.

### Input Data

Item No.	Item	Input Data	Default	Related Program
01	Step Call	0~9, *, # Maximum of 1 digit	2	
02	Barge-In	0~9, *, # Maximum of 1 digit	No Setting	
03	Switching of Voice/Signal Call	0~9, *, # Maximum of 1 digit	1	
04	Call Waiting (Intercom off-hook signaling)	0~9, *, # Maximum of 1 digit	*	
05	Camp-On	0~9, *, # Maximum of 1 digit	#	
06	DND Override/Call forward Override	0~9, *, # Maximum of 1 digit	No Setting	
07	Message Waiting	0~9, *, # Maximum of 1 digit	0	
08	Voice Over	0~9, *, # Maximum of 1 digit	6	
09	Access to Voice Mail	0~9, *, # Maximum of 1 digit	8	
10	Department Group All Ring Mode	0~9, *, # Maximum of 1 digit	No Setting	16-01-05
11	Station Park Hold	0~9, *, # Maximum of 1 digit	No Setting	

### Conditions

None

### Feature Cross Reference

None

# Program 11 : System Numbering

## 11-17 : ACD Group Pilot Number

Level:

**IN**

---

### Description

Use **Program 11-17 : ACD Group Pilot Number** to assign the ACD Master Number for each ACD Group. This is the number a user dials to transfer calls to the ACD Group. Normally, you should use unassigned extension numbers for the master number. If you want to use an extension number which, by default, has a port number assigned, first remove the default assignment.

### Input Data

ACD Group Number	1 ~ 8
------------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>ACD Group Pilot Number</b>	Dial (Up to eight digits)	Assign the ACD Master Number for each ACD Group.	No Setting

### Conditions

None

---

### Feature Cross Reference

- Automatic Call Distribution (ACD)

# Program 11 : System Numbering

## 11-19 : Remote Conference Pilot Number Setup

Level:

**IN**


---

### Description

Use **Program 11-19 : Remote Conference Pilot Number Setup** to assign the pilot number to be used for the Remote Conference. This is the number that outside parties will call in order to connect to a conference.

### Input Data

Conference Group Number	1 ~ 4
-------------------------	-------

Item No.	Item	Input Data	Default	Related Program
01	Remote Conference Group Pilot Number	Dial (Up to 8 digits)	See 	20-13-46 20-34



*No Remote Conference Pilot Numbers assigned to any Conference Group (1 ~ 4).*

### Conditions

None

---

### Feature Cross Reference

- Conference, Remote

# Program 11 : System Numbering

## 11-20 : Dial Extension Analyze Table

Level:

**IN**

### Description

Use **Program 11-20 : Dial Extension Analyze Table** to define the dial type based on three or more digits. This program is relevant only if digits in 11-01-01 are set to 9 (Dial Extension Analyze).

### Input Data

Dial Extension Analyze Table	1 ~ 128
------------------------------	---------

Item No.	Item	Input Data	Default	Related Program
01	Dial	Dial (Up to eight digits : 0, 1 ~ 9, #, *, @)	No Setting	11-01
02	Type of Dials	Type of Dials : 0 = Not used 1 = Service Code 2 = Extension Number 5 = Operator Access 6 = F-Route Access	0	11-01

### Conditions

- When the system uses the Dial Extension Analyze Table to determine the dial type, the lower table has priority. For example, if Table 1 has 211 defined and Table 2 has 2113 defined, Table 1 is used to determine the dial type.

### Feature Cross Reference

None



# Program 12 : Night Mode Setup

## 12-01 : Night Mode Function Setup

Level:

**IN**

---

### Description

Use **Program 12-01 : Night Mode Function Setup** to set up the Night Mode options. Refer to the following chart for a description of each option, its range and default setting.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Manual Night Mode Switching</b>	0 = Off (Manual Night Mode changes are not allowed.) 1 = On (Manual Night Mode changes are allowed.)	Allow/Prevent a activating Night Service by dialing a service code.	1	11-10-01
02	<b>Automatic Night Mode Switching</b>	0 = Off (Automatic Night Mode disabled) 1 = On (Automatic Night Mode enabled)	According to a preset schedule, enable or disable Automatic Night Service for the system.	0	12-02 12-03 12-04



*Even if the operation mode is changed manually, the operation mode changes according to the schedule set up.*

### Conditions

None

---

### Feature Cross Reference

- Night Service

# Program 12 : Night Mode Setup

## 12-02 : Automatic Night Service Patterns

Level:  
**SA**

### Description

Use **Program 12-02 : Automatic Night Service Patterns** to define the daily pattern of the Automatic Mode Switching. Each Mode Group has 10 patterns. These patterns are used in Programs 12-03 and 12-04. The daily pattern consists of 20 timer Settings.

### Input Data

Night Mode Group Number	1 ~ 4
Time Schedule Pattern No.	01 ~ 10
Set Time Number	01 ~ 20

Item No.	Item	Input Data	Description	Default
01	<b>Start Time</b>	0000 ~ 2359	Per Night Service Group, Per Time Pattern, assign a starting time pattern. The first time pattern must start at 00:00 (midnight).	Refer below
02	<b>End Time</b>	0000 ~ 2359	Per Night Service Group, Per Time Pattern, assign an ending time pattern. Each used time pattern must have a starting and ending time assigned.	Refer below
03	<b>Night Mode</b>	1 ~ 8 = Night Modes 1 ~ 8		Refer below

Example :

#### Time Pattern 1

0:00	9:00	12:00	13:00	17:00	18:00	22:00	0:00
Mode 3 (midnight)	Mode 1 (day)	Mode 4 (rest)	Mode 1 (day)	Mode 4 (rest)	Mode 2 (night)	Mode 3 (midnight)	

To make the above schedule, it is necessary to set the data as follows:

Time setting 01 :	00 : 00 to 09 : 00	Mode 3 (midnight)
Time setting 02 :	09 : 00 to 12 : 00	Mode 1 (day)
Time setting 03 :	12 : 00 to 13 : 00	Mode 4 (rest)
Time setting 04 :	13 : 00 to 17 : 00	Mode 1 (day)
Time setting 05 :	17 : 00 to 18 : 00	Mode 4 (rest)
Time setting 06 :	18 : 00 to 22 : 00	Mode 2 (night)
Time setting 07 :	22 : 00 to 00 : 00	Mode 3 (midnight)

**Time Pattern 2**

00 : 00                      00 : 00

Mode 2

(night)

Time setting 01 :                      00 : 00 to 00 : 00                      Mode 2 (night)

**Default  
Time Pattern 1**

Set Time Number	Start Time	End Time	Mode
01	0000	0800	2
02	0800	1700	1
03	1700	0000	2
04	0000	0000	1
:	:	:	:
20	0000	0000	1

**Time Pattern 2**

Set Time Number	Start Time	End Time	Mode
01	0000	0000	2
02	0000	0000	1
:	:	:	:
20	0000	0000	1

**Time Pattern 3 ~ 10**

Set Time Number	Start Time	End Time	Mode
01	0000	0000	1
:	:	:	:
20	0000	0000	1

**Conditions**

None

---

**Feature Cross Reference**

- Night Service

# Program 12 : Night Mode Setup

## 12-03 : Weekly Night Service Switching

Level:

**SA**

### Description

Use **Program 12-03 : Weekly Night Service Switching** to define a weekly schedule of night-switch settings. 21-02 : Trunk Group Routing for Extensions

### Input Data

Night Mode Group Number	1 ~ 4
-------------------------	-------

Item No.	Item	Input Data	Default
01	Day of the Week	01 = Sunday 02 = Monday 03 = Tuesday 04 = Wednesday 05 = Thursday 06 = Friday 07 = Saturday	Refer below
	Time Schedule Pattern Number	0 ~ 10	

### Default

Day of the Week	Time Schedule Pattern Number
01 = Sunday	2
02 = Monday	1
03 = Tuesday	1
04 = Wednesday	1
05 = Thursday	1
06 = Friday	1
07 = Saturday	2

### Conditions

None

### Feature Cross Reference

- Night Service

# Program 12 : Night Mode Setup

## 12-04 : Holiday Night Service Switching

Level:

**SA**

---

### Description

Use **Program 12-04 : Holiday Night Service Switching** to define a yearly schedule of holiday night-switch settings. This schedule is used for the setting of special days when the company is expected to be closed, such as a national holiday.

### Input Data

Night Mode Group Number	1 ~ 4
-------------------------	-------

Item No.	Days and Months	Time Pattern Number	Default
01	0101 ~ 1231 (e.g. 0101 = Jan. 1, 1231 = Dec. 31)	0 ~ 10 (0 = No Setting)	No Setting

### Conditions

None

---

### Feature Cross Reference

- Night Service

## Program 12 : Night Mode Setup

### 12-05 : Night Mode Group Assignment for Extensions

Level:

**IN**

---

#### Description

Use **Program 12-05 : Night Mode Group Assignment for Extensions** to assign Day/Night Mode Group for each extension.

#### Input Data

Extension Number	Up to eight digits
------------------	--------------------

Item No.	Item	Input Data	Description	Default
01	<b>Night Mode Service Group Number</b>	1 = Night Mode Group 1 2 = Night Mode Group 2 3 = Night Mode Group 3 4 = Night Mode Group 4	Assign extension numbers into one of the four Night Mode Service Groups.	1

#### Conditions

None

---

#### Feature Cross Reference

- Night Service

# Program 12 : Night Mode Setup

## 12-06 : Night Mode Group Assignment for Trunks

Level:

**IN**

---

### Description

Use **Program 12-06 : Night Mode Group Assignment for Trunks** to assign a Day/Night Mode Group for each trunk port.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Description	Default
01	<b>Night Mode Group</b>	1 = Night Mode Group 1 2 = Night Mode Group 2 3 = Night Mode Group 3 4 = Night Mode Group 4	Assign the trunks into one of the four Night Mode Service Groups.	1

### Conditions

None

---

### Feature Cross Reference

- Night Service

# Program 12 : Night Mode Setup

## 12-07 : Text Data for Night Mode

Level:

**IN**

---

### Description

Use **Program 12-07 : Text Data for Night Mode** to make an original text message which is displayed on an LCD of Multiline telephone in each Mode.

### Input Data

Night Mode Group Number	1 ~ 4
-------------------------	-------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Description	Default
01	Name	Max. 12 character	Assign the data that will be displayed on the phones display when the system enters one of the eight different night modes. Only phones that have manual night mode switching enabled in class of service (PRG 20-07-01) will display the text.	Mode 1 = No Setting Mode 2 = Night Mode 3 = Mid-night Mode 4 = Rest Mode 5 = Day2 Mode 6 = Night2 Mode 7 = Mid-night2 Mode 8 = Rest2

### Conditions

None

---

### Feature Cross Reference

- Night Service



# Program 12 : Night Mode Setup

## 12-08 : Night Mode Service Range

Level:

**SA**

---

### Description

Use **Program 12-08 : Night Mode Service Range** to define the changing range of toggle key for each Day/Night Mode.

### Input Data

Night Mode Group Number	1 ~ 4
-------------------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>Toggle Between Night Modes</b>	2 ~ 8	When a Night Mode Key (PRG 15-07 key 09) is assigned as a toggle key (PRG 20-01-17), this data determines how many night modes a user toggles through when the Night Mode key is pressed. Each press of the Night Mode key toggles to the next mode.	2
02	<b>Lamp setting of toggle key</b>	0 = Off 1 = On	Whether the Lamp of toggle key sets on or off.	0

### Example :

When Program 12-08-01 is set to 3 and the Mode Key is pressed, the following modes are switched :

- Press once = Night
- Press twice = Mid-night
- Press third = Day
- Default = 2

### Conditions

None

---

### Feature Cross Reference

- Night Service

## Program 13 : Speed Dial

### 13-01 : Speed Dialing Function Setup

Level:

**IN**

---

## Description

Use Program 13-01 : Speed Dialing Function Setup to define the Speed Dialing functions.

## Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Speed Dialing Auto Outgoing Call Mode</b>	0 = Trunk Outgoing Mode (Use trunk group assigned in PRG 13-05.) 1 = Intercom Outgoing Mode (Follow the system routing for the trunk access code entered.)	Set where the Speed Dial bins will use Trunk Routing (0) or dial the bin as though it is an Intercom number (1).	0	13-05
02	<b>Station Speed Dial</b>	0 = Do not use 1 = Use	Define use additional 100 Private speed dial bin beside 1000 Common speed dial bin or not.	1	13-06
03	<b>Common Speed Dial Table Size</b>	100 ~ 1000 0 = No Common Speed Dialing (No System Speed Dial)	Assign the number of Speed Dial bins that are used for System Speed Dials.	900	13-04
04	<b>Trunk Access Routing</b>	0 = Trunk Group 1 = Trunk Route	0 = PRG13-05 defines a trunk group in PRG14-05 to select a trunk from. 1 = PRG13-05 refers to a trunk access route in PRG14-06.	0	

## Conditions

None

---

## Feature Cross Reference

- Speed Dial

# Program 13 : Speed Dial

## 13-02 : Group Speed Dialing Bins

**Level:**

**IN**

---

### Description

Use **Program 13-02 : Group Speed Dialing Bins** to define the range of bin numbers to be used by each Speed Dialing group.

(Refer to [13-03 : Speed Dialing Group Assignment for Extensions.](#))

### Input Data

Speed Dialing Group Number	1 ~ 50
----------------------------	--------

Item No.	Item	Input Data	Default
01	Starting Bin Address	0 ~ 990	All Group : (0 ~ 0)
	Ending Bin Address	0, 9 ~ 999	

### Conditions

None

---

### Feature Cross Reference

- Speed Dial

## Program 13 : Speed Dial

### 13-03 : Speed Dialing Group Assignment for Extensions

Level:

**IN**

---

#### Description

Use **Program 13-03 : Speed Dialing Group Assignment for Extensions** to assign Speed Dialing Group for each extension. There are 64 available Speed Dialing groups.

#### Input Data

Extension Number	Up to 8 digits
------------------	----------------

Item No.	Item	Input Data	Description	Default
01	<b>Speed Dial Group</b>	1 ~ 50 Assign group number for extension	Assign each extension to a speed dialing group.	1

#### Conditions

None

---

#### Feature Cross Reference

- Speed Dial

# Program 13 : Speed Dial

## 13-04 : Speed Dialing Number and Name

Level:


**SB**



### Description

Use **Program 13-04 : Speed Dialing Number and Name** to store Speed Dialing data in the Speed Dialing areas. This program is also used to define the names assigned to the Speed Dialing numbers.

### Input Data

Speed Dialing Bin Number	000 ~ 999
--------------------------	-----------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Number</b>	Dial Data : 1-9, 0, *, #, P, R, @ (Up to 36 digits)	Per speed dial bin (000 ~ 999) assign the telephone number that is to be called when the bin is accessed. If 13-01-01 is set to (0) do not include the trunk access code. If 13-01-01 is set to (1) include the trunk access code.	No Setting	
02	<b>Name (Chinese Character)</b>	Name (Chinese Character) : The Chinese character of a maximum of 12 characters Name : Up to 12 characters	Per Speed Dialing bin (000 ~ 999) assign a name to be used when searching through the directory. If a name is not assigned for a speed dial bin the speed dial entry will not be listed in the directory.	No Setting	
03	<b>Transfer Mode</b>	0 = Not Used (Calls will not be routed based off a users caller ID.) 1 = Internal Dial (Calls will be routed to an internal number specified in PRG 13-04-04.) 2 = Incoming Ring Group (Calls will be routed to a ring group specified in PRG 13-04-04.) 3 = Remote Monitor (Used for the security feature and not Flexible Caller ID routing.)	 Each time when this setting is changed Program 13-04-04 will be reset.	0	

Item No.	Item	Input Data	Description	Default	Related Program
04	<b>Destination Number</b>	If Transfer mode is (Refer to 13-04-03) : 1 = Internal Dial Mode 1 ~ 9, 0, *, #, P, R, @ (Maximum 36 Characters) 2 = Incoming Ring Group 0 ~ 50 (IRG Number) P = Pause R = Recall @ = Additional Digits when using ISDN functionality 3 = Remote Monitor Dial (Up to 8 digits)	 This setting can be changed only when Program 13-04-03 is set other than 0. Also if the Program 13-04-03 is set to 3 only Extension number can be changed.	No Setting	13-04-03
05	<b>Incoming Ring Pattern</b>	[1 or 2] Incoming Ring Pattern(0 ~ 13) Incoming Ring Pattern(0 ~ 13) 0 = normal pattern 1 = tone pattern 1 2 = tone pattern 2 3 = tone pattern 3 4 = Pattern 4 (2W Digital/IP Multiline Terminal) 5 = Scale Pattern 1 (2W Digital/IP Multiline Terminal) 6 = Scale Pattern 2 (2W Digital/IP Multiline Terminal) 7 = Scale Pattern 3 (2W Digital/IP Multiline Terminal) 8 = Scale Pattern 4 (2W Digital/IP Multiline Terminal) 9 = Scale Pattern 5 (2W Digital/IP Multiline Terminal) 10 = Pattern 5 (2W Digital/IP Multiline Terminal) 11 = Pattern 6 (2W Digital/IP Multiline Terminal) 12 = Pattern 7 (2W Digital/IP Multiline Terminal) 13 = Pattern 8 (2W Digital/IP Multiline Terminal)	When set 1 or 2 at PRG13-04-03, this program is used to assign a ring pattern for the caller ID routed call.	0	13-04-03
07	<b>VRS Message Number</b>	0 ~ 100	Vacant	0	
11	<b>Mailbox Number</b>	0 ~ 128 900 ~ 931	 This setting only works when Program 13-04-01 Speed Dial and Incoming Trunk Call match. *IntraMail : Station Mailbox (1 ~ 128) Group Mailbox (900 ~ 931)	0	40-02

Item No.	Item	Input Data	Description	Default	Related Program
12	Type	0 = None 1 = Work 2 = Mobile 3 = Voice Mail 4 = Home 5 = Other		0	

### Conditions

None

---

### Feature Cross Reference

- Speed Dial

# Program 13 : Speed Dial

## 13-05 : Speed Dial Trunk Group/Route

Level:

**SB**

---

### Description

Use **Program 13-05 : Speed Dial Trunk Group/Route** to define the trunk group to be seized for each Speed Dialing number.

If this program has an entry of 0 (no setting), then seizing a line follows the trunk access group routing of the caller's extension (refer to Program 14-06). This setting is available only in External Speed Dialing Mode (Program 13-01-01).

### Input Data

Speed Dialing Bin Number	000 ~ 999
--------------------------	-----------

Item No.	Item	Input Data	Default
01	Trunk Group/Route	0 ~ 50	No Setting

### Conditions

None

---

### Feature Cross Reference

- Speed Dial



## Program 13 : Speed Dial

### 13-06 : Station Speed Dial Number and Name

Level:

**SB**

#### Description

Use **Program 13-06 : Station Speed Dial Number and Name** to set up the dial number and name of each Speed Dial Number.

#### Input Data

Extension Number	Up to 8 digits
------------------	----------------

Speed Dial Number	001 ~ 100
-------------------	-----------

Item No.	Item	Input Data	Default
01	<b>Speed Dialing Data</b>	1 ~ 9, 0, *, #, Pause (Press line key 1), Recall/Flash (Press line key 2), @ = Code to wait for answer supervision in ISDN (Press line key 3) (Maximum 36 digits)	No Setting
	<b>Name</b>	Maximum 12 Characters (Use dial pad to enter name)	
02	<b>Type</b>	0 = None 1 = Office 2 = Mobile 3 = Voice Mail 4 = Home 5 = Other	0

#### Conditions

None

#### Feature Cross Reference

- Speed Dial

# Program 13 : Speed Dial

## 13-11 : Speed Dial Group Name

Level:

**SB**

---

### Description

Use **Program 13-11 : Speed Dial Group Name** to set the name of Speed Dial Group Name.

### Input Data

Group Number	1 ~ 50
--------------	--------

Item No.	Item	Input Data	Default
01	Group Name	Up to 12 characters	1 = ABB : GROUP01 : 50 = ABB : GROUP50

### Conditions

None

---

### Feature Cross Reference

None

# Program 14 : Trunk, Basic Setup

## 14-01 : Basic Trunk Data Setup

Level:

**IN**

### Description

Use **Program 14-01 : Basic Trunk Data Setup** to set the basic options for each trunk port. Refer to the chart below for a description of each option, its range and default setting.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Trunk Name</b>	Up to 12 characters	Set the names for trunks. The trunk name displays on a multiline terminal for incoming and outgoing calls.	Refer below	
02	<b>Transmit Level</b>	1 ~ 57 (- 15.5 dB ~ + 12.5 dB)	Use this option to select the CODEC gain for the trunk. The option sets the gain (signal amplification) for the trunk you are programming.	32 (0 dB)	
03	<b>Receive Level</b>	1 ~ 57 (- 15.5 dB ~ + 12.5 dB)	Use this option to select the CODEC gain for the trunk. The option sets the gain (signal amplification) for the trunk you are programming.	32 (0 dB)	
04	<b>Transmit Gain Level for Conference and Transfer Calls</b>	1 ~ 57 (- 15.5 dB ~ + 12.5 dB)	Use this option to select the CODEC gain type used by the trunk when it is part of an Unsupervised Conference.	32 (0 dB)	
05	<b>Receive Gain Level for Conference and Transfer Calls</b>	1 ~ 57 (- 15.5 dB ~ + 12.5 dB)	Use this option to select the CODEC gain type used by the trunk when it is part of an Unsupervised Conference.	16 (- 8 dB)	
06	<b>SMDR Printout</b>	0 = No (trunk will not be reported in the SMDR print out.) 1 = Yes (trunk will be reported in the SMDR print out.)	This option can include/exclude trunks from being reported in the SMDR printout. If a trunk is set to No Print Out (setting data of 0) any calls made or received on this line will not be reported in the SMDR printout.	1	
07	<b>Outgoing Calls</b>	0 = Deny (No) 1 = Allow (Yes)	Use this option to allow/prevent outgoing calls on the trunk you are programming.	1	
08	<b>Toll Restriction</b>	0 = Restriction Disabled (Toll restriction will not be applied to calls on this trunk.) 1 = Restriction Enabled (Toll restriction will be applied to calls on this trunk.)	Use this option to enable/disable Toll Restriction for the trunk. If enabled, the trunk follows Toll Restriction programming (example: Programs 21-05, 21-06). If disabled, the trunk is a toll free line.	1	21-04 21-05 21-06

Item No.	Item	Input Data	Description	Default	Related Program
09	<b>Private Line</b>	0 = Disable Private Line (Normal) 1 = Enable Private Line (Private Line)		0	
10	<b>DTMF Tones for Outgoing Calls</b>	0 = Disable (No) 1 = Enable (Yes)	Use this option to enable (1) or disable (0) DTMF tones for outgoing trunk calls.	0	
11	<b>Account Code Required</b>	0 = Disabled (user cannot enter account codes using this trunk.) 1 = Enabled (user can enter account codes using this trunk.)	Per trunk enable or disable the ability to enter an account code on an inbound or outbound trunk call.	1	
13	<b>Trunk-to-Trunk Transfer</b>	0 = Disable (No) 1 = Enable (Yes)	Use this option to enable (1) or disable (0) loop supervision for the trunk. This option is required for Call Forwarding Off-Premise and Tandem Trunking only.	1	
14	<b>Long Conversation Cutoff</b>	0 = Disable (No) 1 = Enable (Yes)	Use this option to enable or disable the Long Conversation Cutoff feature for each trunk.	0	20-21-03 20-21-04
15	<b>Long Conversation Alarm Before Cutoff</b>	0 = Disable (No) 1 = Enable (Yes)	Use this option to enable or disable the Long Conversation Alarm for each trunk.	0	20-21-01 20-21-02
16	<b>Forced Release of Held Call</b>	0 = Disable (No) 1 = Enable (Yes)	Use this option to enable/disable forced release for calls on Hold. If enabled, the system disconnects a call if it is on Hold longer than a programmed interval (Program 24-01-05). If disabled, forced disconnection does not occur. Program 24-01-01 also affects this option.	0	24-01-01 24-01-05
17	<b>Trunk to Trunk Warning Tone for Long Conversation Alarm</b>	0 = Disable (No) 1 = Enable (Yes)	Use this option to enable or disable the Warning Tone for Long Conversation feature for DISA callers.	0	
18	<b>Warning Beep Tone Signaling</b>	0 = Disable (No) 1 = Enable (Yes)		0	
19	<b>Privacy Mode Toggle Option</b>	0 = Disable (No) 1 = Enable (Yes)	Use this option to enable or disable a trunk ability to be switched from private to non-private mode by pressing the line key or Privacy Release function key.	0	
20	<b>Block Outgoing Caller ID</b>	0 = Prevent (No) 1 = Allow (Yes)	Allow (1) or prevent (0) the system from automatically blocking outgoing Caller ID information when a user places a call. If allowed (i.e. block, enabled), the system automatically inserts the Caller ID block code (defined in 14-01-21) before the user dialed digits.	0	14-01-21 20-08-15
21	<b>Caller ID Block Code</b>	<b>Dial (up to eight digits)</b>	Enter the code, up to 8 digits, that should be used as the Caller ID Block Code. This code is automatically inserted before dialed digits if Program 14-01-20 is set to 1.	*67	14-01-20 20-08-15
22	<b>Caller ID to Voice Mail</b>	0 = Disable (Caller ID not sent to VM.) 1 = Enable (Caller ID is sent to VM.)	Enable or disable the system ability to send the Caller ID digits (Remote Log-On Protocol) to voice mail.	0	

Item No.	Item	Input Data	Description	Default	Related Program
24	<b>Trunk-to-Trunk Outgoing Caller ID through Mode</b>	0 = Disable (Caller ID not forwarded out.) 1 = Enable (Caller ID is forwarded out.)	Enable (1) or Disable (0) the ability to send the original Caller ID through when the call is Forward Off-Premise.	0	
25	<b>Trunk to Trunk Conversation Option</b>	0 = Disable (No) 1 = Enable (Yes)	Enable (1) or Disable (0) the ability to dial a service code to continue or disconnect the Trunk-to-Trunk conversation after the alert tone is heard.	0	20-28-01 20-28-02 20-28-03 24-02-07 24-02-10 25-07-07 25-07-08
26	<b>Automatic Trunk-to-Trunk Transfer Mode</b>	0 = Normal Transfer (Normal) 1 = Step Transfer (Step)		0	24-02-11 24-02-12
27	<b>Caller ID Refuse Setup</b>	0 = Disable (CID refuse will not function.) 1 = Enable	Per trunk enable or disable the ability to use the caller ID refuse feature.	0	
28	<b>Effectively of "Conversation Recording Destination for Extension"</b>	0 = No Effect (No) 1 = Available (Yes)		1	15-12
30	<b>Flexible Ringing by Caller ID</b>	0 = Disable (No) 1 = Enable (Yes)		1	13-04
32	<b>Anti-trombone Function</b>	0 = No Effect (No) 1 = Available (Yes)		0	
36	<b>Calling Party Name notification (ISDN Trunk)</b>	0 = Off (when set the system will not send any outbound calling party information.) 1 = On (when set to ON the system will send calling party information.)	This program enables/disabled the ability to send calling party name information on a per trunk basis.	0	
38	<b>Outgoing CLI selection</b>	0 = Contract Number 1 = Extension Number 2 = Extended Table 3 = PRG21-13 4 = PRG21-18 5 = PRG21-19 6 = No Digits	Shows what number to show.	0	21-13-01 21-18-01 21-19-01
39	<b>CLI composition</b>	0 = Prefer extension 1 = Combine trunk + extension	If the flag has the default value 0: "prefer extension", the extension's CLI is sent out, if it is not empty. If it is empty, the trunk's CLI is sent instead. If the flag has the value 1: "combine trunk+extension", the trunk's CLI is stored in the sending buffer, padded with the extension's CLI.	0	
40	<b>ISDN Queue announcement connect mode</b>	0 = send CONNECT 1 = send PROGRESS #8	When a VRS queue message is to be played back (configured in PRG 22-14, PRG 22-15, PRG 41-11, or PRG 41-19, the system shall, instead of a CONNECT message, send a PROGRESS message including a ProgressE #8 "in-band tones and announcements available".	0	22-14 22-15 41-11 41-19

Item No.	Item	Input Data	Description	Default	Related Program
41	<b>Incoming Caller Name Usage</b>	0 = Use 1 = Ignore	This program will determines that the caller name information from the network is valid or not. If the program is set to 1, the caller name information the network provides is ignored.	0	
46	<b>Collect Call Blocking</b>	0 = Disable 1 = Enable	Can block the Collect only when ISDN line is in use.	0	20-09-09
47	<b>DTMF Receiver Type</b>	1 ~ 3 = Type 1 ~ Type 3		1	

## Default

Item01 : Trunk Name

Trunk Port Number	Name
1	Line 001
2	Line 002
:	:
128	Line 128

## Conditions

None

---

## Feature Cross Reference

None

# Program 14 : Trunk, Basic Setup

## 14-02 : Analog Trunk Data Setup

Level:

**IN**

### Description

Use **Program 14-02 : Analog Trunk Data Setup** to set the basic options for each analog trunk port. Refer to the table below for a description of each option, its range and default setting.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Signaling Type (DP/DTMF)</b>	0 = Dial Pulse (10 PPS) 2 = DTMF	This option sets the signaling type for the trunk.	2	
02	<b>Ring Detect Type</b>	0 = Normal/delayed 1 = Immediate Ringing	This option sets Extended Ring Detect or Immediate Ring Detect for the trunk. For T1 loop/ground start trunks, this option must be set to 1 for the trunks to ring and light correctly.	1	
03	<b>Flash Type</b>	0 = Open Loop Flash 1 = Ground	This option selects the flash type (open loop flash or ground). Always set this option for open loop flash.	0	
04	<b>Hooking Type</b>	0 = Timed Flash (Hooking) 1 = Disconnect (Cut)	This option lets you use Flash for Timed Flash (Program 81-01-14) or Disconnect (Program 81-01-15). (A user implements Flash by pressing the FLASH key while on a trunk call.)	0	81-01-14 81-01-15
05	<b>Dial Tone Detection for Manually Accessed Trunks</b>	0 = Dial Tone Detection Not Used 1 = Dial Tone Detection Used	Use this option enable/disable dial tone detection for directly accessed trunks. If disabled, the system outdials on the trunks without monitoring for dial tone.	0	21-01-04
06	<b>Pause after First Digit For Manually Dialed Calls</b>	0 = No Pause (No) 1 = Pause (Yes)		1	21-01-06

Item No.	Item	Input Data	Description	Default	Related Program
07	<b>DP to DTMF Conversion Options</b>	0 = Automatic 1 = Automatic and Manual 2 = Manual	Determine how a user can convert a Dial Pulse (DP) call to a DTMF call. For each trunk, set the type of DP to DTMF conversion required. There are three conversion options: Automatic (0), Automatic and Manual (1), or Manual (2). <b>Automatic:</b> DP to DTMF conversion occurs automatically if the extension user waits more than 10 seconds before dialing the next digit. <b>Automatic and Manual:</b> DP to DTMF conversion occurs automatically if the extension user waits more than 10 seconds before dialing the next digit. In addition, the user can dial # to switch a DP trunk to DTMF dialing. <b>Manual:</b> Users can dial # to switch a DP trunk to DTMF dialing.	2	21-01-03
08	<b>Answering Condition</b>	0 = Polarity Reversing (Polarity) 1 = Polarity Reversing or Timer (Int Digit)		1	21-01-03
09	<b>Busy Tone Detection</b>	0 = Disable (No) 1 = Enable (Yes)		0	
10	<b>Caller ID</b>	0 = Off (Caller ID not displayed.) 1 = On (Caller ID is displayed.)	Enable or disable a trunk ability to receive Caller ID information.	1	
11	<b>Next Trunk in Rotary if No Dial Tone</b>	0 = Disable (No) 1 = Enable (Yes)	Use this option to enable/disable the system ability to skip over a trunk if dial tone is not detected. This option pertains to calls placed using Speed Dial, ARS, Last Number Redial or Save Number dialed. It does not pertain to line key or Direct Trunk Access calls.	0	
12	<b>Detect Network Disconnect Signal</b>	0 = Disable (No) 1 = Enable (Yes)		1	
13	<b>Trunk-to-Trunk Limitation</b>	0 = Disable (No) 1 = Enable (Yes)		0	
17	<b>Synchronous Ringing</b>	0 = Disable 1 = Enable		1	
18	<b>Busy Tone Detection on Talking</b>	0 = Disable 1 = Enable		0	
19	<b>Busy Tone Detection Frequency</b>	1 ~ 255		1	14-02-18
20	<b>Busy Tone Detection Interval</b>	0 ~ 64800 (x 100 ms)		0	14-02-18
23	<b>Caller ID Receiving Method</b>	0 = Wait Caller ID 1 = Immediate Ring	Rings extension before receiving Caller ID (1) or after receiving Caller ID (0).	1	
24	<b>Use Call Waiting Caller ID</b>	0 = Off 1 = On	Set the Call Waiting Caller ID.	1	14-02-10



**Conditions**

None

---

**Feature Cross Reference**

None

# Program 14 : Trunk, Basic Setup

## 14-04 : Behind PBX Setup

Level:

**IN**

---

### Description

Use **Program 14-04 : Behind PBX Setup** to indicate if the trunk is installed behind a PBX. There is one item for each mode.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default	Related Program
01	Type of Connection	0 = Stand Alone (Trunk) 1 = Behind PBX (PBX) 2 = Not Used 3 = CTX assume 9	0	22-02

### Conditions

None

---

### Feature Cross Reference

- Central Office Calls, Placing

# Program 14 : Trunk, Basic Setup

## 14-05 : Trunk Group

Level:

**IN**

### Description

Use **Program 14-05 : Trunk Group** to assign trunks to Trunk Groups. You can also assign the outbound priority for trunks within the group. When users dial up the trunk group, they seize the trunks in the order you specify in the outbound priority entry.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data
01	Trunk Group Number	0 ~ 50
	Priority Number	1 ~ 128

### Default

Trunk Port	Group	Priority
1	1	1
:	:	:
128	1	128

### Conditions

None

### Feature Cross Reference

- Trunk Groups

# Program 14 : Trunk, Basic Setup

## 14-06 : Trunk Group Routing

Level:

**IN**

### Description

Use **Program 14-06 : Trunk Group Routing** to set up an outbound routing table for the trunk groups you assigned in Program 14-05. When a user dial 9, the system routes their calls in the order (priority) specified. For example, if a user dials 9 and all calls in the first group are busy, the system may route the call to another group. Trunk Access Map programming (Programs 14-07) may limit this option. The system contains 50 routing tables for trunk access. Each table has four priority orders for trunk access. There are 50 available Trunk Group Numbers.

Example for setting:

With less than four trunk groups,

Route Number 1 : Order 1 - Trunk Group 1  
: Order 2 - Trunk Group 2

For the above setting, if all the lines in trunk group 1 are busy, the system searches for an idle line in trunk group 2.

With more than four trunk groups,

Route Number 1 : Order 1 - Trunk Group 1  
: Order 2 - Trunk Group 2  
: Order 3 - Trunk Group 3  
: Order 4 - 1002 (Jump To Route Number 2)  
Route Number 2 : Order 1 - Trunk Group 4  
: Order 2 - Trunk Group 5

For the above setting, if all the lines in the trunk groups 1, 2 and 3 are busy, the system searches for an idle line in trunk groups 4 and 5.

### Input Data

Route Table Number	1 ~ 50
--------------------	--------

Priority Order Number	1 ~ 4
-----------------------	-------

Item No.	Item	Input Data	Default	Related Program
01	Trunk Group	0 = Not Set 1 ~ 50 = Trunk group No. 101 ~ 150 = 100 + Networking System No. 1001 ~ 1050 = 1000 + Route Table No.	Refer below	14-01-07 14-05 15-01-02 21-02

**Default**

Route No.	Order	Data
Route 1	1	1 (Trunk group 1)
	2	0 (Not specified)
	3	0 (Not specified)
	4	0 (Not specified)
Route 2	1	0 (Not specified)
	2	0 (Not specified)
	3	0 (Not specified)
	4	0 (Not specified)
:	1	0 (Not specified)
	2	0 (Not specified)
	3	0 (Not specified)
	4	0 (Not specified)
Route 50	1	0 (Not specified)
	2	0 (Not specified)
	3	0 (Not specified)
	4	0 (Not specified)

**Conditions**

None

---

**Feature Cross Reference**

None

# Program 14 : Trunk, Basic Setup

## 14-07 : Trunk Access Map Setup


Level:

**IN**

### Description

Use **Program 14-07 : Trunk Access Map Setup** to set up the Trunk Access Maps. This sets an extension access options for trunks. For example, an extension can place only outgoing calls on trunks to which it has outgoing access. There are 128 Access Maps with all 128 trunk ports programmed in Map 1 with full access.

An extension can use one of the maps you set up in this program. Use Program 15-06 to assign Trunk Access Maps to extensions. Each trunk can have one of eight access options for each Access Map.

 *Emergency calls will override Program 14-07 settings.*

### Input Data

Access Map Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Description	Default
01	<b>Access Map</b>	0 = No access 1 = Outgoing access only 2 = Incoming access only 3 = Access only when trunk on Hold 4 = Outgoing access and access when trunk on Hold 5 = Incoming access and access when trunk on Hold 6 = Incoming and Outgoing access 7 = Full access	Trunk Port Number = 001 ~ 128	Refer below

### Default

Access map No.	Trunk Port No.	Default
1	1	7 (T, R, H)
	2	7 (T, R, H)
	:	:
	128	7 (T, R, H)
2	1	7 (T, R, H)
	2	7 (T, R, H)
	:	:
	128	7 (T, R, H)

Access map No.	Trunk Port No.	Default
:	1	7 (T, R, H)
	2	7 (T, R, H)
	:	:
	128	7 (T, R, H)
128	1	7 (T, R, H)
	2	7 (T, R, H)
	:	:
	128	7 (T, R, H)

### Conditions

None

---

### Feature Cross Reference

- Central Office Calls, Answering
- Central Office Calls, Placing

# Program 14 : Trunk, Basic Setup

## 14-08 : Music on Hold Source for Trunks

Level:

**IN**

---

### Description

Use **Program 14-08 : Music on Hold Source for Trunks** to define a Music on Hold source for a trunk as COI port.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Description	Default
01	<b>MOH Type</b>	0 = Internal/External MOH 1 = BGM Source	Select whether the system will use the built in Music on Hold/External Music on Hold or a Customer provided source connected to the BGM port.	0

### Conditions

None

---

### Feature Cross Reference

- Music on Hold



## Program 14 : Trunk, Basic Setup

### 14-09 : Conversation Recording Destination for Trunks

Level:

**IN**

---

#### Description

Use **Program 14-09 : Conversation Recording Destination for Trunks** to set the Conversation Recording destination for each trunk.

 *If both Programs 14-09 and 15-12 define a destination, the destination in Program 15-12 is followed.*

#### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Description	Default
01	<b>Recording Destination Extension Number</b>	Maximum eight digits	Enter the extension number where the trunk calls should be recorded.	No Setting
02	<b>Automatic Recording for Incoming Calls</b>	0 = Off 1 = On	Determine if incoming trunk calls should be automatically recorded.	0

#### Conditions

None

---

#### Feature Cross Reference

None

# Program 14 : Trunk, Basic Setup

## 14-11 : ID Setup for IP Trunk

Level:

**IN**

---

### Description

Use **Program 14-11 : ID Setup for IP Trunk** to set the ID of each IP Trunk. This program refers to incoming and outgoing IP Trunk calls. The ID is sent on an outgoing IP Trunk call. This program is used only for H.323.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Default
01	IP Trunk ID	0 ~ 65535 (0 = No Setting)	0

### Conditions

- This Data is referred to at IP trunk outgoing call, or IP trunk incoming call.
- This ID is notified at IP trunk outgoing call.
- It is not notified when ID is 0.
- Incoming Call arrives to the trunk port of the same ID as ID notified from the partner system.

---

### Feature Cross Reference

None

# Program 14 : Trunk, Basic Setup

## 14-12 : SIP Register ID Setup for IP Trunk

Level:

**IN**

---

### Description

Use Program 14-12 : SIP Register ID Setup for IP Trunk to define the SIP Register ID for IP Trunks.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Default
01	Register ID	0 ~ 31	0
02	Pilot Register ID	0 ~ 31	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 14 : Trunk, Basic Setup

## 14-18 : IP Trunk Data Setup

Level:

**IN**

---

### Description

Use **Program 14-18 : IP Trunk Data Setup** to define the basic setting of each IP Trunk.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Description	Default
01	<b>IP Trunk Type</b>	0 = None 1 = SIP 2 = H.323 3 = CCIS	Read Only Show IP trunk type.	0
03	<b>P2P Mode</b>	0 = Disable 1 = Enable	Enable or disable the peer to peer feature for SIP Trunk.	0
05	<b>SIP Profile</b>	1 = Profile 1 2 = Profile 2 3 = Profile 3 4 = Profile 4 5 = Profile 5 6 = Profile 6		1

### Conditions

None

---

### Feature Cross Reference

None

# Program 15 : Extension, Basic Setup

## 15-01 : Basic Extension Data Setup

Level:

**SA**

### Description

Use **Program 15-01 : Basic Extension Data Setup** to define the basic settings for each extension.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
	Extension Number	Maximum eight digits			
01	<b>Extension Name</b>	Up to 12 Characters	Define the extension/virtual extension name.	No Setting	
02	<b>Automatic Trunk Line Seizing</b>	0 = Off 1 = On	Use this option to set the extension outgoing Trunk Line Preference. If enabled, the extension user receives trunk dial tone when they lift the handset. The user hears trunk dial tone only if allowed by Trunk Access Map programming (Programs 14-07 and 15-06). Refer to the Line Preference feature for more details.	0	14-06 21-02
03	<b>SMDR Printout</b>	0 = None (Station will not be reported in the SMDR print out.) 1 = Yes (Station will be reported in the SMDR print out.)	Use this option to include or exclude the extension in the SMDR report.	1	
04	<b>ISDN Caller ID</b>	0 = Disabled (CPN is NOT sent.) 1 = Enabled (CPN is sent.)	If both Program 15-01-04 and 10-03-05 are enabled, the system includes Caller ID in the Setup message as Presentation Allowed. If these options are disabled, it is Presentation Restricted.	1	10-03-05 20-08-13
05	<b>The terminal for restriction in Outgoing Disable - on Incoming Line</b>	0 = Supervise dial detection 1 = Not supervise dial detection	Enable or disable supervised dial detection for an extension.	0	21-01-15 21-01-16 21-01-17 80-03-01
07	<b>Do-Not-Call</b>	0 = Off 1 = On		0	21-01-19
08	<b>Call Attendant Busy Message</b>	0 ~ 100 (0 = No Setting)		0	11-11-59 40-10-08
09	<b>Call Attendant Answer Message</b>	0 ~ 100 (0 = No Setting)		0	11-11-60 40-10-09

Item No.	Item	Input Data	Description	Default	Related Program
10	<b>Calling Party Name notification (ISDN Trunk)</b>	0 = Off (when set to Off the system will not send any outbound calling party information.) 1 = On (when set to ON the system will send calling party information.)	This program enables/disables the ability to send calling party name information on a per station basis.	0	
13	<b>Special ringtone choice</b>	0 = Incoming extension ring tone 1 = Tone pattern 1 2 = Tone pattern 2 3 = Tone pattern 3 4 = Tone pattern 4 5 = Melody1 (2W Digital/IP Multiline Terminal) 6 = Melody2 (2W Digital/IP Multiline Terminal) 7 = Melody3 (2W Digital/IP Multiline Terminal) 8 = Melody4 (2W Digital/IP Multiline Terminal)	When an incoming call is received from the extension defined in this PRG this item defines the ringtone presented.	0	15-02-03
14	<b>SMDR output of made intercom calls</b>	0 = Disable 1 = Enable	When set 0 it will not record the internal calls that been made.	0	15-01-49
15	<b>SMDR output of answered intercom calls</b>	0 = Disable 1 = Enable	When set 0 it will not record the internal calls that been received.	0	15-01-49
16	<b>Line Load Control Restriction</b>	0 = Not Restrict 1 = Restrict		Port1:0 Other ports :1	

## Conditions

None

---

## Feature Cross Reference

None

# Program 15 : Extension, Basic Setup

## 15-02 : Multiline Telephone Basic Data Setup

Level:

**IN**

### Description

Use **Program 15-02 : Multiline Telephone Basic Data Setup** to set up various Multiline telephone options.


### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
		Extension Number		Maximum eight digits	
01	<b>Display Language Selection</b>	1 = English 2 = German 3 = French 4 = Italian 5 = Spanish 6 = Dutch 7 = Portuguese 8 = Norwegian 9 = Danish 10 = Swedish 11 = Turkish 12 = Latin American Spanish 13 = Romanian 14 = Polish 17 = Simplified Chinese 18 = Traditional Chinese 99 = Flexible Language (Not Used)	This program sets the Display Language for the extension port you are programming. (To select options 6 ~ 11, dial 6 or press Help until 2 shows in the far right of screen , then press line keys 1 ~ 6. To select options 12 ~ 16, dial 12 or press Help until 3 shows in the far right of screen, then press line keys 1 ~ 6.)	1	
02	<b>Trunk Ring Tone</b>	1 = High (2W Digital, IP Multiline Terminal) 2 = Medium (2W Digital, IP Multiline Terminal) 3 = Low (2W Digital, IP Multiline Terminal) 4 = Melody 1 (2W Digital, IP Multiline Terminal) 5 = Melody 2 (2W Digital, IP Multiline Terminal) 6 = Melody 3 (2W Digital, IP Multiline Terminal) 7 = Melody 4 (2W Digital, IP Multiline Terminal) 8 = Melody 5 (2W Digital, IP Multiline Terminal)	Use this option to set the tone (pitch) of the incoming trunk ring for the extension port you are programming.	2	22-03


Item No.	Item	Input Data	Description	Default	Related Program
03	<b>Internal Incoming Ring Tone</b>	1 = High (2W Digital, IP Multiline Terminal) 2 = Medium (2W Digital, IP Multiline Terminal) 3 = Low (2W Digital, IP Multiline Terminal) 4 = Melody 1 (2W Digital, IP Multiline Terminal) 5 = Melody 2 (2W Digital, IP Multiline Terminal) 6 = Melody 3 (2W Digital, IP Multiline Terminal) 7 = Melody 4 (2W Digital, IP Multiline Terminal) 8 = Melody 5 (2W Digital, IP Multiline Terminal)	Use this option to set the tone (pitch) of the incoming extension call ring for the extension port you are programming. Also refer to Program 15-08.	8	
04	<b>Redial (Speed Dial) Control</b>	0 = Common and Individual Speed Dialing 1 = Group Speed Dialing	Use this option to control the function of the extension Redial key when used with Speed Dialing. The Redial key can access either the Common/Individual or Group Speed Dialing numbers.	0	
05	<b>Transfer Key Operation Mode</b>	0 = Transfer 1 = Serial Call (call back) 2 = Hook (Flash)	Use this option to set the operating mode of the extension Transfer key. The keys can be for Call Transfer, Serial Calling or Flash. When selecting the Flash option (selection 2), refer also to Program 81-01-14.	0	
06	<b>Hold Key Operating Mode</b>	0 = Normal Hold 1 = Exclusive Hold	Use this option to set the function of the Multiline Hold key. The Hold key can activate normal Hold or Exclusive Hold.	0	
07	<b>Automatic Hold for CO Lines</b>	0 = Hold 1 = Disconnect (Cut)	When talking on a CO call and another CO line key is pressed, the original trunk is placed on Hold (0) or Disconnected (1).	1	
08	<b>Automatic Handsfree</b>	0 = Preselect 1 = One-Touch (Automatic Handsfree)	Use this option to set whether pressing a key access a One-Touch Key or if it preselects the key.	1	
10	<b>Ringling Line Preference for Trunk Calls</b>	0 = Idle (Off) 1 = Ringing (On)	Use this option to select between Idle and Ringing Line Preference for trunk calls.	1	
11	<b>Callback Automatic Answer</b>	0 = Off 1 = On	Use this option to enable or disable automatic answer of calls recalling to a station. For example, if a Transfer Recall or Hold Recall is ringing back to a station, the following happens: If Program 15-02-11 is enabled, the station will automatically answer the recall when it goes off-hook. If Program 15-02-11 is disabled, a station does not automatically answer the recall when it goes off-hook. The user must first press the line appearance of the recalling call or press the answer key.	1	



Item No.	Item	Input Data	Description	Default	Related Program
12	<b>Off-Hook Ringing</b>	0 = Muted Off-Hook Ringing 1 = No Off-Hook Ringing 2 = Not Used 3 = Beep in Speaker (SP) 4 = Beep in Handset (HS) 5 = Speaker and Handset Beep	Use this option to set the telephone Off-hook signaling. Off-hook signaling occurs when a telephone user receives a second call while busy on a handset call. To enable/disable Off-hook signaling for an extension Class of Service, use Program 20-13-06.	5	
13	<b>Redial List Mode</b>	0 = ICM/Trunk (Extension/Trunk Mode) 1 = Trunk Mode	Select whether the Redial List feature should store internal and external numbers (0), or only external numbers (1).	0	
15	<b>Storage of Caller-ID for answered call</b>	0 = Disable (Off) 1 = Enable (On)		1	
16	<b>Handsfree Operation</b>	0 = Disable (Off) 1 = Enable (On)	Enable or disable an extension ability to use the speakerphone on outside calls. When disabled, users can hear the conversation, but cannot respond handsfree.	1	
18	<b>Power-Saving Mode</b>	0 = Normal mode 1 = Power-Saving Mode (Eco-Mode)		1	
21	<b>Virtual Extension Access Mode (when idle Virtual Extension key pressed)</b>	0 = DSS 1 = Outgoing (OTG) 2 = Ignore	Determine whether a Virtual Extension (VE) should function as a DSS key or a Virtual Extension. When DSS (0) is selected, the key functions as a DSS key to the extension and for incoming calls to that extension. When Outgoing (1) is selected, the key functions as a virtual extension and can be used for incoming and outgoing calls. When Ignore (2) is selected, the key functions can receive incoming calls only.	2	
22	<b>Multiple Incoming From Intercom and Trunk</b>	0 = Disable 1 = Enable	If enabled, this affects how a Hotline key lights, based on the setting in Program 22-01-01. If 22-01-01 is set to 1 for trunk priority, the Hotline key lights solid when a trunk call rings in. If 22-01-01 is set to 0 for intercom priority, the Hotline key does not light for incoming trunk calls, but lights solid for intercom calls. If 15-02-22 is disabled, Hotline keys light solid for any incoming calls regardless of the setting in Program 22-01-01.	1	22-01-01
23	<b>Speed Dial Preview Mode</b>	0 = Preview 1 = Outgoing Immediately	This option defines how a speed dial key functions when pressed. If set to Preview (0), the speed dial number can be previewed before dialing. If set to Outgoing Immediate (1), the number is dialed immediately.	0	

Item No.	Item	Input Data	Description	Default	Related Program
27	<b>Handset Volume</b>	0 = Back to Default (Back) 1 = Stay at previous level (Stay)	Determine how an extension handset volume is set after it is adjusted during a call.   <i>When 1 is assigned in this program and a user sets the volume to maximum, the volume is reset to a level to meet FCC standards when the user hangs up.</i>	1	
28	<b>Message Waiting Lamp Color</b>	0 = Green 1 = Red	Determine whether an extension Message Waiting Lamp lights Green (0) or Red (1) when a message is received.	1	
29	<b>PB Back Tone Level</b>	1 ~ 57 (- 15.5 dB ~ + 12.5 dB)	This program allows adjustment of the PB Back Tone Level when you are calling an ISDN Line.	32 (0 dB)	
30	<b>Toll Restriction Class</b>	0 = Virtual Extension (Follows virtual extension Toll Class in PRG 21-04.) 1 = Real Extension (Follows physical stations Toll Class in PRG 21-04.)	Select the Toll Restriction Class to use when placing a call from a virtual extension.	1	15-02-21
34	<b>Call Register Mode</b>	0 = Trunk Mode 1 = Extension/Trunk Mode	The Caller ID Scroll stores Trunk calls only (0), or both Internal and Trunk calls (1).	0	
35	<b>Message Waiting Lamp Cycle for Calling Extension</b>	1 = Cycle 1 2 = Cycle 2 3 = Cycle 3 4 = Cycle 4 5 = Cycle 5 6 = Cycle 6 7 = Cycle 7	Select the cycle method that the Large LED flashes when the extension has set Message Waiting.	3	
36	<b>Message Waiting Lamp Cycle for Called Extension</b>	1 = Cycle 1 2 = Cycle 2 3 = Cycle 3 4 = Cycle 4 5 = Cycle 5 6 = Cycle 6 7 = Cycle 7	Select the cycle method that the Large LED flashes when the extension has Message Waiting set to the extension.	2	
37	<b>Voice Mail Message Wait Lamp Color</b>	0 = Green 1 = Red	Select the color of the Large LED when a voice mail message is waiting at the extension.	1	
38	<b>Voice Mail Message Wait Lamp Cycle</b>	1 = Cycle 1 2 = Cycle 2 3 = Cycle 3 4 = Cycle 4 5 = Cycle 5 6 = Cycle 6 7 = Cycle 7	Select the cycle method that the Large LED flashes when the extension has a VM Message Waiting set to the extension.	2	
40	<b>Additional Dial for Caller ID Call Return</b>	Up to four digits (0, 1 ~ 9, #, *)	Enter the digits to be dialed in front of the Caller ID when using the Caller ID Return function.	No Setting	
41	<b>Incoming Ring Setup</b>	0=Speaker Normal Ring 1=Headset Ring		0	11-11-37 11-11-62 15-02-12 15-02-42 20-13-06
42	<b>Incoming Off-Hook Ring Setup</b>	0=Speaker Off-Hook Ring 1=Headset Off-Hook Ring		0	11-11-37 11-11-62 15-02-12 15-02-41

Item No.	Item	Input Data	Description	Default	Related Program
43	<b>Headset Ring Duration</b>	0=No Switch to Speaker Ring 1=10 sec 2=20 sec 3=30 sec 4=40 sec 5=50 sec 6=1 minute		0	11-11-62 15-02-41 15-02-42
44	<b>Reversing Display Indication</b>	0 = Normal Indication 1 = Reversing Indication	Reversing Display Indication	0	
45	<b>Double height character Indication</b>	0 = Normal Indication 1 = Double height character Indication of calendar display line. 2 = Double height character Indication of status display line.	Double height character Indication	0	
46	<b>Backlight LCD duration</b>	0 = Continuous on 1 = 5 seconds 2 = 10 seconds 3 = 15 seconds 4 = 30 seconds 5 = 60 seconds	Set how long the Backlight LCD stays on.	2	
47	<b>Icon display mode of DESI-less</b>	0 = OFF 1 = ON		0	11-11-17 15-07-01 15-20-01
48	<b>Short Ring Setup</b>	0 = Disable 1 = Enable		0	80-09-01 80-09-02 80-09-03
49	<b>Button kit Information of Multi-line Telephone</b>	0 ~ 15		0	
50	<b>Mute Lamp Status Change</b>	0 = normal 1 = Lamp Status Change		0	
52	<b>Voice Mail Message Waiting Lamp Setup</b>	0 = Light the VM F-Key only 1 = Light the MW lamp only 2 = Light both MW Lamp and VM Key	This program is not followed if one of the F-keys is assigned as a VM key of some other mailbox.	0	15-07-01
54	<b>Menu Operation Mode</b>	0 = Automatic Close 1 = Manual Close		0	
55	<b>VRS Message Number</b>	0 ~ 100		0	
57	<b>Caller Log on busy</b>	0 = Off 1 = On	When call is received during the user is calling, the Caller Log is registered. When the Caller Log is displayed, "BUSY" is displayed in the left end.	1	15-02-34
60	<b>Soft Key/Navigation key Mode</b>	0 = Standard Mode 1 = Advanced Mode1 2 = Advanced Mode2		2	
61	<b>Backlight Max Brightness</b>	0 ~ 8		6	
62	<b>Backlight Min Brightness</b>	0 ~ 8		0	
66	<b>Dial Button Backlight</b>	0 = Off 1 = On		1	

Item No.	Item	Input Data	Description	Default	Related Program
68	<b>Mode setting for incoming call from extension</b>	0 = Voice 1 = Signal	 This program can only be change by using PC Programming.	1	
69	<b>Mute Operation on Handsfree</b>	0 = Do not change Mute status 1 = Start with enabled Mute 2 = Start with muted Mute		0	
70	<b>Mute Key Operation</b>	0 = Enabled (Active) 1 = Disabled	A flag shall control if the microphone key is disabled (1) or active(0) SL2100 system has Mute key instead of microphone key.	0	
71	<b>Disable Softkey</b>	0 = Off 1 = On	When set to 1 (On), disable Softkey and cursor key operation at the terminal.	0	
73	<b>Calling Party History View Mode</b>	0 = pack 1 = unpack	If this data is 1 (unpack), Dialed data is saved as each history in case of different time even if the numbers are same.	0	
74	<b>Ten key Backlit Control</b>	0 = Normal 1 = Half	This program defines the control of ten key backlit.	0	

## Lamp Cycle On/Off Timing Pattern (Program 15-02-35, 36, 38)

Programs 15-02-35, 36, and 38		
Input	Cycle	
1	Cycle 1	500 ms - ON / 500 ms - OFF
2	Cycle 2	250 ms - ON / 250 ms - OFF
3	Cycle 3	125 ms - ON / 125 ms - OFF
4	Cycle 4	125 ms - ON / 125 ms - OFF / 125 ms - ON / 625 ms - OFF
5	Cycle 5	875 ms - ON / 125 ms - OFF
6	Cycle 6	625 ms - ON / 125 ms - OFF / 125 ms - ON / 125 ms - OFF
7	Cycle 7	1000 ms - ON

## Program 15-02 - Incoming Signal Frequency Patterns

Incoming Signal Frequency Pattern	Type	Frequency 1	Frequency 2	Modulation
External Incoming Signal Frequency (Pattern 1)	High Middle Low	1100 Hz 660 Hz 520 Hz	1400 Hz 760 Hz 660 Hz	16 Hz 16 Hz 16 Hz
External Incoming Signal Frequency (Pattern 2)	High Middle Low	1100 Hz 660 Hz 520 Hz	1400 Hz 760 Hz 660 Hz	8 Hz 8 Hz 8 Hz
External Incoming Signal Frequency (Pattern 3)	High Middle Low	2000 Hz 1400 Hz 1100 Hz	760 Hz 660 Hz 540 Hz	16 Hz 16 Hz 16 Hz
External Incoming Signal Frequency (Pattern 4)	High Middle Low	2000 Hz 1400 Hz 1100 Hz	760 Hz 660 Hz 540 Hz	8 Hz 8 Hz 8 Hz
Internal Incoming Signal Frequency	High Middle Low	1100 Hz 660 Hz 520 Hz	1400 Hz 760 Hz 660 Hz	8 Hz 8 Hz 8 Hz

**Conditions**

None

---

**Feature Cross Reference**

None

# Program 15 : Extension, Basic Setup

## 15-03 : Single Line Telephone Basic Data Setup

Level:


**IN**


### Description

Use **Program 15-03 : Single Line Telephone Basic Data Setup** to set up various single line telephone options.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
Extension Number		Maximum eight digits			
01	<b>SLT Signaling Type</b>	0 = DP 1 = DTMF	Use this option to tell the system the type of dialing the connected telephone uses. For Analog Wireless telephones to function correctly, this must be set to 0 (dial pulse). If this option is set for DTMF, after an outside call is placed, the system cannot dial any additional digits. This program change is automatically performed when the Analog Wireless telephone is registered. When upgrading software from prior versions, the previous default of 1 is saved from the prior database so this option must be changed manually.	Port 1 ~ 112 = 1 (DTMF) Port 113 ~ 128 = 0 (DP)	15-03-03 45-01-01
03	<b>Terminal Type</b>	0 = Normal 1 = Special	Enter 1 for this option to allow a single line port to receive DTMF tones after the initial call setup. Enter 0 to have the port ignore DTMF tones after the initial call setup. For Voice Mail, always enter 1 (e.g., receive DTMF tones).	Port 1 ~ 112 = 0 (Normal) Port 113 ~ 128 = 1 (Special)	15-03-01 45-01-01
04	<b>Flashing</b>	0 = No 1 = Yes	Enables/disables Flash for single line telephones.	1	
05	<b>Trunk Polarity Reverse</b>	0 = Off 1 = On	Do Not Change Default Entry as DTMF issues may arise with voice mail.	1	
06	<b>Extension Polarity Reverse</b>	0 = Disable (Off) 1 = Enable (On)	Do Not Change Default Entry as DTMF issues may arise with voice mail.	0	
07	<b>Enabled On-Hook When Holding (SLT)</b>	0 = No 1 = Yes		1	11-12-45
08	<b>Answer On-Hook when Holding (SLT)</b>	0 = Disable (No) 1 = Yes (Enable)		1	11-12-46

Item No.	Item	Input Data	Description	Default	Related Program
09	<b>Caller ID Function</b>	0 = Disable (Caller ID not displayed.) 1 = Enable (Caller ID is displayed.)	Enable (1) or disable (0) the Caller ID FSK signal for an external Caller ID module or a 3rd party vendor telephone with Caller ID display. <b>Important:</b> If voice mail is used, this setting must be disabled for the system integration codes to be correct.  <i>With a Single Line Telephone, this must be set to 0 for incoming callers to have a talk path.</i>	0	
10	<b>Caller Name</b>	0 = Disable 1 = Enable	Determine if an extension user telephone should display the Caller name.	1	15-03-09
12	<b>Fixed Cadence</b>	0 = Normal 1 = Fixed		1	
13	<b>MW sending type</b>	0 = Lamp 1 = Caller ID		0	
14	<b>Forwarded Caller ID Display Mode</b>	0 = Calling Extension Number (Calling) 1 = External Caller ID (Forward)	Determine what the display shows when a multiline terminal receives a forwarded outside call.	0	
15	<b>Disconnect without dial after hooking hold</b>	0 = Normal 1 = Disconnect	Determine whether or not to disconnect a held call when on-hook without any dialing after hooking-hold.	0	
16	<b>Special DTMF Protocol Send</b>	0 = No 1 = Yes	Determine whether or not to send the extension number of the phone forwarded to the extension when Program 15-03-04 is set to Special (1) and not in the VM group.	0	45-01-16
18	<b>Select Special Terminal Type</b>	0 = Fax 1 = Modem	This PRG is used for selecting Special Terminal Type (Fax or Modem). This setting influences how to transmit data via SIP trunk. This PRG is effective at the time of when PRG15-03-03 1: Special.	0	15-03-03
19	<b>Door Phone Number</b>  <i>Do not set the same door phone number as PRG10-03-05 (SLIU).</i>	1 ~ 6	Set the SLT door phone number. When unlocking the door PRG10-61 will be in effect.	0	10-03-05 (SLIU) 10-61

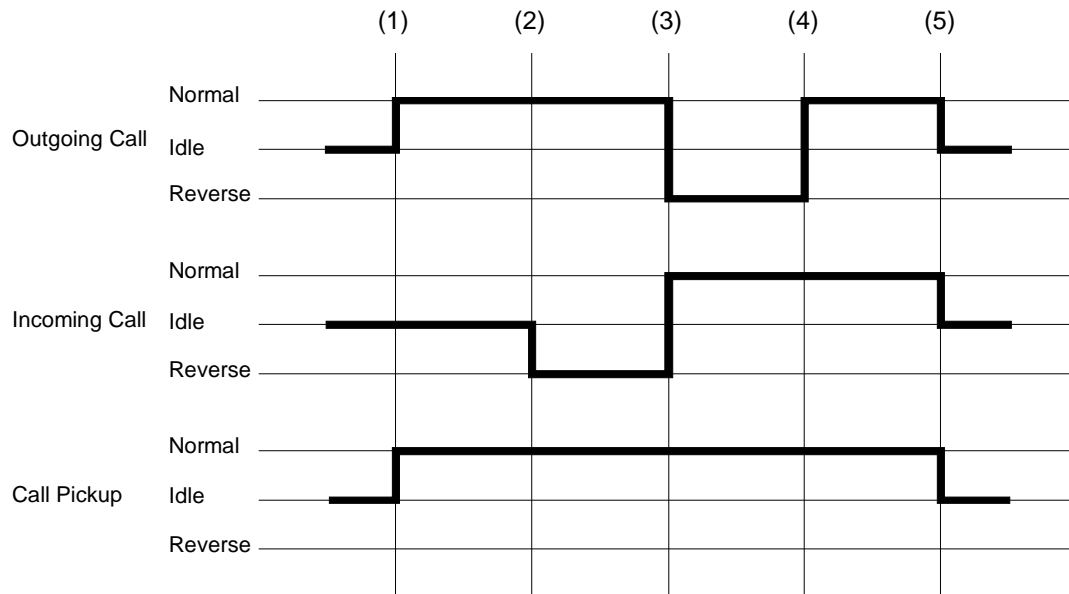

(1) = Off-Hook (2) = Calling/Ringing (3) = Answer (4) = Detect Hang Up(5) = On-Hook

### Conditions

None

### Feature Cross Reference

- Single Line Telephones



# Program 15 : Extension, Basic Setup

## 15-05 : IP Telephone Terminal Basic Data Setup

Level:

**IN**

### Description

Use **Program 15-05 : IP Telephone Terminal Basic Data Setup** to set up the basic settings for an IP telephone.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Terminal Type</b>	1 = H.323 2 = SIP 3 = None 4 = IP MLT 5 = WebRTC (V1.5 added)		3	
02	<b>IP Phone Fixed Port Assignment</b>	MAC address 00-00-00-00-00-00 ~ FF-FF-FF-FF-FF-FF	MAC Address of registered SIP MLT phone is stored and/or can input the MAC address of an SIP MLT phone so when it comes online it is provided with the extension in which the MAC address matches.	00-00-00-00-00-00	15-05-01
04	<b>Nickname</b>	Up to 48 characters	Nickname section on Invite message. Example : Extension 100 has a Nickname set to PAUL. Extension 101 has command 15-05-17 set to Nickname. The inbound call to extension 101, from 100, shows PAUL. Nickname must be unique in the system.	No Setting	15-05-17
07	<b>Using IP Address</b>	0.0.0.0 ~ 255.255.255.255		-	15-05-01
09	<b>Call procedure port</b>	0 ~ 65535		-	15-05-01
11	<b>IP MLT C/CTR Port</b>	0 ~ 65535		-	
15	<b>CODEC Type</b>	1 = Type 1 2 = Type 2 3 = Type 3 4 = Type 4 5 = Type 5	Assign the CODEC Type of the SIP MLT.	1	84-24 84-11 15-05-01
16	<b>Authentication Password</b>	Up to 24 characters Version 3.00 or higher: The password needs to be 8 or more characters in length, contain at least one upper case letter, one lower case letter and one number.	Assign the authentication password for SIP single line telephones. Web pro indicates password as * mark. This program is valid when PRG 15-05-01 Terminal Type is set to 2. (2=SIP)	No Setting	15-05-01

Item No.	Item	Input Data	Description	Default	Related Program
18	<b>IP Duplication Allowed Group</b>	0 = Disable 1 = Enable	When this program is 1: Enable, the duplication of an IP address is allowed at the time of SIP/IP MLT terminal registration. This PRG is valid, when PRG15-05-01 is SIP or IP MLT.	0	15-05-01
19	<b>Side Option Information</b>	0 = No Option 1 ~ 3 = Not used 4 = EHS		0	
20	<b>Bottom Option Information</b>	0 = No Option 1 ~ 2 = Not Used 3 = WHA 4 = BCA	Shows the type of adapter installed.	0	10-03-10
22	<b>Side option additional Data</b>	0 = No Setting 1 ~ 12 = DSS Console number		0	
26	<b>IP MLT Terminal Type</b>	0 = Not Set 1 = Not Used 2 = ITL-**D-1D/ ITL-24BT-1D/ ITL-24PA-1D (without 8LKI (LCD) -L) 3 = UT880 4 = Not Used 5 = Softphone 6 = CTI 7 ~ 8 = Not Used 9 = IP4WW-24TIXH 10 ~ 12 = Not Used 13 = ITZ-*.D 14 = ITZ-*.CG 15 = ITZ-**.LDG/ITZ-**.LD 16 = ITY-6D 17 = ITY-8LDX 18 = IP7WW-8IPLD-C1		0	
27	<b>Personal ID Index</b>	0 ~ 128	When the SIP Multiline telephone is using manual/auto registration, assign each phone a unique personal index. Then go to command 84-22 to assign the user name and password.	0	84-22
28	<b>Addition Information Setup</b>	0 = Do not inform 1 = Inform	Select whether to inform of additional information or not.	0	15-01-01 15-02-13 15-02-15 15-02-34
29	<b>Terminal WAN-side IP Address</b>	0.0.0.0 ~ 255.255.255.255		0.0.0.0	
30	<b>DTMF Play during Conversation at Receive Extension</b>	0 = Do Not Play 1 = Play		0	
31	<b>Alarm Tone during Conversation (RTP packet loss alarm)</b>	0 = Off 1 = On		1	
33	<b>LAN Side IP Address of Terminal</b>	0.0.0.0 ~ 255.255.255.255		0.0.0.0.	
35	<b>Encryption Mode On/Off</b>	0 = Off 1 = On		0	
36	<b>IP MLT Firmware Version</b>	00.00.00.00 ~ ff.ff.ff.ff	Indicate a current firmware Version.	00.00.00.00	
38	<b>Paging Protocol Mode</b>	0 = Multicast 1 = Unicast 2 = Auto	Sets the protocol mode for the Paging function.	0	

Item No.	Item	Input Data	Description	Default	Related Program
39	<b>CTI Override Mode</b>	0 = Disable 1 = Enable		0	
40	<b>Calling name display info via trunk for standard SIP</b>	0 = Both name and number 1 = Name only 2 = Number only 3 = None	* Trunk name is the first priority and abbreviated (SPD) name is second priority	0	
41	<b>Time Zone(hour)</b>	0 ~ 24 (- 12 ~ + 12 hour)		12	
43	<b>Video Mode</b>	0 = Disable 1 = Enable		0	
44	<b>Using STD-SIP Display for CPN</b>	0 = Disable 1 = Enable		0	
45	<b>NAT plug &amp; play</b>	0 = OFF 1 = ON	Effect this program only when PRG 10-46-14 (for IP Multiline Terminals) or PRG 10-33-05 (for Standard SIP Terminal) are set to NAT mode. Effect this program only when PRG 10-46-14 (for IP Multiline Terminals) is set to NAT mode. If you are setting the SIP Terminal using remote router by turning this setting ON you don't need to set the Port Forward on remote router side. Select sending RTP port number to remote Router, use from negotiation result (0) or received RTP packet (1)	1	10-46-14
46	<b>Door Phone Number</b>	0 = Not door phone 1 ~ 6 = Door phone number		0	
47	<b>Registration Expire Timer for NAT</b>	0 = Disable 60 ~ 65535 (sec)	On a per station basis, this setting defines the SIP registration expiry timer. This setting applies to IP Multiline Terminals or Standard SIP Terminal connected via NAPT. If this value is set to 0, for a NAPT terminal, the value in PRG 84-23-01 (for IP Multiline Terminals) or PRG 10-33-01 (for Standard SIP Terminal) are applied.	180	84-23-01
48	<b>Subscriber Expire Timer for NAT</b>	0 = Disable 60 ~ 65535 (sec)	On a per station basis, this setting defines the SIP subscribe expiry timer. This setting only applies to IP Multiline Terminals or Standard SIP Terminal connected via NAPT. If this value is set to 0, for a NAPT terminal, the value in PRG 84-23-02 (for IP Multiline Terminals) or PRG 10-33-01 (for Standard SIP Terminal) are applied.	180	84-23-02
49	<b>Receiving SIP INFO</b>	0 = Disable 1 = Allowed any time 2 = Allowed while RTP is not available	Enables to receive a SIP INFO message from a standard SIP phone as a dial information.	2	
50	<b>Peer to Peer Mode</b>	0 = Off 1 = On		1	
51	<b>Transport Protocol</b>	0 = UDP 1 = TCP 2 = TLS	This program is the transport protocol. (Read only)	0	

**Conditions**

None

---

**Feature Cross Reference**

None

# Program 15 : Extension, Basic Setup

## 15-06 : Trunk Access Map for Extensions

Level:

**IN**

---

### Description

Use **Program 15-06 : Trunk Access Map for Extensions** to define the trunk access map for each extension. An extension can place only outgoing calls on trunks to which it has outgoing access. Use Program 14-07 to define the available access maps.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default	Related Program
01	Trunk Access Map Number	1 ~ 128	1	14-07

### Conditions

None

---

### Feature Cross Reference

- Central Office Calls, Answering
- Central Office Calls, Placing

# Program 15 : Extension, Basic Setup

## 15-07 : Programmable Function Keys

Level:

**SA**

### Description

Use **Program 15-07 : Programmable Function Keys** to assign functions to a multiline terminal line keys.

For certain functions, you can append data to the key basic function. For example, the function 26 appended by data 1 makes a Group Call Pickup key for Pickup Group 1. You can also program Function Keys using Service Codes.

To clear any previously programmed key, press **000** to erase any displayed code.

### Input Data

Extension Number	Maximum eight digits
Key Number	1 ~ 32

### Default Settings

Line Key	Function Number	Additional Data
LK01	*01 (Trunk Line Key)	1
:	:	:
LK12	*01 (Trunk Line Key)	12
LK13	0 (No Setting)	0 (No Setting)
:	:	:
LK32	0 (No Setting)	0 (No Setting)

Item No.	Item	Input Data	Additional Data
01	Line Key Number	1 ~ 32	Refer to <a href="#">Table 2-3 Function Number List</a> .
	Function Number	0 ~ 99, #0 ~ #99	Refer to <a href="#">Table 2-3 Function Number List</a> .

### Default

Programmable keys 1 ~ 12 are Trunk Line keys (key 1 = Trunk Line 1, key 2 = Trunk Line 2, etc.). All other programmable keys are undefined.

### Function Number List

Table 2-3 Function Number List

## [1] Normal Function Code (00 ~ 99, #00 ~ #99) (Service Code 751)

Function Number	Function	Additional Data	LED Indication	Note
01	DSS/One-Touch	Extension number or any numbers (up to 36 digits)	<b>On (Red)</b> : DSS Ext. Busy <b>Off</b> : DSS Ext. Idle <b>Fast Blink (Red)</b> : DND or Call Forward Setup	
02	Microphone (Mute) Key (ON/OFF)		<b>On (Red)</b> : Mic On <b>Off</b> : Mic Off	
03	DND Key		<b>On (Red)</b> : DND Setup	
04	BGM (ON/OFF)		<b>On (Red)</b> : Active	
05	Headset		<b>On (Red)</b> : Headset Operating	
06	Transfer Key		None	
07	Conference Key		<b>On (Red)</b> : Conference Operating	
08	Incoming Call Log		<b>Slow Blink (Red)</b> : Existing New CID <b>On (Red)</b> : Existing Checked CID <b>Off</b> : No CID	
09	Day/Night Mode Switch	Mode number (1 ~ 8) (0 = toggle)	<b>On</b> : While each mode	
10	Call Forward - Immediate	None/Extension number or Any number (Max. 36 digits)	<b>Slow Blink (Red)</b> : SET UP <b>Fast Blink (Red)</b> : To be set up	
11	Call Forward - Busy	None/Extension number or Any number (Max. 36 digits)	<b>Slow Blink (Red)</b> : SET UP <b>Fast Blink (Red)</b> : To be set up	
12	Call Forward -No Answer	None/Extension number or Any number (Max. 36 digits)	<b>Slow Blink (Red)</b> : SET UP <b>Fast Blink (Red)</b> : To be set up	
13	Call Forward - Busy/No Answer	None/Extension number or Any number (Max. 36 digits)	<b>Slow Blink (Red)</b> : SET UP <b>Fast Blink (Red)</b> : To be set up	
14	Call Forward - Both Ring	None/Extension number or Any number (Max. 36 digits)	<b>Slow Blink (Red)</b> : SET UP <b>Fast Blink (Red)</b> : To be set up	
15	Call Forward - Follow Me		<b>Fast Blink (Red)</b> : Setup <b>Slow Blink</b> : To be setup	
18	Text Message Setup	Selectable Display Message Numbers (1 ~ 20)	<b>On (Red)</b> : Setup	
19	External Group Paging	External Paging Number (1 ~ 3)	<b>On (Red)</b> : Active	
20	External All Call Paging		<b>On (Red)</b> : Active	
21	Internal Group Paging	Internal Paging Number (1 ~ 50)	<b>On (Red)</b> : Active	
22	Internal All Call Paging		None	
23	Meet-me Answer to Internal Paging		None	
24	Call Pickup for own group		None	

Function Number	Function	Additional Data	LED Indication	Note
25	Call Pickup for Another Group		None	
26	Call Pickup for Specified Group	Call Pickup Group Number	None	
27	Speed Dial - Common/Private	Speed Dial Number (Common / Private)	None	
28	Speed Dial - Group	Speed Dial Number (Group)	None	
29	Repeat Dial		<b>On (Red)</b> : Repeat Dialing	
30	Saved Number Redial		None	
31	Memo Dial		None	
32	Meet - Me Conference		None	
33	Override (Off-Hook Signaling)		None	
34	Break - In	nodata or Extension number(not Virtual Extension) or " * ". In the case " * ", refer to the extension number (not Virtual Extension) set to PRG24-09-03.	None	
35	Camp On		<b>On (Red)</b> : Active	
36	Step Call		None	
37	DND/FWD Override Call		None	
38	Message Waiting		None	
39	Room Monitoring		<b>Slow Blink (Red)</b> : Monitoring <b>Fast Blink (Red)</b> : To be monitored	
41	Buzzer	Extension Number	<b>On (Red)</b> : Calling party <b>Fast Blink (Red)</b> : Called party	
42	Boss - Secretary Call	Extension Number	<b>On (Red)</b> : Active	
43	Series Call		None	
44	Common Hold		None	
45	Exclusive Hold		None	
46	Department Group Log Out		<b>On (Red)</b> : Withdrawing	
47	Reverse Voice Over	Extension Number		
48	Voice Over		<b>On (Red)</b> : Responding <b>Slow Blink (Red)</b> : Listening	
49	Call Redirect	Extension Number or Voice Mail Number	None	
50	Account Code		<b>On (Red)</b> : While Account Code is input <b>Off</b> : While a dial is input	
52	Automatic Answer with Delay Message Setup	Incoming Ring Group (1 ~ 50)	<b>On (Red)</b> : Setup	



Function Number	Function	Additional Data	LED Indication	Note
53	Automatic Answer with Delay Message Start		<b>On (Red)</b> : Delay Message Answering	
54	External Call Forward by Door Box		<b>On (Red)</b> : Setup	
55	Extension Name Change		None	
56	General Purpose LED Operation	1 ~ 100 : (Red) On ⇄ Off	1 ~ 100 : (Red) On ⇄ Off	
57	General Purpose LED Indication	1 ~ 100 : (Red) On ⇄ Off	1 ~ 100 : (Red) On ⇄ Off	
58	Automatic Transfer at Department Group Call	Extension Group Number (1 ~ 50)	<b>On (Red)</b> : Set <b>Off</b> : Cancel	
59	Delayed Transfer at Department Group Call	Extension Group Number (1 ~ 50)	<b>On (Red)</b> : Set <b>Off</b> : Cancel	
60	DND at Department Group Call	Extension Group Number (1 ~ 50)	<b>On (Red)</b> : Set <b>Off</b> : Cancel	
62	Flash Key		None	
63	Outgoing Call Without Caller ID (ISDN)		<b>On (Red)</b> : Mode enabled	
72	Keypad Facility Key			
73	Keypad Hold Key			
74	Keypad RETRIEVE Key			
75	Keypad Conference Key			
76	Application Key	Any dial data (8 digit)	None	
77	Voice Mail (In-Skin)	Extension Number or Pilot Number	<InMail> 【2W/IP Multiline Terminal】 • Own Mailbox : Fixed on Lamp Cycle 3 (Green) • Other Mailbox : Set with PRG 15-02-38 (Red) <External Voice Mail> <b>On (Red)</b> : Access to Voice Mail 【2W/IP Multiline Terminal】 • Own Mailbox: Fixed on Lamp Cycle 3 (Green) • Other Mailbox: Set with PRG 15-02-38 (Red)	
78	Conversation Recording - Voice Mail		<b>Slow Blink</b> : Recording	
79	Automated Attendant (In-Skin)	Extension Number or Pilot Number	【2W/IP Multiline Terminal】 <b>On (Red)</b> : Setup - All calls <b>Fast Blink (Red)</b> : Setup - No answer calls <b>(125msec on/125msec off/125msec on/625msec off) (Red)</b> : Setup - Busy calls <b>Slow Blink (Red)</b> : Setup - Busy/No answer calls	
80	Tandem Ringing	Extension Number		
81	Automatic Transfer to Transfer Key	Trunk Line No. (001-128)	<b>Off</b> : Cancel <b>Slow Blink (Red)</b> : Set	

Function Number	Function	Additional Data	LED Indication	Note
83	Conversation Recording Function (VMSU)	0 = Pause 1 = Re-recording 2 = Address 3 = Erase 4 = Urgent Page		
84	Drop Key	None		
85	Directory Dialing			
86	Private Call Refuse	None	<b>Off</b> : Pattern 1, Pattern 5 ~ 8 <b>On (Red)</b> : Pattern 2 <b>Slow Blink (Red)</b> : Pattern 3 <b>Fast Blink (Red)</b> : Pattern 4	
87	Caller ID Refuse	None	<b>Off</b> : Cancel <b>Slow Blink (Red)</b> : Set	
88	Dial-In Mode Switching	Program 22-17 Table No. (1 ~ 500)	<b>Off</b> : Pattern 1, Pattern 5 ~ 8 <b>On (Red)</b> : Pattern 2 <b>Slow Blink (Red)</b> : Pattern 3 <b>Fast Blink (Red)</b> : Pattern 4	
91	Live Recording Key		<b>Slow Blink (Green)</b> : Set	
94	Call Attendant		<b>Fast Blink (Red)</b> : Setup - No answer calls (125 msec : on ⇒ 125 msec : off ⇒ 125 msec : on ⇒ 625 msec : off) (Red) : Setup - Busy calls <b>On (Red)</b> : Setup - Busy/No answer calls	
97	Door Box Access Key	Door Box Number (1-6)	<b>On (Red)</b> : Doorphone Busy <b>Off</b> : Doorphone Idle <b>Fast Blink (Red)</b> : Doorphone Incoming	
#02	-- Cutting the telephone power --	Package Number (2-12)	<b>On (Red)</b> : Set <b>Off</b> : Cancel	
#03	-- Remote Monitor Permit --		<b>Slow Blink (Red)</b> : Remote Monitor Permit <b>Off</b> : Remote Monitor Deny	
#04	Change Restriction Class	None/Password (PRG 21-14)		
#07	Fix Operation Mode	Night Mode Service Group No. (1-4)	<b>On (Red)</b> : Set <b>Off</b> : Cancel	
#08	Bluetooth Connect			
#09	Bluetooth Path			
#10	Conference Record		<b>On (Red)</b> : Recording	
#11	Major Alarm		<b>On (Red)</b> : Alarm <b>Off</b> : No Alarm	
#12	Minor Alarm		<b>On (Red)</b> : Alarm <b>Off</b> : No Alarm	
#14	Multi Device Support		<b>On (Red)</b> : Set <b>Off</b> : Cancel	


Table 2-4 Function Number List

## [2] Appearance Function Level ( \* 00 ~ \* 99) (Service Code 752)


Function Number	Function	Additional Data	LED Indication	Note
*00	ICM Key	None		

Function Number	Function	Additional Data	LED Indication	Note
*01	Trunk Key	Trunk Number (1 ~ 128)	<p><b>[2W/IP Multiline Terminal]</b>  <b>Fast Blink (Green)</b> : Incoming(own)/Recall(own)  <b>Fast Blink (Red)</b> : Incoming(other)  <b>On (Green)</b> : Speaking(own)  <b>On (Red)</b> : Speaking(other)  <b>Slow Blink (Green)</b> : Holding(own)/Transferring(own)  <b>Slow Blink (Red)</b> : Holding(other)/Transferring(other)/Recall(other)</p>	
*02	Trunk Group	Trunk Group Number (1 ~ 50)	<b>Fast Blink (Red)</b> : Incoming (own/other)	
*03	Virtual Extension Key	Extension Number or Department Group Number	<p><b>[2W/IP Multiline Terminal]</b>  <b>Fast Blink (Red)</b> : Incoming(own/other)/Recall(own)  <b>On (Green)</b> : Speaking(own)  <b>On (Red)</b> : Speaking(other)  <b>Slow Blink (Green)</b> : Holding(own)/Transferring(own)  <b>Slow Blink (Red)</b> : Holding(other)/Transferring(other)/Recall(other)</p>	
*04	Park Key	Park Number (1 ~ 50)	<p><b>[2W/IP Multiline Terminal]</b>  <b>Slow Blink (Green)</b> : Holding(own)  <b>Fast Blink (Green)</b> : Recall(own)  <b>Slow Blink (Red)</b> : Holding(other)</p>	
*05	Loop Keys <i>Use Programs 15-13-01 and/or 15-13-02 to assign the loop key to a trunk group.</i>	0 = Incoming 1 = Outgoing 2 = Both	None	
*06	Trunk Access via Networking	Network System No. 1 ~ 50	None	
*07	Station Park Hold	None	<b>Slow Blink (Green)</b> : Holding(own) <b>Fast Blink (Green)</b> : Recall(own)	
*10	ACD Log in / Log out		<b>On</b> : Logged in <b>Off</b> : Logged out	
*12	ACD Emergency call		<b>On</b> : While calling your supervisor or after being answered by your supervisor <b>Fast Blink</b> : Supervisor while Ringing <b>Slow Blink</b> : Failed to Emergency call	
*13	ACD off-duty mode (Rest Mode)		<b>On</b> : While Setup <b>Slow Blink</b> : Rest Mode Setup	
*15	ACD Terminal Speech Monitor		<b>On</b> : While Speech Monitor	
*17	ACD Work wrap up time		<b>On</b> : While wrap up time <b>Slow Blink</b> : While setup wrap up time	
*19	ACD Queue Status Display		None	
*32	Warning Message		<b>On (Red)</b> : Play warning message <b>Off</b> : Stop warning message	
*33	Sensor Mode		<b>On (Red)</b> : Security Sensor On <b>Off</b> : Security Sensor Off <b>[2W/IP Multiline Terminal]</b> <b>(125msec:on / 125msec:off / 125msec:on / 625msec:off)</b> : Security Sensor Delay Timer (PRG 20-55-01) is starting.	
*35	System Call History		<b>On (Green)</b> : Using <b>On (Red)</b> : Other using <b>Off</b> : Not using	

LED Pattern 0:[OFF]



LED Pattern 1:[FL: On(500ms)/Off(500ms)]




LED Pattern 2:[WK: On(250ms)/Off(250ms)]




LED Pattern 3:[RW: On(125ms)/Off(125ms)]




LED Pattern 4:[IR: On(125ms)/Off(125ms)/ On(125ms)/Off(625ms)]




LED Pattern 5:[IL On(875ms)/Off(125ms)]



LED Pattern 6:[IW On(625ms)/Off(125ms)/On(125ms)/Off(125ms)]



LED Pattern 7:[ON]



2W Digital/IP Multiline Terminal

### LED Indication Reference :

ON = LED pattern 7. (2W Digital/IP Multiline Terminal)

OFF = LED pattern 0. (2W Digital/IP Multiline Terminal)

Rapid Blink = LED pattern 3. (2W Digital/IP Multiline Terminal)

Slow Blink (General Function Level) = LED pattern 5 (2W Digital/IP Multiline Terminal).

Slow Blink (Appearance Function Level) = LED pattern 1.

Fast Blink = LED pattern 3 (2W Digital/IP Multiline Terminal).

Stutter Blink = LED pattern 4 (2W Digital/IP Multiline Terminal).

### Conditions

- When a key is programmed using service code 752, it cannot be programmed with a function using the 751 code until the key is undefined (000). For example with a Park Key programmed by dialing 752 + \*04 must be undefined by dialing 752 + 000 before it can be programmed as a Voice Over key by dialing 751 + 48.

## Feature Cross Reference

None

# Program 15 : Extension, Basic Setup

## 15-08 : Incoming Virtual Extension Ring Tone Setup

Level:

**IN**

### Description

Use **Program 15-08 : Incoming Virtual Extension Ring Tone Setup** to assign a ring tone range (0 ~ 8) to incoming virtual extensions assigned to a Virtual Extension key (Program 15-07). If you enable ringing for the key in Program 15-09, the key rings with the tone you set in this program. Also see Program 22-03. The chart below shows the available tones. There are 128 available extension ports.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Item No.	Item	Input Data	Description	Default
01	<b>Incoming Ring Pattern</b>	0 ~ 8 0 = Tone Pattern 1 1 = Tone Pattern 2 2 = Tone Pattern 3 3 = Tone Pattern 4 4 = Incoming extension ring tone 5 = Melody1 (2W Digital/IP Multiline Terminal) 6 = Melody2 (2W Digital/IP Multiline Terminal) 7 = Melody3 (2W Digital/IP Multiline Terminal) 8 = Melody4 (2W Digital/IP Multiline Terminal)	When an extension or a virtual extension is assigned to the function key on the key telephone, select the ring tone when receiving a call on that key.	0

**Table 2-5 Program 15-08 - Incoming Signal Frequency Patterns**

Incoming Signal	Type	Frequency 1	Frequency 2	Modulation
Pattern 1	High Middle Low	1100 Hz 660 Hz 520 Hz	1400 Hz 760 Hz 660 Hz	16 Hz 16 Hz 16 Hz
Pattern 2	High Middle Low	1100 Hz 660 Hz 520 Hz	1400 Hz 760 Hz 660 Hz	8 Hz 8 Hz 8 Hz
Pattern 3	High Middle Low	2000 Hz 1400 Hz 1100 Hz	760 Hz 660 Hz 540 Hz	16 Hz 16 Hz 16 Hz
Pattern 4	High Middle Low	2000 Hz 1400 Hz 1100 Hz	760 Hz 660 Hz 540 Hz	8 Hz 8 Hz 8 Hz

Incoming Signal	Type	Frequency 1	Frequency 2	Modulation
Incoming extension ring tone	High Middle Low	1100 Hz 660 Hz 520 Hz	1400 Hz 760 Hz 660 Hz	8 Hz 8 Hz 8 Hz
Pattern 5	High Middle Low	1400 Hz 760 Hz 660 Hz	540 Hz 540 Hz 540 Hz	16 Hz 16 Hz 16 Hz
Pattern 6	High Middle Low	1400 Hz 760 Hz 660 Hz	540 Hz 540 Hz 540 Hz	8 Hz 8 Hz 8 Hz
Pattern 7	High Middle Low	2000 Hz 2000 Hz 1100 Hz	1100 Hz 540 Hz 760 Hz	16 Hz 16 Hz 16 Hz
Pattern 8	High Middle Low	2000 Hz 2000 Hz 1100 Hz	1100 Hz 540 Hz 760 Hz	8 Hz 8 Hz 8 Hz

### Conditions

None

---

### Feature Cross Reference

None

# Program 15 : Extension, Basic Setup

## 15-09 : Virtual Extension Ring Assignment

Level:

**SA**

### Description

Use **Program 15-09 : Virtual Extension Ring Assignment** to assign the ringing options for an extension Virtual Extension Key or Virtual Extension Group Answer Key which is defined in Program 15-07. You make an assignment for each Night Service Mode.

Assign extension numbers and names to virtual extension ports in Program 15-01. Program Virtual Extension keys in Program 15-07 (code \*03). There are 50 Virtual Extension Ports.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Key Number	01 ~ 32
------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default
01	<b>Ringing</b>	0 = No Ringing 1 = Ring	0

### Conditions

- Program the Multiple Directory Number function keys **NOT** to ring before removing the key from telephone programming.

### Feature Cross Reference

None

# Program 15 : Extension, Basic Setup

## 15-10 : Incoming Virtual Extension Ring Tone Order Setup

Level:

**SA**

### Description

Use **Program 15-10 : Incoming Virtual Extension Ring Tone Order Setup** to set the priority (1 ~ 4) for the Virtual Extension Ring Tones set in Program 15-08. When Virtual Extension calls ring an extension simultaneously, the tone with the highest order number (e.g., 1) rings. The other keys only flash. There are 50 Virtual Extension ports.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Item No.	Item	Input Data	Description	Related Program
01	<b>Priority Order</b>	1 ~ 4	When two or more virtual extensions are set on a function key on the telephone, and the tone pattern by which the sound of each extension differs, the priority of ring sound is set up.	15-08
	<b>Data</b>	0 ~ 8 0 = Tone Pattern 1 1 = Tone Pattern 2 2 = Tone Pattern 3 3 = Tone Pattern 4 4 = Incoming extension ring tone 5 = Melody1 (2W Digital/IP Multiline Terminal) 6 = Melody2 (2W Digital/IP Multiline Terminal) 7 = Melody3 (2W Digital/IP Multiline Terminal) 8 = Melody4 (2W Digital/IP Multiline Terminal)		

### Default

- By default, Virtual Extension ring tones have the following order :

Priority Order	Ring Tone (Set in Program 15-08)
1	0 (Tone Pattern 1)
2	1 (Tone Pattern 2)
3	2 (Tone Pattern 3)
4	3 (Tone Pattern 4)

### Conditions

None



---

## Feature Cross Reference

None

# Program 15 : Extension, Basic Setup

## 15-11 : Virtual Extension Delayed Ring Assignment

Level:

**SA**

### Description

Use **Program 15-11 : Virtual Extension Delayed Ring Assignment** to assign the delayed ringing options for an extension Virtual Extension or Virtual Extension Group Answer keys (defined in Program 15-09). You make an assignment for each Night Service Mode. There are 50 Virtual Extension Ports.

Assign extension numbers (Program 11-04) and names (Program 15-01) to virtual extension ports. Program Multiple Directory Number (virtual extension) keys in Program 15-07 (code \*03).

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Key Number	01 ~ 32
------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default	Related Program
01	<b>Ring</b>	0 = Immediate Ring 1 = Delayed Ring	0	20-04-03 15-09-01

### Conditions

- Program the Virtual Extension keys **NOT** to ring before removing the key from telephone programming.
- Program 15-09-01 has to be assigned to Ring Immediately before assigning the VE key to Delay Ring.

### Feature Cross Reference

None

## Program 15 : Extension, Basic Setup

### 15-12 : Conversation Recording Destination for Extensions

Level:

**IN**

---

#### Description

Use **Program 15-12 : Conversation Recording Destination for Extensions** to set the Conversation Recording destination for each extension.

 *If both Programs 14-09 and 15-12 define a destination, the destination in Program 15-12 is followed.*

#### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Item No.	Item	Input Data	Description	Default
01	<b>Recording Destination Extension Number</b>	Maximum eight digits	Enter the extension number to which the trunk calls should be recorded.	No Setting
02	<b>Automatic Recording for Incoming Calls</b>	0 = Off 1 = On	Determine if an extension incoming calls should be automatically recorded.	0

#### Conditions

None

---

#### Feature Cross Reference

None

# Program 15 : Extension, Basic Setup

## 15-13 : Loop Keys

Level:

**IN**

---

### Description

Use **Program 15-13 : Loop Keys** to assign the Loop Key data for each keyset terminal. Loop Keys can be incoming, outgoing or both ways. Outgoing Loop Keys use the entry in item 1. Incoming Loop Keys use the entry in item 2. Both Way Loop Keys follow the entries in both item 1 and 2.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Key Number	01 ~ 32
------------	---------

Item No.	Item	Input Data	Default
01	<b>Outgoing Option</b>	0 ~ 50 (0 = Assigns the Loop Key for ARS, 1 ~ 50 = Assigns the Loop Key to the trunk group specified)	0
02	<b>Incoming Option</b>	0 ~ 50 (0 = Assigns the Loop Key to all trunk groups, 1 ~ 50 = Assigns the Loop key to the trunk group specified)	0

### Conditions

- Please set Loop Key at Program 15-07 before setting Program 15-13.

---

### Feature Cross Reference

None

# Program 15 : Extension, Basic Setup

## 15-14 : One-Touch Keys

Level:

**SB**

### Description

Use **Program 15-14 : One-Touch Keys** to define the One-Touch key data for each multiline terminal.

For each Wireless telephone to use the Transfer When Out of Range feature, enter the destination number (up to 36 digits) and name (up to 12 characters) into One-Touch bin 10. Make sure to add any required trunk access codes for outside numbers. If this bin information is changed either through 15-14-01 or through user programming, the destination for the transferred calls is also changed.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Key Number	01 ~ 10
------------	---------

Item No.	Item	Input Data	Description	Default
01	<b>Dial Data</b>	Maximum of 36 digits (0 ~ 9, *, #, @, P, R) @ = Wait for Answer Supervision - ISDN trunks only P = Pause - Analog Trunk Only R = Hook flash - Analog Trunk Only	If PRG 15-02-60 is set to a (0) then the stations personal speed dial entries are programmed here. Per key number (1 ~ 10) assign the telephone number that is to be called when the bin is accessed.	No Setting
02	<b>Name</b>	Maximum of 12 characters	Per key number (1 ~ 10) assign a name to be used when searching through the directory. If a name is not assigned for a speed dial bin the speed dial entry will not be listed in the directory.	No Setting

### Conditions

None

### Feature Cross Reference

None

# Program 15 : Extension, Basic Setup

## 15-16 : SIP Register ID Setup for Extension

Level:

**IN**

---

### Description

Use **Program 15-16 : SIP Register ID Setup for Extension** to define the SIP Register ID for Extensions.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Profile	1 ~ 6
---------	-------

Item No.	Item	Input Data	Default
01	Register ID	None, 0 ~ 31	No Setting

### Conditions

None

---

### Feature Cross Reference

None

# Program 15 : Extension, Basic Setup

## 15-17 : CO Message Waiting Indication

Level:

**IN**

---

### Description

Use **Program 15-17 : CO Message Waiting Indication** to set the message waiting LED Flash assignment on each CO line.

### Input Data

Extension Number including Virtual Extensions	Up to eight digits
---	--------------------

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Default
01	LED Flash Assignment	0 = LED Off 1 = LED On	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 15 : Extension, Basic Setup

## 15-18 : Virtual Extension Key Enhanced Options

Level:


**IN**

### Description

Use **Program 15-18 : Virtual Extension Key Enhanced Options** to define the operation when a Virtual Extension Key is pressed.

### Input Data

Extension Number including Virtual Extensions	Up to eight digits
---	--------------------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Virtual Extension Key Operation Mode</b>	0 = Release 1 = Land on the key	Define if calls to a Virtual Extension Key land on the Virtual or on the extension/CO appearance.   <i>This is assigned for the Virtual Extension Key, not the extension it resides on.</i>	0	20-04-01
02	<b>Display mode when placing a call on Virtual Extension Key</b>	0 = Secondary Extension Name 1 = Actual Station Name	Defines if calls to or from a Virtual Extension Key display the Virtual Extension Key name or the name of the extension it resides on.	0	
03	<b>Show CLI</b>	0 = No CLI info 1 = Show CLI info	When set to a 0, the caller ID of a trunk call/station call pointed to a virtual extension will not be displayed if the virtual extension is not set to ring. When set to a 1, the caller ID of a trunk call pointed to a virtual extension will be displayed if the virtual extension is not set to ring. Station calls to a virtual that is not assigned to ring will display the station name or number if PRG 15-18-04 is set to a 1.	0	15-09-01
04	<b>Show Internal Caller Information</b>	0 = Do Not Show 1 = Show	When set to a 0, internal calls to the virtual extension will not show the name or number of the extension that is calling. When set to 1, internal calls to the virtual extension will show the name or number of the extension that is calling if the virtual is assigned to ring or if PRG 15-18-03 is set to a 1.	0	15-09-01 15-18-03
05	<b>One Ring</b>	0 = Normal Ring Cycle 1 = One Ring	When set to a 0, the virtual extension follows the normal ring cycle. When set to a 1, the virtual extension will only ring one time (the virtual extension must be first set to ring in PRG 15-08).	0	15-09-01



**Condition**

- If a DIL rings a Virtual Extension, the Virtual Extension Key Operation Mode must be set to 1.

---

**Feature Cross Reference**

None

# Program 15 : Extension, Basic Setup

## 15-20 : LCD Line Key Name Assignment

Level:

**IN**

### Description

Use this Memory Block to assign a name to each LCD Line Key of the IP Multiline Terminal. Up to 13 characters can be assigned.

### Input Data


Extension Number	Up to eight digits
------------------	--------------------

Key Number	1 ~ 32
------------	--------

Item No.	Item	Input Data	Default
01	Name	Up to 13 characters	Refer below
	Name (Chinese Character)	The Chinese character of a maximum of 6 characters	

### Default

Key No.	Name	Name (Chinese Character)
LK01	CO 001	All Blank
:	:	:
LK06	:	:
LK07	:	:
LK08	CO 008	:
LK09	All Blank	:
:	:	:
LK32	All Blank	All Blank

 Depend on PRG15-07-01  
When Chinese characters is inputted, if character is not inputted, it is an error. It is not an error when only character is inputted.

### Conditions

None

### Feature Cross Reference

None

# Program 15 : Extension, Basic Setup

## 15-22 : Mobile Extension Setup

Level:

**IN**

### Description

Use **Program 15-22 : Mobile Extension Setup** to set the system information for the Mobile Extension feature.

### Input Data

Extension Number	Up to eight digits
------------------	--------------------

Item No.	Item	Input Data	Description	Default
01	<b>Mobile Extension Target Setup</b>	0 = No Setting 1 ~ 999 = Speed Dial Bin 1 ~ 999 (PRG 13-04)	Set which Speed Dial bin is used to call when the Mobile extension is called.	0
02	<b>Connect Confirmation</b>	0 = Always (User must dial * when answered for the call to cut through on ALL line types.) 1 = On Analog Line (User must dial * when answered for the call to cut through on Analog lines only.) 2 = Never (When the call is answered the call is immediately cuts through.)	Per Mobile Extension, assigned in PRG 11-02, select whether a confirmation is required (user dials*) to allow the call to cut through when answered.	0
03	<b>Trunk Access Code</b>	0 = Normal Trunk Access (PRG 11-09-01) 1 = Individual Trunk Access (PRG 11-09-02)	Select if the Normal (0) or Individual (1) Trunk access is used when making the call to the mobile number.	0
04	<b>Call Back</b>	0 = Disable 1 = Enable		0

### Conditions

None

### Feature Cross Reference

None

# Program 15 : Extension, Basic Setup

## 15-24 : Registration of Standard SIP Terminal

Level:

**IN**

### Description

Use **Program 15-24 : Registration of Standard SIP Terminal** to register data in the standard SIP terminal where Register is not used.

### Input Data

Extension Number	Up to eight digits
------------------	--------------------

Item No.	Item	Input Data	Description	Default
01	<b>Using IP Address</b>	0.0.0.0 ~ 255.255.255.255	IP Address of the standard SIP terminal that is used as the SIP extension. When Program 15-24-03 is set to 1, this Program cannot be changed from 0.0.0.0 (except using PCProgramming).	0.0.0.0
02	<b>Call Procedure Port</b>	1 ~ 65535	Call procedure port of the standard SIP terminal that is used as SIP extension.	5060
03	<b>Registration Setting when REGISTER isn't used</b>	0 = Disable 1 = Enable	Enables or disables the Registration method. An error will occur if Program 15-24-01 is 0.0.0.0 and this Program is set to 1 (except using PCProgramming).	0
04	<b>Transport Protocol</b>	0 = UDP 1 = TCP	This program sets the transport protocol.	0

### Conditions

None

### Feature Cross Reference

None

# Program 15 : Extension, Basic Setup

## 15-25 : DESI-less Page Setup

Level:

**IN**

---

### Description

This program defines the page setting of each Self Labeling (Sophisticated) extension.

### Input Data

Extension Number	Up to eight digits
------------------	--------------------

Item No.	Item	Input Data	Default
01	Incoming Call Notify Event	0 = Disable 1 = Enable	1
02	Automatically Screen Change while Incoming Call	0 = Disable 1 = Enable	1
03	Automatic Display Setting while idle	0 = Disable 1 ~ 4 = page1 ~ page4	0
04	Automatic Display Setting while speaking	0 = Disable 1 ~ 4 = page1 ~ page4	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 15 : Extension, Basic Setup

## 15-28 : Trunk Incoming Ring Tone of Extension Setup

Level:

**IN**

### Description

Use **Program 15-28 : Trunk Incoming Ring Tone of Extension Setup** to define the ringing tone for each trunk port of extension.

### Input Data

Extension Number	Up to eight digits
Trunk port number	1 ~ 128
Day/Night Mode	1 ~ 8

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Trunk Incoming Ring Tone</b>	0 ~ 8 0 = Trunk incoming ring tone (2W Digital/IP Multiline Terminal) 1 = High (2W Digital/IP Multiline Terminal) 2 = Middle (2W Digital/IP Multiline Terminal) 3 = Low (2W Digital/IP Multiline Terminal) 4 = Melody1 (2W Digital/IP Multiline Terminal) 5 = Melody2 (2W Digital/IP Multiline Terminal) 6 = Melody3 (2W Digital/IP Multiline Terminal) 7 = Melody4 (2W Digital/IP Multiline Terminal) 8 = Melody5 (2W Digital/IP Multiline Terminal)	Assign individual ring tones at extension for each trunk and each Night mode. When 0 (Trunk incoming ring tone) is selected, it follows the setting of Program 15-02-02. When 2 (Incoming external ring tone) is selected, it follows the setting of Program 22-03.	0	22-03 15-02-02

### Conditions

None

### Feature Cross Reference

None

# Program 15 : Extension, Basic Setup

## 15-31 : Terminal-ID Assignment Setup

Level:

**IN**

---

### Description

Use **Program 15-31 : Terminal-ID Assignment Setup** to set a terminal ID for each extension number.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Item No.	Item	Input Data	Description	Default
01	Terminal-ID	0-999		0

### Conditions

None

---

### Feature Cross Reference

E-911 Compatibility

# Program 16 : Department Group Setup

## 16-01 : Department Group Basic Data Setup

Level:


**IN**

### Description

Use **Program 16-01 : Department Group Basic Data Setup** to set the function mode for each department group. There are 50 available Department Groups.

### Input Data

Department Group Number	1 ~ 50
-------------------------	--------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Department Name</b>	Maximum 12 characters	This program is used to assign a name to the department group.	No Setting	11-07
02	<b>Department Calling Cycle</b>	0 = Normal Routing (Priority) 1 = Easy - UCD Routing (Circular)	Use this option to set the call routing for Department Calling. Routing can be either circular (cycles to all phones in group) or priority (cycles to highest priority extensions first).	0	16-02
03	<b>Department Routing when Busy (Auto Step Call)</b>	0 = Normal (Intercom caller hears busy tone.) 1 = Circular (Intercom caller routes to an idle group member.)	Set this option to set how the system routes an Intercom call to a busy Department Group member. Intercom callers to the extension can either hear busy or route to the first available department number. This only occurs for calls to the extension directly, not the department number assigned in Program 11-07.	0	16-02
04	<b>Hunting Mode</b>	0 = Stop at last member (non-loop) 1 = Circular	Use this option to set the action taken when a call reaches the last extension in the Department Group (0 = hunting stopped, 1 = hunting repeats with circular routing through the Department Group).	0	16-02
05	<b>Extension Group All Ring Mode Operation</b>	0 = Manual (Ring the extensions one at a time when the service code are pressed.) 1 = Automatic (Ring all extensions.)	Determine whether calls ringing a Department Group should ring all extensions in the group simultaneously automatically or manually when using the service code defined in Program 11-12-09.   <i>When set to (1) Automatic, only ICM Calls and DID Calls will ring all the stations in the Department Group.</i>	0	11-16-10
06	<b>STG Withdraw Mode</b>	0 = Disabled (Call will camp on to the group.) 1 = Automatic (Call follows PRG 22-11-11.)		0	
07	<b>Call Recall Restriction for STG</b>	0 = Disabled (Call will recall.) 1 = Enabled (Call will not recall.)	Determine whether or not an unanswered call transferred to a Department Group should recall the extension from which it was transferred.	0	24-02-04



Item No.	Item	Input Data	Description	Default	Related Program
08	<b>Maximum Queuing number for Department Group Call</b>	0 ~ 32 0 = No Queuing	This program sets the amount of calls that can queue to a department group when all members of the group are busy.	0	
09	<b>Department Hunting No Answer Time</b>	0 ~ 64800 seconds	Set how long a call rings a Department group extension before hunting occurs.	15	
10	<b>Enhanced Hunt Type</b>	0 = No hunting 1 = Hunting When Busy 2 = Hunting When Not Answered 3 = Hunting When Busy or No Answer	Set the type of hunting for each Extension (Department) Group.	0	

### Conditions

None

---

### Feature Cross Reference

- Department Calling

# Program 16 : Department Group Setup

## 16-02 : Department Group Assignment for Extensions

Level:


**IN**

### Description

Use **Program 16-02 : Department Group Assignment for Extensions** to set the Department Groups. The system uses these groups (50 Department Groups) for Department Calling. Assign pilot numbers to Department Groups you set up in Program 11-07. This lets system users place calls to the departments. Use Program 16-01 to set the priority of each extension in each Department Group. When a call comes to the group, the extensions ring in order of their priority.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Item No.	Item	Input Data	Default	Description	Related Program
01	Group Number	1 ~ 50	1 - xxx (See  )	Set up the Department Group called by the pilot number and the extension priority when a group is called. Call Pickup Groups are set up in 23-02.	11-07 16-01
	Priority	1 ~ 200			



*The initial value of a priority becomes the ports numerical order assigned in Programs 11-02 and 11-04.*

**Table 2-6 Default Value**

Extension	Group	Priority
101 ~ 212	1	1 ~ 112
213 ~ 228	50	1 ~ 16
250 ~ 299	1	129 ~ 178

### Conditions

None

### Feature Cross Reference

- Department Calling

# Program 16 : Department Group Setup

## 16-03 : Secondary Department Group

Level:

**IN**

---

### Description

Use **Program 16-03 : Secondary Department Group** to set a second Department Group for extensions. Up to 16 extensions can be assigned per a Department Group. There are 50 available Department Groups.

### Input Data

Department (Extension) Group Number	1 ~ 50
-------------------------------------	--------

Item No.	Item	Input Data	Description
01	<b>Secondary Extension Number</b>	1 ~ 16	This program is set up when placing telephones in two or more groups.
	<b>Extension Number</b>	Maximum 8 digits	
	<b>Priority Order</b>	0 ~ 200	

### Default

- All extension groups : No Setting

### Conditions

None

---

### Feature Cross Reference

- Department Calling

# Program 16 : Department Group Setup

## 16-04 : Call Restriction Between Department Groups

Level:

**IN**

---

### Description

Use **Program 16-04 : Call Restriction Between Department Groups** to set internal calls between members of different Department (Station) groups that can be restricted on a per group basis. Each department group can restrict calls to up to 8 department groups in Department Group - Departmental Call Restriction.

### Input Data

Extension (Department) Group Number	1 ~ 50
-------------------------------------	--------

Restricted Group Index	1 ~ 8
------------------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>Restrict Department Group Number</b>	0 ~ 50	Calls between members of different Department (Station) groups can be restricted on a per group basis.	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-01 : System Options

Level:

**IN**

### Description

Use Program 20-01 : System Options to set various system options.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Operator Access Mode</b>	0 = Step Call 1 = Circular	Use this program to set up priority of a call when calling an operator telephone.	0	20-17
02	<b>Text Message Mode</b>	0 = Call mode 1 = Absent mode	Use this program to select the mode when calling the telephone which set up the text message.	1	11-11-14 15-07-08
04	<b>Interval timer for BLF Data</b>	0 ~ 64800 (0 ~ 6480 seconds)	While on Networking Operation It sends a BLF message to other system interval of per 100s.	0	
05	<b>DTMF Receive Active Time</b>	0 ~ 64800 seconds	For OPXs, analog telephones and certain analog trunks (like DISA), the system attaches a DTMF receiver to the port for this time. The system releases the receiver after the time expires.	10	25-07-01
06	<b>Alarm Duration</b>	0 ~ 64800 seconds	This time sets the duration of the alarm signal.	30	11-11-12
07	<b>Callback Ring Duration Time</b>	0 ~ 64800 seconds	Callback rings an extension for this time.	15	11-12-05 15-07-35
08	<b>Trunk Queuing Callback Time</b>	0 ~ 64800 seconds	Trunk Queuing callback rings an extension for this time.	15	11-12-05 15-07-35
09	<b>Callback/Trunk Queuing Cancel Time</b>	0 ~ 64800 seconds	The system cancels an extension Callback or Trunk Queuing request after this time.	64800	11-12-05 15-07-35
10	<b>Trunk Guard Timer</b>	0 ~ 64800 seconds	The amount of time the system waits to seize the next outside line after the system releases an outside line.	1	
12	<b>Telephone/Web Pro Logout Time</b>	1 ~ 86400 (86400 seconds = 1 day)	The system automatically logs out of a Telephone/Web Pro session after inactivity lasting this time.	900 (15 min.)	
16	<b>Mobile Extension Callback time</b>	1 ~ 64800 seconds	The amount of time the system waits to until system ends the call back.	15	15-22-04
17	<b>Day/Night Change Key Mode</b>	0 = Toggle (Will follow PRG 12-08-01.) 1 = Skip (When pressed the system will step to the next night mode time period in PRG 12-02.)	This program sets the operation mode for the Night Mode Key (PRG 15-07 key 09).	0	15-07

Item No.	Item	Input Data	Description	Default	Related Program
20	<b>ProgressTone for Mobile Extension Setting</b>	0 = Disable 1 = Enable	Enable/Disable the ProgressiveTone when calling a Mobile Extension.	1	
21	<b>Recording operation on hold</b>	0 = Continue 1 = Exit		1	

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-02 : System Options for Multiline Telephones

Level:

**IN**

### Description

Use **Program 20-02 : System Options for Multiline Telephones** to set various system options for multiline telephones.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Trunk Loop Key Operation Mode</b>	0 = Keep Lamp 1 = Extinction  <i>Mode      0 = Keep Lamp    1 = LED Off</i> <i>Incoming :            300 IPM Red blink</i> <i>Talking :      Green Lighting      LED Off</i> <i>                  (on Talking TEL)</i> <i>Holding :      60 IPM Green      LED Off</i> <i>                  blink (on holding TEL)</i>		1	
04	<b>Retrieve the Line After Transfer</b>	0 = Extinction 1 = Keep Lamp	Enable (1) or disable (0) an extension ability to answer a call after it has been transferred, but before it is answered.	1	
05	<b>Headset Busy Mode</b>	0 = No (Disable) 1 = Yes (Enable)	Set the conditions under which a headset extension is busy to incoming callers.	0	20-09-07
06	<b>Pre-selection Time</b>	0 ~ 64800 seconds	When a multiline terminal user pre-selects a line key, the system remembers the pre-selection for this time.	5	
07	<b>Display mode of Date and Time</b>	1 ~ 10	Set how the Time and Date appear on display telephones. There are eight display modes.	3	
08	<b>LCD Display Holding Time</b>	0 ~ 64800 seconds		5	
09	<b>Disconnect Supervision</b>	0 = Disable (Off) 1 = Enable (On)	Use this option to enable or disable disconnect supervision for the system trunks.	1	

Item No.	Item	Input Data	Description	Default	Related Program
10	<b>Time Before Shifting to Power-Saving Mode</b>	0 = No Shift (Power saving mode off) 1 = 1 minute 2 = 2 minutes 3 = 4 minutes 4 = 8 minutes 5 = 16 minutes 6 = 32 minutes 7 = 64 minutes		0	15-02-18
11	<b>Handsfree Microphone Control</b>	0 = Off 1 = On	Use this option to control the setting for Multiline Terminal Handsfree microphone after being disconnected and reconnected. If set to 0, the microphone is always off when the terminal is reconnected. If set to 1, the microphone remains in the same state it was in when the terminal is reconnected.	1	
12	<b>Forced Intercom Ring (ICM Call Type)</b>	0 = Disable (Voice) 1 = Enable (Signal)	Use this option to enable or disable Forced Intercom Ringing. If enabled, incoming Intercom calls normally ring. If disabled, Intercom calls voice-announce.	1	
15	<b>Caller ID Display Mode</b>	0 = Name and Number (Both) 1 = Name Preference 2 = Number Preference		0	
18	<b>Dialing Record Display Time</b>	0 ~ 64800 seconds		30	
19	<b>DSS Key - Virtual Extension Mode</b>	0 = No 1 = Yes	Sets the mode of a virtual extension key that appears on a DSS console.	0	99-01-46
24	<b>LCD scroll mode</b>	0 = Character 1 = Dot		0	
26	<b>F-Route outgoing mode from incoming history</b>	0 : OFF 1 : ON		0	
27	<b>ACD Monitor for Business Mode</b>	0 : OFF 1 : ON	ACD Monitor can be used at any time.	0	41-02-01 41-05-01 41-06-01 41-07-01 15-07-01

**Table 2-7 Note [Digital (2W)/IP Multiline Terminal]**

Clock display mode
type1 "DD MMM WWW hh:mmAP" (12H)



<b>Clock display mode</b>	
type2 "hh:mmAP MMM DD WWW" (12H)	
type3 "MM-DD WWW hh:mmAP" (12H)	
type4 "hh:mmAP WWW DD MMM" (12H)	
type5 " DD MMM WWW hh:mm" (24H)	
type6 "hh:mm MMM DD WWW" (24H)	
type7 "MM-DD WWW hh:mm" (24H)	
type8 "hh:mm WWW DD MMM" (24H)	
MM --- Month	Ex.) "1", "10"
MMM -- Month	Ex.) "JAN"
DD --- Day	Ex.) "1", "31"
WWW -- Day of Week	Ex.) "MON"
AP --- AM/PM	
hh --- Hour	Ex.) "6", "18"
mm --- Minute	Ex.) "05"

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-03 : System Options for Single Line Telephones

Level:

**IN**

### Description

Use **Program 20-03 : System Options for Single Line Telephones** to set up various options for single line telephones.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>SLT Call Waiting Answer Mode</b>	0 = Hook Flash (Hooking) 1 = Hook Flash + Service Code 794	For a busy single line telephone, set the mode used to answer a camped-on trunk call.	0	11-12-47
02	<b>Ignore Received DP Dial on DTMF SLT Port</b>	0 = Do Not Ignore (No) 1 = Ignore (Yes)	Use this option to define whether the system should receive dial pulse and DTMF signals (0) or ignore dial pulse and only accept DTMF signals (1).	0	15-03-01
03	<b>SLT DTMF Dial to Trunk Lines</b>	0 = Quing Dial Method 1 = Direct Dial Method	<ul style="list-style-type: none"> <li>• <b>Type 0</b> : The system keeps the digits dialed by the single line telephone on a trunk in a buffer. After all the digits are received, the system sends all the digits to the trunk. If the time space between digits is longer than the time in Item 4, the system considers all digits received.</li> <li>• <b>Type 1</b> : The system passes the received digits from the single line telephone to the trunk immediately. If the single line telephone has a Last Number Dial key without a pause, this key may not be able to use the Last Number Dial key with the Type 1 setting.</li> </ul> <p>When using a third-party external paging device, set this option to <b>1</b>. In addition, set Program 20-03-04 to <b>1</b></p>	0	20-03-04
04	<b>Dial Sending Start Time for SLT or ARS</b>	0 ~ 64800 seconds	When ARS or an analog extension user accesses a trunk and dials an outside call, the system waits this time before outdialing the first digit. When using a third-party external paging device, set this option to <b>1</b> . In addition, set Program 20-03-03 to <b>1</b> .	3	20-03-03
05	<b>SLT Operation Mode</b>	0 = Normal Mode 1 = Extended Mode 1 2 = Extended Mode 2		0	

Item No.	Item	Input Data	Description	Default	Related Program
06	Headset Ringing Start Time (for SLT)	0 ~ 64800 seconds	Define the headset ringing start time. After this time expires from the time when a single line telephone is off-hook, the system sets the single line telephone to headset ringing mode.	5	20-13-38
07	Trunk Call Dial Forced Sending Start Time (Forced Dial)	0 ~ 64800 seconds		0	20-03-03 20-03-04

### Conditions

None

---

### Feature Cross Reference

- Single Line Telephones

# Program 20 : System Option Setup

## 20-04 : System Options for Virtual Extensions

Level:

**IN**

---

### Description

Use **Program 20-04 : System Options for Virtual Extensions** to set up various system options for Virtual Extensions. There are 50 available Virtual Extension ports.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
03	<b>Call Coverage Delay Interval</b>	0 ~ 64800 seconds	Virtual Extensions set for Delayed Ringing (see Program 15-11) ring the extension after this time.	10	
04	<b>Virtual Extension Key Seize Mode</b>	0 = Normal 1 = Enhanced Option	When set to <b>Enhanced</b> , the BLF will not show as being busy when the station is on a trunk call. When set to <b>Normal</b> , the BLF will show as being busy when on a trunk call.	1	
05	<b>Ringtone mode for incoming to VE</b>	0 = Off 1 = On	Enable the distinctive ring tone when incoming ring.	0	22-03-01 15-08-01

### Conditions

None

---

### Feature Cross Reference

- Virtual Extensions

# Program 20 : System Option Setup

## 20-06 : Class of Service for Extensions

Level:

**IN**

---

### Description

Use **Program 20-06 : Class of Service for Extensions** to assign a Class of Service (COS) to an extension. There are 15 Classes of Service that can be assigned. To specify the options in each Class of Service, refer to Programs 20-07 through 20-13. You make eight entries for Program 20-06, one for each Night Service Mode.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default
01	Class of Service for Extensions	1 ~ 15	Extension 101 is Class 15 and other Extension are Class 1

### Conditions

None

---

### Feature Cross Reference

- Class of Service

# Program 20 : System Option Setup

## 20-07 : Class of Service Options (Administrator Level)

Level:

**IN**

### Description

Use **Program 20-07 : Class of Service Options (Administrator Level)** to define the administrator service availability for each extension Class of Service (COS).

### Input Data

Class of Service Number	1 ~ 15
-------------------------	--------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Manual Night Service Enabled</b>	0 = OFF (User cannot control manual night mode.) 1 = ON (User can control manual night mode.)	Turns off or on an extension for manual Night Service Switching.	COS1 ~ 14/ COS15 = 1	11-10-01
02	<b>Changing the Music on Hold Tone</b>	0 = Off 1 = On	Turns off or on an extension to change the Music on Hold tone.	COS1 ~ 14/ COS15 = 1	11-10-02
03	<b>Time Setting</b>	0 = Off 1 = On	Turns off or on an extension to set the Time via Service Code 728.	COS1 ~ 14/ COS15 = 1	11-10-03
04	<b>Storing Speed Dialing Entries</b>	0 = Off (Deny) 1 = On	Turns off or on an extension to store System or Group Speed Dialing numbers.	COS1 ~ 14/ COS15 = 1	11-10-04
05	<b>Set/Cancel Automatic Trunk-to-Trunk Transfer</b>	0 = Off 1 = On	Turns off or on an extension user ability to use the Trunk-to-Trunk Forwarding service codes.	COS1 ~ 14/ COS15 = 0	11-10-06 11-10-07 11-10-08
06	<b>Charging Cost Display</b>	0 = Off 1 = On		COS1 ~ 14/ COS15 = 0/1	11-10-09
10	<b>Programmable Function Key Programming (Appearance Level)</b>	0 = Off 1 = On	Turns off or on the ability for an extension user ability to program the Appearance function keys using Service Code 752.	COS1 ~ 14/ COS15 = 1	11-11-38
11	<b>Forced Trunk Disconnect (analog trunk only)</b>	0 = Off 1 = On	Turns off or on an extension user ability to use Forced Trunk Disconnect.	COS1 ~ 14/ COS15 = 1	11-10-26
12	<b>Trunk Port Disable</b>	0 = Off 1 = On		COS1 ~ 14/ COS15 = 1	11-10-27
13	<b>VRS Record (VRS Msg Operation)</b>	0 = Off 1 = On	Turns off or on extension user ability to record, erase and listen to VRS messages.	COS1 ~ 14/ COS15 = 0/1	11-10-20
14	<b>VRS General Message Play</b>	0 = Off 1 = On	Turns an extension off or on to dial 4 or Service Code 611 to listen to the General Message.	COS1 ~ 14/ COS15 = 0/1	11-10-21

Item No.	Item	Input Data	Description	Default	Related Program
15	<b>VRS General Message Record/Delete</b>	0 = Off 1 = On	Turns off or on an extension user ability to dial Service Code 612 and record, listen to, or erase the General Message.	COS1 ~ 14/ COS15 = 0/1	11-10-22
18	<b>SMDR Printout Accumulated Extension Data</b>	0 = Off 1 = On		COS1 ~ 14/ COS15 = 1	11-10-23
19	<b>SMDR Printout Department Group (STG) Data</b>	0 = Off 1 = On		COS1 ~ 14/ COS15 = 1	11-10-24
20	<b>SMDR Printout Accumulated Account Code Data</b>	0 = Off 1 = On		COS1 ~ 14/ COS15 = 1	11-10-25
23	<b>CO MSG Waiting Indication Callback Number Programming</b>	0 = Off 1 = On	Allow following operation. Forced LED Clear (Feature plus 20). MWI Callback number area assignment (Feature plus 28). Edit Callback number digits (Feature plus 29).	COS1 ~ 14/ COS15 = 0	
24	<b>Set/Cancel Private Call Refuse</b>	0 = Off (User cannot control the feature.) 1 = On	Per class of service (PRG 20-06-01) this program is used to allow or deny the stations ability to set or cancel the Private Call Refuse feature.	COS1 ~ 14/ COS15 = 1	11-10-32
25	<b>Set/Cancel Caller ID Refuse</b>	0 = Off (User cannot control the feature.) 1 = On	Enable or Disable an extension ability to set or cancel Caller ID Refuse.	COS1 ~ 14/ COS15 = 1	11-10-33 11-10-34
26	<b>Dial-In Mode Switch</b>	0 = Off (Station cannot control DDI switching.) 1 = On (Station can control DDI switching.)		COS1 ~ 14/ COS15 = 1	11-10-35
27	<b>Do-Not-Call Administrator</b>	0 = Off 1 = On		COS1 ~ 14/ COS15 = 0	15-01-07 15-07-89 21-01-19
30	<b>Date Setting</b>	0 = Off 1 = On		COS1 ~ 14/ COS15 = 1	11-10-41
31	<b>System Wide call forward clear</b>	0 = Off 1 = On		COS1 ~ 14/ COS15 = 0/1	
33	<b>Caller ID Checking</b>	0 = Off 1 = On	This program sets the Caller ID Checking.	COS 1 ~ 5 = 0	
34	<b>Clear Alarm</b>	0 = Off 1 = On		COS 15 = 1	
35	<b>Save Statistical Information of RTP</b>	0 = Off 1 = On	The availability of the save to SD Card of RTP statistical information is set up.	COS 15 = 1	

## Conditions

None

---

## Feature Cross Reference

- Class of Service

# Program 20 : System Option Setup

## 20-08 : Class of Service Options (Outgoing Call Service)

Level:

**IN**

### Description

Use **Program 20-08 : Class of Service Options (Outgoing Call Service)** to define the outgoing call feature availability for each extension Class of Service (COS).

### Input Data

Class of Service Number	1 ~ 15
-------------------------	--------

Item No.	Item	Input Data	Description	Default	Related Program
01	Intercom Calls	0 = Off 1 = On	Turns off or on Intercom calling for the extension.	COS 1 ~ 15 = 1	
02	Trunk Outgoing Calls	0 = Off 1 = On	Turns off or on outgoing trunk calling for the extension.	COS 1 ~ 15 = 1	
03	System Speed Dialing	0 = Off (Deny) 1 = On	Turns off or on an extension ability to make outbound calls using system speed dial numbers.	COS 1 ~ 15 = 1	
04	Group Speed Dialing	0 = Off (Deny) 1 = On	Turns off or on an extension ability to make outbound calls using group speed dial numbers.	COS 1 ~ 15 = 1	
05	Dial Number Preview (Preset Dial)	0 = Off 1 = On	Turns off or on an extension for using Dial Number Preview.	COS 1 ~ 15 = 1	
06	Toll Restriction Override	0 = Off 1 = On	Turns off or on Toll Restricting Override (Service Code 663).	COS 1 ~ 15 = 0	21-01-07 21-07
07	Repeat Redial	0 = Off 1 = On	Turns off or on an extension to use Repeat Redial.	COS 1 ~ 15 = 1	
08	Toll Restriction Dial Block	0 = Off 1 = On	Turns off or on an extension to use Dial Block.	COS 1 ~ 15 = 1	
09	Hotline/Extension Ringdown	0 = Off 1 = On	Turns off or on Ringdown Extension for extensions with this COS.	COS 1 ~ 15 = 1	
10	Signal/Voice Call	0 = Off 1 = On	Turns off or on an extension allowing it to force Handsfree Answerback or Forced Intercom Ringing for outgoing Intercom calls.	COS 1 ~ 15 = 1	
11	Protect for the Call Mode Switching from Caller	0 = Off 1 = On	(Internal Call)	COS 1 ~ 15 = 0	
12	Department Group Step Calling	0 = Off 1 = On	Turns off or on an extension to use Department Group Step Calling.	COS 1 ~ 15 = 1	



Item No.	Item	Input Data	Description	Default	Related Program
13	<b>Set Calling Party Number</b>	0 = Off (when set to Off the system will not send any outbound calling party information.) 1 = On (when set to ON the system will send calling party information for the station or trunk.)	Determines if the ISDN calling line identity presentation and screening indicators are allowed.	COS 1 ~ 15 = 0	10-03-05 15-01-04
14	<b>Call Address Information</b>	0 = Off 1 = On		COS 1 ~ 15 = 0	
15	<b>Block Outgoing Caller ID</b>	0 = Off 1 = On	Turns off or on the system ability to automatically block outgoing Caller ID information when a user places a call. If this option is on, the system automatically inserts the Caller ID block code (defined in Program 14-01-21) before the user-dialed digits.	COS 1 ~ 15 = 0	14-01-20 14-01-21
16	<b>Display E911 Dialed Extension Name and Number</b>	0 = Off 1 = On	Turns off or on an extension to display the name and number of the extension that dialed E911.	COS 1 ~ 15 = 0	
17	<b>ARS Override of Trunk Access Map</b>	0 = Off 1 = On	Turns off or on an extension ability to override the trunk access map programming for outgoing calls.	COS 1 ~ 15 = 0	
19	<b>Hotline for SPK</b>	0 = Off 1 = On	The ability of an extension to have Hotline activated or deactivated when going off hook via the speaker key.	COS 1 ~ 15 = 0	20-08-09
20	<b>Hot Key Pad</b>	0 = Off 1 = On	The ability of an extension to make a call by just dialing the number without first going off hook.	COS 1 ~ 15 = 0	
21	<b>Automatic Trunk Seizing by Pressing SPK Key</b>	0 = Off 1 = On	The ability of an extension to automatically access Trunk Route when going off hook via the speaker key.	COS 1 ~ 15 = 0	
22	<b>Voice Over to Busy Virtual Extension</b>	0 = Off 1 = On	The ability of an extension to make Voice Over to Busy Virtual Extension.	COS 1 ~ 15 = 0	
23	<b>Display indication for security sensor detection</b>	0 = Off 1 = On	Enable (1) or Disable (0) an extension's ability to display indication for security sensor detection.	COS 1 ~ 15 = 0	
24	<b>Display indication for emergency call by remote inspection</b>	0 = Off 1 = On	Enable (1) or Disable (0) an extension's ability to display indication for emergency call by remote inspection.	COS 1 ~ 15 = 0	

## Conditions

None

---

## Feature Cross Reference

- Class of Service

# Program 20 : System Option Setup

## 20-09 : Class of Service Options (Incoming Call Service)

Level:



**IN**

### Description

Use **Program 20-09 : Class of Service Options (Incoming Call Service)** to define the incoming call feature availability for each extension Class of Service (COS).

### Input Data

Class of Service Number	1 ~ 15
-------------------------	--------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Second Call for DID/DISA/DIL/E&amp;M Override</b>	0 = Off (2nd call will not be allowed.) 1 = On (2nd call is allowed.)	Turns off or on the extension ability to receive a second call from a DID, DISA, DIL, or tie line caller.   <i>With this option set to 1, the destination extension must be busy for a second DNIS caller to ring through. If the destination extension does not have a trunk key available for the second call and a previous call is ringing the extension but has not yet been answered, the second caller hears busy regardless of this program setting.</i>   <i>On TELPro/WebPro/PCPro Item name is changed to "2nd External Call" from "2nd Cal DID Ovrride".</i>	COS 1 ~ 15 = 1	
02	<b>Caller ID Display</b>	0 = Off 1 = On	Turns off or on the Caller ID display at an extension.	COS 1 ~ 15 = 1	
04	<b>Notification for Incoming Call List Existence</b>	0 = Off 1 = On	Determines whether or not an extension display shows Check List when an incoming call is missed by a user.	COS 1 ~ 15 = 1	
05	<b>Signal/Voice Call</b>	0 = Off 1 = On	Turn off or on an extension ability to enable Handsfree Answerback or Forced Intercom Ringing for their incoming Intercom calls.	COS 1 ~ 15 = 1	11-11-15 11-11-16
06	<b>Incoming Time Display</b>	0 = Off 1 = On		COS 1 ~ 15 = 1	
07	<b>Call Queuing</b>	0 = Off (Calls are not queued.) 1 = On (Calls are queued.)	Turn off or on an extension ability to have calls queued if a call rings the extension when it is busy.	COS 1 ~ 15 = 1	20-13-06
09	<b>Deny Collect Call Receiving</b>	0 = Off 1 = On		COS 1 ~ 15 = 1	20-09-09

Item No.	Item	Input Data	Description	Default	Related Program
13	<b>DND Active While Ringing</b>	0 = Immediate 1 = Next call	When set to 0, and if set DND during an incoming call, the call for the terminal stops immediately. When set to 1, and if set DND during an incoming call, the call for the terminal continues ringing and set for the next call.	COS 1 ~ 15 = 1	

### Conditions

None

---

### Feature Cross Reference

- Class of Service

# Program 20 : System Option Setup

## 20-10 : Class of Service Options (Answer Service)

Level:

**IN**

### Description

Use **Program 20-10 : Class of Service Options (Answer Service)** to define the answer feature availability for each extension Class of Service (COS).

### Input Data

Class of Service Number	1 ~ 15
-------------------------	--------

Item No.	Item	Input Data	Description	Default
01	<b>Group Call Pickup (Within Group)</b>	0 = Off 1 = On	Turns off or on Group Call Pickup for calls ringing an extension Pickup Group and ringing group calls (Service Code *#).	COS 1 ~ 15 = 1
02	<b>Call pickup for another group</b>	0 = Off 1 = On	Turns off or on Group Call Pickup for calls ringing outside a group (Service Code 769).	COS 1 ~ 15 = 1
03	<b>Call pickup for specified group</b>	0 = Off 1 = On	Turns off or on Group Call Pickup for a specific group (Service Code 768).	COS 1 ~ 15 = 1
04	<b>Call picked-up telephone</b>	0 = Off 1 = On	Turns off or on an extension to be picked up by a call pickup	COS 1 ~ 15 = 1
05	<b>Directed Call Pickup for Own Group</b>	0 = Off 1 = On	Turns off or on Directed Call Pickup for calls ringing an extension Pickup Group (Service Code 756).	COS 1 ~ 15 = 1
06	<b>Meet-Me Conference and Paging</b>	0 = Off 1 = On	Turns off or on an extension to use Meet-Me Conference and Paging.	COS 1 ~ 15 = 1
07	<b>Automatic Off-Hook Answer</b>	0 = Off 1 = On	Turns off or on an extension to use Universal Auto Answer (no service code required).	COS 1 ~ 15 = 0
08	<b>Virtual Extension Off-Hook Answer</b>	0 = Off (Ringing Line Preference Disabled) 1 = On (Ringing Line Preference Enabled)	Turns off or on an extension to answer an incoming call on a Virtual Extension simply by lifting the handset.	COS 1 ~ 15 = 1
09	<b>Call Pickup Callback</b>	0 = Off 1 = On	Turn off or on an extension ability to use Call Pickup to pick up Callback calls.	COS 1 ~ 15 = 1
10	<b>Answer Preset</b>	0 = Off 1 = On		COS 1 ~ 15 = 0

### Conditions

None

---

## Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-11 : Class of Service Options (Hold/Transfer Service)

Level:

**IN**

### Description

Use **Program 20-11 : Class of Service Options (Hold/Transfer Service)** to define the Hold and Transfer feature availability for each extension Class of Service (COS).

### Input Data

Class of Service Number	1 ~ 15
-------------------------	--------

Item No.	Item	Input Data	Description	Default
01	Call Forward All	0 = Off 1 = On	Turns off or on an extension ability to initiate Call Forwarding All.	COS 1 ~ 15 = 1
02	Call Forward When Busy	0 = Off 1 = On	Turns off or on an extension ability to use Call Forward when Busy.	COS 1 ~ 15 = 1
03	Call Forwarding When Unanswered	0 = Off 1 = On	Turns off or on an extension ability to use Call Forward when Unanswered.	COS 1 ~ 15 = 1
04	Call Forwarding (Both Ringing)	0 = Off 1 = On	Turns off or on an extension ability to activate Call Forwarding with Both Ringing.	COS 1 ~ 15 = 1
05	Call Forwarding with Follow Me	0 = Off 1 = On	Turns off or on an extension ability to initiate Call Forwarding with Follow Me.	COS 1 ~ 15 = 1
06	Unscreened Transfer (Ring Inward Transfer)	0 = Off 1 = On	Turns off or on an extension ability to use Unscreened Transfer.	COS 1 ~ 15 = 1
07	Transfer Without Holding	0 = Off 1 = On	Turns off or on an extension ability to use Transfer Without Holding.	COS 1 ~ 15 = 0
08	Transfer Information Display	0 = Off 1 = On	Turns off or on an extension ability for incoming Transfer preanswer display.	COS 1 ~ 15 = 1
09	Group Hold Initiate	0 = Off 1 = On	Turns off or on an extension ability to initiate a Group Hold.	COS 1 ~ 15 = 1
10	Group Hold Answer	0 = Off 1 = On	Turns off or on an extension ability to pick up a call on Group Hold.	COS 1 ~ 15 = 1
11	Automatic On-Hook Transfer	0 = Off 1 = On	Turns off or on an extension ability to use Automatic On Hook Transfer.	COS 1 ~ 15 = 0
12	Call Forwarding Off Premise (External Call Forwarding)	0 = Off 1 = On	Turns off or on an extension ability to set up Call Forwarding Off-Premise for their telephone.	COS 1 ~ 15 = 1
13	Operator Transfer After Hold Callback	0 = Off 1 = On	Turns off or on an extension ability to have a call which recalls from hold transfer to the operator.	COS 1 ~ 15 = 1
14	Trunk-to-Trunk Transfer Restriction	0 = Off 1 = On	Turns off or on the Trunk-to-Trunk Transfer Restriction. If enabled, Trunk-to-Trunk Transfer is not possible.	COS 1 ~ 15 = 0
15	VRS Personal Greeting (Message Greeting)	0 = Off 1 = On	Turns off or on a Service Code to record, listen to, or erase the Personal Greeting Message.	COS 1 ~ 15 = 1

Item No.	Item	Input Data	Description	Default
16	Call Redirect	0 = Off 1 = On	Turns off or on a multiline terminal user ability to transfer a call to a predefined destination (such as an operator, voice mail, or another extension) without answering the call.	COS 1 ~ 15 = 1
17	Department Group Trunk-to-Trunk Transfer (Each Telephone Group Transfer)	0 = Off 1 = On	Turns off or on an extension user ability to set Trunk-to-Trunk Forwarding for a Department Group.	COS 1 ~ 15 = 1
18	Transfer Recall on Receiving CoS	0 = Off 1 = On	Allow (0)/Deny (1) unanswered Transferred calls from recalling the originating extension.	COS 1 ~ 15 = 0
19	Hold/Extended Park	0 = Off 1 = On	Determine if an extension Class of Service should allow either a normal or extended Park.	COS 1 ~ 15 = 0
20	No Callback	0 = Off 1 = On	Turns off or on an extension to receive callbacks.	COS 1 ~ 15 = 0
21	Restriction for Tandem Trunking on Hang Up	0 = Off 1 = On	Allow (0) or Deny (1) an extension user ability to set up a tandem/conference call automatically when they hang up.	COS 1 ~ 15 = 0
22	Restricted Unsupervised Conference	0 = Allow 1 = Deny	Allow (0) or Deny (1) an extension ability to initiate an unsupervised conference.	COS 1 ~ 15 = 0
23	CAR/VE Call Forward Set/Cancel	0 = Off 1 = On	Turn on or off an extension ability to set or cancel call forwarding for a virtual extension.	COS 1 ~ 15 = 1
24	Trunk Park Hold Mode	0 = Non Exclusive Hold (Off) 1 = Exclusive Hold (On)	Set the hold type when a trunk call is put on hold by an extension.	COS 1 ~ 15 = 1
25	Transfer Park Call	0 = Off 1 = On	Turn off or on an extension ability to transfer a parked call.	COS 1 ~ 15 = 1
26	Station Park Hold mode	0 = Off 1 = On		COS 1 ~ 15 = 0
27	Call Park Search	0 = Off 1 = On		COS 1 ~ 15 = 1
28	Both Ring Enhancement	0 = Normal 1 = Enhanced		COS 1 ~ 15 = 0
30	Disable Call FWD Indication on LCD	0 = Off 1 = On	When set to 1, Call FWD setting is not shown on the terminal LCD.	COS 1 ~ 15 = 1
31	Transfer to Remote Conference	0 = Off 1 = On	Use this option to enable or disable an extensions ability to transfer a call to a remote conference.	COS 1 ~ 15 = 1

## Conditions

None

---

## Feature Cross Reference

- Class of Service

## Program 20 : System Option Setup

### 20-12 : Class of Service Options (Charging Cost Service)

Level:

**IN**

---

#### Description

Use **Program 20-12 : Class of Service Options (Charging Cost Service)** to define the Charging Cost service availability for each extension service class.

#### Input Data

Class of Service Number	1 ~ 15
-------------------------	--------

Item No.	Item	Input Data	Default
02	Advice of Charge (ISDN-AOC)	0 = Off 1 = On	COS 1 ~ 15 = 0
03	Cost Display (TTU)	0 = Off 1 = On	COS 1 ~ 15 = 1

#### Conditions

None

---

#### Feature Cross Reference

- Class of Service



## Program 20 : System Option Setup

### 20-13 : Class of Service Options (Supplementary Service)

Level:

**IN**

#### Description

Use **Program 20-13 : Class of Service Options (Supplementary Service)** to define the supplementary feature availability for each extension Class of Service (COS).

#### Input Data

Class of Service Number	1 ~ 15
-------------------------	--------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Long Conversation Alarm</b>	0 = Off 1 = On	Turns off or on the Warning Tone for Long Conversation (not for single line telephones).	COS 1 ~ 15 = 0	
02	<b>Long Conversation Cutoff (Incoming)</b>	0 = Off 1 = On	Turns off or on an extension ability to use Long Conversation Cutoff for incoming calls.	COS 1 ~ 15 = 0	
03	<b>Long Conversation Cutoff (Outgoing)</b>	0 = Off 1 = On	Turns off or on an extension ability to use Long Conversation Cutoff for outgoing calls.	COS 1 ~ 15 = 0	
04	<b>Call Forward/DND Override (Bypass Call)</b>	0 = Off 1 = On	Turns off or on an extension ability to use Call Forwarding/DND Override.	COS 1 ~ 15 = 1	
05	<b>Intercom Off-Hook Signaling</b>	0 = Off (ICM off hook signaling disabled.) 1 = On (ICM off hook signaling enabled.)	Turns off or on an extension ability to receive off-hook signals.	COS 1 ~ 15 = 1	
06	<b>Automatic Off-Hook Signaling (Automatic Override)</b>	0 = Off (manually) 1 = On (automatically)	Allows a busy extension ability to manually (0) or automatically (1) receive off-hook signals.	COS 1 ~ 15 = 1	
07	<b>Message Waiting</b>	0 = Off 1 = On	Turns off or on an extension ability to leave Message Waiting.	COS 1 ~ 15 = 1	
08	<b>Conference</b>	0 = Off 1 = On	Turns off or on an extension user ability to initiate a conference or Meet-Me Conference.	COS 1 ~ 15 = 1	
09	<b>Privacy Release</b>	0 = Off 1 = On	Turns off or on an extension user ability to initiate a Voice Call Conference.	COS 1 ~ 15 = 1	
10	<b>Barge-In Monitor</b>	0 = Speech 1 = Monitor	Enables the extension Barge-In Mode to be Speech mode (0) or Monitor mode (1).	COS 1 ~ 15 = 0	20-13-45
11	<b>Room Monitor, Initiating Extension</b>	0 = Off 1 = On	Turns off or on extension user ability to Room Monitor other extensions.	COS 1 ~ 15 = 1	

Item No.	Item	Input Data	Description	Default	Related Program
12	Room Monitor, Extension Being Monitored	0 = Off 1 = On	Turn off or on an extension ability to be monitored by other extensions.	COS 1 ~ 15 = 1	
13	Continued Dialing (DTMF) Signal on ICM Call	0 = Off 1 = On	Turn off or on an extension user ability to use Continued Dialing, which allows DTMF signal sending while talking on extension.	COS 1 ~ 15 = 1	
14	Department Calling (PLT No Called Extension)	0 = Off 1 = On	Turns off or on an extension user ability to call a Department Group Pilot.	COS 1 ~ 15 = 1	
15	Barge-In, Initiate	0 = Off 1 = On	Turns off or on an extension user ability to barge-in on other's calls.	COS 1 ~ 15 = 0	
16	Barge-In, Receive	0 = Off 1 = On	Turns off or on an extension ability to have other extensions barge-in on calls.	COS 1 ~ 15 = 0	
17	Barge-in Tone/ Display (Intrusion Tone)	0 = Off 1 = On	Turns off or on the Barge-In tone. If on, callers hear an alert tone and their display indicates the Barge-In when another extension barges into their conversation. If off, there is no alert tone or display indication.	COS 1 ~ 15 = 1	
18	Programmable Function Key Programming (General Level)	0 = Off 1 = On	Turns off or on extension user ability to program General function keys using Service Code 751 (by default). (Refer to Program 20-07-10 for Service Code 752.)	COS 1 ~ 15 = 1	
19	Selectable Display Messaging (Text Messaging)	0 = Off 1 = On	Turns off or on an extension user ability to use Selectable Display Messaging.	1	
20	Account Code/ Toll Restriction Operator Alert (Restricted Operation Transfer)	0 = Off (Call restricted.) 1 = On (Call routed to operator.)	Turns off or on operator alert when an extension user improperly enters an Account Code or violates Toll Restriction.	COS 1 ~ 15 = 0	
21	Extension Name	0 = Off 1 = On	Turns off or on an extension user ability to program its name.	COS 1 ~ 15 = 1	
22	Busy Status Display (Called Party Status)	0 = Off 1 = On	Turns off or on the ability to display the detailed state of the called party.	COS 1 ~ 15 = 0	20-13-06
23	Display the Reason for Transfer	0 = Off 1 = On	Select whether an extension should display the reason a call is being transferred to their extension (Call Forward Busy, Call Forward No Answer, and DND).	COS 1 ~ 15 = 0	
24	Privacy Release by Pressing Line Key	0 = Off 1 = On	Turns off or on a user ability to press a line key to barge into an outside call. The Barge-In feature must be enabled if this option is to be used.	COS 1 ~ 15 = 0	
26	Group Listen	0 = Off 1 = On	Turns off or on an extension user ability to use Group Listen.	COS 1 ~ 15 = 1	
27	Busy on Seizing Virtual Extension	0 = Off 1 = On	If set to 1, you can call a busy extension which is talking on a virtual extension key. Program 20-13-06 (Call Waiting) must be set to 0 for this option to work.	COS 1 ~ 15 = 1	
28	Allow Class of Service to be Changed	0 = Off 1 = On	Turns off or on the ability of an extension Class of Service to be changed via Service Code 677.	COS 1 ~ 15 = 0	

Item No.	Item	Input Data	Description	Default	Related Program
29	<b>Paging Display</b>	0 = Off 1 = On	Turns off or on an extension user ability to display paging information.	COS 1 ~ 15 = 1	
30	<b>Background Music</b>	0 = Deny (user cannot control background music on their station.) 1 = Allow (user can control background music on their station.)	Allow or Deny an extension user to turn Background Music on and off.	COS 1 ~ 15 = 1	
31	<b>Connected Line Identification (COLP)</b>	0 = Off 1 = On		COS 1 ~ 15 = 0	
32	<b>Deny Multiple Barge-Ins</b>	0 = Off 1 = On	Allows or Denies an extension from having multiple users Barge into their conversation.	COS 1 ~ 15 = 0	
33	<b>ACD Supervisor's Position Enhancement</b>	0 = Off 1 = On		COS 1 ~ 15 = 0	
34	<b>Block Manual Off-Hook Signaling</b>	0 = Off 1 = On	Turns off or on an extension user ability to block off-hook signals manually sent from a co-worker.	COS 1 ~ 15 = 0	
35	<b>Block Camp On</b>	0 = Off ( Camp On blocked.) 1 = On (Camp On allowed.)	Turns off or on an extension user ability to block callers from dialing to Camp On.	COS 1 ~ 15 = 0	
36	<b>Call Duration Timer Display</b>	0 = Off 1 = On	Turns off or on an extension display of the Call Duration Time. The system waits until the interdigit time (Program 21-01-01) expires before beginning this timer.	COS 1 ~ 15 = 1	
38	<b>Headset Ringing for SLT</b>	0 = Off 1 = On	Turn off or on an extension user ability to use the Headset ringing	COS 1 ~ 15 = 0	
39	<b>ACD Queue Status Display</b>	0 = Off 1 = On	Turn off or on the ACD Queue Status Display for an extension Class of Service. Any extension, which has this option enabled, also hears the queue alarm.	COS 1 ~ 15 = 0	41-20
40	<b>Do Not Disturb</b>	0 = Off 1 = On	Turn off or on an extension user ability to set or cancel Do Not Disturb.	COS 1 ~ 15 = 1	11-11-08 15-07-03
41	<b>Voice Mail Message Indication on DSS</b>	0 = Off 1 = On	Turn off or on the Voice Mail Message Indication for an extension on a DSS console.	COS 1 ~ 15 = 0	
42	<b>Extension Data Swap Enabling</b>	0 = Off 1 = On	Turn off or on an extension user ability to use Extension Data Swap.	COS 1 ~ 15 = 1	11-15-12
43	<b>Disconnected Supervision</b>	0 = Off 1 = On	Set PRG 20-13-43 1: Enable and PRG 20-03-09 0: Off order to use this feature. By Setting this feature it will automatically change it to idle when caller ends the call.	1	20-02-09
44	<b>Live Monitor Enabling</b>	0 = Off 1 = On	Turn off or on an extension user ability to use Live Monitor.	COS 1 ~ 15 = 1	
45	<b>Mute Key Mode while Call Monitoring</b>	0 = Off 1 = On	Set per class of service, when in Call Monitoring Mode determines if the monitored parties receive the barge in alert tone when Coaching Mode is enabled.	COS 1 ~ 15 = 1	20-13-10
46	<b>Remote Conference</b>	0 = Off 1 = On		COS 1 ~ 15 = 1	11-19 20-34

Item No.	Item	Input Data	Description	Default	Related Program
47	Station Number Display	0 = Off 1 = On	Determine if a station Number will be displayed (On) or not displayed (Off) in the LCD when the phone is in an idle state.	COS 1 ~ 15 = 1	
48	Station Name Display	0 = Off 1 = On	Determine if a station Number will be displayed (On) or not displayed (Off) in the LCD when the phone is in an idle state.	COS 1 ~ 15 = 1	
49	BLF Indication on CO Incoming State	0 = Off (Disabled) 1 = On (Enabled)	Determine if a BLF of the station will light when a Normal CO call is ringing the phone.	COS 1 ~ 15 = 0	
51	Number and Name appear in the Directory	0 = Off 1 = On	Determine if an extension name and number will be listed (On) or unlisted (Off) in the directory.	COS 1 ~ 15 = 1	
52	VoIPDB All DSP Busy Display	0 = Disable 1 = Enable	Set whether "All DSP Busy" alarm displays on LCD when the caller makes an IP call and there is no VoIPDB DSP resource.	COS 1 ~ 15 = 1	
53	Language Selection for specific extension	0 = Disable 1 = Enable		COS 1 ~ 15 = 0	11-11-68 15-02-01 47-02-16
54	Call waiting for standard SIP terminal	0 = Disable 1 = Enable		COS 1 ~ 15 = 0	20-13-05 20-13-06 20-09-01 20-09-07
55	Intercom Call to Room Monitor	0 = Off 1 = On		COS 1 ~ 15 = 1	

## Conditions

None

---

## Feature Cross Reference

- Class of Service

# Program 20 : System Option Setup


## 20-14 : Class of Service Options for DISA/E&M

Level:

**IN**

### Description

Use **Program 20-14 : Class of Service Options for DISA/E&M** to enable/disable DISA and tie line Class of Service options. You assign a DISA Class of Service to DISA users in Program 25-09. Assign tie line Classes of Service in 34-02. Up to 15 DISA/E&M Classes of Service can be defined.

 *Analog trunk-to-analog trunk and ISDN trunk-to-ISDN trunk calls are supported by this program. However, analog trunk-to-ISDN trunk and ISDN trunk-to-analog trunk calls are NOT supported by this program.*

### Input Data

Class of Service Number	1 ~ 15
-------------------------	--------

Item No.	Item	Input Data	Description	Default
01	<b>First Digit Absorption (Delete First Digit Dialed)</b>	0 = Off 1 = On	For tie lines, enable or disable the ability to absorb (ignore) the first incoming digit. Use this to make the tie trunk compatible with 3- and 4-digit tie line service. This option does not apply to DISA.	COS 1 ~ 15 = 0
02	<b>Trunk Group Routing/ARS Access</b>	0 = Off 1 = On	This option enables or disables a DISA or tie trunk caller ability to dial 9 for Trunk Group Routing or Automatic Route Selection (ARS/F-Route).	COS 1 ~ 15 = 1
03	<b>Trunk Group Access</b>	0 = Off 1 = On	This option enables or disables a DISA or tie trunk caller ability to access trunk groups for outside calls (Service Code 704).	COS 1 ~ 15 = 1
04	<b>Outgoing System Speed Dial</b>	0 = Off 1 = On	This option enables or disables DISA or tie trunk caller ability to use the System Speed Dialing.	COS 1 ~ 15 = 0
05	<b>Operator Calling</b>	0 = Off 1 = On	This option enables or disables a DISA or tie trunk caller ability to dial 0 for the telephone system operator.	COS 1 ~ 15 = 1
06	<b>Internal Paging</b>	0 = Off 1 = On	This option enables or disables a DISA or tie trunk caller ability to use the telephone system Internal Paging.	COS 1 ~ 15 = 1
07	<b>External Paging</b>	0 = Off 1 = On	This option enables or disables a DISA or tie trunk caller ability to use the telephone system External Paging.	COS 1 ~ 15 = 1
08	<b>Direct Trunk Access</b>	0 = Off 1 = On	This option enables or disables a DISA or tie trunk caller ability to use Direct Trunk Access (Service Code #9).	COS 1 ~ 15 = 0
09	<b>Forced Trunk Disconnect &lt;Not for ISDN T-point&gt;</b>	0 = Off 1 = On	This option enables or disables a tie trunk caller ability to use Forced Trunk Disconnect (Service Code 11-10-26). This option is not available to DISA callers.	COS 1 ~ 15 = 0

Item No.	Item	Input Data	Description	Default
10	Call Forward Setting by Remote via DISA	0 = Off 1 = On	Enable or disable a DISA caller ability to use the Call Forward service codes (Programs 11-11-01 ~ 11-11-05).	COS 1 ~ 15 = 0
11	DISA/Tie Trunk Barge-In	0 = Off 1 = On	This option enables or disables a DISA or tie trunk caller ability to use the Barge-In.	COS 1 ~ 15 = 0
12	Retrieve Park Hold	0 = Off 1 = On	This option enables or disables a DISA or tie trunk caller ability to retrieve a Park Hold call.	COS 1 ~ 15 = 1

### Conditions

None

---

### Feature Cross Reference

- Class of Service
- Direct Inward System Access (DISA)

# Program 20 : System Option Setup

## 20-15 : Ring Cycle Setup

Level:

**IN**

### Description

Use Program 20-15 : Ring Cycle Setup to define the ringing cycles for each ring type.

### Input Data

Item No.	Item	Input Data	Default
01	Incoming Signal Type : Normal Incoming Call on Trunk	Ringing Cycle Number : 1 ~ 13	2
02	Incoming Signal Type : PBX, CES Incoming Call	Ringing Cycle Number : 1 ~ 13	8
03	Incoming Signal Type : Incoming Internal Call	Ringing Cycle Number : 1 ~ 13	12
04	Incoming Signal Type : DID/ DISA/VRS	Ringing Cycle Number : 1 ~ 13	8
05	Incoming Signal Type : DID/DDI	Ringing Cycle Number : 1 ~ 13	8
06	Incoming Signal Type : Dial-In in the E&M Tie Line	Ringing Cycle Number : 1 ~ 13	12
07	Incoming Signal Type : Door Box Ringing for SLT	Ringing Cycle Number : 1 ~ 13	8
08	Incoming Signal Type : Virtual Extension Ring	Ringing Cycle Number : 1 ~ 13	8
09	Incoming Signal Type : Callback	Ringing Cycle Number : 1 ~ 13	11
10	Incoming Signal Type : Alarm for SLT	Ringing Cycle Number : 1 ~ 13	5
11	Incoming Signal Type : VRS Waiting Message Incoming Call	Ringing Cycle Number : 1 ~ 13	6

**Table 2-8 Ringing Cycles**

Number	2W Digital/IP Multiline Terminal
1	On
2	On : 2.0 / Off : 4.0
3	On : 1.0 / Off : 2.0
4	On : 0.5 / Off : 0.5
5	On : 0.25 / Off : 0.25
6	On : 0.5 / Off : 0.5 / On : 0.5 / Off : 1.5
7	On : 0.25 / Off : 0.25 / On : 0.25 / Off : 5.25
8	On : 0.375 / Off : 0.25 / On : 0.375 / Off : 2.0
9	On : 0.25 / Off : 0.125 / On : 0.25 / Off : 0.125 / On : 0.25 / Off : 2.0
10	On : 1.0 / Off : 4.0

Number	2W Digital/IP Multiline Terminal
11	On : 0.25 / Off : 0.25 / On : 0.25 / Off : 4.25
12	On : 1.0 / Off : 3.0
13	On : 0.25 / Off : 0.25 / On : 0.25 / Off : 2.25

Number	DT700
1	On
2	On : 2.0 / Off : 4.0
3	On : 1.0 / Off : 2.0
4	On : 0.5 / Off : 0.5
5	On : 0.25 / Off : 0.25
6	On : 0.5 / Off : 0.5 / On : 0.5 / Off : 1.5
7	On : 0.25 / Off : 0.25 / On : 0.25 / Off : 5.25
8	On : 0.375 / Off : 0.25 / On : 0.375 / Off : 2.0
9	On : 0.25 / Off : 0.125 / On : 0.25 / Off : 0.125 / On : 0.25 / Off : 2.0
10	On : 1.0 / Off : 4.0
11	On : 0.25 / Off : 0.25 / On : 0.25 / Off : 4.25
12	On : 1.0 / Off : 3.0
13	On : 0.25 / Off : 0.25 / On : 0.25 / Off : 2.25

### Conditions

None

---

### Feature Cross Reference

None



# Program 20 : System Option Setup

## 20-16 : Selectable Display Messages

Level:  
**SA**

### Description

Use **Program 20-16 : Selectable Display Messages** to enter the Selectable Display Messages. There are 20 alphanumeric messages, with up to 24 characters. Use the following chart when programming messages.

Use this keypad digit ...	When you want to ...
1	Enter characters: 1 @ [ ¥ ] ^ _ ` {   } → ← Á À Ã Ä Å Æ Ç È É Ê Ì Í Ö 0
2	Enter characters : A-C, a-c, 2.
3	Enter characters : D-F, d-f, 3.
4	Enter characters : G-I, g-i, 4.
5	Enter characters : J-L, j-l, 5.
6	Enter characters : M-O, m-o, 6.
7	Enter characters : P-S, p-s, 7.
8	Enter characters : T-V, t-v, 8.
9	Enter characters : W-Z, w-z, 9.
0	Enter characters : 0 ! " # \$ % & ' ( ) ð ó ú á â ã ä å ö ü æ ø ù α ε θ B
*	Enter characters : * + , - . / : ; < = > ? π Σ σ Ω ∞ φ £
#	# = Accepts an entry (only required if two letters on the same key are needed - ex : TOM). Pressing # again = Space. (In system programming mode, use the right arrow soft key instead to accept and/or add a space.)
Clear/Back or DND (2W Digital/IP Multiline Terminal)	Clear the character entry one character at a time.
Flash	Clear all the entries from the point of the flashing cursor and to the right.

### Input Data

Selectable Display Message Number	1 ~ 20
-----------------------------------	--------

Item No.	Item	Input Data	Default
01	Selectable Display Messages	24 characters	Refer below

### Default

Number	Message
1	IN MEETING UNTIL ## : ##
2	MEETING ROOM - #####
3	COME BACK ## : ##
4	PLEASE CALL #####

Number	Message
5	BUSY CALL AFTER ## : ##
6	OUT FOR LUNCH BACK ## : ##
7	BUSINESS TRIP BACK ## / ##
8	BUSINESS TRIP #####
9	GONE FOR THE DAY
10	ON VACATION UNTIL ## / ##
11	MESSAGE 11
12	MESSAGE 12
13	MESSAGE 13
14	MESSAGE 14
15	MESSAGE 15
16	MESSAGE 16
17	MESSAGE 17
18	MESSAGE 18
19	MESSAGE 19
20	MESSAGE 20

### Conditions

- Time value ## : ## must be followed by two spaces.

---

## Feature Cross Reference

- Selectable Display Messages

# Program 20 : System Option Setup

## 20-17 : Operator Extension

Level:

**IN**

---

### Description

Use Program **20-17 : Operator Extension** to designate an operator. When an extension user dials 0 (defined by Program 11-01 Type 5), calls go to the operator selected in this program.

If you do not assign an extension in Program 90-11-01, system alarms appear on the extension assigned in this option.

### Input Data

Operator Number	1 ~ 10
-----------------	--------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Operator's Extension Number</b>	Up to eight digits	Define the extension numbers which are to be used by operators.	operator No.1 = 101 operator No.2 ~ 10 = No Setting	11-01 20-01-01
02	<b>Operator Console</b>	0 = Normal Key Set 1 = Special Operator Console	Determines an operator console type when any extension user dials "0", the assigned extensions shall ring.	0	

### Conditions

None

---

### Feature Cross Reference

- Intercom

# Program 20 : System Option Setup

## 20-18 : Service Tone Timers

Level:

**IN**

### Description

Use **Program 20-18 : Service Tone Timers** to set the values for the system service tone timers. Refer to the following chart for a description of each option, its range and default setting.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	Extension Dial Tone Time	0 ~ 64800 seconds	After getting Intercom dial tone, a telephone user has this time to dial the first digit of the Intercom call.	30	
02	Busy Tone Timer	0 ~ 64800 seconds		15	
03	Congestion Tone	0 ~ 64800 seconds	A Busy Tone when system resources run short. (Such as DTMF receiver resources).	10	
04	Call Waiting Tone Timer	0 ~ 64800 seconds	This option sets the time between Call Waiting tones. This timer also sets the time between Off-Hook Signaling alerts.	10	
05	Multiline Confirmation Tone	0 ~ 64800 seconds		10	
06	Interval of Call Waiting Tone	3 ~ 64800 seconds		10	
07	Intrusion Tone Repeat Time	0 ~ 64800 seconds	After a call is interrupted (such as Barge-In, Voice Mail Conversation Recording, or Voice Over), the system repeats the Intrusion Tone after this time. Normally, you should enter 0 to disable this time.	0	
08	Conference Tone Interval	0 ~ 64800 seconds		0	
09	Warning Beep Tone Signaling Interval	0 ~ 64800 seconds		60	14-01-18

### Conditions

None

### Feature Cross Reference

- Distinctive Ringing, Tones, and Flash Patterns

# Program 20 : System Option Setup

## 20-19 : System Options for Caller ID

Level:

**IN**

### Description

Use **Program 20-19 : System Options for Caller ID** to define the system options for the Caller ID feature.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	Caller ID Displaying Format	0 = First 10 digits (Upper) 1 = Last 10 digits (Lower)	(if displaying digits are more than 12 digits)	0	
02	Caller ID Wait Timer	0 ~ 30 seconds	When an incoming CO call is received, the SL2100 starts the timer. It will wait the programmed time for Caller ID information from Telco before connecting the CO call.	5	
03	Caller ID Edit Mode	0 = Off 1 = On	If Caller ID Edit Mode is disabled (0), no access code will be added to the Caller ID. If this option is enabled (1), the access code entered in PRG 10-02-02 & 10-02-03 will be added to the beginning of the Caller ID.	0	
04	Wait Facility IE Timer	0 ~ 64800 seconds	This timer is used with ISDN trunks to determine how long the system waits for the Caller ID name from the Telco.	10	
05	Caller ID Sender Queuing Time (Sender Wait)	0 ~ 64800 seconds		0	
07	Long Distance Code	Up to two digits		1	20-19-08
08	Area Code	Up to six digits		No Setting	20-19-07
09	Calling party Name for ISDN Trunk	Maximum of 12 digits (0 ~ 9, *, #)	When a name is programmed in this program this will be the name sent out for all callers that have PRG 15-01-10 enabled.	No Setting	

### Conditions

None

---

## Feature Cross Reference

- Caller ID

# Program 20 : System Option Setup

## 20-20 : Message Setup for Non-Caller ID Data

Level:

**IN**

---

### Description

Use **Program 20-20 : Message Setup for Non-Caller ID Data** to define the messages which are displayed when no Caller ID information is received.

### Input Data

Item No.	Item	Input Data	Default
01	Private Call	24 Alphanumeric Characters	PRIVATE
02	Call from Out of Service Area	24 Alphanumeric Characters	OUT OF AREA
03	Call Information with Error	24 Alphanumeric Characters	NO CALLER INFO

### Conditions

None

---

### Feature Cross Reference

- Caller ID

# Program 20 : System Option Setup

## 20-21 : System Options for Long Conversation

Level:

**IN**

---

### Description

Use **Program 20-21 : System Options for Long Conversation** to define the system options for the Long Conversation feature.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	Long Conversation Alarm 1	0 ~ 64800 seconds	The warning tone for long toll calls sounds after this time.	170	14-01-15
02	Long Conversation Alarm 2	0 ~ 64800 seconds	After the initial long toll call warning tone, additional warning tones sound after this time.	180	14-01-15
03	Long Conversation Cutoff for Incoming Call	0 ~ 64800 seconds	This timer determines how long the system waits before disconnecting an incoming call.	0	14-01-14
04	Long Conversation Cutoff for Outgoing Call	0 ~ 64800 seconds	This timer determines how long the system waits before disconnecting an outgoing call.	0	14-01-14
05	Conversation cutoff for remote monitor	0 ~ 64800 seconds		180	

### Conditions

None

---

### Feature Cross Reference

- Long Conversation Cutoff



# Program 20 : System Option Setup

## 20-23 : System Options for CTI

Level:

**IN**

---

### Description

Use Program 20-23 : System Options for CTI to define the system options for the CTI feature.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Delayed ring timer for CTI	0 ~ 64800 seconds		50 seconds
02	ALERT replay time (CTI)	0 ~ 64800 seconds		8 seconds
03	Trunk Virtual Bridge - TSP	0 = Disable (No) 1 = Enable (Yes)	Enable or disable the system to send trunk or virtual extension information to the TSP driver.	0
04	The Timer that waits for an off-hook for Single Line Telephone	0 ~ 64800 seconds		30 seconds
06	3rd Party CTI IP Address	0.0.0.0 - 255.255.255.255	Displays the IP address of 3rd Party CTI Server currently connected.	0.0.0.0

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-25 : ISDN Options

Level:

**IN**

### Description

Use Program 20-25 : ISDN Options to define the ISDN system options.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Send the Release Message After Subscriber Hangs Up	0 = Service Off 1 = Service On		1
02	Progress Indicate Information Element Detect	0 = Service Off 1 = Service On		1
03	Bearer Capability Select from SLT Outgoing	0 = 3.1 KHz Audio 1 = Speech		0
04	Send DT until user dials first digit (Local Dial Tone)	0 = Service Off 1 = Service On	With Overlap Sending Mode, if the network side stops dial tone when CLI is included in the SETUP message, the system sends dial tone until the user dials the first digit instead of the network.	0
05	T305 Timer Start After Sending Disconnect Message	0 = Service Off 1 = Service On		1
06	Call Proceeding Send Mode	0 = Service Off 1 = Service On		1
07	Local Busy Tone Mode Set When Disconnect Message Received	0 = Local Busy Tone Off 1 = Busy Tone from NT (network side)		0
08	Use of Lower Layer Compatibility (LLC)	0 = Disable (Off) 1 = Enable (On)	This Program must be set to (0 = Disable) for International Dialing when using Calling Number Presentation (CPN) from station.	0
09	High Layer Compatibility (HLC) Sending	0 = Disable (Off) 1 = Enable (On)		0
10	S-Point Terminal Seizes Analog Trunk	0 = Disable (Off) 1 = Enable (On)		1
11	Automatic Changing System Clock When Date/Time Information Element Received	0 = Disable (Off) 1 = Enable (On)		0
12	Call Forward Options (Auto Connect Send)	0 = Normal - No Message (Off) 1 = Normal - No Message (On)	Incoming Calls Forwarded Out Automatically Return Connect Message When Outgoing Call Receives Alerting Message.	0
13	Local Busy Tone (Release)	0 = Off 1 = On	Busy tone sends when T-point receiving a RELEASE message from Network.	0

Item No.	Item	Input Data	Description	Default
14	<b>No Response Release Send</b>	0 = Off 1 = On	Operation mode setting for when second T303 timer expires.	0
15	<b>Call Reference selection for PRI 2B-Ch Transfer</b>	0 = Off 1 = On		0
18	<b>Include CPN on Presentation Restriction</b>	0 = Not include 1 = Include	When the presentation indicator bit is set (by pressing key 63 in PRG 15-07) the ISDN setup message is changed as follows: When set to "Include" the CPN from the station or trunk is sent in the setup message. When set to "Disable" the CPN from the station or trunk is NOT sent in the setup message.	0
19	<b>Send Progress Message on Forward</b>	0 = Disable 1 = Enable	When enabled if an ISDN call forwards out of the system a Progress Message will be sent for the initial call.	0
20	<b>Send Sending Complete Information</b>	0 = No Send 1 = Send		0

## Conditions

None

---

## Feature Cross Reference

- ISDN Compatibility

# Program 20 : System Option Setup

## 20-26 : Multiplier for Charging Cost

Level:

**IN**

---

### Description

Use **Program 20-26 : Multiplier for Charging Cost** to define the Multiplier for charging cost to each extension service class.

### Input Data

Service Class	1 ~ 15
---------------	--------

Item No.	Item	Input Data	Default
01	Value (%)	100 ~ 500	100

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-28 : Trunk to Trunk Conversation

Level:

**IN**

---

### Description

Use **Program 20-28 : Trunk to Trunk Conversation** to define system options for Trunk to Trunk Conversation.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Conversation Continue Code</b>	0 ~ 9, *, # (Set for one digit only)	Input the code that can be dialed to continue the conversation after the Trunk-to-Trunk Release Warning Tone is heard.	No Setting	14-01-25 20-28-03 24-02-07 24-02-10 25-07-07 25-07-08
02	<b>Conversation Disconnect Code</b>	0 ~ 9, *, # (Set for one digit only)	Input the code that can be dialed to disconnect the conversation after the Trunk-to-Trunk Release Warning Tone is heard.	No Setting	14-01-25 24-02-07 24-02-10 25-07-07 25-07-08
03	<b>Conversation Continue Time</b>	0 ~ 64800 seconds	Input how long the conversation extends when the Conversation Continue Code is dialed.	0	14-01-25 20-28-01 24-02-07 24-02-10 25-07-07 25-07-08

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-29 : Timer Class for Extension

Level:

**IN**

---

### Description

Use **Program 20-29 : Timer Class for Extension** to assign the timer class to each extension. There are 16 Classes that can be assigned. You make eight entries for this Program, one for each Night Service Mode. This entry includes virtual extension numbers.

The details of classes are assigned by Program 20-31.

### Input Data

Extension Number	Up to eight digits
------------------	--------------------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default
01	Timer Class for Extension	0 ~ 15 0 = Not assigned	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-30 : Timer Class for Trunks

Level:

**IN**

---

### Description

Use **Program 20-30 : Timer Class for Trunks** to assign the timer class to each trunk. There are 16 Classes that can be assigned. You make eight entries for this Program, one for each Night Service Mode. The details of classes are assigned by Program 20-31.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default
01	Timer Class for Trunks	0 ~ 15 0 = Not assigned	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-31 : Timer Class Timer Assignment

Level:

**IN**

### Description

Use **Program 20-31 : Timer Class Timer Assignment** to assign values to the timers on a class of service basis.

### Input Data

Timer Class Number	1 ~ 15
--------------------	--------

Item No.	Item	Input Data	Description	Default	Related Program
01	Trunk Queuing Callback Duration Time	0 ~ 64800 seconds	Trunk Queuing Callback rings an extension for this amount of time	15	20-01-08
02	Callback / Trunk Queuing Cancel Time	0 ~ 64800 seconds	The system cancels an extension Callback or Trunk Queuing request after this amount of time.	64800	20-01-09
03	Virtual Extension Delay Interval	0 ~ 64800 seconds	Virtual Extensions set for Delayed Ringing (refer to 15-11 : Virtual Extension Delayed Ring Assignment) ring the extension after this time.	10	20-04-03
04	Intercom Interdigs Time (Intercom I/D Timer)	0 ~ 64800 seconds	When placing Intercom calls, extension users must dial each digit in this time.	10	21-01-02
05	Trunk Interdigs Time (Trunk I/D Timer)	0 ~ 64800 seconds	The system waits for this time to expire before placing the call in a talk state (Call Timer starts after time expires, Voice Over and Barge-In are not allowed until after time expires).	5	21-01-03
06	Hotline Time Start Time (Hotline Start)	0 ~ 64800 seconds	A Ringdown extension automatically calls the programmed destination after this time.	5	21-01-09
07	Ring No Answer Alarm Time	0 ~ 64800 seconds	If a trunk rings a multiline telephone longer than this time, the system changes the ring cadence. This indicates to the user that the call has been ringing too long.	60	22-01-03
08	DIL/Incoming Ring Group No Answer Time	0 ~ 64800 seconds	A DIL that rings its programmed destination longer than this time diverts to the DIL No Answer Ring Group (set in Program 22-08).	0	22-01-04
09	DID Ring-No-Answer Time	0 ~ 64800 seconds	In systems with DID Ring-No-Answer Intercept, this time sets the Ring-No-Answer time. This time is how long a DID call rings the destination extension before rerouting to the intercept ring group.	20	22-01-06



Item No.	Item	Input Data	Description	Default	Related Program
10	<b>Hold Recall Time (Non Exclusive Hold)</b>	0 ~ 64800 seconds	A call on Hold recalls the extension that placed it on Hold after this time. This time works with the Hold Recall Callback Time (Program 24-01-02).	60	24-01-01
11	<b>Hold Recall Call-Back Time (Non Exclusive Hold)</b>	0 ~ 64800 seconds	A trunk recalling from Hold or Park rings an extension for this time. This time works with Hold Recall Time or Park Hold Time. After this time, the system invokes the Hold Recall Time again. Cycling between time Program 24-01-01 and 24-01-02 and Program 24-01-06 and 24-01-07 continues until a user answers the call.	30	24-01-02
12	<b>Exclusive Hold Recall Time</b>	0 ~ 64800 seconds	A call left on Exclusive Hold recalls the extension that placed it on Hold after this time.	90	24-01-03
13	<b>Exclusive Hold Recall Callback Time</b>	0 ~ 64800 seconds	An Exclusive Hold Recall rings an extension for this time. If not picked up, the call goes back on System Hold.	30	24-01-04
14	<b>Park Hold Time - Normal</b>	0 ~ 64800 seconds	A call left parked longer than this time interval recalls the extension that initially parked it.	60	24-01-06
15	<b>Delayed Call Forwarding Time (Call Forward No Answer)</b>	0 ~ 64800 seconds	If activated at an extension, Delayed Call Forwarding occurs after this time. This also sets how long a Transferred call waits at an extension forwarded to Voice Mail before routing to the called extension mailbox.	10	24-02-03
16	<b>Transfer Recall Time</b>	0 ~ 64800 seconds	An unanswered transferred call recalls after this time to the extension that initially transferred it.	20	24-02-04
17	<b>DID/DISA No Answer Time (Disconnect or IRG or VM)</b>	0 ~ 64800 seconds	A VRS/DISA caller can ring an extension for this time before the system sets the call as a Ring No Answer. After this time expires, the call follows the programmed Ring No Answer routing (set in Program 25-03 and 25-04).	0	25-07-02
18	<b>Disconnect after Re-transfer to IRG</b>	0 ~ 64800 seconds		60	25-07-03
19	<b>Long Conversation Warning Tone Time (Trunk to Trunk)</b>	0 ~ 64800 seconds	Determine the time a DISA caller or any trunk-to-trunk (such as Tandem Trunking) conversation can last before the Long Conversation tone is heard	3600	25-07-07
20	<b>Long Conversation Disconnect (Trunk to Trunk)</b>	0 ~ 64800 seconds	This time determines how long the system waits before disconnecting a DISA caller or any trunk-to-trunk (such as Tandem Trunking) conversation call after the Long Conversation tone is heard.	10	25-07-08
21	<b>DISA Internal Paging Time</b>	0 ~ 64800 seconds	This is the maximum length of an Internal Page placed by a DISA caller. If the Page continues longer than this time, the system terminates the DISA call.	30	25-07-09

Item No.	Item	Input Data	Description	Default	Related Program
22	<b>DISA External Paging Time</b>	0 ~ 64800 seconds	This is the maximum length of an External Page placed by a DISA caller. If the Page continues longer than this time, the system terminates the DISA call.	30	25-07-10
23	<b>Page Announcement Duration</b>	0 ~ 64800 seconds	This timer sets the maximum length of Page announcements. (Affects External Paging only)	1200	31-01-02
24	<b>Mobile Extension answer time</b>	0 ~ 64800 seconds		3	22-01-12
25	<b>Mobile Extension callback time</b>	1 ~ 64800 seconds		15	20-01-16

### Conditions

- These timers are used when an extension or trunk is assigned to a class from 1 to 16 in 20-29-01 or 20-30-01. When the timer class is set to 0, the system-wide timer is used.
- All defaults are the same as the system-wide timers.

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-34 : Remote Conference Group Setup


Level:  
**SA**

### Description

Use **Program 20-34 : Remote Conference Group Setup** to define the Remote Conference options.

### Input Data

Remote Conference Group Number	1 ~ 4
--------------------------------	-------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Conference Name</b>	Up to 12 characters	Enter the name displayed at the time of a Remote Conference. This entry will display on the keyset LCD.	Group1 = Conf1 Group2 = Conf2 Group3 = Conf3 Group4 = Conf4	
02	<b>Password</b>	4 digits Fixed (0 ~ 9, @ = wild character)	Define the password of a Remote Conference.	Group1 = 1111 Group2 = 2222 Group3 = 3333 Group4 = 4444	
03	<b>Max participants</b>	0 ~ 16	Define the maximum number of participants of a Remote Conference.	8	
04	<b>Max Conference Duration</b>	0 ~ 64800 seconds	Define the maximum duration of a Remote Conference. When this time passes, the conference is disconnected by the SL2100.	7200	
05	<b>End Tone Alert Time</b>	0 ~ 64800 seconds	Determine how long prior disconnecting a Remote Conference call (based on the maximum conference duration above) the SL2100 should send out a beep. This is used to warn the conference participants of the pending disconnect.	300	
08	<b>Automatic Recording</b>	0 = Disable 1 = Enable	Enable or Disable automatic recording for a Remote Conference. If disabled, a line key must be used to start recording.	0	
09	<b>Recording Destination Mail Box</b>	1 ~ 128	Enter the mailbox number where recordings are to be stored.  <i>This is the mailbox number not the extension number for a mailbox.</i>	No Setting	47-02

### Conditions

None

---

## Feature Cross Reference

- Conference, Remote

# Program 20 : System Option Setup

## 20-35 : Extension's Operator Setting

Level:

**IN**

---

### Description

Use **Program 20-35 : Extension's Operator Setting** to assign an extension to an operator group.

### Input Data

Extension Number	Up to eight digits
------------------	--------------------

Item No.	Item	Input Data	Default
01	Extension's Operator Setting	0 ~ 15 ( 0 = Not Set)	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-36 : Trunk's Operator Setting

Level:

**IN**

---

### Description

Use **Program 20-36 : Trunk's Operator Setting** to assign a trunk to an operator group.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Description	Default
01	<b>Trunk's Operator Setting</b>	0 ~ 15 (0 = No Setting)	Allows the user to select Operator Group per trunk when DISA is being used. After the user enters the 6 digit DISA password if the user dials 0 this command will decide which operator to route the call to.	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-37 : Operator Extension Group Setup

Level:

**IN**

---

### Description

Use **Program 20-37 : Operator Extension Group Setup** to define the operator(s) in the operator group.

### Input Data

Operator Group	1 ~ 15
----------------	--------

Operator Number	1 ~ 10
-----------------	--------

Item No.	Item	Input Data	Default
01	<b>Operator Extension Group Setup</b>	Up to eight digits	No Setting

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-38 : Operator Group Setting

Level:

**IN**

---

### Description

Use **Program 20-38 : Operator Group Setting** to set up priority of a call when calling an operator telephone.

### Input Data

Operator Group	1 ~ 15
----------------	--------

Item No.	Item	Input Data	Description	Default
01	<b>Operator Access Mode</b>	0 = Step 1 = Circular	Assign if the operator is called, starting with the first operator, every time (0) or a different operator is tried first (1)	0

### Conditions

None

---

### Feature Cross Reference

None



# Program 20 : System Option Setup

## 20-42 : Night Mode for each package

Level:

**IN**

---

### Description

Use **Program 20-42 : Night Mode for each package** to assigns the Night Mode to each package. This Program uses ecology function (Program 20-43).

### Input Data

PKG Number	02 ~ 12
------------	---------

Item No.	Item	Input Data	Description	Default	Related Program
01	Ecology Mode group No	1 ~ 4	Assign Night mode group number per each package (slot)	1	12-02

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-43 : Power supply for each package

Level:

**IN**

---

### Description

Use **Program 20-43 : Power supply for each package** to assigns the Night Mode to each package. This Program uses ecology function (Program 20-43).

### Input Data

PKG Number	2 ~ 12
------------	--------

Operation Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Ecology Mode</b>	0 = Cut the power 1 = Power Supply	Assigns the power supply mode to each package base	1	12-02

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-44 : Watch Mode Setup

Level:

**IN**

---

### Description

Use Program 20-44 : Watch Mode Setup to defines the watch mode.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Internal Paging Group for Watch Message	0 ~ 64 0 = No Setting 1 ~ 50 = Internal paging group no.	Define Internal paging group number for Watching message.	0
02	External Paging Group for Watch Message	0 ~ 8 0 = No Setting 1 ~ 50 = External paging group no.	Define External paging group number for Watching message	0
03	VRS Message for Watch Mode	0 ~ 100 0 = No Setting 1 ~ 100 = VRS message no.	Define VRS number used for Watching message	0
04	Interval Timer for Watch Message	0 ~ 60	Define interval time for sending Watching message.	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-45 : Remote Watch Setup

Level:

**IN**

---

### Description

Use Program 20-45 : Remote Watch Setup to defines the remote watch.

### Input Data

Terminal Number	1 ~ 6
-----------------	-------

Item No.	Item	Input Data	Description	Default
01	Ring Terminal for Remote Inspection	Extension Number (Up to 8 digits)	Extension number for Remote Inspection	No Setting
02	Ring Time Setting	0000 ~ 2359	Ringling start time for Inspected Extension	0000
03	Ring Timer	0 ~ 60	Ringling continue time for inspected extension	0
04	Auto Dial Number Area Setting	0 ~ 999	Speed dial number when detect no answer at extension and make emergency call	0
05	VRS Message for Answer	0 ~ 100	VRS message number when inspected extension answered	0
06	VRS Message for Auto Dial	0 ~ 100	VRS message number when emergency call destination answered.	0
07	Time of Repeat Auto Dial	0 ~ 255	Repeat number for making emergency call.	0
08	Auto Dial Calling Time	0, 10 ~ 3600	Calling continue time when making emergency call.	0
09	Interval of Auto Dial	0, 10 ~ 3600		0

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-46 : Security Sensor Setup

Level:

**IN**

### Description

Use Program 20-46 : Security Sensor Setup to defines the security sensor.

### Input Data

Security Sensor Number	1 ~ 6
------------------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>Sensor Mode</b>	0 = Off 1 = On	Define door port to use as Sensor.	0
02	<b>Internal Paging Group for Warning Message</b>	0 ~ 50 0 = No Setting 1 ~ 50 = Internal paging group no.	Define Internal paging group number for Warning message	0
03	<b>External Paging Group for Warning Message</b>	0 ~ 3 0 = No Setting 1 ~ 3 = External paging group no.	Define External paging group number for Warning message.	0
04	<b>VRS Message for Warning</b>	0 = No Setting 1 ~ 100 = VRS message no.	Define VRS number used for Warning message.	0
05	<b>Auto Dial Number Area Setting</b>	0 ~ 999	Define Speed dial number when sensor detects warning.	0
06	<b>VRS Message for Answer</b>	0 ~ 100 0 = No Setting 1 ~ 100 = VRS message no.	Define VRS message number when emergency call destination answered.	0
07	<b>Auto Dial Wait Timer</b>	0 ~ 64800	Define wait time before making emergency auto dial.	30
08	<b>Time of Repeat Auto Dial</b>	0 ~ 255	Define repeat number for making emergency call.	3
09	<b>Auto Dial Calling Time</b>	0, 1 ~ 3600 0 = No Auto Dial	Define calling continue time when making emergency call.	30
10	<b>Monitored Terminal</b>	Extension Number (Up to 8 digits)	Define extension number for monitor from outside. IP terminal cannot set as monitored extension.	No Setting
11	<b>Interval of Auto Dial</b>	0 ~ 3600		0

### Conditions

None

---

## Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-47 : Time pattern setting for Watch Mode

Level:

**IN**

---

### Description

Use Program 20-47 : Time pattern setting for Watch Mode to defines the watch mode time pattern.

### Input Data

Time Pattern	1 ~ 8
--------------	-------

Item No.	Item	Input Data	Description	Default
01	Watch Mode Time Pattern	0 = Off 1 = On	Define watch mode on/off against time pattern 1-8	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-48 : Time pattern setting for Security Sensor

Level:

**IN**

---

### Description

Use **Program 20-48 : Time pattern setting for Security Sensor** to defines the Security Sensor time pattern.

### Input Data

Time Pattern	1 ~ 8
--------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>Security Sensor Time Pattern</b>	0 = Off 1 = On	Define security sensor on/off against time pattern 1 ~ 8	0

### Conditions

None

---

### Feature Cross Reference

None



# Program 20 : System Option Setup

## 20-55 : Delay Timer for Security Sensor

Level:

**IN**

---

### Description

Use **Program 20-55 : Delay Timer for Security Sensor** to set time for Security to be operational. Once it reach the time the Security will starts if the Security sets manually.

### Input Data

Item No.	Item	Input Data	Default
01	Sensor delay timer	0 ~ 3600 (seconds) 0 = Sensor will start immediately	60

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-57 : UC User Information Setting

Level:

**SA**


### Description

This program is for set up the user data which are used by UC mode.

### Input Data

User Information Table Number	1 ~ 128
-------------------------------	---------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>UserID</b>	Up to 16characters		No Setting	
02	<b>Password</b>	Up to 16characters Version 3.00 or higher: The password needs to be 8 or more characters in length, contain at least one upper case letter, one lower case letter and one number.		No Setting	
03	<b>Last Name</b>	Up to 20characters		No Setting	
04	<b>First Name</b>	Up to 20characters		No Setting	
07	<b>TEL1</b>	Dial Data (Up to 24 digits) 0-9, *, #, @, P, R		No Setting	
08	<b>Last Name2</b>	Up to 20characters		No Setting	
09	<b>First Name2</b>	Up to 20characters		No Setting	
10	<b>TEL2</b>	Dial Data (Up to 24 digits) 0-9, *, #, @, P, R		No Setting	
11	<b>Last Name3</b>	Up to 20characters		No Setting	
12	<b>First Name3</b>	Up to 20characters		No Setting	
13	<b>TEL3</b>	Dial Data (Up to 24 digits) 0-9, *, #, @, P, R		No Setting	
14	<b>Mobile1</b>	Dial Data (Up to 24 digits) 0-9, *, #, @, P, R		No Setting	
15	<b>Mobile2</b>	Dial Data (Up to 24 digits) 0-9, *, #, @, P, R		No Setting	
16	<b>E-Mail1</b>	Up to 128characters		No Setting	
17	<b>E-Mail2</b>	Up to 128characters		No Setting	
18	<b>Company</b>	Up to 128characters		No Setting	
19	<b>Department/Division</b>	Up to 128characters	Only WebPro/PCPro	No Setting	
20	<b>City</b>	Up to 64characters		No Setting	
21	<b>State/Prov</b>	Up to 32characters		No Setting	
22	<b>Zip/Postal</b>	Up to 32characters		No Setting	
23	<b>Country</b>	Up to 32characters		No Setting	
24	<b>Profile Note</b>	Up to 256characters		No Setting	

Item No.	Item	Input Data	Description	Default	Related Program
41	<b>Extension Number</b>	Dial (Up to 8 digits)	This is the extension number related to the UC account. It's input automatically at the time of UC client registration. While a UC client is on-line, change isn't applied.	No Setting	11-02-01
42	<b>Language</b>	Language: 0 = Japanese 1 = English 2 = German 3 = French 4 = Italian 5 = Spanish 6 = Dutch 7 = Portuguese 8 = Norwegian 9 = Danish 10 = Swedish 11 = Turkish 12 = Romanian 13 = Polish 14 = Russian 15 = Simplified Chinese 16 = Traditional Chinese 17 = Thai 18 = Vietnamese 19 = Bahasa Indonesia 20 = Language20 21 = Language21 22 = Language22 23 = Language23 24 = Language24 25 = Language25 26 = Language26 27 = Language27 28 = Language28 29 = Language29 30 = Language30	This is the language setting for InUC Web Client.  <i>When unsupported language is selected, client uses default language.</i>	1	
43	<b>Extension Number of Browser Phone</b> (V1.5 added)	Dial (Up to 8 digits)	This is the extension number of browser phone related to the UC account. While a UC client is on-line, change isn't applied.	No Setting	

## Conditions

None

---

## Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-58 : UC Server Presence Settings

Level:

**IN**

### Description

#### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>UC Server Presence States: In the Office</b>	0 = Disable 1 = Enable	Enable to use the presence state In office	1 = Enable
02	<b>UC Server Presence States: On Vacation</b>	0 = Disable 1 = Enable	Enable to use the presence state Vacation	1 = Enable
03	<b>UC Server Presence States: Business Travel</b>	0 = Disable 1 = Enable	Enable to use the presence state Business Travel	1 = Enable
04	<b>UC Server Presence States: In a Meeting</b>	0 = Disable 1 = Enable	Enable to use the presence state In a Meeting	1 = Enable
05	<b>UC Server Presence States: Out to Lunch</b>	0 = Disable 1 = Enable	Enable to use the presence state Out to Lunch	1 = Enable
06	<b>UC Server Presence States: Sick</b>	0 = Disable 1 = Enable	Enable to use the presence state Sick	1 = Enable
07	<b>UC Server Presence States: Gone for the Day</b>	0 = Disable 1 = Enable	Enable to use the presence state "Gone for the Day"	1 = Enable
08	<b>UC Server Presence States: Out of the Office</b>	0 = Disable 1 = Enable	Enable to use the presence state Out of the Office	1 = Enable
09	<b>UC Server Presence States: UnAvailable</b>	0 = Disable 1 = Enable	Enable to use the presence state UnAvailable	1 = Enable
10	<b>UC Server Presence States: Unknown</b>	0 = Disable 1 = Enable	Enable to use the presence state Unknown	1 = Enable
11	<b>UC Server Custom Presence Usage</b>	0 = Disable 1 = Enable	Enable if more custome presence states are required	0 = Disable
12	<b>UC Server Custom Presence 1 definition</b>	32 characters	Enter your own Presence states 1 name	User Defined 1
13	<b>UC Server Custom Presence 1 use</b>	0 = Disable 1 = Enable	Enable/Disable usageof Custom Presence states 1	0 = Disable
14	<b>UC Server Custom Presence 2 definition</b>	32 characters	Enter your own Presence states 2 name	User Defined 2
15	<b>UC Server Custom Presence 2 use</b>	0 = Disable 1 = Enable	Enable/Disable usageof Custom Presence states 2	0 = Disable
16	<b>UC Server Custom Presence 3 definition</b>	32 characters	Enter your own Presence states 3 name	User Defined 3
17	<b>UC Server Custom Presence 3 use</b>	0 = Disable 1 = Enable	Enable/Disable usageof Custom Presence states 3	0 = Disable
18	<b>UC Server Custom Presence 4 definition</b>	32 characters	Enter your own Presence states 4 name	User Defined 4

---

Item No.	Item	Input Data	Description	Default
19	UC Server Custom Presence 4 usee	0 = Disable 1 = Enable	Enable/Disable usage of Custom Presence states 4	0 = Disable

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-59 : UC Server User Settings

Level:

**IN**

### Description

#### Input Data

User Settings	112
---------------	-----

Item No.	Item	Input Data	Description	Default
01	UC-User ID	Upto 255 characters	Unique ID within system	No Setting
02	UC-User Password	Upto 32 characters		No Setting
03	UC-DT Client	0 = Disable 1 = Enable		0 = Disable
04	UC-Web Client	0 = Disable 1 = Enable		0 = Disable
05	UC-Deskset Extension	Dial (Up to 8 digits)		No Setting
06	UC-Softphone Extension	Dial (Up to 8 digits)		No Setting
07	UC-IM-Allow	0 = Disable 1 = Enable		1 = Enable
08	UC-Shared Data Allow	0 = Disable 1 = Enable		0 = Disable
09	UC-Global Presesnce Change Allow	0 = Disable 1 = Enable		0 = Disable
10	UC-Message Feature Allow	0 = Disable 1 = Enable		1 = Enable
11	UC-Phone Monitor Allow	0 = Disable 1 = Enable		0 = Disable
12	UC-Block to be Monitored	0 = Disable 1 = Enable		0 = Disable
13	UC-Server Connect	0 = Disable 1 = Enable		1 = Enable
14	UC-License Level	0 = Softphone 1 = Deskset 2 = Softphone + Deskset		1 = Deskset
15	UC-Login Mode	0 = Softphone 1 = Deskset		1 = Deskset
16	UC Attendant Mode	0 = Disable 1 = Enable		0 = Disable
17	UC-Trial Mode	0 = Disable 1 = Enable		0 = Disable
18	UC-Voicemail Interface	0 = Disable 1 = Enable		1 = Enable
19	UC-ACD Agent Mode	0 = Disable 1 = Enable		0 = Disable

Item No.	Item	Input Data	Description	Default
20	UC-Abandon Call-Back	0 = Disable 1 = Enable		0 = Disable
21	UC-CRM Integration	0 = Disable 1 = Enable		0 = Disable

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-60 : UC Server Telephony Settings

Level:

**IN**

---

### Description

#### Input Data

Item No.	Item	Input Data	Description	Default
01	UC Server Consult Call for Immediate Transfer	0 = Disable 1 = Enable	UC SVR to utilize the Consult Call for Immediate transfer	0 = Disable
02	UC Server Emergency Number	Maximum 16 digits (1 ~ 0, *, #)		911

#### Conditions

None

---

### Feature Cross Reference

None



# Program 20 : System Option Setup

## 20-61 : UC Server Call Alerts Feature Settings

Level:

**IN**

---

### Description

#### Input Data

Item No.	Item	Input Data	Default
01	UC Server Abandon Call Alerts	0 = Disable 1 = Enable	0 = Disable
02	UC Server Minimum Wait Time	0000 ~ 2359	0
03	UC Server Clear Call Timer	0000 ~ 2359	0
04	UC Server Clear call if matching Caller ID returns to queue	0 = Disable 1 = Enable	1 = Enable

#### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-62 : UC Exception Table

Level:

**IN**

---

### Description

#### Input Data

UC Exception Table Number	1 ~ 99
---------------------------	--------

Item No.	Item	Input Data	Description	Default
01	Dial data	Maximum 24 digits (1 ~ 0, *, #)	Enter the exception table to include all the numbers needed to be excluded with the dialing plan	No Setting

#### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-63 : Multi-Device Group Setup

Level:

**SA**

### Description

This program setup the Multi-Device Group.

### Input Data

Group Number	1 ~ 50
--------------	--------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Pilot Extension Number</b>	Dial (Up to 8 digits)	Set the extension number of the pilot terminal. It is an error if it is not the extension number. Duplicated setting with the same group or the other group is not allowed.	No Setting	11-02
02	<b>Member Extension Number 1</b>	Dial (Up to 8 digits)	Set the extension number of the member terminal1. It is an error if it is not the extension number. Duplicated setting with the same group or the other group is not allowed.	No Setting	11-02
03	<b>Member Extension Number 2</b>	Dial (Up to 8 digits)	Set the extension number of the member terminal2. It is an error if it is not the extension number. Duplicated setting with the same group or the other group is not allowed.	No Setting	11-02
04	<b>Member Extension Number 3</b>	Dial (Up to 8 digits)	Set the extension number of the member terminal3. It is an error if it is not the extension number. Duplicated setting with the same group or the other group is not allowed.	No Setting	11-02
05	<b>Member Extension Number 4</b>	Dial (Up to 8 digits)	Set the extension number of the member terminal4. It is an error if it is not the extension number. Duplicated setting with the same group or the other group is not allowed.	No Setting	11-02
06	<b>Member Extension Number 5</b>	Dial (Up to 8 digits)	Set the extension number of the member terminal5. It is an error if it is not the extension number. Duplicated setting with the same group or the other group is not allowed.	No Setting	11-02
07	<b>Member Extension Number 6</b>	Dial (Up to 8 digits)	Set the extension number of the member terminal6. It is an error if it is not the extension number. Duplicated setting with the same group or the other group is not allowed.	No Setting	11-02
08	<b>Member Extension Number 7</b>	Dial (Up to 8 digits)	Set the extension number of the member terminal7. It is an error if it is not the extension number. Duplicated setting with the same group or the other group is not allowed.	No Setting	11-02

**Conditions**

None

---

**Feature Cross Reference**

None

# Program 20 : System Option Setup

## 20-64 : UC Web Application Setting


Level:


**SA**

### Description

This program is for set up the UC Web Application.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Web Conference Duration Timer</b>	0 ~ 64800	Max web conference duration (sec). If 0 is set, the duration is non-limit.	7200	
02	<b>End alert of Web Conference</b>	0 ~ 64800	The time (sec) displaying a alert dialog before expiring Web Conference Duration Timer. If 0 or a larger value than Web Conference Duration Timer is set, the alert dialog is not displayed.	300	20-64-01
03	<b>IM Port Number</b>	0 ~ 65535		0	
04	<b>Allow blank password</b>	0 = Not allow 1 = Allow	It is set whether a blank password is allowed at the time of login of UC Web application and Video Conference.	0	20-57-02
05	<b>Enter Key Operation at editing IM</b>	0 = Newline 1 = Send IM	When It is set "0 = Newline", Enter key make a newline, and Ctrl+Enter send a IM. When It is set "1 = Send IM", Enter key send an IM, and Ctrl+Enter make a newline.	1	20-57-02
06	<b>Register Port of Browser Phone (V1.5 added)</b>	0 ~ 65535	This is register port of browser phone. When it is 0, InUC web client cannot use browser phone mode.	0	
07	<b>Internal Port of Browser Phone (V1.5 added)</b>	0 ~ 65024	This is top of internal port for browser phone. When it is not 0, 512 port which continues from a set port is reserved. For example, when this port number is 50000, 50000 ~ 50511 ports are reserved. When it is 0, InUC web client cannot use browser phone mode.   <i>When a input check detected a duplicate with other port, an input error occurs.</i>	0	

Item No.	Item	Input Data	Description	Default	Related Program
08	<b>Internal Forwarded Port of Browser Phone</b> (V1.5 added)	0 ~ 65076	<p>This is top of internal forwarded port for browser phone. When it is not 0, 460 port which continues from a set port is reserved. For example, when this port number is 10020, 10020 ~ 10479 ports are reserved. When it is 0, InUC web client cannot use browser phone mode.</p> <p> <i>When a input check detected a duplicate with other port, an input error occurs.</i></p>	0	

### Conditions

None

---

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-66 : STUN/TURN Server Setting

Level:

**SA**

### Description

This program is for set up the STUN/TURN Server for UC Web Conference.

### Input Data

Server Number	1 ~ 4
---------------	-------

Item No.	Item	Input Data	Description	Default
01	Server Type	0 = Disable 1 = STUN 2 = TURN	Set the STUN/TURN server type. If it is 0 = Disable, STUN/TURN Server of the index is not work.	0
02	IP Address / Server Name	Up to 128 characters	Set IP Address or domain name of STUN/TURN server. If it is domain name, each client make the address resolution, and example of input is... example.server.com	No Setting
03	Port Number	0-65535	Set the server port.	3478
04	Authentication Name	Up to 32 characters	Set authentication name, if it needs authentication. If it doesn't need authentication, set blank this.	No Setting
05	Password	Up to 32 characters	Set password, if it needs authentication. If it doesn't need authentication, set blank this.	No Setting

### Conditions

None

### Feature Cross Reference

None

# Program 20 : System Option Setup

## 20-70 : Custom Presence Status Setting

Level:

**SA**

---

### Description

This program is for set up the Custom Presence Status for InUC Web Application.

### Input Data

Index.	1 ~ 5
--------	-------

Item No.	Item	Input Data	Description	Default
01	Icon	0 = arrow 1 = asterisk 2 = at 3 = bed 4 = coffee 5 = book 6 = building 7 = lock 8 = mobile 9 = subway	Set the presence icon.	0
02	Icon Color	0 = Green 1 = Orange 2 = Red	Set the color of presence icon.	0
03	Status Name	Up to 16 characters	Set the name of presence status.	None

### Conditions

None

---

### Feature Cross Reference

None



# Program 21 : Outgoing Call Setup

## 21-01 : System Options for Outgoing Calls

Level:

**IN**

### Description

Use **Program 21-01 : System Options for Outgoing Calls** to set the system options for Outgoing Call Service.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Seizure Trunk Line Mode</b>	0 = Priority Route 1 = Circular Route	Select the trunk based off the Trunk Route Priority (0) or based off the trunk that has not been used in the longest time (1).	0	14-05 14-06
02	<b>Intercom Interdigit Time</b>	0 ~ 64800 seconds	When placing Intercom calls, extension users must dial each digit in this time.	10	
03	<b>Trunk Interdigit Time (External)</b>	0 ~ 64800 seconds	The system waits for this time to expire before placing the call in a talk state (Call Timer starts after time expires, Voice Over and Barge-In is not allowed until after time expires).	5	14-02-08
04	<b>Dial Tone Detection Time</b>	0 ~ 64800 seconds	If dial tone detection is enabled, the system waits this time for the Telco to return dial tone. When the time expires, the system assumes dial tone is not present. To disable this time (and have the system wait continuously), enter 0.	5	14-02-05
05	<b>Disconnect Time when Dial Tone not Detected</b>	0 ~ 64800 seconds	If 14-02-11 is enabled, the system skips over a trunk if dial tone is not detected. This option pertains to calls placed using Speed Dial, ARS, Last Number Redial or Save Number dialed. It does not pertain to line key or Direct Trunk Access calls.	3	
06	<b>Dial Pause at First Digit</b>	0 ~ 64800 seconds		1	
07	<b>Toll Restriction Override Time</b>	0 ~ 64800 seconds	After dialing the Toll Restriction Override codes, the system removes Toll Restriction from the extension for this time.	10	20-08-06 21-07
08	<b>Preset Dial Display Hold Time</b>	0 ~ 64800 seconds		10	
09	<b>Ringdown Extension Timer (Hotline Start)</b>	0 ~ 64800 seconds	A Ringdown extension automatically calls its programmed destination after this time.	5	20-08-09 21-11

Item No.	Item	Input Data	Description	Default	Related Program
10	<b>Dial Digits for Toll Restriction Path</b>	0 ~ 24	If this option is programmed with an entry other than 0, a call does not have a talk path unless the user dials at least the number of digits entered in this option when placing an outgoing call. This means that an entry of 4 or higher in this program causes a problem when dialing 911 (USA only). Since it is only a 3-digit number, the call does not have a talk path, preventing the emergency dispatcher from hearing the caller. This option should be kept at its default setting of 0 to prevent any problems with dialing 911 (USA only).	0	
11	<b>Inter-Digit Time for Toll Restriction Path Control</b>	0 ~ 60 seconds		0	
12	<b>Dial E911 Routing Without Trunk Access</b>	0 = Trunk Access Code Required 1 = Trunk Access Code Not Required	If enabled (1), an extension user can dial 911 (USA only) without first dialing a trunk access code or pressing a line key. If disabled (0), an extension user must dial a trunk access code (e.g., 9) or press a line key before dialing 911 (USA only).	1	
13	<b>Alarm Ring Timer (E911)</b>	0, 1~ 64800 seconds (0 = Off)	Use this option to set the duration of the E911 Alarm Ring Time. If set for 0, the E911 Alarm does not ring.	0	11-12-56 20-08-16
14	<b>Forced Account Code Inter-digit Timer</b>	0 ~ 64800 seconds	If the user does not enter the account code in the amount of time specified in this program the call will be restricted.	3	
15	<b>Outgoing Disable on Incoming Line (Toll Restriction)</b>	0 = Disable (Off) 1 = Enable (On)	Enable or disable the Outgoing Disable on Incoming Line feature.	0	15-01-05 21-01-16 21-01-17 80-03-01
16	<b>Supervise Dial Detection Timer</b>	0 ~ 64800 seconds	With the Outgoing Disable on Incoming Line feature, if dial tone is not detected after the extension answers an incoming line, the system determines the call is unable to complete and releases the DTMF receiver.	20	15-01-05 21-01-16 21-01-17 80-03-01
17	<b>Restriction Digit in Outgoing Disable on Incoming Line</b>	Digits 1 ~ 9	With the Outgoing Disable on Incoming Line feature, determine the number of digits to be dialed before the call should be disconnected.	4	15-01-05 21-01-15 21-01-16 80-03-01
18	<b>Reset Dial After Failure of Trunk Access</b>	0 = Disable (Off) 1 = Enable (On)	Enable (1) or Disable (0) the ability to continue to dial codes or extensions after receiving Trunk Busy. This needs to be set to Enabled (1) for the Forced Trunk Disconnect feature to work.	1	
19	<b>Do-Not-Call-Setup</b>	0 = No service 1 = Extended common restriction		0	15-01-07
20	<b>Caller ID Call-back with Home Area Code Mode</b>	0 = Disable 1 = Manual Call Back 2 = Automatic Call Back	0 = Disable 1 = CID Call Back is manual 2 = Call Back is automatic based on the entries of the Home NPA, HNPA Exceptions, and Foreign NPA Locals	0	21-01-21 21-01-22 21-26-01 21-27-01 21-28-01

Item No.	Item	Input Data	Description	Default	Related Program
21	<b>HNPA Exception Type</b>	0 = Toll 1 = Local	Sets the exception of HNPA list.	0	21-01-20 21-01-22 21-26-01 21-27-01 21-28-01
22	<b>10 Digit Local Calls</b>	0 = 7 digits (without Area code) 1 = 10 digits (with Area Code)	Decide if the local call needs to dial with Area Code or not.	0	21-01-20 21-01-21 21-26-01 21-27-01 21-28-01

### Conditions

None

---

### Feature Cross Reference

- Central Office Calls, Placing

# Program 21 : Outgoing Call Setup

## 21-02 : Trunk Group Routing for Extensions

Level:

**IN**

---

### Description

Use **Program 21-02 : Trunk Group Routing for Extensions** to assign Program 14-06 routes to extensions.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default	Related Program
01	Route Table Number	0 ~ 50 (0 = No Setting)	1	14-06 14-01-07

### Conditions

None

---

### Feature Cross Reference

None

# Program 21 : Outgoing Call Setup

## 21-03 : Trunk Group Routing for Trunks

Level:

**IN**

---

### Description

Use **Program 21-03 : Trunk Group Routing for Trunks** to set the Trunk Route Table for Automatic External Call Forward. The Route Table is set in Program 14-06.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default	Related Program
01	Route Table Number	0 ~ 50 (0 = No Setting)	1	14-06 14-07-01

### Conditions

None

---

### Feature Cross Reference

- Trunk Group Routing

# Program 21 : Outgoing Call Setup

## 21-04 : Toll Restriction Class for Extensions


Level:

**IN**

---

### Description

Use **Program 21-04 : Toll Restriction Class for Extensions** to assign a Toll Restriction class to an extension. The details of Toll Restriction are defined in Program 21-05 and 21-06.

 *A telephone and a trunk will have a Restriction Class. The higher class applies for outgoing calls.*

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default	Related Program
01	Restriction Class	1 ~ 15 = Toll Class 1 ~ 15	2	14-01-08 21-05

### Conditions

None

---

### Feature Cross Reference

None

# Program 21 : Outgoing Call Setup

## 21-05 : Toll Restriction Class

Level:

**IN**

### Description

Use **Program 21-05 : Toll Restriction Class** to set the system Toll Restriction classes (1 ~ 15).

### Input Data

Toll Restriction Class Number	1 ~ 15
-------------------------------	--------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>International Call Restriction Table</b>	0 = Unassign (No international restrict table applied.) 1 = Assign (Table in PRG 21-06-01 is applied.)	This option assigns/unassigns the International Call Restrict Table for the Toll Restriction Class you are programming. Enter International Call Restrict Table data in Program 21-06-01.	Class No1, 6 ~ 15 : 0 Class No2 ~ 5 : 1	21-06-01
02	<b>International Call Permit Code Table</b>	0 = Unassign (No international permit table applied.) 1 = Assign (Table in PRG 21-06-02 is applied.)	This option assigns/unassigns the International Call Permit Table for the Toll Restriction Class you are programming. Enter International Call Permit Table data in Program 21-06-02.	Class No1, 3 ~ 15 : 0 Class No2 : 1	21-06-02
04	<b>Maximum Number of Digits Table Assignment</b>	0 = No Table Applied 1 ~ 4 = Tables 1 ~ 4 ( Defined in PRG 21-06-03)	Select the table (defined in 21-06-03) to be used to determine the maximum number of digits allowed for outgoing calls.	Class No1 ~ 2, 6 ~ 15 : 0 Class No3 : 1 Class No4 : 2 Class No5 : 3	21-06-03
05	<b>Common Permit Code Table</b>	0 = Unassign (No common permit table applied.) 1 = Assign (Table in PRG 21-06-04 is applied.)	It chooses whether the table set up by 21-06-04 is referred to, or not referred to.	Class No1, 8 ~ 15 : 0 Class No2 ~ 7 : 1	21-06-04
06	<b>Common Restriction Table</b>	0 = Unassign (No common restrict table applied.) 1 = Assign (Table in PRG 21-06-05 is applied.)	It chooses whether the table set up by 21-06-05 is referred to, or not referred to.	Class No1, 6 ~ 15 : 0 Class No2 ~ 5 : 1	21-06-05
07	<b>Permit Code Table</b>	0 = No Permit Table Assigned 1 ~ 4 = Permit Tables 1 ~ 4 (assigned in PRG 21-06-06)	Set the tables 1 ~ 4 when referring to the table set up by 21-06-06.	Class No1 ~ 2, 6 ~ 15 : 0 Class No3 : 1 Class No4 : 2 Class No5 : 3	21-06-06
08	<b>Restriction Table</b>	0 = No Permit Table Assigned 1 ~ 4 = Restrict Tables 1 ~ 4 (assigned in PRG 21-06-07)	Set the tables 1 ~ 4 when referring to the table set up by 21-06-07.	0	21-06-07

Item No.	Item	Input Data	Description	Default	Related Program
09	<b>Restriction for Common Speed Dials</b>	0 = Does Not Restrict 1 = Following Restriction Check	Use this option to enable/disable Toll Restriction for Common Speed Dialing numbers. If enabled, System Speed Dialing numbers have the same restrictions as manually dialed numbers.	0	
10	<b>Restriction for Group Speed Dials</b>	0 = Does Not Restrict 1 = Following Restriction Check	Use this option to enable/disable Toll Restriction for Group Speed Dialing numbers. If enabled, Group Speed Dialing numbers have the same restrictions as manually dialed numbers.	0	
11	<b>Intercom Call Restriction</b>	0 = Disable (ICM call not restricted.) 1 = Enable (ICM call restricted.)	Determine if incoming intercom calls are restricted.	0	
12	<b>PBX Call Restriction</b>	0 = Disable (PBX/CTX call not restricted.) 1 = Enable (PBX/CTX call restricted.)	Use this option to set how the system Toll Restricts calls over PBX trunks. If you enable PBX Toll Restriction, the system begins Toll Restriction after the PBX access code. The user cannot dial a PBX extension. If you disable PBX Toll Restriction, the system only restricts calls that contain the PBX access code. The system does not restrict calls to PBX extensions. Refer to the PBX compatibility feature. Make sure Program 21-05-04 (Maximum Number of Digits Table Assignment) allows for PBX Toll Call Dialing (normally 12 digits).	Class 1 ~ 6 = 0 Class 7 = 1 Class 8 ~ 15 = 0	
13	<b>Restriction of Tie Line Calls</b>	0 = Disable (No) 1 = Enable (Yes)	It chooses whether the toll restriction of the dial set up by 34-08 is enabled or disabled.	0	34-08

## Conditions

None

---

## Feature Cross Reference

None



# Program 21 : Outgoing Call Setup

## 21-06 : Toll Restriction Table Data Setup

Level:

**IN**

### Description

Use **Program 21-06 : Toll Restriction Table Data Setup** to set the system Toll Restriction data. Dial 1 ~ 9, 0, \*, # can be entered in each table.

### Input Data

Item No.	Item	Table	Input Data	Default
01	<b>International Call Restriction Table</b> This option lets you program the Restrict Table for international calls. The system has 10 International Call Restrict Tables. Each entry can have up to four digits.	[caption: table] 1 ~ 10	Dial (Up to four digits)	Tables 1 ~ 10 = No Setting
02	<b>International Call Permit Code Table</b> This option lets you program the Permit Table for international calls. The system has 20 International Call Permit Tables. Each entry can have up to six digits.	[caption: table] 1 ~ 20	Dial (Up to six digits)	Tables 1 ~ 20 = No Setting
03	<b>Maximum Number Digits Table Assignment</b> This option selects the maximum number of digits allowed in outgoing calls for each table.	[caption: table] 1 ~ 4	4 ~ 30	Tables 1 ~ 4 = 30
04	<b>Common Permit Code Table</b> This option lets you program the Common Permit Code Table. This table contains up to 10 codes you commonly allow users to dial.	[caption: table] 1 ~ 10	Dial (Up to four digits)	Table 1 = 911 Table 2 = 1800 Table 3 = 1888 Table 4 = 1822 Table 5 = 1833 Table 6 = 1844 Table 7 = 1855 Table 8 = 1866 Table 9 = 1877 Table 10 = No Setting
05	<b>Common Restriction Table</b> This option lets you program the Common Restrict Code Table. This table contains up to 10 codes you commonly prevent users from dialing.	[caption: table] 1 ~ 10	Dial (Up to 12 digits)	Table 1 = 900 Table 2 = 1900 Table 3 = 976 Tables 4 ~ 10 = No Setting
06	<b>Permit Code Table</b> This option lets you program the Permit Code Tables. If the system has Toll Restriction enabled, users can dial numbers only if permitted by these tables and the Common Permit Table (21-06-04). There are four Permit Code Tables, with up to 200 entries in each table. The system permits calls exactly as you enter the code.	[caption: table] 1 ~ 4 (table) 001 ~ 200 (Entry)	Dial (Up to 12 digits)	Tables 1 ~ 4 = No Setting

Item No.	Item	Table	Input Data	Default
07	<p><b>Deny Restriction Table</b></p> <p>This option lets you program the Restrict Code Tables.</p> <p>If the system has Toll Restriction enabled, users cannot dial numbers listed in these tables.</p> <p>There are four Restrict Code Tables, with up to 60 entries in each table.</p> <p>The system restricts calls exactly as you enter the code.</p>	[caption: table] 1 ~ 4 (table) 1 ~ 60 (Entry)	Dial (Up to 12 digits)	Tables 1 ~ 4 = No Setting
08	<p><b>PBX Access Code</b></p> <p>Use this option to enter the PBX Access Code.</p> <p>When the system is behind a PBX, this is the code users dial to access a PBX trunk.</p> <p>Toll Restriction begins after the PBX access code.</p> <p>For PBX trunks (Program 14-04) the system only Toll Restricts calls that contain the access code.</p> <p>Always program this option when the system is behind a PBX, even if you don't want to use Toll Restriction.</p> <p>PBX Access Codes can have up to two digits, using 0-9, #, * and LINE KEY 1 (don't care).</p> <p>When using Account Codes, do not use an asterisk in a PBX access code. Otherwise, after the *, the trunk stops sending digits to the central office.</p> <p>Entries 1-4 correspond to the 4 PBX Access Codes.</p> <p>Each code can have up to two digits.</p>	[caption: table] 1 ~ 4	Dial (Up to two digits)	Tables 1 ~ 4 = No Setting
09	<p><b>Specific Dial Outgoing Code</b></p>	[caption: table] 1 ~ 20	Dial (Up to eight digits)	Tables 1 ~ 20 = No Setting
10	<p><b>Outgoing Call Code Setup</b></p>	[caption: table] 1 ~ 20	Dial (Up to four digits)	Tables 1 ~ 20 = No Setting

## Conditions

None

---

## Feature Cross Reference

None

# Program 21 : Outgoing Call Setup

## 21-07 : Toll Restriction Override Password Setup

*Level:*

**SA**

---

### Description

Use **Program 21-07 : Toll Restriction Override Password Setup** to assign Toll Restriction Override codes to extension ports. Each code must have four digits, using any combination of 0 ~ 9, # and \*. Each extension can have a separate code, or many extensions can share the same override code.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Item No.	Item	Input Data	Default	Related Program
01	Password	Four Digits (Fixed)	No Setting	21-01-07 20-08-06

### Conditions

None

---

### Feature Cross Reference

None

# Program 21 : Outgoing Call Setup

## 21-08 : Repeat Dial Setup

Level:

**IN**

---

### Description

Use **Program 21-08 : Repeat Dial Setup** to define the automatic Repeat Dial data.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Repeat Redial Count	0 ~ 255	Sets how many times a Repeat Redial automatically repeats if the call does not go through.	3
02	Repeat Redial Interval Time	0 ~ 64800 seconds	Set the time between Repeat Redial attempts.	60
03	Repeat Dial Calling Timer	0 ~ 64800 seconds	After dialing the trunk call, Repeat Redial maintains the call after this time. After this time, the system terminates the call, waits the Repeat Redial Time (Timer 02) and tries again.	30
04	Time for Send Busy Tone for ISDN Trunk	0 ~ 64800 seconds	Sets the time (sec) to send out Busy Tone with an ISDN line, when called party is busy.	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 21 : Outgoing Call Setup

## 21-09 : Dial Block Setup

Level:

**IN**

---

### Description

Use **Program 21-09 : Dial Block Setup** to define the Dial Blocking Toll Restriction Class and Dial Block Password to be used by the Supervisor extension.

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>Toll Restriction Class With Dial Block</b>	1 ~ 15	Assign a Toll Restriction Class of Service when the Dial Block feature is used.	15
02	<b>Supervisor Password</b>	0 ~ 9, *, # (4-digit fixed)	Assign a 4-digit password to be used by the supervisor to enable or disable Dial Block for other extensions.	No Setting

### Conditions

- This function works by password and Class of Service control (the supervisor is not an assigned extension). If Dial Block is available for all Classes of Service, everyone may become a supervisor if they know the Dial Block password.

---

### Feature Cross Reference

None

# Program 21 : Outgoing Call Setup

## 21-10 : Dial Block Restriction Class Per Extension

Level:

**IN**

---

### Description

Use **Program 21-10 : Dial Block Restriction Class Per Extension** to define the Toll Restriction Class to each extension when the extension is set for Dial Block Restriction. If this data is 0, Toll Restriction Class follows Program 21-09-01.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Item No.	Item	Input Data	Default
01	<b>Toll Restriction Class</b>	0, 1 ~ 15 (0 = No Setting)	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 21 : Outgoing Call Setup

## 21-11 : Extension Ringdown (Hotline) Assignment

Level:

**IN**

---

### Description

Use **Program 21-11 : Extension Ringdown (Hotline) Assignment** to define the Hotline destination number for each extension number.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Item No.	Item	Input Data	Default	Related Program
01	<b>Hotline Destination Number</b>	1 ~ 0, *, #, Pause, Hook Flash, @ (Code to wait for answer supervision) (maximum 36 digits)	No Setting	20-08-09 21-01-09

### Conditions

- The @ code is used to make an outbound call automatically to a DISA Trunk or to VM Auto Attendant. This code can only be used on ISDN outbound calls. Internal calls and analog outbound calls are not supported.

---

### Feature Cross Reference

- Ringdown Extension (Hotline), Internal/External

# Program 21 : Outgoing Call Setup

## 21-12 : ISDN Calling Party Number Setup for Trunks

Level:

**IN**

---

### Description

Use **Program 21-12 : ISDN Calling Party Number Setup for Trunks** to assign Calling Party Numbers for each trunk (maximum 16 digits per entry). When a call is made by an extension which does not have an Extension Calling Number assigned (Program 21-13), the system sends the calling number for the ISDN trunk defined in 21-12.

 *If the Calling Party Number is assigned in both Programs 21-12 and 21-13, the system sends the data in Program 21-13.*

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Description	Default
01	<b>Calling Party Number Data</b>	Maximum of 16 digits (0 ~ 9, *, #) Most Telco's will only accept 10 digits.	This program is used to assign a calling party number per trunk. If CPN information is programmed on both the trunk and station when a call is made the CPN from the station will be sent to the Telco.	No Setting

### Conditions

None

---

### Feature Cross Reference

- ISDN Compatibility



# Program 21 : Outgoing Call Setup

## 21-13 : ISDN Calling Party Number Setup for Extensions

Level:

**IN**

### Description

Use **Program 21-13 : ISDN Calling Party Number Setup for Extensions** to assign each extension a Calling Party Number (maximum 16 digits per entry). The calling number is the subscriber number of the dial-in number. When a call is made by an extension which does not have an Extension Calling Number assigned (Program 21-13), the system sends the calling number for the ISDN trunk defined in Program 21-12.

 *If a Calling Party Number is assigned in both Programs 21-12 and 21-13, the system sends the data in Program 21-13.*

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Item No.	Item	Input Data	Description	Default
01	<b>Calling Party Number Data</b>	Maximum of 16 digits (0 ~ 9, *, #) Most Telco's will only accept 10 digits.	This program is used to assign a calling party number per station. If CPN information is programmed on both the trunk and station when a call is made the CPN from the station will be sent to the Telco.	No Setting

### Conditions

None

### Feature Cross Reference

- ISDN Compatibility

# Program 21 : Outgoing Call Setup

## 21-14 : Walking Toll Restriction Password Setup

Level:

**SA**

---

### Description

Use **Program 21-14 : Walking Toll Restriction Password Setup** to assign the password and Toll Restriction Class for Walking Toll Restriction. Each code has six digits, using any combination of 0 ~ 9, # and \*.

### Input Data

ID Table Number	1 ~ 500
-----------------	---------

Item No.	Item	Input Data	Default
01	<b>User ID</b>	Dial (Six digits)	No Setting
02	<b>Walking Toll Restriction Class Number</b>	1 ~ 15	1

### Conditions

None

---

### Feature Cross Reference

- Code Restriction/Toll Restriction

# Program 21 : Outgoing Call Setup

## 21-15 : Individual Trunk Group Routing for Extensions

Level:

**IN**

---

### Description

Use **Program 21-15 : Individual Trunk Group Routing for Extensions** to designate the alternate trunk access route accessed when a user dials the Alternate Trunk Route Access Code. Refer to Program [11-09 : Trunk Access Code](#) when setting up alternate trunk codes. Refer to [14-06 : Trunk Group Routing](#) to set up the trunk routes. When entering data for this option, enter the route number or 0 to prevent routing.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Description	Default
01	Route Table Number	0 ~ 50 0 = No Setting (Calls will not route.)	This assigns extensions per day/night mode to a route table (PRG 14-06-01). This program follows the special trunk access code from PRG 11-01-01 and 11-09-02.	0

### Conditions

None

---

### Feature Cross Reference

- Central Office Calls, Placing

# Program 21 : Outgoing Call Setup

## 21-16 : Trunk Group Routing for Networking

Level:

**IN**

---

### Description

Use **Program 21-16 : Trunk Group Routing for Networking** to assign Program 14-06 routes for a networked system. This is required to seize the trunk in a networked system (Extension in System A tries to make an external call using a trunk in System B).

The route number is specified for each system ID (01 ~ 04).

### Input Data

System ID	1 ~ 50
-----------	--------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Description	Default	Related Program
01	Route Table Number	0 ~ 50 0 = No Setting (Calls will not route.)	If a call comes in from across the network, this program determines the route table (PRG 14-06-01) that will be accessed in the local system.	1	14-06

### Conditions

None

---

### Feature Cross Reference

- SL-Net

## Program 21 : Outgoing Call Setup

### 21-17 : IP Trunk (H.323/SIP) Calling Party Number Setup for Trunk

Level:

**IN**

---

#### Description

Use **Program 21-17 : IP Trunk (H.323/SIP) Calling Party Number Setup for Trunk** set the SIP calling party number for individual trunks.

#### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Default	Related Program
01	Calling Party Number	Up to 16 digits (1 ~ 0, *, #)	No Setting	15-01-04 20-08-13

#### Conditions

None

---

#### Feature Cross Reference

None

# Program 21 : Outgoing Call Setup

## 21-19 : IP Trunk (SIP) Calling Party Number Setup for Extension

Level:

**IN**

---

### Description

Use **Program 21-19 : IP Trunk (SIP) Calling Party Number Setup for Extension** to set the SIP calling party number for an individual extension.

### Input Data

Extension Number	Up to eight digits
------------------	--------------------

Profile	1 ~ 6
---------	-------

Item No.	Item	Input Data	Default	Related Program
01	Calling Party Number	Up to 16 Digits (1 ~ 0, *, #)	No Setting	15-01-04 20-08-13

### Conditions

None

---

### Feature Cross Reference

None

## Program 21 : Outgoing Call Setup

### 21-20 : SIP Trunk Call Discernment Setup for Extension

Level:

**SB**

---

#### Description

Use **Program 21-20 : SIP Trunk Call Discernment Setup for Extension** to set the SIP Trunk Call Discernment.

#### Input Data

Extension Number	Up to eight digits
------------------	--------------------

Item No.	Item	Input Data	Default
01	Discernment Tone	0 = Off 1 = On	1

#### Conditions

None

---

#### Feature Cross Reference

None

## Program 21 : Outgoing Call Setup

### 21-21 : Toll Restriction for Trunks (Seized Trunk Basis Setting)

Level:

**IN**

---

#### Description

Use **Program 21-21 : Toll Restriction for Trunks (Seized Trunk Basis Setting)** to define the toll restriction class to each trunk. The details of toll restriction are defined by Programs 21-05 and 21-06.

This program is compared to Station Restriction Class. The higher class is applied.

#### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Restriction Class</b>	1 ~ 15 = Toll Class 1 ~ 15	Per Day/Night Mode assign a toll restriction class to each trunk. It is recommended to not use class 2, because by default all stations are assigned in class 2.	1	14-01-08 21-05

#### Conditions

None

---

#### Feature Cross Reference

None



## Program 21 : Outgoing Call Setup

### 21-22 : CO Message Waiting Indication - Call Back Settings

Level:

**IN**

---

#### Description

Use **Program 21-22 : CO Message Waiting Indication - Call Back Settings** to define the settings of CO Message Waiting Indication.

#### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Description	Default
01	<b>CO MWI Call Back Enabling</b>	0 = No VMWI Service 1 = Enable VMWI Service	Enable or Disable CO MWI Call Back.	0
02	<b>CO MWI Call Back Number Area Setting</b>	0 ~ 999	Define the Speed Dial Bin number for MWI Call Back.	999

#### Conditions

None

---

#### Feature Cross Reference

None

# Program 21 : Outgoing Call Setup

## 21-26 : Home NPA Setup

Level:

**IN**

---

### Description

Use **Program 21-26 : Home NPA Setup** to set the home NPA dial. Order to use this program PRG 21-01-20 needs to set to 2: Automatic Call Back.

### Input Data

Index	1 ~ 16
-------	--------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Home NPA</b>	Blank or 3 digits (0 ~ 9, *) * = Wild Card	Set the NPA (Home Area Code)  <i>If using wild card "*" make sure it is 3 digits (Example: 1**)</i>		21-01-20 21-01-21 21-01-22 21-27-01 21-28-01

### Conditions

None

---

### Feature Cross Reference

None

# Program 21 : Outgoing Call Setup

## 21-27 : HNPB Exceptions Setup

Level:

**IN**

---

### Description

Use **Program 21-27 : HNPB Exceptions Setup** to set the dial number sent. Order to use this program PRG 21-01-20 needs to set as 2: Automatic Call Back.

### Input Data

Index	1 ~ 96
-------	--------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>HNPB Exceptions</b>	Blank or 6 digits (0 ~ 9, *) * = Wild Card	It is a 6 digits starting with Area Code which you want to have an exception to it.  <i>If using wild card "*" make sure it is 6 digits (Example: 123***)</i>		21-01-20 21-01-21 21-01-22 21-26-01 21-28-01

### Conditions

None

---

### Feature Cross Reference

None

# Program 21 : Outgoing Call Setup

## 21-28 : Foreign NPA Locals Setup

Level:

**IN**

---

### Description

Use **Program 21-28 : Foreign NPA Locals Setup** to set the dial number sent. Order to use this program PRG 21-01-20 needs to set as 2: Automatic Call Back.

### Input Data

System Number	1 ~ 96
---------------	--------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Foreign NPA Ex-ceptions</b>	Blank or 6 digits (0 ~ 9, *) * = Wild Card	Foreign NPA Locals, this is used to make exceptions of some area code office code combinations that are not within your home area code but may be dialed as a local call (Such as Metro-Lines)  <i>If using wild card "*" make sure it is 6 digits (Example: 123***)</i>		21-01-20 21-01-21 21-01-22 21-26-01 21-27-01

### Conditions

None

---

### Feature Cross Reference

None

# Program 22 : Incoming Call Setup

## 22-01 : System Options for Incoming Calls

Level:

**IN**

### Description

Use Program 22-01 : System Options for Incoming Calls to define the system options for incoming calls.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Incoming Call Priority</b>	0 = Intercom Call Priority 1 = Trunk Call Priority	Use this option to determine if Intercom calls or trunk calls have answer priority when both are ringing simultaneously.	1	15-02-22
02	<b>Incoming Call Ring No Answer Alarm</b>	0 = Disable (Off) 1 = Enable (On)	If enabled, an incoming call that rings longer than the Ring No Answer Alarm interval (22-01-03), changes to a unique ring cadence to indicate that the call has been ringing too long. If disabled, this does not occur.	0	22-01-03 22-01-04
03	<b>Ring No Answer Alarm Time</b>	0 ~ 64800 seconds	If a trunk rings a multiline telephone longer than this interval, the system changes the ring cadence. This indicates to the user that the call has been ringing too long.	60	22-01-02
04	<b>DIL No Answer Recall Time</b>	0 ~ 64800 seconds 0 = No Overflow	A DIL that rings its programmed destination longer than this interval diverts to the DIL No Answer Ring Group (set in Program 22-08).	0	
06	<b>DID Ring-No-Answer Time</b>	0 ~ 64800 seconds	In systems with DID Ring-No-Answer Intercept, this sets the Ring-No-Answer time. This time is how long a DID call rings the destination extension before rerouting to the intercept ring group.	20	22-12
07	<b>DID Incoming Ring Group No Answer Time</b>	0 ~ 64800 seconds		20	
08	<b>DID Pilot Call No Answer Time</b>	0 ~ 64800 seconds		60	
09	<b>DID to Trunk to Trunk no answer timer</b>	0 ~ 64800 seconds		20	
10	<b>VRS Waiting Message Operation</b>	0 = Automatic Operation 1 = Manual Operation	Set up the operation mode for Auto Attendant and Queuing Message.	0	22-14 22-15 22-08 22-04 22-01-04 20-15-11 15-07

Item No.	Item	Input Data	Description	Default	Related Program
11	<b>VRS Waiting Message Interval Time</b>	0 ~ 64800 seconds	Setup the sending duration time of the Auto - Attendant & Queuing. The message is repeatedly sent out during the specified time.	20	22-14-06 22-15-06 41-11-06
12	<b>Mobile Extension answer time</b>	0~ 64800 seconds		3	15-22-04

## Conditions

None

---

## Feature Cross Reference

- Central Office Calls, Answering

# Program 22 : Incoming Call Setup

## 22-02 : Incoming Call Trunk Setup

Level:

**IN**

### Description

Use **Program 22-02 : Incoming Call Trunk Setup** to assign the incoming trunk type for each trunk. There is one item for each Night Service Mode.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Description	Default	Related Program
01	Trunk Service Type	0 = Normal 1 = VRS (second dial tone if no VRS installed) 2 = DISA 3 = DID 4 = DIL 5 = Tie Line 6 = Delayed VRS 7 = ANI/DNIS 8 = DID (DDI) Mode Switching	Use this option to set the feature type for the trunk you are programming.	0	14-04

### Conditions

- When connecting to T1 trunks, after changing Program 22-02-01 to match the Telco connected T1 service type, the T1 cable or the T1 board must be unplugged and then reconnected for the T1 board to sync.
- When the trunk type is set to 3 (DID), the DID Transfer to Destination in 22-11-04 for each DID feature is not supported. This feature is supported only for DID trunks when assigned as VRS.
- When the trunk type is set to 3 (DID), the DID Intercept Destination feature for each DID is not supported. This feature is supported only for DID trunks assigned as VRS.

### Feature Cross Reference

- Central Office Calls, Answering

# Program 22 : Incoming Call Setup

## 22-03 : Trunk Ring Tone Range

Level:

**IN**

### Description

Use **Program 22-03 : Trunk Ring Tone Range** to select the ring tone range for the trunk. The trunk uses a ring tone in the range selected when it rings an extension. Eight ring tones are available. Customize the Trunk Ring Tones in Program 82-01.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Description	Default	Related Program
01	Ring Tone Pattern	0 = Tone 1 1 = Tone 2 2 = Tone 3 3 = Tone 4 4 = Melody 1 5 = Melody 2 6 = Melody 3 7 = Melody 4 8 = Melody 5 9 = Tone 5 10 = Tone 6 11 = Tone 7 12 = Tone 8	Use this program to select the ring tone range for the trunk. The trunk uses a ring tone in the range selected when it rings an extension. Eight Ring Tones are available.	0	15-02

**Table 2-9 Program 22-03 - Incoming Signal Frequency Patterns**

Incoming Signal Frequency Pattern	Type	Frequency 1	Frequency 2	Modulation
Pattern 1	High	1100Hz	1400Hz	16Hz
	Middle	660Hz	760Hz	16Hz
	Low	520Hz	660Hz	16Hz
Pattern 2	High	1100Hz	1400Hz	8Hz
	Middle	660Hz	760Hz	8Hz
	Low	520Hz	660Hz	8Hz
Pattern 3	High	2000Hz	760Hz	16Hz
	Middle	1400Hz	660Hz	16Hz
	Low	1100Hz	540Hz	16Hz
Pattern 4	High	2000Hz	760Hz	8Hz
	Middle	1400Hz	660Hz	8Hz
	Low	1100Hz	540Hz	8Hz
Pattern 5	High	1400Hz	540Hz	16Hz
	Middle	760Hz	540Hz	16Hz
	Low	660Hz	540Hz	16Hz
Pattern 6	High	1400Hz	540Hz	8Hz
	Middle	760Hz	540Hz	8Hz
	Low	660Hz	540Hz	8Hz



Incoming Signal Frequency Pattern	Type	Frequency 1	Frequency 2	Modulation
Pattern 7	High	2000Hz	1100Hz	16Hz
	Middle	2000Hz	540Hz	16Hz
	Low	1100Hz	760Hz	16Hz
Pattern 8	High	2000Hz	1100Hz	8Hz
	Middle	2000Hz	540Hz	8Hz
	Low	1100Hz	760Hz	8Hz

## Conditions

None

---

## Feature Cross Reference

- Selectable Ring Tones

# Program 22 : Incoming Call Setup


## 22-04 : Incoming Extension Ring Group Assignment


Level:

**SA**

### Description

Use **Program 22-04 : Incoming Extension Ring Group Assignment** to assign extensions to Ring Groups. Calls ring extensions according to Ring Group programming. Use Program 22-05 to assign trunks to Ring Groups and use Program 22-06 to set the ringing for the phones. An Incoming Ring Group (IRG) can have up to 48 extension numbers assigned.

 *There are 50 available Ring Groups.*

 *An Incoming Ring Group (IRG) can have up to 48 extensions assigned, but when there is a call to the IRG, Only the first 32 extensions will ring, for the rest 16 extensions, only their LED will blink.*

### Input Data

Incoming Ring Group Number	1 ~ 50
----------------------------	--------

IRG Member Number	1 ~ 48
-------------------	--------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Extension Number</b>	Maximum eight Digits	Use this program to assign extensions (up to 48) to Ring Groups. Calls ring extensions according to Ring Group programming.	Group01 has 101, 102, 103, 104, 105, 106, 107, and 108 (First 8 ports ringing)	22-02 22-05 22-06
02	<b>Delayed Ring</b>	0 ~ 60 (Sec)	Use this program to assign the timing of ring to the terminal that set to delayed ring on PRG 22-04-01. 0: Immediate Ring 1 ~ 60: Ring after 1 ~ 60 sec	0	22-02 22-05 22-06

### Conditions

None

### Feature Cross Reference

- Ring Groups

# Program 22 : Incoming Call Setup

## 22-05 : Incoming Trunk Ring Group Assignment

Level:

**IN**

---

### Description

Use **Program 22-05 : Incoming Trunk Ring Group Assignment** to assign trunks to incoming Ring Groups. There are 50 available Ring Groups.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Incoming Group Number</b>	0 = No Setting 1 ~ 50 = Incoming Ring Group 101 = Not Used 102 = InMail 103 = Centralized VM	Use this program to assign Normal Ring Trunks (22-02) to Incoming Ring Groups (22-04).	1	14-02 22-04 22-06

### Conditions

None

---

### Feature Cross Reference

- Ring Groups

# Program 22 : Incoming Call Setup

## 22-06 : Normal Incoming Ring Mode

Level:

**IN**

---

### Description

Use **Program 22-06 : Normal Incoming Ring Mode** to define whether or not an extension should ring for the Normal Incoming Ring Mode.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default	Related Program
01	Incoming Group Number	0 = No Ring 1 = Ring	1	22-04 22-05

### Conditions

None

---

### Feature Cross Reference

- Central Office Calls, Answering

# Program 22 : Incoming Call Setup

## 22-07 : DIL Assignment

Level:

**IN**

---

### Description

Use **Program 22-07 : DIL Assignment** to assign the destination extension or Department Calling Group for each DIL Incoming trunk. A DIL rings an extension directly, without any other Access Map or Ring Group programming. If an extension has a line key, the DIL rings the line key. Use Program 22-02 to designate a trunk as a DIL. You can make eight DIL assignments, one for each Night Service mode.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Description	Default
01	Number of Transferring Destination	Maximum of 8 digits (0 ~ 9, *, #)	Assign extension or department group number for DIL trunk.	No Setting

### Conditions

- Program 22-02 must be set to four for the trunk.

---

### Feature Cross Reference

- Direct Inward Line (DIL)

# Program 22 : Incoming Call Setup

## 22-08 : DIL/IRG No Answer Destination

Level:

**IN**

---

### Description

For DIL Delayed Ringing, use **Program 22-08 : DIL/IRG No Answer Destination** to assign the DIL No Answer Ring Group. An unanswered DIL rings this group after the DIL No Answer Time expires (Program 22-01-04). DIL Delayed Ringing can also reroute outside calls ringing a Ring Group. Make eight assignments, one for each Night Service mode.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default
01	Incoming Ring Group Number	0 = No Setting 1 ~ 50 = Incoming Group 101 = Not Used 102 = InMail 103 = Centralized VM	1

### Conditions

None

---

### Feature Cross Reference

- Direct Inward Line (DIL)
- Ring Group

# Program 22 : Incoming Call Setup

## 22-09 : DID Basic Data Setup

Level:

**IN**

### Description

Use **Program 22-09 : DID Basic Data Setup** to define the basic setting of Dial-In incoming calls for each trunk group.

### Input Data

Trunk Group Number	1 ~ 50
--------------------	--------

Item No.	Item	Input Data	Description	Default
01	Dial-In Receive digit	1 ~ 8	Enter the number of digits the table expects to receive from the Telco. Use this program to make the system compatible with 3- and 4-digit DID service. If ISDN trunks, we analyze the last digits that are set here. If it is T-1 or analog DID, it analyzes the first digits that are assigned here.	4
02	Received Vacant Number Operation	0 = Disconnect (call denied) 1 = Transfer (call routed to PRG 22-12)	If the system receives a DID that is not routed this program sets what the system does with the call. If the setting data is a (0), Disconnect, the system will deny the call. If the setting data is a (1), Transfer, the call will be routed to the ring group specified in PRG 22-12-01.	0
03	Sub-Addressing Mode	0 = Extension # Specify (Intercom) 1 = DID Conversion Table		0
04	DID Receiving Mode for ISDN	0 = Enbloc Receiving 1 = Overlap Receiving		0
05	Local Code Digits	0 ~ 15 (0 = No Local Code)	(Only Overlap Receiving Mode)	0
06	Local Code	Dial (maximum 16 digits)	(Only Overlap Receiving Mode)	No Setting
07	Pilot Code	Dial (1 digit : 0 ~ 9)	(Only Overlap Receiving Mode)	No Setting
08	T302 Time-out Operation	0 = Disconnect (Cut) 1 = Transfer (Refer to Program 22-12 : DID Intercept Ring Group.)	(Only Overlap Receiving Mode)	0

### Conditions

None

---

## Feature Cross Reference

- Direct Inward Dialing (DID)



# Program 22 : Incoming Call Setup

## 22-10 : DID Translation Table Setup

Level:

**IN**

### Description

Use **Program 22-10 : DID Translation Table Setup** to specify the size of the DID Translation Tables. There are 1000 Translation Table entries that you can allocate among 20 Translation Tables.

### Input Data

Conversion Table Area Number	1 ~ 20
------------------------------	--------

Item No.	Item	Input Data	Default
01	1st Area Setup (Start Address)	0 ~ 1000 (0 = No Setting)	Refer below
	1st Area Setup (End Address)		
	2nd Area Setup (Start Address)		
	2nd Area Setup (End Address)		

### Default

Conversion Table Area	1st		2nd	
	Start Table	End Table	Start Table	End Table
1	1	100	0	0
2	101	200	0	0
3	201	300	0	0
4	301	400	0	0
5	0	0	0	0
:	:	:	:	:
20	0	0	0	0

### Conditions

None

### Feature Cross Reference

- Direct Inward Dialing (DID)

# Program 22 : Incoming Call Setup

## 22-11 : DID Translation Table

Level:

**SA**

### Description

Use **Program 22-11 : DID Translation Table** to specify for each Translation Table entry (1000).

- The digits received by the system (eight maximum)
- The extension the system dials after translation (36 digits maximum)
- The name that should show on the dialed extension display when it rings (12 characters maximum)
- The Transfer Target - 1 and 2



*If the Transfer Targets are busy or receive no answer, those calls are transferred to the final transfer destination (Program 22-10).*


- Operation Mode


Use the following chart when entering and editing text for names. Press the key once for the first character, twice for the second character, etc. For example, to enter a C, press 2 three times.

Key for Entering Names	
When entering names in the procedures below, refer to this chart. Names can have up to 12 digits.	
Use this keypad digit ...	When you want to ...
1	Enter characters: 1 @ [ ¥ ] ^ _ ` {   } → ← Á Â Ã Ä Å Æ Ç È É Ê Ì Ó 0
2	Enter characters: A-C, a-c, 2.
3	Enter characters: D-F, d-f, 3.
4	Enter characters: G-I, g-i, 4.
5	Enter characters: J-L, j-l, 5.
6	Enter characters: M-O, m-o, 6.
7	Enter characters: P-S, p-s, 7.
8	Enter characters: T-V, t-v, 8.
9	Enter characters: W-Z, w-z, 9.
0	Enter characters: 0 ! " # \$ % & ' ( ) ð õ ú â ä æ ö ü α ε θ Β
*	Enter characters: * + , - . / : ; < = > ? π Σ σ Ω ∞ ζ £
#	# = Accepts an entry (only required if two letters on the same key are needed - ex : TOM). Pressing # again = Space. (In system programming mode, use the right arrow soft key instead to accept and/or add a space.)
Clear/Back or DND (2W Digital/IP Multi-line Terminal)	Clear the character entry one character at a time.
Flash	Clear all the entries from the point of the flashing cursor and to the right.

### Input Data

Conversion Table Number	1 ~ 1000
-------------------------	----------

Item No.	Item	Input Data	Description	Default
01	<b>Received Number</b>	Maximum eight digits (0 ~ 9, *, #, @)	This is the received DID digits.	No Setting
02	<b>Target</b>	Maximum 36 digits (0 ~ 9, *, #, @)	Enter the destination number to which the DID number is sent.	No Setting
03	<b>DID Name</b>	Maximum 12 characters	This is the name that is assigned to the DID digits when it rings the extension.	No Setting
04	<b>Transfer Operation Mode</b>	0 = No Transfer 1 = Busy 2 = No Answer 3 = Busy/No Answer	The transfer operation mode allows DID calls to have more routing options than just the target number. If the transfer operation mode is set to "No Transfer" calls will only be delivered to the Target Number specified in PRG 22-11-02. If set to one of the three other modes, it will follow that mode through all assigned transfer destinations.	0
05	<b>Transfer Target 1</b>	0 = No Setting 01 ~ 50 = Incoming Ring Group 101 = Not Used 102 = InMail 103 = Centralized VM 201 ~ 250 = Department Group 400 = VRS 401 = DISA 501 ~ 599 = Valid Extension Number/VRS Message 1000 ~ 1999 = Common ABB Dial (000 ~ 999)		0
06	<b>Transfer Target 2</b>	0 = No Setting 01 ~ 50 = Incoming Ring Group 101 = Not Used 102 = InMail 103 = Centralized VM 201 ~ 250 = Department Group 400 = VRS 401 = DISA 501 ~ 599 = Valid Extension Number/VRS Message 1000 ~ 1999 = Common ABB Dial (000 ~ 999)	400 - Allow the outside party to dial a different extension number in the translation table (for example, ring no answer to a dialed number, the caller then hears a dial tone, allowing them to enter another Valid Extension Number). 401 - Provide the caller with DISA dialing options (requires using the DISA password).  <i>This applies to 22-11-05 and 22-11-06.</i>	0
07	<b>Call Waiting</b>	0 = Disable (No) 1 = Enable (Yes)	Program 20-09-07 overrides this setting.	0
08	<b>Maximum Number of DID Calls</b>	0 ~ 128 (0 = No limit)	Per DID translation table a DID can be limited to only accept a certain amount of calls. If a call is delivered to the system when the limit has been reached, the outside caller will receive a busy tone.	0
09	<b>Music on Hold Source</b>	0 = IC/MOH Port 1 = BGM Port		0

Item No.	Item	Input Data	Description	Default
11	<b>Incoming Ring Group Transfer</b>	0 = Disable (Calls will not be routed to PRG 22-12.) 1 = Enable (Calls will be routed to PRG 22-12.)	Enable (1) or disable (0) each conversation tables ability to follow the Ring Group programming defined in Program 22-12-01 : DID Intercept Ring Group. If Program 22-11-05 (DID Translation Number Conversion, Transfer Destination Number 1) and Program 22-11-06 (DID Translation Number Conversion, Transfer Destination Number 2) are set, the priority of transferring is in this order (Program 22-11-05 then Program 22-11-06) then if Program 22-11-11 is enabled, the calls will overflow from Transfer Destination Number 2 to the destination programmed in PRG 22-12-01.   <i>If the terminal is in Power Cutting mode from the ecology feature this command will not be applied.</i>	1
13	<b>Identify for Mobile Extension</b>	0 = Off 1 = On	Enable/Disable if when a Mobile Extension number calls in on this DID will it provide Internal Tone (1) or route the call as programmed (0).	0

### Conditions

When the trunk type is set to 3 (DID) in 22-02-01, the DID Transfer Destination for each DID feature is not supported. This feature is supported only for DID trunks when assigned as VRS.

---

### Feature Cross Reference

- Direct Inward Dialing (DID)

# Program 22 : Incoming Call Setup

## 22-12 : DID Intercept Ring Group

Level:

**IN**


### Description

For each DID Translation Table, use **Program 22-12 : DID Intercept Ring Group** to define the first destination group for DID calls.

Depending on the entry in Programs 22-09-02 and 22-11-04, the incoming calls route to the first destination group by the following:

- Vacant number intercept (vacant number means that no phone is connected, no station board is installed, or the extension number is not defined in Program 11-02)
- Busy intercept
- Ring-no-answer intercept

If the destination is 0, the calls are forwarded to the trunk ring group defined in Program 22-11 based on the table assigned to the DID trunk.

 *If Programs 22-11-05 and 22-11-06 are set, the priority of transferring is in this order: Program 22-11-05 + Program 22-11-06 + Program 22-12.*

**For busy and no-answer calls, if the first and third destinations are programmed, but the second destination is not, the incoming call goes to the third destination after the first destination. If the first and second destinations are not defined, but the third destination is, the call goes directly to the third destination.**

### Input Data

Conversion Table Area Number	1 ~ 20
------------------------------	--------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default
01	Incoming Ring Group Number	0 = No Setting 1 ~ 50 = Incoming Ring Group 101 = Not Used 102 = InMail 103 = Centralized VM	1

### Conditions

None

### Feature Cross Reference

- Direct Inward Dialing (DID)

## Program 22 : Incoming Call Setup

### 22-13 : DID Trunk Group to Translation Table Assignment

Level:

**IN**

---

#### Description

Use **Program 22-13 : DID Trunk Group to Translation Table Assignment** to assign the DID Trunk Groups to DID Translation Tables. DID trunks should be in their own group. If you have more than one type of DID trunk, put each type in a separate Trunk Group. For each Trunk Group, you make a Translation Table entry for each Night Service mode.

#### Input Data

Trunk Group Number	1 ~ 50
--------------------	--------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default
01	Translation Table	0 ~ 20 (0 = No Setting)	1

#### Conditions

None

---

#### Feature Cross Reference

- Direct Inward Dialing (DID)

# Program 22 : Incoming Call Setup

## 22-14 : VRS Delayed Message for IRG

Level:

**IN**

### Description

Use **Program 22-14 : VRS Delayed Message for IRG** (Incoming Group Ring) to define for each incoming ring group the timers, VRS message number and type of tone for VRS Waiting Message.

### Input Data

Incoming Ring Group Number	1 ~ 50
----------------------------	--------

Item No.	Item	Input Data	Description	Default
01	<b>1<sup>st</sup> Delayed Message Start Time</b>	0 ~ 64800 seconds	Time before the VRS Delay Message is played for IRG.	0
02	<b>1<sup>st</sup> Delayed Message Number</b>	0 ~ 101 0 = No Message 101 = Fixed Message	VRS message that is used for the 1st Delayed Message.	0
03	<b>1<sup>st</sup> Delayed Message Sending Count</b>	0 ~ 255 (time)	This is the number of times the 1st Delay Message is played. If set to 0, the 1st Delay Message is not played.	0
04	<b>2<sup>nd</sup> Delayed Message Number</b>	0 ~ 101 0 = No Message 101 = Fixed Message	VRS message that is used for the 2nd Delayed Message.	0
05	<b>2<sup>nd</sup> Delayed Message Sending Count</b>	0 ~ 255 (time)	This is the number of times the 2nd Delay Message is played. If set to 0, the 2nd Delay Message is not played.	0
06	<b>Tone Kind at Message Interval</b>	0 = Ring Back Tone 1 = MOH Tone 2 = BGM Source	What is heard between the Delay Message.	0
07	<b>Disconnect Time After the End of VRS Delayed Message</b>	0 ~ 64800 seconds 0 = No Disconnect	Time, after all 2nd Delay Messages are played, before the caller is disconnected.	60

### Conditions

None

### Feature Cross Reference

None

## Program 22 : Incoming Call Setup

### 22-15 : VRS Delayed Message for Department Group

Level:

**IN**

#### Description

Use **Program 22-15 : VRS Delayed Message for Department Group** to define for each Department (Extension) Group the timers, VRS message number and tone kind for VRS Delayed Message. There are 50 available Department Groups.

#### Input Data

Extension Group Number	1 ~ 50
------------------------	--------

Item No.	Item	Input Data	Description	Default
01	<b>1<sup>st</sup> Delayed Message Start Time</b>	0 ~ 64800 seconds	Time before the VRS Delay Message is played for Department Group.	0
02	<b>1<sup>st</sup> Delayed Message Number</b>	0 ~ 101 0 = No Message 101 = Fixed Message	VRS message that is used for the 1st Delayed Message.	0
03	<b>1<sup>st</sup> Delayed Message Sending Count</b>	0~255 (time)	This is the number of times the 1st Delay Message is played. If set to 0, the 1st Delay Message is not played.	0
04	<b>2<sup>nd</sup> Delayed Message Number</b>	0 ~ 101 0 = No Message 101 = Fixed Message	VRS message that is used for the 2nd Delayed Message.	0
05	<b>2<sup>nd</sup> Delayed Message Sending Count</b>	0 ~ 255 (time)	This is the number of times the 2nd Delay Message is played. If set to 0, the 2nd Delay Message is not played.	0
06	<b>Tone Kind at Message Interval</b>	0 = Ring Back Tone 1 = MOH Tone 2 = BGM Source	What is heard between the Delay Message.	0
07	<b>Disconnect Time After the End of VRS Delayed Message</b>	0 ~ 64800 seconds 0 = No Disconnect	Time, after all 2nd Delay Messages are played, before the caller is disconnected.	60

#### Conditions

None

#### Feature Cross Reference

- Department Group



# Program 22 : Incoming Call Setup

## 22-16 : Private Call Refuse Target Area Setup

Level:

**IN**

---

### Description

Use **Program 22-16 : Private Call Refuse Target Area Setup** to define Speed Dial group number for Private Call Refuse.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Speed Dial Group Number	0 ~ 50 0 = No Group Assigned (Caller ID refuse will not function.)	This program is used to assign a speed dial group (1 ~ 50) to be used for the caller ID refuse number matching storage.	0

### Conditions

None

---

### Feature Cross Reference

- Department Group

# Program 22 : Incoming Call Setup

## 22-17 : Dial-In Conversion Table Area Setup for Time Pattern

Level:  
**SA**

---

### Description

Use **Program 22-17: Dial-In Conversion Table Area Setup for Time Pattern** to define Time Zone and Dial-In Conversion Table (Program 22-11) for Time Pattern.

### Input Data

Conversion Table Number	1 ~ 500
-------------------------	---------

Time Pattern Number	1 ~ 8
---------------------	-------

Item No.	Item	Input Data	Description	Default
01	Received Dial	Up to eight digits		No Setting
02	Starting Time	0000 ~ 2359 (Time)	Define the Starting Time for each DID Translation table in PRG 22-17-01.	0000
03	Ending Time	0000 ~ 2359 (Time)	Define the Ending Time for each DID Translation table in PRG 22-17-01.	0000
04	Dial-In Conversion Table Number	1 ~ 1000 (These are the table entries in PRG 22-11.)		0
05	Day of week	1: Sun 2: Mon 3: Tue 4: Wed 5: Thu 6: Fri 8: Sun 9: Holiday 0 = Off 1 = On	Assign Day of Week for each DID conversion table.	1

### Conditions

None

---

### Feature Cross Reference

None

# Program 22 : Incoming Call Setup

## 22-18 : Private Call Assignment Setup

Level:

**IN**

### Description

Use **Program 22-18: Private Call Assignment Setup** to define assignment and incoming ring pattern for Private Calls.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Transfer Mode</b>	0 = Not Defined (Private call will not transfer to a user in the system, can be routed to VRS message in PRG 40-10-06.) 1 = Internal Dial (Specified in PRG 22-18-02) 2 = Incoming Ring Group (Specified in PRG 22-04)	Leave this program set to (0) Not Defined to route the Private caller to a VRS message to refuse the call. This program can also be used to route the Private caller to an internal destination (PRG 22-18-02) or a Ring Group (PRG 22-04).	0	14-01-27 15-02-02 40-10-06
02	<b>Destination Number</b>	1 = Internal Dial (up to 36 digits) 0 ~ 9, *, #, P, R, @ 2 = Incoming Ring Group 0 ~ 50		No Setting	14-01-27 15-02-02 40-10-06

Item No.	Item	Input Data	Description	Default	Related Program
03	<b>Incoming Ring Pattern</b>	[1 or 2] Incoming Ring Pattern (0 ~ 13) 0 = normal pattern 1 = tone pattern 1 2 = tone pattern 2 3 = tone pattern 3 4 = Pattern 4 (2W Digital/IP Multiline Terminal) 5 = Scale Pattern 1 (2W Digital/IP Multiline Terminal) 6 = Scale Pattern 2 (2W Digital/IP Multiline Terminal) 7 = Scale Pattern 3 (2W Digital/IP Multiline Terminal) 8 = Scale Pattern 4 (2W Digital/IP Multiline Terminal) 9 = Scale Pattern 5 (2W Digital/IP Multiline Terminal) 10 = Pattern 5 (2W Digital/IP Multiline Terminal) 11 = Pattern 6 (2W Digital/IP Multiline Terminal) 12 = Pattern 7 (2W Digital/IP Multiline Terminal) 13 = Pattern 8 (2W Digital/IP Multiline Terminal)		0	14-01-27 15-02-02 40-10-06

### Conditions

None

---

### Feature Cross Reference

None

# Program 22 : Incoming Call Setup

## 22-20 : Flexible Ringing by Caller ID Setup

Level:

**IN**

---

### Description

Use **Program 22-20: Flexible Ringing by Caller ID Setup** to set flexible ringing by Caller ID per timer pattern mode.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default	Related Program
01	Flexible Ringing	0 = Disable 1 = Enable	1	13-04 14-01-30

### Conditions

None

---

### Feature Cross Reference

None

# Program 23 : Answer Features Setup

## 23-02 : Call Pickup Groups

Level:

**IN**

### Description

Use **Program 23-02 : Call Pickup Groups** to assign extensions to Call Pickup Groups. This program also lets you assign an extension Call Pickup Group priority. If two extensions in a group are ringing at the same time, Group Call Pickup intercepts the highest priority extension first.

 *There are 50 available Call Pickup Groups.*

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Priority</b>	Group No. - Priority Order (1 - 50) - ( 1 - 9999)	Use this program to assign extensions to Call Pickup Groups other than the extension group set up by a Program 16-02.	1 - xxx (Note; default value follows the port order of PRG11-02 or PRG11-04.)	11-12-27 11-12-28 15-07-24 15-07-25 15-07-26 11-12-2

### Conditions

None

### Feature Cross Reference

- Group Call Pickup

# Program 23 : Answer Features Setup

## 23-03 : Universal Answer/Auto Answer

Level:

**IN**

### Description

Use **Program 23-03 : Universal Answer/Auto Answer** to assign trunk routes (set in Program 14-06) to extensions for Universal Answer. If the call ringing the paging system is in an extension assigned route, the user can dial the Universal Answer code (#0) to pick up the call.

You can also use this program to let an extension user automatically answer trunk calls that ring other extensions (not their own). When the user lifts the handset, they automatically answer the ringing calls based on Trunk Group Routing programming (defined in Program 14-06). The extension user ringing calls, however, always have priority over calls ringing other co-worker extensions. Refer to the Line Preference feature in the SL2100 Features and Specifications Manual for more information.



*Make one entry for each Night Service mode.*

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Description	Default	Related Program
01	Route Table Number	0 ~ 50	Use this program to let an extension user automatically answer trunk calls that ring other extensions. When the user lifts the handset, they automatically answer the ringing calls based on Trunk Group Routing programming (defined in Program 14-06).	0	14-06

### Conditions

None

### Feature Cross Reference

- Line Preference
- Night Service

## Program 23 : Answer Features Setup


### 23-04 : Ringing Line Preference for Virtual Extensions

Level:

**IN**

#### Description

Use **Program 23-04 : Ringing Line Preference for Virtual Extensions** to set the off-hook automatic response priority for calls ringing virtual extension keys on a telephone.

 *There are 50 available Virtual Extension Ports.*

#### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Priority Order	1 ~ 4
----------------	-------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Extension Group Number</b>	0 ~ 50 (0 = No Setting)	When an extension has a virtual extension assigned to a Programmable Function Key, this program determines the priority for automatically answering the ringing calls when the handset is lifted. If 0 or 00 is selected, when the user lifts the handset, the user answers a ringing call from any group.	0	16-02

#### Conditions

None

#### Feature Cross Reference

- Virtual Extensions



## Program 24 : Hold/Transfer Setup

### 24-01 : System Options for Hold

Level:

**IN**

---

### Description

Use Program 24-01 : System Options for Hold to define the system options for the Hold feature.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	Hold Recall Time	0 ~ 64800 seconds	A call on Hold recalls the extension that placed it on Hold after this time. This time works with the Hold Recall Callback Time (Item 2).	60	
02	Hold Recall Callback Time	0 ~ 64800 seconds	A trunk recalling from Hold or Park rings an extension for this time. This time works with Hold Recall Time or Park Hold Time. After this time, the system invokes the Hold recall time again. Cycling between time 01 and 02 and 06 and 07 continues until a user answers the call.	30	
03	Exclusive Hold Recall Time	0 ~ 64800 seconds	A call left on Exclusive Hold recalls the extension that placed it on Hold after this time.	90	
04	Exclusive Hold Recall Callback Time	0 ~ 64800 seconds	An Exclusive Hold Recall rings an extension for this time. If not picked up, the call goes back on System Hold.	30	
05	Forced Release of Held Call	0 ~ 64800 seconds	Depending on the setting of Program 14-01-16, the system disconnects calls on Hold longer than this time.	1800	14-01-16
06	Park Hold Time - Normal	0 ~ 64800 seconds	A call left parked longer than this time recalls the extension that initially parked it.	60	20-31-14
07	Park Hold Time - Extended (Recall)	0 ~ 64800 seconds	A call left parked longer than this time recalls the extension that initially parked it.	300	

### Conditions

None

---

### Feature Cross Reference

- Hold
- Park

# Program 24 : Hold/Transfer Setup

## 24-02 : System Options for Transfer

Level:

**IN**

### Description

Use **Program 24-02 : System Options for Transfer** to define the system options for the Transfer feature.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Busy Transfer</b>	0 = Disable (No) 1 = Enable (Yes)	Use this option to prevent or allow extensions to Transfer calls to busy extensions. If disabled, calls transferred to busy extensions recall immediately.	1	
02	<b>MOH or Ring-back on Transferred Calls</b>	0 = Hold Tone 1 = Ring Back Tone	Use this option to enable or disable MOH on Transfer. If enabled (0), a transferred caller hears MOH while their call rings the destination extension. If disabled (1), a transferred caller hears ringback while their call rings the destination extension.	1	20-03-02
03	<b>Delayed Call Forwarding Time</b>	0 ~ 64800 seconds	If activated at an extension, Delayed Call Forwarding occurs after this time. This also sets how long a Transferred call waits at an extension forwarded to Voice Mail before routing to the called extension mailbox.	10	20-31-15
04	<b>Transfer Recall Time</b>	0 ~ 64800 seconds	An unanswered transferred call recalls to the extension that initially transferred it after this time.	20	20-31-16
05	<b>Message Wait Ring Interval Time</b>	0 ~ 64800 seconds	For Single Line Telephones (SLTs) without message waiting lamps, this is the time between intermittent ringing. If this value is set to 0, the system rings once.	30	
07	<b>Trunk-to-Trunk Transfer Release Warning Tone</b>	0 ~ 64800 seconds	Time starts when a trunk begins talking with another trunk (for example : trunk-to-trunk transfer, outgoing from trunk, Tandem Trunking). When this time expires, a warning tone is heard. If Program 24-02-10 is set, the conversation disconnects after time expires. This time is set again when the external digit timer expires. One of the trunks used must be an analog trunk (or leased line).	1800	14-01-25 20-28-01 20-28-02 20-28-03 24-02-10
08	<b>Delayed Transfer Time for all Department Groups</b>	0 ~ 64800 seconds		10	11-11-28 11-11-29 15-07-59

Item No.	Item	Input Data	Description	Default	Related Program
09	Two B-Channel Transfer Retry Timer	1 ~ 30 seconds		10	10-03-16 (PRI)
10	Disconnect Trunk-to-Trunk	0 ~ 64800 seconds		0	14-01-25 20-28-01 20-28-02 20-28-03 24-02-07
11	No Answer Step Transfer	0 ~ 64800 seconds		10	14-01-26
12	No Answer Trunk-to-Trunk Transfer	0 ~ 64800 seconds		0	14-01-26
13	Hook Flash Sending Timer When the System Answers Automatically	0 ~ 64800 seconds	Time before sending the hook flash for Call Forward Centrex.	2	
15	SIP Out of Range Timer	0 ~ 30 seconds	When not receiving any response within this timer setting, the system determines that the SIP terminal is out of range. When set to 0, timer is invalid.	4	

## Conditions

None

---

## Feature Cross Reference

- Transfer

# Program 24 : Hold/Transfer Setup

## 24-03 : Park Group

Level:

**IN**

---

### Description

Use **Program 24-03 : Park Group** to assign an extension to a Park Group. The system allows a total of 64 Park Groups. An extension user can pick up only a call parked in orbit by an extension user in own group.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Park Group Number</b>	1 ~ 50	Assign an extension to a Park Group. The system allows a total of 50 Park Groups.	1	15-07-01

### Conditions

None

---

### Feature Cross Reference

- Park

## Program 24 : Hold/Transfer Setup

### 24-04 : Automatic Trunk-to-Trunk Transfer Target Setup

Level:

**IN**

---

#### Description

Use **Program 24-04 : Automatic Trunk-to-Trunk Transfer Target Setup** to assign the Speed Dialing number bin which should be used as the destination of the Automatic Trunk-to-Trunk Transfer.

#### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Description	Default	Related Program
01	Speed Dial Area Number	0 ~ 999	The destination telephone number of the Trunk-to-Trunk Transfer uses the number registered into the Speed Dial. Use this program to set-up the Speed Dial Bin Number.	999	11-10-08 13-04 24-05

#### Conditions

None

---

#### Feature Cross Reference

- Call Forwarding, Off-Premise

# Program 24 : Hold/Transfer Setup

## 24-05 : Department Group Transfer Target Setup

Level:

**IN**

---

### Description

Use **Program 24-05 : Department Group Transfer Target Setup** to assign the Speed Dialing bin which is used as the destination of the extension for the Extension Group.

 *There are 50 available Department Groups.*

### Input Data

Extension Group Number	1 ~ 50
------------------------	--------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Speed Dial Area Number</b>	0 ~ 999	The Speed Dialing area is used to program the destination number of the transferred telephone number when a Department Group call is transferred using the Trunk-to-Trunk Forwarding feature.	999	11-11-27 13-04 24-04

### Conditions

None

---

### Feature Cross Reference

- Transfer

# Program 24 : Hold/Transfer Setup

## 24-09 : Call Forward Split Settings


Level:

**IN**

### Description


Use **Program 24-09 : Call Forward Split Settings** to assign Call Forwarding Type and the destination number for each extension/virtual extension. The destination can have up to 24 digits, using 0 ~ 9, \*, #, and @. Be sure to include the trunk access code (e.g., 9) in the number if the destination is off-premise.

 *Only ISDN uses the @ symbol.*

 *Pause can be set by LK 1.*

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Item No.	Item	Input Data	Default
01	<b>Call Forwarding Type</b>	0 = Call Forwarding Off 1 = Call Forwarding with Both Ringing 2 = Call Forward when No Answer 3 = Call Forwarding All Calls 4 = Call Forwarding when Busy or Not Answered 5 = Call Forwarding when Busy	0
02	<b>CO Call Forwarding Destination for Both Ring, All Call, No Answer</b>	Maximum of 36 digits (0 ~ 9, *, #, @, P, R)  <i>Only ISDN uses the @ symbol</i>	No Setting
03	<b>Intercom Call Forwarding Destination for Both ring, All Call, No Answer</b>	Maximum of 36 digits (0 ~ 9, *, #, @, P, R)	No Setting
04	<b>CO Call Forwarding Busy Destination</b>	Maximum of 36 digits (0 ~ 9, *, #, @, P, R)	No Setting
05	<b>Intercom Call Forwarding Busy Destination</b>	Maximum of 36 digits (0 ~ 9, *, #, @, P, R)	No Setting
06	<b>Call Forwarding Destination for CTX/PBX for All Call, No Answer</b>	Maximum of 36 digits (0 ~ 9, *, #, @, P, R)	No Setting
07	<b>Call Forwarding Destination for CTX/PBX for Busy</b>	Maximum of 36 digits (0 ~ 9, *, #, @, P, R)	No Setting

### Conditions

None

---

## Feature Cross Reference

- Call Forwarding, Off-Premise



# Program 25 : VRS/DISA Setup

## 25-01 : VRS/DISA Line Basic Data Setup

Level:

**IN**

---

### Description

Use **Program 25-01 : VRS/DISA Line Basic Data Setup** to define the basic setting of each VRS/DISA line.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Default	Related Program
01	<b>VRS/DISA Dial - In Mode</b>	0 = Extension Number Service Code Specify (Intercom) 1 = Use Dial Conversion Table	0	22-11
02	<b>DISA User ID</b>	0 = Off 1 = On	1	25-08
03	<b>VRS/DISA Transfer Alarm</b>	0 = Normal (Off) 1 = Alarm (On)	0	

### Conditions

None

---

### Feature Cross Reference

- Direct Inward System Access (DISA)

## Program 25 : VRS/DISA Setup

### 25-02 : DID/DISA VRS Message

Level:

**IN**

---

### Description

Use **Program 25-02 : DID/DISA VRS Message** to assign the VRS message number to be used as the Automated Attendant Message for each trunk which is assigned as a VRS/DISA.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Additional Data	Default
01	<b>Message (Talkie) Source</b>	0 = No Talkie 1 = VAU : 1 ~ 100 (VAU Message No.) 3 = SLT : 1 ~ 50 (Station Group No.)	1 = 1 ~ 100 (VRS Message Number) 3 = 1 ~ 50 (Station Group Number)	Talkie Type = 1 Additional Data = 1

### Conditions

None

---

### Feature Cross Reference

- Direct Inward System Access (DISA)

## Program 25 : VRS/DISA Setup

### 25-03 : VRS/DISA Transfer Ring Group With Incorrect Dialing

Level:

**IN**

---

### Description

Use **Program 25-03 : VRS/DISA Transfer Ring Group With Incorrect Dialing** to set what happens to a call when the DISA or Automated Attendant caller dials incorrectly or waits too long to dial. The call can either disconnect (0) or Transfer to an alternate destination (a ring group or voice mail). When setting the DISA and DID Operating Mode, make an entry for each Night Service mode.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default	Related Program
01	Incoming Group Number	0 = Disconnect 1 ~ 50 = Incoming Ring Group 102 = InMail 103 = Centralized VM 104 = Assign the Speed Dial Number	0	22-04

### Conditions

None

---

### Feature Cross Reference

- Direct Inward System Access (DISA)

## Program 25 : VRS/DISA Setup

### 25-04 : VRS/DISA Transfer Ring Group With No Answer/ Busy

Level:

**IN**

---

#### Description

Use **Program 25-04 : VRS/DISA Transfer Ring Group With No Answer/Busy** to set the operating mode of each DISA trunk. This sets what happens to the call when the DISA or Automated Attendant caller calls a busy or unanswered extension. The call can either disconnect (0) or Transfer to an alternate destination (a ring group or voice mail). When setting the DISA and DID Operating Mode, make an entry for each Night Service mode.

#### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default	Related Program
01	Incoming Group Number	0 = Disconnect 1 ~ 50 = Incoming Ring Group 101 = Not Used 102 = VMSU or VMI 103 = Centralized VM 104 = Assigns the Speed Dial Number	0	22-04

#### Conditions

None

---

#### Feature Cross Reference

- Direct Inward System Access (DISA)

## Program 25 : VRS/DISA Setup

### 25-05 : VRS/DISA Error Message Assignment

Level:

**IN**

---

#### Description

Use **Program 25-05 : VRS/DISA Error Message Assignment** to assign the VRS message number to be used as the Automated Attendant error message. For each VRS/DISA trunk that the VRS answers, enter the VRS message (1 ~ 100) the outside caller hears if they dial incorrectly. If you enter 0 (i.e., no error message), the call reroutes according to Programs 25-03 and 25-04.

For each trunk, make a separate entry for each Night Service mode.

#### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default
01	<b>VRS Message Number</b>	0 ~ 100 (0 = No Setting)	0

#### Conditions

None

---

#### Feature Cross Reference

- Direct Inward System Access (DISA)

# Program 25 : VRS/DISA Setup

## 25-06 : VRS/DISA One-Digit Code Attendant Setup

Level:

**IN**

### Description

Use **Program 25-06 : VRS/DISA One-Digit Code Attendant Setup** to set up single digit dialing through the VRS. This gives VRS callers single key access to extensions, the company operator, Department Calling Groups and Voice Mail. For each VRS message set to answer outside calls (refer to Programs 25-04 and 25-05), you specify:

- The digit the VRS caller dials (0 ~ 9, \*, #). Keep in mind that if you assign destinations to digits, outside callers cannot dial system extensions.
- The destination reached (Maximum eight digits) when the caller dials the specified digit.

The destination can be an extension, a Department Calling pilot number or the Voice Mail master number. A one-digit code can be assigned for each Automated Attendant message.

Example:


Message Number = 01, Destination = 2, Next Message Number = 0, Dial = 399

In this example, when 2 is dialed by an outside caller, the system transfers the call to 399. This means that extension 200~299 cannot receive calls from VRS/DISA users during/after VRS Message 01.

### Input Data

Attendant Message Number	1 ~ 100
--------------------------	---------

Received Dial	1 ~ 9, 0, *, #
---------------	----------------

Item No.	Item	Input Data	Description	Default
01	<b>Next Attendant Message Number</b>	0 ~ 100 (0 = No Setting) 101 = Voice Mail answers 104 = Refer to <a href="#">25-04 : VRS/DISA Transfer Ring Group With No Answer/Busy</a> 105 = Dial the other extension	Defines the next attendant message number or destination number for each 1-digit access code in Automated Attendant service	0
02	<b>Destination Number</b>	<b>Up to eight digits</b>  <i>Must be a valid extension number that is programmed in command 11-02 or 11-04.</i>		No Setting

**Conditions**

- Outside caller may not be able to dial individual extensions or lines if the same first digit is defined here.

---

**Feature Cross Reference**

- Direct Inward System Access (DISA)
- Voice Response System (VRS)

# Program 25 : VRS/DISA Setup

## 25-07 : System Timers for VRS/DISA

Level:

**IN**

### Description

Use **Program 25-07 : System Timers for VRS/DISA** to set the value for the system timers which affect DID and DISA. Refer to the following chart for a description of each option, its range and default setting.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>VRS/DISA Dial Tone Time</b>	0 ~ 64800 seconds	After answering a DISA trunk, the system waits this time for the caller to dial the first digit of the DISA password. If the caller fails to dial during this time, the system drops the call.	10 seconds	25-03 25-04
02	<b>VRS/DISA No Answer Time</b>	0 ~ 64800 seconds	A VRS/DISA caller can ring an extension for this time before the system sets the call as a Ring No Answer. After this time expires, the call follows the programmed Ring No Answer routing (set in Programs 25-03 and 25-04).	0	25-04 20-31-17
03	<b>Disconnect after VRS/DISA re-transfer to IRG</b>	0 ~ 64800 seconds	From DISA trunk, when the call may go to Incoming Ring Group of Programs 25-03 and 25-04. This setting determines how long the call is ringing in the IRG.	60 seconds	20-31-18
04	<b>Calling Time to Automatic Answering Telephone Set</b>	0 ~ 64800 seconds	Set the answering waiting time of the automatic answering extension when an incoming DID trunk call is received.	10 seconds	25-02
05	<b>Duration Time for Guidance Message by Automatic Answering Telephone Set</b>	0 ~ 64800 seconds	Set the announcement time of the automatic answering extension after which an incoming DID trunk caller is disconnected.	10 seconds	25-02
07	<b>Long Conversation Warning Tone Time</b>	0 ~ 64800 seconds	Determine the time a DISA caller or any trunk-to-trunk (such as Tandem Trunking) conversation can talk before the Long Conversation tone is heard.	3600	14-01-25 20-28-01 20-28-02 20-28-03 20-31-19
08	<b>Long Conversation Disconnect Time</b>	0 ~ 64800 seconds	This time determines how long the system waits before disconnecting a DISA caller or any trunk-to-trunk (such as Tandem Trunking) conversation call after the Long Conversation tone is heard.	10	14-01-25 20-28-01 20-28-02 20-28-03 20-31-20



Item No.	Item	Input Data	Description	Default	Related Program
09	<b>DISA Internal Paging Time</b>	0 ~ 64800 seconds	This is the maximum length of an Internal Page placed by a DISA caller. If the Page continues longer than this time, the system terminates the DISA call.	30 seconds	20-31-21
10	<b>DISA External Paging Time</b>	0 ~ 64800 seconds	This is the maximum length of an External Page placed by a DISA caller. If the Page continues longer than this time, the system terminates the DISA call.	30 seconds	20-31-22
11	<b>VRS/DISA Answer Delay Time</b>	0 ~ 64800 seconds	Sets up the time the system waits after receiving an incoming VRS/ DISA call before the system automatically answers the call.	0 second	
13	<b>VRS/DISA Busy Tone Interval</b>	0 ~ 64800 seconds	If a DISA caller dials a busy extension (and Program 25-04 = 0), the system plays busy tone for this time before disconnecting.	5 seconds	
14	<b>Delayed VRS Answer Time</b>	0 ~ 64800 seconds	Assign the delay time from switching from a normal incoming status to DID mode. If this time is set to 0, the call switches to DID mode immediately.	10 seconds	

## Conditions

None

---

## Feature Cross Reference

- Direct Inward System Access (DISA)

## Program 25 : VRS/DISA Setup

### 25-08 : DISA User ID Setup

Level:

**SA**

---

### Description

Use **Program 25-08 : DISA User ID Setup** to set the 6-digit DISA password for each user. There are 15 users each with one 6-digit password.

### Input Data

DISA User Number	1 ~ 15
------------------	--------

Item No.	Item	Input Data	Default	Related Program
01	Password	Dial (Fixed - six digits) 0 ~ 9, *, #	No Setting	49-10-11

### Conditions

None

---

### Feature Cross Reference

- Direct Inward System Access (DISA)

## Program 25 : VRS/DISA Setup

### 25-09 : Class of Service for DISA Users

**Level:**

**IN**

---

### Description

Use **Program 25-09 : Class of Service for DISA Users** to set the DISA Class of Service for each user. When a DISA caller enters a password (defined in Program 25-08), the system identifies the user and associates the appropriate DISA Class of Service with the call. Assign the DISA Class of Service options in Program 20-14. When programming DISA Class of Service, make one entry for each Night Service mode.

### Input Data

DISA User Number	1 ~ 15
------------------	--------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default	Related Program
01	Function Class	1 ~ 15	1	20-14

### Conditions

- DISA Class of Service cannot be 0.
- Program 20-06 cannot be used to assign Class of Service to DISA trunks.

---

### Feature Cross Reference

- Direct Inward System Access (DISA)

## Program 25 : VRS/DISA Setup

### 25-10 : Trunk Group Routing for DISA

Level:

**IN**

---

### Description

Use **Program 25-10 : Trunk Group Routing for DISA** to assign the Trunk Group route chosen when a user places a DISA call to the system and dials 9. Set Trunk Group Routing in Program 14-06. Enable or disable the DISA caller ability to dial 9 in Program 20-14-02. Assign a route to each DISA Class of Service (1 ~ 15). The system assigns a DISA Class of Service to a call based on the password the DISA caller dials.



*When programming, make a separate entry for each Night Service Mode.*

### Input Data

DISA User Number	1 ~ 15
------------------	--------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default	Related Program
01	Route Table Number	0 ~ 50 (0 = No Setting)	1	14-06

### Conditions

None

---

### Feature Cross Reference

- Direct Inward System Access (DISA)

# Program 25 : VRS/DISA Setup

## 25-11 : DISA Toll Restriction Class

Level:

**IN**

---

### Description

For systems that use Toll Restriction, use **Program 25-11 : DISA Toll Restriction Class** to assign a Toll Restriction Class (1-15) to each DISA user (1~15). The system uses the Toll Restriction Class you enter in Programs 21-05 and 21-06. The Toll Restriction Class assigned to a DISA call is based on the DISA Class of Service and user, which is determined by the password the caller dials.



*When programming, make a separate entry for each Night Service mode.*

### Input Data

DISA User Number	1 ~ 15
------------------	--------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default	Related Program
01	<b>Toll Restriction Class</b>	1 ~ 15	2	21-05

### Conditions

- Program 21-05 cannot be used to assign Toll Restriction to DISA trunks.

---

### Feature Cross Reference

- Direct Inward System Access (DISA)

# Program 25 : VRS/DISA Setup

## 25-12 : Alternate Trunk Group Routing for DISA

Level:

**IN**

---

### Description

Use **Program 25-12 : Alternate Trunk Group Routing for DISA** to define the trunk route selected when a DISA caller dials the Alternate Trunk Access Code. The route selected is based on the DISA caller Class of Service, which in turn is determined by the password the caller dials. When programming, make a separate entry for each Night Service Mode.

 Use Program 11-09-02 to set the Alternate Trunk Access Code. Use Program 14-06 to set trunk routes.

### Input Data

DISA User Number	1 ~ 15
------------------	--------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default	Related Program
01	Route Table Number	0 ~ 50 (0 = No Setting)	1	14-06

### Conditions

- You cannot use Program 21-15 to assign alternate trunk routing to DISA trunks.

---

### Feature Cross Reference

- Direct Inward System Access (DISA)
- Trunk Group Routing

# Program 25 : VRS/DISA Setup

## 25-13 : System Option for DISA

Level:

**IN**

---

### Description

Use **Program 25-13 : System Option for DISA** to enter the password DISA callers must dial before the system allows them to record, listen to and or erase the VRS messages. This program also is used to define additional DISA call options.

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>VRS Message Access Password</b>	1 ~ 9, 0, *, # (Fixed six digits)	Enter the password DISA callers must dial before the system allows them to record, listen to and/or erase the VRS messages.	No Setting

### Conditions

None

---

### Feature Cross Reference

- Direct Inward System Access (DISA)
- Voice Response System (VRS)

# Program 25 : VRS/DISA Setup

## 25-15 : DISA Transfer Target Setup

Level:

**IN**

---

### Description

Use **Program 25-15 : DISA Transfer Target Setup** to assign a Speed Dial number when a dial tone times-out, or when the wrong number is received and the target extension does not answer or is busy.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default	Related Program
01	<b>DISA Transfer Target Area At Wrong Dial</b>	Speed Dial bin number 0 ~ 999	999	13-04-01 13-04-02 25-03-01
02	<b>DISA Transfer Target Area At No Answer or Busy</b>	Speed Dial bin number 0 ~ 999	999	13-04-01 13-04-02 25-04-01

### Conditions

- Related to Programs 25-03-01 25-04-01.

---

### Feature Cross Reference

- Direct Inward System Access (DISA)
- Voice Response System (VRS)



## Program 25 : VRS/DISA Setup

### 25-16 : DUD/DISA Single Digit Timer

Level:

**IN**

---

### Description

Use Program 25-16 : DUD/DISA Single Digit Timer to define DUD/DISA talkie base setup.

### Input Data

Item No.	Item	Input Data	Default	Related Program
01	DUD/DISA Single Digit Timer	0 ~ 64800	0	
02	Item DTMF(PB) Detect	0 = Off 1 = On	1	25-02-01 25-06-01 15-01-08 15-01-09 40-10-08 40-10-09

### Conditions

None

---

### Feature Cross Reference

- Direct Inward System Access (DISA)
- Voice Response System (VRS)

# Program 26 : ARS Service & Least Cost Routing

## 26-01 : Automatic Route Selection (ARS/F-Route) Service

Level:

**IN**

### Description

Use **Program 26-01 : Automatic Route Selection Service (ARS/F-Route)** to define the system options for Automatic Route Selection (ARS/F-Route).

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>ARS Service</b>	0 = Disabled (ARS service is OFF.) 1 = Enabled (ARS service is ON.)	Enable or disable ARS.	0	26-02 26-03 26-04 26-05
02	<b>Network Outgoing Inter-Digit ARS Time</b>	0 ~ 64800 seconds	With Networking, this time replaces 20-03-04 when determining if all network protocol digits have been received. If ARS is enabled at Site B, this time can be programmed for 5 (500 ms) at Site A. If ARS is disabled and Site B is using F-Route for outbound dialing, this time should be programmed for 30 (three seconds) at Site A.	30	20-03-04
03	<b>ARS Misdialed Number Handling</b>	0 = Route to Trunk Group 1 1 = Play Warning Tone to Dialer	If a user dials a number not programmed in ARS, this option determines if the system should route over Trunk Group 1 or play error tone.	0	21-02 26-02
06	<b>Class of Service Match Access</b>	0 = Disabled (ARS service is OFF.) 1 = Enabled (ARS service is ON.)	This enables/disables the ARS class of service settings.	0	26-02
07	<b>F-Route Access COS Reference</b>	0 = F-Route 1 = ARS		0	26-02 44-05

### Conditions

None

### Feature Cross Reference

- Automatic Route Selection (ARS/F-Route)

# Program 26 : ARS Service & Least Cost Routing

## 26-02 : Dial Analysis Table for ARS/LCR

Level:

**IN**

### Description

Use **Program 26-02 : Dial Analysis Table for ARS/LCR** to set pre-transaction tables for selecting Automatic Route Selection (ARS/F-Route).

- Service Type 1 (Route to Trunk Group Number) - The number routes to a trunk group.
- Service Type 2 (F-Route Selected) - The number is controlled by the F-Route table.

### Input Data

Dial Analysis Table Number	1 ~ 400
----------------------------	---------

Item No.	Item	Input Data	Default	Related Program
01	Dial	Maximum of 16 digits (0 ~ 9, *, #, @)	No Setting	
02	ARS Service Type	0 = No Service (Call Restricted) 1 = Route to Trunk Group 2 = Select F-Route Access	0	
03	Additional Data/Service Number	Service type 1 0 ~ 50 (Trunk Group Number 0 = No Route) 101 ~ 150 (Networking ID) Service type 2 [Not used F-Route Time Schedule] 0 ~ 100 (F-Route Table No.) [Use F-Route Time Schedule] 0 ~ 100 (F-Route Selection No.)	0	44-04 44-05
04	ARS Class of Service	0 ~ 50 0 = No ARS Class (Call Restricted)	0	
05	Dial Treatment for ARS	0 ~ 15	0	
07	Network Specified Parameter Table	0 ~ 16	0	26-12

### Conditions

None

### Feature Cross Reference

- Automatic Route Selection (ARS/F-Route)

# Program 26 : ARS Service & Least Cost Routing

## 26-03 : ARS Dial Treatments

Level:

**IN**

---

### Description

Use **Program 26-03 : ARS Dial Treatments** to assign the 15 Dial Treatments for automatic ARS dialing translation. Assign Dial Treatments to Service Numbers (Trunk Groups) in Program 26-02. The ARS Dial Treatment options are:

- **Dnn** - Outdial the NN number of digits or execute the code that follows. For example, D041234 outdials 1234. Valid entries are 0-9, #, \*, Wnn (wait nn seconds) and P (pause). Each digit code counts as a digit. So, for example, if a "P" was added for a pause, the entry would look like: D05P1234. This Dial Treat can only be added from telephone programming.
- **Wnn** - Wait nn Seconds.
- **P** - Pause in Analogue Trunk.
- **R** - Redial the initially dialed number, including any modifications.
- **X** - When ARS is enabled, X must be entered in the Dial Treatment in order for the system to out-put the extension number of the call's originator to the black box for the E911 feature.
- **An** - Insert a Transit Network ID for alternate access in the SETUP message. 'n' refers to PRG26-11.
- **E** - End of the Dial Treatment. All Dial Treatments must end with the E code.

Applied to US only

- **3** - Delete the NPA if dialed as part of the initial call.
- **2** - Delete the leading if dialed as part of the initial call.
- **1** - Add a leading 1 if not dialed as part of the initial call.
- **Inpa** - Insert the NPA specified by npa.

### Input Data

Dial Treatment Table Number	1 ~ 15
-----------------------------	--------

Item No.	Item	Input Data	Default
01	Treatment Code	Maximum 36 characters	No Setting

### Conditions

None

---

### Feature Cross Reference

- Automatic Route Selection (ARS/F-Route)

# Program 26 : ARS Service & Least Cost Routing

## 26-04 : ARS Class of Service

Level:

**IN**

---

### Description

Use **Program 26-04 : ARS Class of Service** to set the ARS Class of Service for an extension. Automatic Route Selection (ARS/F-Route) uses ARS Class of Service when determining how to route extension calls.

### Input Data

Extension Number	Up to eight digits
------------------	--------------------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default
01	Class	0 ~ 50 0 = No Class	0

### Conditions

None

---

### Feature Cross Reference

- Automatic Route Selection (ARS/F-Route)

# Program 26 : ARS Service & Least Cost Routing

## 26-11 : Transit Network ID Table

Level:

**IN**

---

### Description

Use **Program 26-11 : Transit Network ID Table** to define Transit Network ID for Alternate carrier access, which is referred from Program 26-03.

### Input Data

Transit Network ID Table	1 ~ 4
--------------------------	-------

Item No.	Item	Input Data	Default
01	Transit Network ID (Carrier ID)	0000 ~ 9999 (Fixed four digits or No Setting)	Table No. 1 ~ 4 = No Setting

### Conditions

None

---

### Feature Cross Reference

None

# Program 26 : ARS Service & Least Cost Routing

## 26-12 : Network Specific Parameter Table for ARS

Level:

**IN**

---

### Description

Use Program 26-12 : Network Specific Parameter Table for ARS to define the Network Specific Parameter Table.

### Input Data

Network Specific Parameter Table	1 ~ 16
----------------------------------	--------

Item No.	Item	Input Data	Description	Default
01	<b>Called Party Number - Type of Number Selection</b>	0 = System Default 1 = Unknown 2 = International No. 3 = National No. 4 = Network Specific No. 5 = Subscriber No. 6 = Speed Dial No.	This setting is used by Programs 26-02-07 and 44-05-11 to determine ISDN element.	0
02	<b>Called Party number - Numbering Plan Identification Selection</b>	0 = System Default 1 = Unknown 2 = ISDN Plan 3 = Data Plan 4 = Telex Plan 5 = National Standard Plan 6 = Private Plan	This setting is used by Programs 26-02-07 and 44-05-11 to determine ISDN element.	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 30 : DSS/DLS Console Setup

## 30-01 : DSS Console Operating Mode

Level:

**IN**

---

### Description

Use **Program 30-01 : DSS Console Operating Mode** to set the mode of the system DSS Consoles. The entry for this option applies to all the system DSS Consoles. The available options are:

- Regular (Business) Mode (0)
- Hotel Mode (1)

### Input Data

DSS Console Number	1 ~ 12
--------------------	--------

Item No.	Item	Input Data	Default
01	DSS Operation Mode	0 = Business Mode 1 = Hotel Mode	0

### Conditions

None

---

### Feature Cross Reference

- Direct Station Selection (DSS) Console
- Hotel/Motel



# Program 30 : DSS/DLS Console Setup

## 30-02 : DSS Console Extension Assignment

Level:

**IN**

---

### Description

Use **Program 30-02 : DSS Console Extension Assignment** to identify which extensions have DSS Consoles connected.

- Up to 12 different extensions with DSS Consoles can be set up. A single extension can have up to four 60-button DSS Consoles (12 is the maximum allowed per system).

When programming, each extension/DSS Console(s) combination is called a Console Number. There are 12 Console Numbers (1 ~ 12). Console Numbers can be assigned to extensions. When entering data, the assignment for Console Number 1 is normally made first.

### Input Data

DSS Console Number	1 ~ 12
--------------------	--------

Item No.	Item	Input Data	Description	Default
01	Extension port connected to DSS	Up to 8 digits	The extension number for the multiline terminal connected with the DSS console.	No Setting

### Conditions

None

---

### Feature Cross Reference

- Direct Station Selection (DSS) Console

# Program 30 : DSS/DLS Console Setup

## 30-03 : DSS Console Key Assignment

Level:

**SA**

### Description

Use **Program 30-03 : DSS Console Key Assignment** to customize the key assignments for 60-button DSS Consoles. A DSS Console key can have any function with up to eight digits (e.g., extension number or Service Code).

To prevent lamp problems when reassigning DSS Console keys, clearing an extension programmed key before reassigning it is recommended [Enter key to be cleared + 00 or \*00 (If using WebPro or PC Programming, delete the key assignments and upload the change to the system before proceeding.)] Without clearing an extension key first, the DSS Console may not show the correct lamp display, although the DSS function works correctly.

If you are programming the system from the extension to which the DSS Console is connected, either by phone or using the WebPro or PC Program, you may need to unplug the DSS and plug it back in to reset the console lamping.

### Input Data

DSS Console Number	1 ~ 12
--------------------	--------

Item No.	Key Number	Function Number	Additional Data
01	001 ~ 114	0 ~ 99, #0 ~ #99 (General Functional Level) *00 ~ *99 (Appearance Functional Level)	Refer to <a href="#">Table 2-10 Function Number List</a> .

Item No.	Item	Input Data	Default
01	Function Number	00-99 (Normal Function Code) *00 ~ *99 (Appearance Function Code)	[Function] LK1 01 (DSS/One Touch Key) ~ LK60 01 (DSS/One Touch Key)
	Additional Data	Refer to <a href="#">Table 2-10 Function Number List</a> .	[Additional] LK1 101 ~ LK60 160

**Table 2-10 Function Number List**

[1] General functional level (00 ~ 99, #00 ~ #99)

Function Number	Function	Additional Data	LED Indication	Note
01	DSS/One-Touch	Extension Number or any Numbers (up to 36 digits)	<b>On (Red)</b> : DSS Ext. Busy <b>Off</b> : DSS Ext. Idle, DND External, DND Transfer, CFW Busy, CFW Noans, CFW Busy/Noans, CFW Both, CFW FL ME <b>Fast Blink (Red)</b> : DND Intercom, DND All, CFW Imm	
02	Microphone Key (ON/OFF)		<b>On (Red)</b> : Mic On <b>Off</b> : Mic Off	

Function Number	Function	Additional Data	LED Indication	Note
03	DND Key		<b>On (Red)</b> : DND Setup	
04	BGM (ON/OFF)		<b>On (Red)</b> : Active	
05	Headset		<b>On (Red)</b> : Headset Operation	
06	Transfer Key		None	
07	Conference Key		<b>On (Red)</b> : Conference Operation	
08	Incoming Call ID List		<b>Slow Blink (Red)</b> : Existing New CID <b>On (Red)</b> : Existing Checked CID <b>Off</b> : No CID	
09	Day/Night Mode Switch	Mode Number (1 ~ 8)	<b>On</b> : While each mode	
10	Call Forward - Immediate		<b>On (Red)</b> : Setup	
11	Call Forward - Busy		<b>On (Red)</b> : Setup	
12	Call Forward - No Answer		<b>On (Red)</b> : Setup	
13	Call Forward - Busy/No Answer		<b>On (Red)</b> : Setup	
14	Call Forward - Both Ring		<b>On (Red)</b> : Setup	
15	Follow Me		<b>Fast Blink (Red)</b> : Setup <b>Slow Blink (Red)</b> : To be setup	
18	Text Message Setup	Message Numbers (1 ~ 20)	<b>On (Red)</b> : Setup	
19	External Group Paging	External Paging Number (1 ~ 3)	<b>On (Red)</b> : Active	
20	External All Call Paging		<b>On (Red)</b> : Active	
21	Internal Group Paging	Internal Paging Number (01 ~ 50)	<b>On (Red)</b> : Active	
22	Internal All Call Paging		None	
23	Meet-Me Answer to Internal Paging		None	
24	Call Pickup		None	
25	Call Pickup for Another Group		None	
26	Call Pickup for Specified Group	Call Pickup Group Number (1 ~ 50)	None	
27	Speed Dial - System/Private	None or Speed Dial Number (00 ~ 99 or 000 ~ 999)	None	
28	Speed Dial - Group	None or Speed Dial Number (00 ~ 99 or 000 ~ 999)	None	
29	Repeat Dial		<b>On (Red)</b> : Repeat Dialing	
30	Saved Number Redial		None	
31	Memo Dial		None	
32	Meet-me Conference		None	
33	Override (Off-Hook Signaling)		None	
34	Barge-In		None	
35	Camp On		<b>On (Red)</b> : Active	
36	Department Step Call		None	

Function Number	Function	Additional Data	LED Indication	Note
37	DND/FWD Override Call		None	
38	Message Waiting		None	
39	Room Monitoring		<b>Slow Blink (Red)</b> : Monitoring <b>Fast Blink (Red)</b> : To be monitored	
41	Secretary Buzzer	Extension Number (8 digits)	<b>On (Red)</b> : Calling party <b>Fast Blink</b> : Called party	
42	Boss - Secretary Call Pickup	Extension Number (8 digits)	<b>On (Red)</b> : Active	
43	Series Call		None	
44	Common Hold		None	
45	Exclusive Hold		None	
46	Department Group Log Out		<b>On (Red)</b> : Withdrawing	
49	Call Redirect	Extension Number or Voice Mail Number (8 digits)	None	
50	Account Code		None	
52	Automatic Answer with Delay Message Setup	Incoming Group Number (1 ~ 50)	<b>On (Red)</b> : Setup	
53	Automatic Answer with Delay Message Starting		<b>On (Red)</b> : Delay Message Answering	
54	External Call Forward by Door Box Setup		<b>On (Red)</b> : Setup	
55	Extension Name Edit		None	
56	General Purpose LED Operation	1 ~ 100 : (Red) On ⇄ Off 101 ~ 200 : (Green) On ⇄ Off 201 ~ 300 : (Red) On ⇒ (Green) On ⇒ Off	1 ~ 100 : (Red) On ⇄ Off 101 ~ 200 : (Green) On ⇄ Off 201 ~ 300 : (Red) On ⇒ (Green) On ⇒ Off	
57	General Purpose LED Indication	1 ~ 100 : (Red) On ⇄ Off	1 ~ 100 : (Red) On ⇄ Off	
58	Department Incoming Call - Immediate	Extension Group Number (1 ~ 50)	<b>Slow Blink (Red)</b> : Set <b>Off</b> : Cancel	
59	Department Incoming Call - Delay	Extension Group Number (1 ~ 50)	<b>Slow Blink (Red)</b> : Set <b>Off</b> : Cancel	
60	Department Incoming Call - DND	Extension Group Number (1 ~ 50)	<b>Slow Blink (Red)</b> : Set <b>Off</b> : Cancel	
62	Flash Key		None	
63	Outgoing Call Without Caller ID (ISDN)		<b>On (Red)</b> : Mode enabled	
72	Keypad Facility Key			
73	Keypad Hold Key			
74	Keypad Retrieve Key			
75	Keypad Conference Key			
76	Application Key	Any dial data(8 digit)	None	

Function Number	Function	Additional Data	LED Indication	Note
77	Voice Mail (In-Skin)	Extension Number or Pilot Number (8 digits)	- IntraMail/InMail - <b>Fast Blink (Green)</b> : new message(s) in own mailbox <b>Slow Blink (Red)</b> : new message(s) in other mailbox - APSU/external VM - <b>On (Red)</b> : Access to Voice Mail <b>Fast Blink (Green)</b> : new message(s) in own mailbox <b>Slow Blink (Red)</b> : new message(s) in other mailbox	
78	In-skin Conversation Recording		<b>Fast Blink (Red)</b> : Recording	
79	In-skin Automated Attendant	Extension Number or Pilot Number (8 digits)	<b>Fast Blink</b> : Recording	
80	Tandem Ringing Set Up Key	Extension Number	<b>On (Red)</b> : Master Side <b>Slow Blink (Red)</b> : Slave Side	
81	Automatic Transfer to Transfer Key	Trunk Line No. 1 ~ 128	<b>Off</b> : Cancel <b>Slow Blink (Red)</b> : Set	
83	Conversation Recording Function	0 = Pause 1 = Re-record 2 = Address 3 = Erase 4 = Urgent Page		
84	Line Drop (send long blink)			
86	Private Call Refuse	None	<b>Off</b> : pattern 1, pattern 5 ~ 8 <b>On (Red)</b> : pattern 2 <b>Slow Blink (Red)</b> : pattern 3 <b>Fast Blink (Red)</b> : pattern 4	
87	Caller ID Refuse	None	<b>Off</b> : Cancel <b>Slow Blink (Red)</b> : Set	
88	Dial-In Mode Switching	Program 22-17, Table No. 1 ~ 500	<b>Off</b> : pattern 1, pattern 5 ~ 8 <b>On (Red)</b> : pattern 2 <b>Slow Blink (Red)</b> : pattern 3 <b>Fast Blink (Red)</b> : pattern 4 ( <b>125 msec on/125 msec off/125 msec on/625 msec off</b> ) (Red)	
90	Do-Not-Call Setup			
92	Wake Up Call Indication	None		
93	Room Status Indication	None		
94	Call Attendant		<b>Fast Blink (Red)</b> : Setup - No answer calls ( <b>125 msec : on</b> ⇒ <b>125 msec : off</b> ⇒ <b>125 msec : on</b> ⇒ <b>625 msec : off</b> ) (Red) : Setup - Busy calls <b>On (Red)</b> : Setup - Busy/No answer calls	
95	Page Switching	None	<b>On (Red)</b> : Buttons 1 ~ 60 are displayed. <b>Slow Blink (Red)</b> : Buttons 61 ~ 114 are displayed.	The page Switching Key can be assigned only between the DSS key number 55-60.
97	Door Box Access Key	Doorphone No. (1 ~ 6)	<b>On (Red)</b> : Door Box Busy <b>Off</b> : Door Box Idle <b>Fast Blink (Red)</b> : Door Box Incoming	
98	Message Waiting Indication Key	None		

Function Number	Function	Additional Data	LED Indication	Note
99	Alternate Answer Key	None		

Function Number	Function	Additional Data	LED Indication
#04	Change Restriction Class	None / Password (PRG 21-14)	
#07	Fix Operation Mode	Night Mode Service Group No.(1-4)	
#10	Conference Record	None	On : Recording
#11	Major Alarm		On (Red) : Alarm Off: No Alarm
#12	Minor Alarm		On (Red) : Alarm Off : No Alarm
#13	Calling Party Number Notification	Any number (Max. 36 digits)	On (Red) : Set Off : Cancel

**Table 2-11 Function Number List**

**[2] Appearance Function Level (\* 00 - \* 99) (Service Code 752)**

Function Number	Function	Additional Data	LED Indication
*00	ICM Key		
*01	Trunk Key	Trunk Line Number 1 ~ 128	
*04	Park Key	Park Number (1 ~ 50)	
*06	Trunk access via Networking	Network System Number 1 ~ 4	
*07	Station Park Hold		Slow Blink (Red) : Holding Fast Blink (Red) : Recall

**Default**

- The DSS keys 001 ~ 060 of all DSS consoles = DSS/One-Touch key 101 ~ 160.
- The DSS keys 061 ~ 114 of all DSS consoles = No Setting.

**Conditions**

None

---

**Feature Cross Reference**

- Direct Station Selection (DSS) Console

# Program 30 : DSS/DLS Console Setup

## 30-04 : DSS Console Alternate Answer

Level:

**SA**

---

### Description

Use **Program 30-04 : DSS Console Alternate Answer** to assign the alternate DSS console station in case off-duty mode is set (by pressing the **ALT** key on the DSS console).

### Input Data

DSS Console Number	1 ~ 12
--------------------	--------

Item No.	Item	Input Data	Default
01	<b>DSS Console Alternate Answer</b>	Alternate DSS No. 1 ~ 12 (0 = No Setting)	0 = No Setting

### Conditions

- Related extension is assigned in Program 30-02. Alternate answer key (ALT key) is assigned at Program 30-03.

---

### Feature Cross Reference

None

# Program 30 : DSS/DLS Console Setup

## 30-05 : DSS Console Lamp Table

Level:

**IN**

### Description


Use **Program 30-05 : DSS Console Lamp Table** to define the LED patterns for functions on the DSS consoles.

### Input Data


Item No.	Item	Input Data	Default
02	Busy Extension	0 ~ 7 (Lamp Pattern Data)	7
03	DND Extension	0 ~ 7 (Lamp Pattern Data)	3
04	ACD Agent Busy	0 ~ 7 (Lamp Pattern Data)	7
05	Out of Schedule (ACD DSS)	0 ~ 7 (Lamp Pattern Data)	0
06	ACD Agent log Out (ACD DSS)	0 ~ 7 (Lamp Pattern Data)	5
07	ACD Agent Log In (ACD DSS)	0 ~ 7 (Lamp Pattern Data)	4
08	ACD Agent Emergency (ACD DSS)	0 ~ 7 (Lamp Pattern Data)	6
09	Hotel Status Code 1 (Hotel DSS)	0 ~ 7 (Lamp Pattern Data)	7
10	Hotel Status Code 2 (Hotel DSS)	0 ~ 7 (Lamp Pattern Data)	1
11	Hotel Status Code 3 (Hotel DSS)	0 ~ 7 (Lamp Pattern Data)	2
12	Hotel Status Code 4 (Hotel DSS)	0 ~ 7 (Lamp Pattern Data)	3
13	Hotel Status Code 5 (Hotel DSS)	0 ~ 7 (Lamp Pattern Data)	5
14	Hotel Status Code 6 (Hotel DSS)	0 ~ 7 (Lamp Pattern Data)	3
15	Hotel Status Code 7 (Hotel DSS)	0 ~ 7 (Lamp Pattern Data)	6
16	Hotel Status Code 8 (Hotel DSS)	0 ~ 7 (Lamp Pattern Data)	4
17	Hotel Status Code 9 (Hotel DSS)	0 ~ 7 (Lamp Pattern Data)	3
18	Hotel Status Code 0 (Hotel DSS)	0 ~ 7 (Lamp Pattern Data)	0
19	Hotel Status Code * (Hotel DSS)	0 ~ 7 (Lamp Pattern Data)	4
20	Hotel Status Code # (Hotel DSS)	0 ~ 7 (Lamp Pattern Data)	5
21	Voice Mail Message Indication	0 ~ 7 (Lamp Pattern Data)	3



LED Pattern 0:[OFF]




LED Pattern 1:[FL: On(500ms)/Off(500ms)]




LED Pattern 2:[WK: On(250ms)/Off(250ms)]



LED Pattern 3:[RW: On(125ms)/Off(125ms)]




LED Pattern 4:[IR: On(125ms)/Off(125ms)/ On(125ms)/Off(625ms)]




LED Pattern 5:[IL On(875ms)/Off(125ms)]



LED Pattern 6:[IW On(625ms)/Off(125ms)/On(125ms)/Off(125ms)]



LED Pattern 7:[ON]



LED Patterns for DSS Console

## Conditions

None

---

## Feature Cross Reference

- Direct Station Selection (DSS) Console

## Program 30 : DSS/DLS Console Setup

### 30-10 : DSS Console IP Terminal Setup


Level:

**IN**

---

#### Description

Use **Program 30-10 : Console IP Terminal Setup** to set the MAC address for a particular IP DSS Console. This must be done before the console can be associated to the attendant phone. The system supports up to 12 IP DSS Consoles.

 *The items highlighted in gray are read only and cannot be changed.*

#### Input Data

DSS Console Number	1 ~ 12
--------------------	--------

Item No.	Item	Input Data	Default
01	MAC Address	00-00-00-00-00-00~FF-FF-FF-FF-FF-FF	00-00-00-00-00-00

#### Conditions

None

---

#### Feature Cross Reference

None

# Program 31 : Paging Setup

## 31-01 : System Options for Internal/External Paging

Level:

**IN**

### Description

Use **Program 31-01 : System Options for Internal/External Paging** to define the system options for Internal/External Paging.

The system shows the name you program on the telephone display. Use the following chart when entering and editing text. When using the keypad digits, press the key once for the first character, twice for the second character, etc. For example, to enter C, press 2 three times. Press 2 six times to display the lower case letter.

Key for Entering Names	
When entering names in the procedures below, refer to this chart. Names can have up to 12 digits.	
Use this keypad digit ...	When you want to ...
1	Enter characters : 1 @ [ ¥ ] ^ _ ` {   } → ← Á Â Ã Ä Å Æ Ç È É Ê Ë Ì Ó 0
2	Enter characters : A-C, a-c, 2.
3	Enter characters : D-F, d-f, 3.
4	Enter characters : G-I, g-i, 4.
5	Enter characters : J-L, j-l, 5.
6	Enter characters : M-O, m-o, 6.
7	Enter characters : P-S, p-s, 7.
8	Enter characters : T-V, t-v, 8.
9	Enter characters : W-Z, w-z, 9.
0	Enter characters : 0 ! " # \$ % & ' ( ) ò ó ú â ä æ ö ü α ε θ B
*	Enter characters : * + , - . / : ; < = > ? π Σ σ Ω ∞ φ £
#	# = Accepts an entry (only required if two letters on the same key are needed - ex : TOM). Pressing # again = Space. (In system programming mode, use the right arrow soft key instead to accept and/or add a space.)
Clear/Back or DND (2W Digital/IP Multiline Terminal)	Clear the character entry one character at a time.
Flash	Clear all the entries from the point of the flashing cursor and to the right.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>All Call Paging Zone Name</b>	Up to 12 Characters	Assign a name to each All Call Internal Paging zone. The name shows on the display of the telephone making the announcement.	Group all	11-12-19 31-02-02
02	<b>Page Announcement Duration</b>	0 ~ 64800 seconds	This timer sets the maximum length of Page announcements. (Affects External Paging only)	1200 seconds	

Item No.	Item	Input Data	Description	Default	Related Program
04	Privacy Release Time	0 ~ 64800 seconds	Once the user initiates a Meet-Me Conference or Voice Call Conference, the system waits this time for the Paged party to join the call.	90 seconds	

### Conditions

None

---

### Feature Cross Reference

- Paging, External
- Paging, Internal

# Program 31 : Paging Setup

## 31-02 : Internal Paging Group Assignment

Level:

**IN**

### Description

Use **Program 31-02 : Internal Paging Group Assignment** to assign extensions to Internal Paging Groups (i.e., Page Zones). The setting in this program also determines if the Internal Page Group can receive Internal All Call Paging. The system can have up to 50 paging groups. An extension can be in only one Internal Paging Group.

### Input Data

Extension Number	Maximum eight digits
------------------	----------------------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Internal Paging Group Number</b>	0 ~ 50 (0 = No Setting)	Assign extensions to Internal Paging Groups (i.e., Page Zones). The system allows up to 50 Internal Paging Groups. An extension can be in only one Internal Paging Group.	Port 1 ~ 16 = 1 (Group 1), Port 17 ~ = 0	
02	<b>Internal All Call Paging Receiving</b>	0 = Off 1 = On	Allow or prevent All Call Internal Paging for each extension. If allowed, extension can place and receive All Call Internal Paging announcements. If prevented, extensions can only make (not receive) All Call Internal Paging announcements. If combined, Paging zones should be restricted as well, change the internal page zone group in Program 31-07-01 to 0.	0	31-02-01

### Conditions

None

### Feature Cross Reference

- Paging, Internal

# Program 31 : Paging Setup

## 31-03 : Internal Paging Group Settings

Level:

**IN**

### Description

Use **Program 31-03 : Internal Paging Group Settings** to assign names to Internal Paging Groups (i.e., Page Zones) and to define the splash tone for Internal Paging.

The system shows the names you program on the telephone display. Use the following chart when entering and editing text. When using the keypad digits, press the key once for the first character, twice for the second character, etc. For example, to enter a C, press 2 three times. Press 2 six times to display the lower case letter.

Key for Entering Names	
When entering names in the procedures below, refer to this chart. Names can have up to 12 digits.	
Use this keypad digit ...	When you want to ...
1	Enter characters : 1 @ [ ¥ ] ^ _ ` {   } < - Á À Ã Ä Å Æ Ç È É Ê Ë Ì Ó 0
2	Enter characters : A-C, a-c, 2.
3	Enter characters : D-F, d-f, 3.
4	Enter characters : G-I, g-i, 4.
5	Enter characters : J-L, j-l, 5.
6	Enter characters : M-O, m-o, 6.
7	Enter characters : P-S, p-s, 7.
8	Enter characters : T-V, t-v, 8.
9	Enter characters : W-Z, w-z, 9.
0	Enter characters : 0 ! " # \$ % & ' ( ) ò ó ú â ã ä å æ ö ü α ε θ B
*	Enter characters : * + , - . / : ; < = > ? π Σ σ Ω ∞ φ £
#	# = Accepts an entry (only required if two letters on the same key are needed - ex : TOM). Pressing # again = Space. (In system programming mode, use the right arrow soft key instead to accept and/or add a space.)
Clear/Back or DND (2W Digital/IP Multiline Terminal)	Clear the character entry one character at a time.
Flash	Clear all the entries from the point of the flashing cursor and to the right.

### Input Data

Internal Paging Group Number	1 ~ 50
------------------------------	--------

Item No.	Item	Input Data	Description	Default
01	Internal Paging Group Name	Up to 12 Characters	Assign name to Internal Paging Groups (i.e., Page Zones). The system shows the name you program on the telephone display.	Refer below

**Default**

Item 01 : Internal Paging Group Name

<b>Extension Paging Group</b>	<b>Name</b>
01	Group 1
02	Group 2
:	:
50	Group 50

**Conditions**

None

---

**Feature Cross Reference**

- Paging, Internal

# Program 31 : Paging Setup

## 31-04 : External Paging Zone Group

Level:

**IN**

---

### Description

Use **Program 31-04 : External Paging Zone Group** to assign each External Paging zone to an External Paging group. Users call the External Paging group when broadcasting announcements to the external zone.

To simplify programming and troubleshooting, always make the External Paging Zone Group the same number as the External Paging zone (i.e., 1 = 1, 2 = 2, etc.).

### Input Data

External Speaker Number	1 ~ 3
-------------------------	-------

Item No.	Item	Input Data	Default
01	<b>Paging Group Number</b>	0 ~ 3 (0 = No Setting, 1 ~ 3 = Group number)	Speaker 1 : 1 (Group 1) Speaker 2 : 2 (Group 2) Speaker 3 : 3 (Group 3)

### Conditions

None

---

### Feature Cross Reference

- Paging, External



# Program 31 : Paging Setup

## 31-05 : Universal Night Answer/Ring Over Page

Level:

**IN**

---

### Description

Use **Program 31-05 : Universal Night Answer/Ring Over Page** to assign Universal Night Answer ringing to each External Paging zone. For each trunk port, make a separate entry for each External Paging zone. For UNA ringing, make a separate entry for each Night Service mode.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

External Speaker Number	1 ~ 3
-------------------------	-------

Item No.	Item	Input Data	Default
01	<b>Universal Night Answer/Ring</b>	0 = No Ringing (No) 1 = Ringing (Yes)	0

### Conditions

None

---

### Feature Cross Reference

- Night Service
- Paging, External

# Program 31 : Paging Setup

## 31-06 : External Speaker Control

Level:

**IN**

---

### Description

Use **Program 31-06 : External Speaker Control** to define the settings for the external speaker using an amplifier.

### Input Data

External Speaker Number	1 ~ 3
-------------------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>Broadcast Splash Tone Before Paging (Paging Start Tone)</b>	0 = No Tone (None) 1 = Splash Tone 2 = Chime Tone	Use this option to enable or disable splash tone before Paging over an external zone. If enabled, the system broadcasts a splash tone before the External Paging announcement.	2
02	<b>Broadcast Splash Tone After Paging (Paging End Time)</b>	0 = No Tone (None) 1 = Splash Tone 2 = Chime Tone	Use this option to enable or disable splash tone after Paging over an external zone. If enabled, the system broadcasts a splash tone at the end of an External Paging announcement.	2
04	<b>CODEC Transmit Gain Setup</b>	1 ~ 57 (- 15.5 ~ + 12.5 dB)		32

### Conditions

None

---

### Feature Cross Reference

- Paging, External

# Program 31 : Paging Setup

## 31-07 : Combined Paging Assignments

Level:

**IN**

---

### Description

Use **Program 31-07 : Combined Paging Assignments** to assign an External Paging Group (0 ~ 3) to an Internal Paging Zone (0 ~ 50) for Combined Paging. When an extension user makes a Combined Page, they simultaneously broadcast into both the External and Internal Zone.

Use Program 31-04-01 to assign an External Paging Zone (1 ~ 3) to an External Page Group (0 ~ 3).

### Input Data

External Paging Group Number	0 ~ 3 (0 = All External Paging)
------------------------------	---------------------------------

Item No.	Item	Input Data	Default
01	Internal Paging Group Number	0 ~ 50 (0 = All Internal Paging)	1

### Conditions

None

---

### Feature Cross Reference

- Paging, External
- Paging, Internal

# Program 31 : Paging Setup

## 31-08 : Back Ground Music on External Paging

Level:

**IN**

---

### Description

Use **Program 31-08 : Back Ground Music on External Paging** to set the Background Music option for each External Paging zone. If enabled, the system plays Background Music over the zone when it is idle.

### Input Data

External Speaker Number	1 ~ 3
-------------------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>BGM</b>	0 = BGM Prevented (No) 1 = BGM allowed (Yes)	Use this option to allow or prevent the External Paging zone you select from broadcasting Background Music when it is idle.	0

### Conditions

None

---

### Feature Cross Reference

- Background Music
- Paging, External

# Program 31 : Paging Setup

## 31-10 : External Paging Group Basic Setting

Level:

**IN**

---

### Description

Use **Program 31-10 : External Paging Group Basic Setting** assigns the name of external paging group and defines the splash tone for external paging.

### Input Data

External Speaker Number	1 ~ 3
-------------------------	-------

Item No.	Item	Input Data	Default
01	<b>External Speaker Name</b>	Up to 12 Characters	External Speaker Number 1 = Group 1 External Speaker Number 2 = Group 2 External Speaker Number 3 = Group 3

### Conditions

None

---

### Feature Cross Reference

None

# Program 32 : Door Box and Sensor Setup

## 32-01 : Door Box Timers Setup


Level:

**IN**

---

### Description

Use **Program 32-01 : Door Box Timers Setup** to assign the timers used for the Door Box.

 *The Door Box feature is called Door Phone when programming via WebPro and using a multiline terminal.*

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>Door Box Answer Time</b>	0 ~ 64800 seconds	A user can answer the door box during the time specified in this program.	30 seconds
02	<b>Door Lock Cancel Time</b>	0 ~ 64800 seconds	When a user activates the door lock release relay, this program specifies the amount of time the door strike remains open.	10 seconds
03	<b>Off-Premise Call Forward by Door Box Disconnect Timer</b>	0 ~ 64800 seconds	Define the conversation period for an Off-Premise Call Forward by Door Box call. When this timer expires, the caller hears busy tone for three seconds (fixed time), and the call is then disconnected.	60 seconds

### Conditions

None

---

### Feature Cross Reference

- Door Box

# Program 32 : Door Box and Sensor Setup


## 32-02 : Door Box Ring Assignment

Level:

**SA**

### Description

Use **Program 32-02 : Door Box Ring Assignment** to assign the extension which rings when a caller presses the associated Door Box call button.

 *The Door Box feature is called Door Phone when programming via WebPro and using a multiline terminal.*

### Input Data

Door Box Number	1 ~ 6
Day/Night Mode	1 ~ 8
Door Box Ring Group Number	01 ~ 32

Item No.	Item	Input Data	Default
01	Extension Number	Maximum eight digits	Door Box Ringing Member 1 = 101 Other : No Setting

### Conditions

None

### Feature Cross Reference

- Door Box

# Program 32 : Door Box and Sensor Setup


## 32-03 : Door Box Basic Setup

Level:

**IN**

### Description

Use **Program 32-03 : Door Box Basic Setup** to select the chime pattern and gain level for each Door Box. There are six distinctive chime patterns. The chime tones are defined in [80-01 : Service Tone Setup](#).

 *The Door Box feature is called Door Phone when programming via WebPro and using a multiline terminal.*

### Input Data

Door Box Number	1 ~ 6
-----------------	-------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Chime Pattern</b>	0 = None 1 = Door Box Ring 1 2 = Door Box Ring 2 3 = Door Box Ring 3 4 = Door Box Ring 4 5 = Door Box Ring 5 6 = Door Box Ring 6	Per door box specify the chime pattern for ringing.	Doorphone 1 = Chime Pattern 1 Doorphone 2 = Chime Pattern 2 Doorphone 3 = Chime Pattern 3 Doorphone 4 = Chime Pattern 4 Doorphone 5 = Chime Pattern 5 Doorphone 6 = Chime Pattern 6	80-01
02	<b>CODEC Transmit Gain Setup</b>	1 ~ 57 (- 15.5 ~ + 12.5dB)	This program controls the gain levels from the system to the door box.	32	
03	<b>CODEC Receive Gain Setup</b>	1 ~ 57 (- 15.5 ~ + 12.5dB)	This program controls the gain levels from the door box to the system.	32	

### Conditions

None

### Feature Cross Reference

- Door Box



# Program 32 : Door Box and Sensor Setup


## 32-04 : Door Box Name Setup

Level:

**IN**

### Description

Use **Program 32-04 : Door Box Name Setup** to define the name of each Door Box.

 *The Door Box feature is called Door Phone when programming via WebPro and using a multiline terminal.*

### Input Data

Door Box Number	1 ~ 6
-----------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>Door Box Name</b>	Up to 12 characters	Per door box assign a name up to 12 characters long.	Doorphone 1 = DOOR-1 Doorphone 2 = DOOR-2 Doorphone 3 = DOOR-3 Doorphone 4 = DOOR-4 Doorphone 5 = DOOR-5 Doorphone 6 = DOOR-6

### Conditions

None

### Feature Cross Reference

- Door Box

## Program 34 : Tie Line Setup

### 34-01 : E&M Tie Line Basic Setup

Level:

**IN**

---

### Description

Use **Program 34-01 : E&M Tie Line Basic Setup** to define the basic settings for each E&M Tie line.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>DID/E&amp;M Start Signaling</b>	0 = 2 <sup>nd</sup> Dial Tone 1 = Wink 2 = Immediate 3 = Delay	Set the start signaling mode for DID and Tie trunks. DID and Tie trunks can use either immediate start or wink start signaling.	1	22-02
02	<b>Receive Dial Type for E&amp;M Tie Line</b>	0 = DP 1 = DTMF 2 = MF		1	10-09
03	<b>E&amp;M Dial-In Mode</b>	0 = Specify Extension Number (Intercom) 1 = Use Conversion Table (NTT)	Determine if the incoming Tie Line call should be directed as an intercom call or if it should follow the DID Translation Table in Program 22-11.	0	22-11
04	<b>E&amp;M Line Dial Tone</b>	0 = Disable (No) 1 = Enable (Yes)	Enter 1 if the Tie Line should send dial tone to the calling system after the call is set up. Enter 0 if the Tie Line should not send dial tone.	1	
05	<b>System Toll Restriction</b>	0 = System 1 = Each Extension	Determine if an incoming Tie Line call should be subject to Toll Restriction. If it is set to 0 then it will use the Program 21-05-13, if it is set to 1 then it will use Programs 21-05-01 ~ 21-05-13.	0	21-05

### Conditions

None

---

### Feature Cross Reference

None

# Program 34 : Tie Line Setup

## 34-02 : E&M Tie Line Class of Service

Level:

**IN**

---

### Description

Use **Program 34-02 : E&M Tie Line Class of Service** to assign a Class of Service to a Tie line (there are 15 Tie line Classes of Service). The Class of Service options are defined in Program 20-14. For each Tie line, make a separate entry for each Night Service mode.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default	Related Program
01	Class	1 ~ 15	1	20-14

### Conditions

- Program 20-06 cannot be used to assign Class of Service to Tie lines.

---

### Feature Cross Reference

None

# Program 34 : Tie Line Setup

## 34-03 : Trunk Group Routing for E&M Tie Lines

Level:

**IN**

---

### Description

Use **Program 34-03 : Trunk Group Routing for E&M Tie Lines** to assign the trunk group route 1 ~ 50) chosen when a user seizes a Tie Line and dials 9. (Set Trunk Group Routing in Program 14-07.) If the system has Automatic Route Selection (ARS/F-Route), dialing 9 accesses ARS. Make a separate entry for each Tie Line - for each Night Service Mode.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default
01	Route Table Number	0 ~ 50 (0 = No Setting)	1

### Conditions

None

---

### Feature Cross Reference

None

# Program 34 : Tie Line Setup

## 34-04 : E&M Tie Line Toll Restriction Class

Level:

**IN**

---

### Description

Use **Program 34-04 : E&M Tie Line Toll Restriction Class** to enter a Toll Restriction Class for each Tie Line. There are 15 Toll Restriction Classes which are defined in Programs 21-05 and 21-06. For each Tie Line, you make a separate Toll Restriction Class entry for each Night Service mode.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default	Related Program
01	Toll Restriction Class	1 ~ 15	2	21-05 14-01-08

### Conditions

- Program 20-06 cannot be used to assign Toll Restriction to Tie Lines.

---

### Feature Cross Reference

None

# Program 34 : Tie Line Setup

## 34-05 : Tie Line Outgoing Call Restriction

Level:

**IN**

---

### Description

Use **Program 34-05 : Tie Line Outgoing Call Restriction** to build a restriction matrix for outgoing trunk calls placed from an inbound trunk (e.g., dialed from a Tie Line). For each inbound trunk group, enable or disable access to each CO trunk group.

### Input Data

Incoming Trunk Group Number	1 ~ 50
-----------------------------	--------

Trunk Group Number	1 ~ 50
--------------------	--------

Item No.	Item	Input Data	Default
01	Outgoing Trunk Group Number	0 = Enable (Y-Tandem) 1 = Restricted (N-Tandem)	0

### Conditions

None

---

### Feature Cross Reference

None

## Program 34 : Tie Line Setup

### 34-06 : Add/Delete Digit for E&M Tie Line

**Level:**

**IN**

---

### Description

Use **Program 34-06 : Add/Delete Digit for E&M Tie Line** to set digits that the system should add or delete for Tie Lines.

- **Delete Digit**

Some Tie Line networks pass the location number and extension number to the remote side. This program allows the system to ignore such numbers for a call.

If individual extension users do not want to receive an incoming call, they could delete all digits including the extension number.

- **Add Digit**

If a Tie Line network requires additional digits to reroute the call to a location, the digits for the location can be added to the received digits.

### Input Data

Incoming Trunk Group Number	1 ~ 50
-----------------------------	--------

Item No.	Item	Input Data	Default
01	<b>Delete Digit</b>	0 ~ 255 (255 = delete all digits)	0
02	<b>Additional Dial Digits</b>	Up to four digits (0 ~ 9, *, #)	No Setting

### Conditions

None

---

### Feature Cross Reference

None

## Program 34 : Tie Line Setup

### 34-07 : E&M Tie Line Timer

Level:

**IN**

---

### Description

Use Program 34-07 : E&M Tie Line Timer to define the system service tone timers.

### Input Data

Item No.	Item	Input Data	Default
01	First Digit Pause (E&M Immediate Start)	0 ~ 64800 seconds	3 seconds
02	First Digit Pause (E&M Wink Start)	0 ~ 64800 seconds	0
03	First Digit Pause (LD Trunk)	0 ~ 64800 seconds	3 seconds
04	LD Trunk Guard Time	0 ~ 64800 seconds	0
05	Trunk Answer Detect Timer for E&M	0 ~ 64800 seconds	30 seconds

### Conditions

- If Program 34-07-05 is left at default (30) the transferred call recalls to the station that performed the transfer when not answered.

---

### Feature Cross Reference

None



# Program 34 : Tie Line Setup

## 34-08 : Toll Restriction Data for E&M Tie Lines

Level:

**IN**

---

### Description

Use **Program 34-08 : Toll Restriction Data for E&M Tie Lines** to define the toll restriction data for E&M Tie Lines. This data should be defined if Tie Line Toll Restriction is enabled in Program 21-05-13.

### Input Data

Class of Service	1 ~ 15
------------------	--------

Table No.	1 ~ 20
-----------	--------

Item No.	Item	Input Data	Default	Related Program
01	Dial Data	Up to 10 Digits (0 ~ 9, *, #)	No Setting	21-05-13

### Conditions

None

---

### Feature Cross Reference

None

# Program 34 : Tie Line Setup

## 34-09 : ANI/DNIS Service Options

Level:


**IN**

### Description

Use **Program 34-09 : ANI/DNIS Service Options** to define the ANI/DNIS service option setup for E&M Class of Service.

### Input Data

Class of Service	1 ~ 15
------------------	--------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Receive Format</b>	0 = Address 1 = * ANI* 2 = * DNIS* 3 = * ANI* Address* 4 = * ANI* DNIS* 5 = * DNIS* ANI* (* = Delimiter Code)	Use this option to specify the format of the ANI/DNIS data received from the Telco. Make sure your entry is compatible with the service the Telco provides. The character * indicates a delimiter.   <i>If Program 34-01-02 is selected to 2 (MF), this Program works only as 4 = *ANI*DNIS*.</i>	COS 1 = 0 COS 2 ~ 15 = 0	34-01-02 34-09-02
02	<b>Delimiter Dial Code</b>	1 ~ 9, 0, #, *	This option defines the character Telco uses as a delimiter (see entries 1 ~ 5 in Item 1 above). Valid entries are 0 ~ 9, #, and *.	COS 1 = * COS 2 ~ 15 = *	34-09-01
03	<b>Route Setup of Receive Dial</b>	0 = Fixed Route (Item 08) (No Routing) 1 = Routes on Received DNIS or Address Data 2 = Routes on Received ANI Data	This option specifies the source of the data the system uses to route incoming ANI/DNIS calls. If option 2 is selected, refer to Program 34-09-04.	COS 1 = 0 COS 2 ~ 15 = 0	22-09-01 22-11-01 34-09-04 34-09-08

Item No.	Item	Input Data	Description	Default	Related Program
04	<b>Route Table Setup of Target Dial</b>	0 = ABB Table (Program 13-03) 1 = DDI Table (Program 22-11)	The option sets how the system uses the route data (gathered in Item 3) to route incoming ANI/DNIS calls. If option 2 is selected, and the call is to be routed using the DID table (1), up to eight digits can be matched. The number of expected digits set in Program 22-09-01 must match the ANI digits defined in Program 22-11-01. For example, if an ANI/DNIS number received was *2035551234*3001* and Program 22-09-01 = 4, the entry in 22-11-01 must be 1234 with the defined target extension. If the call is to be routed using the ABB table (0), up to 36 digits can be matched. Define the range of the ABB table to be used in Program 34-09-06. The data is compared to the entries in Program 13-04-01 and then routed according to Program 13-04-03.	COS 1 = 0 COS 2 ~ 15 = 0	13-04 22-11-03 34-09-05
05	<b>ANI/DNIS Display as Target Dial Name</b>	0 = Display Off 1 = Display On	Use this option to set whether or not ANI data should appear on telephone displays as part of Caller ID display.	COS 1 = 1 COS 2 ~ 15 = 0	13-04 20-09-02 22-11-03 23-09-04
06	<b>Routing SPD Table Setup</b>	Start = 0, 100 ~ 900 End = 0, 99 ~ 999	Use this option to define which part of the ABB Table set up in Program 13-04 the system uses for ANI/DNIS Caller ID look-ups and ANI/DNIS routing. This is required if Items 4 and 5 above are 1 (Caller ID on). When you specify a starting and end address, the system uses the part of the table for look-ups. When you specify a starting address and length, the system uses that part of the table for routing. If the incoming ANI/DNIS number data matches the Number entry in the table, the system routes according to the associated Name data. That data can be an extension, Department Group pilot number, the voice mail master number or a trunk ring group.	COS 1 = Start = 900 End = 999 COS 2 ~ 15 = Start = 0 End = 0	13-04
07	<b>Routing on ANI/DNIS Error</b>	0 = Play Busy Tone to Caller 1 = Route Caller to Ring Group Specified in Program 25-03 (Transfer)	This option lets you determine how the system handles an ANI/DNIS call if a data error is detected in the incoming data string.	COS 1 = 1 COS 2 ~ 15 = 0	25-03
08	<b>Routing When Destination Busy or No Answer</b>	0 = Play Busy or Ring-back Tone to Caller (Busy/ NoAns) 1 = Route Caller to Ring Group Specified in Program 25-04 (Transfer)	This option lets you determine how the system handles an ANI/DNIS call if destination is busy or does not answer.	COS 1 = 0 COS 2 ~ 15 = 0	25-04

Item No.	Item	Input Data	Description	Default	Related Program
09	Calling Number Address Length	1 ~ 8	When Item 01 = 0 (ANI/DNIS receive format is the address), use this option to specify the address length. The choices are from 1 ~ 8 digits.	COS 1 = 7 COS 2 ~ 15 = 7	34-09-01

### Conditions

None

---

### Feature Cross Reference

None

## Program 34 : Tie Line Setup

### 34-10 : Digit Delete for T1 ANI

Level:

**IN**

---

### Description

Use **Program 34-10 : Digit Delete for T1 ANI** to delete the Information Digits received from the Network on Feature Group D Trunks.

### Input Data

Incoming Trunk Group Number	1 ~ 50
-----------------------------	--------

Item No.	Item	Input Data	Description	Default
01	Delete digit	0 ~ 9 (0 = No delete)	<b>Example :</b> ANI Information = 111222 Delete = 2 digits After digit been deleted = 1222	2

### Conditions

None

---

### Feature Cross Reference

None

# Program 35 : SMDR Account Code Setup

## 35-01 : SMDR Options

Level:

**IN**

### Description

Use **Program 35-01 : SMDR Options** to set the SMDR (Station Message Detail Recording) options. Refer to the following chart for a description of each option, its range and default setting.

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>Output Port Type</b>	0 = No Setting 3 = LAN (CPU)	This option specifies the type of connection used for SMDR. The baud rate for the COM port should be set in Program 10-21-02 or 15-02-19.	3
03	<b>Header Language</b>	0 = English 1 = German 2 = French 3 = Italian 4 = Spanish	Specify the language in which the SMDR header should be printed.	0
04	<b>Omit Digits</b>	0 ~ 24 (0 = Not applied)	The number of digits entered in this option does not print on the SMDR report. For example, if the entry is 10, the first 10 digits a user dials do not appear on the SMDR report.	0
05	<b>Minimum Digits</b>	0 ~ 24 (0 = Not applied)	Outgoing calls must be at least this number of digits for inclusion in the SMDR report.	0
06	<b>Minimum Call Duration</b>	0 ~ 65535 seconds (0 = All)	The duration of the call must be at least this time to be included on the SMDR report.	0
07	<b>Minimum Ring Time (For Incoming Calls)</b>	0 ~ 65535 seconds (0 = All)	A call must ring for at least this time to be included on the SMDR report.	0
08	<b>Format Selection</b>	0 = Format1 Type (North America) 1 = Format2 Type (Overseas)		0

### Conditions

None

### Feature Cross Reference

- Station Message Detail Recording

# Program 35 : SMDR Account Code Setup

## 35-02 : SMDR Output Options


Level:


**IN**

### Description

Use **Program 35-02 : SMDR Output Options** to set the SMDR (Station Message Detail Recording) output options. Refer to the following chart for a description of each option, its range and default setting.

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>Toll Restricted Call</b>	0 = Not Displayed 1 = Displayed	SMDR can include or exclude calls blocked by Toll Restriction.	1
02	<b>PBX Calls</b>	0 = Not Displayed 1 = Displayed	When the system is behind a PBX, SMDR can include all calls (1) or just calls dialed using the PBX trunk access code (0).	1
03	<b>Trunk Number or Name</b>	0 = Name 1 = Number	Select whether the system should display the trunk name (0) or the number (1) on SMDR reports.   <i>If this option is set to 1, Program 35-02-14 must be set to 0.</i>	1
04	<b>Summary (Daily)</b>	0 = Not Displayed 1 = Displayed	Set this option to (1) to have the SMDR report provides a daily summary (at midnight every night).	1
05	<b>Summary (Weekly)</b>	0 = Not Displayed 1 = Displayed	Set this option to (1) to have the SMDR report provides a weekly summary (every Saturday at midnight).	1
06	<b>Summary (Monthly)</b>	0 = Not Displayed 1 = Displayed	Set this option to (1) to have the SMDR report provides a monthly summary (at midnight on the last day of the month).	1
07	<b>Toll Charge Cost</b>	0 = Not Displayed 1 = Displayed	Set this option to (1) have the SMDR report include toll charges.	1
08	<b>Incoming Call</b>	0 = Not Displayed 1 = Displayed	Enable this option (1) to have the SMDR report include incoming calls. If you disable this option (0), incoming calls do not print.	1
09	<b>Extension Number or Name</b>	0 = Name 1 = Number	Set this option (1) to have the SMDR report include extension numbers. Set this option (0) to have the SMDR report include extension names.	1
10	<b>All Lines Busy (ALB) Output</b>	0 = Not Displayed 1 = Displayed	Determine if the All Lines Busy (ALB) indication should be displayed.	0
11	<b>Walking Toll Restriction Table Number</b>	0 = Not Output 1 = Output		1
12	<b>DID Table Name Output</b>	0 = Not Displayed 1 = Displayed	Determine if the DID table name should be displayed.	0
13	<b>CLI Output When DID to Trunk</b>	0 = Not Displayed 1 = Displayed	Determine if the CLI output should be displayed for DID.	0

Item No.	Item	Input Data	Description	Default
14	Date	0 = Not Displayed 1 = Displayed	Determine whether or not the date should be displayed on SMDR reports.  This option must be set to 0 if the trunk name is set to be displayed in Program 35-02-03.	0
15	CLI/DID Number Switching	0 = CLI (CLIP) 1 = DID Calling Number 2 = Calling Party Name	Determine whether or not the CLI/DID Number Switching should be displayed.	0
16	Trunk Name or Received Dialed Number	0 = Trunk Port Name 1 = Received Dialed Number 2 = Both 3 = Both (8digits)	Determine how the SMDR should print incoming calls on ANI/DNIS or DID trunks. If set to (1), ANI/DNIS trunks can print DNIS digits. If set to (0) trunk names are printed instead.	0
17	Print Account Code or Caller Name of Incoming Call	0 = ACC 1 = CNAME	Determine if SMDR should print Account Code or Caller Name of Incoming Call.	0
18	Print Mode for Caller Name of Incoming Call	0 = Normal 1 = Line Feed	Determine how SMDR should print Caller Name of Incoming Call.	0
21	S-Point Terminal Number	0 = MSN Number 1 = Extension Number		0
22	Security Auto Dialing	0 = No Output 1 = Output	Emergency call from Watch Mode. Define SMDR output on/off. Output is SAD (Security auto dialing).	1
23	Watch Auto Dialing	0 = No Output 1 = Output	Emergency call from Remote Inspection. Define SMDR output on/off. Output is WAD (Watch auto dialing )	1
25	Call Waiting	0 = No Output 1 = Output	Define Call Waiting output on/off	1

**Table 2-12 SMDR FORMAT**

CLSS	TIME	LAIN	DURATION	STATION	DIALLED No./CLI	RD.COST	ACCOUNT
aa bbbb	cc:cc	ddddddddd	ee:ee:ee	fffffff	ggggggggggggggg	\$hh,hhh	iiiiiii
aa bbbb	cc:cc	ddddddddd	ee:ee:ee	fffffff	ggggggggggggggg	\$hh,hhh	iiiiiii
:	:	:	:	:	:	:	:
aa bbbb	cc:cc	ddddddddd	ee:ee:ee	fffffff	ggggggggggggggg	\$hh,hhh	iiiiiii

**Conditions**

None

---

**Feature Cross Reference**

- Station Message Detail Recording



# Program 35 : SMDR Account Code Setup

## 35-05 : Account Code Setup

Level:

**IN**

### Description

Use **Program 35-05 : Account Code Setup** to set various Account Code options for an extension Class of Service. Assign a Class of Service to extensions in Program 20-06.

### Input Data

Class of Service Number	1 ~ 15
-------------------------	--------

Item No.	Item	Input Data	Description	Default
01	<b>Account Code Mode</b>	0 = Account Codes Disabled 1 = Account Codes Optional (This is for the account code entry feature.) 2 = Account Code Required Not Verified (Forced Account Codes enabled, no verification with the system required) 3 = Account Code Required and Verified (Forced Account Codes enabled, verification with PRG 35-06-01 required)	Use this option to select the Account Code Mode (0 ~ 3).	0
02	<b>Forced Account Code Toll Call Setup</b>	0 = Account Codes for ALL calls 1 = Account Codes for TOLL calls	Use this option enable Account Codes for all calls or just toll calls (for mode 2 or 3 in Item 01 above).	0
03	<b>Account Codes for Incoming Calls</b>	0 = Disabled (User cannot enter an account code.) 1 = Enabled (User can enter an account code while on an incoming call.)	Use this option to allow users to enter Account Codes for incoming calls. If disabled, any codes entered dial out on the connected trunk.	0
04	<b>Hiding Account Codes</b>	0 = Account Codes displayed 1 = Account Codes not displayed	Use this option to either hide or show the Account codes on a telephone display.	0

### Conditions

None

---

## Feature Cross Reference

- Account Code Forced/Verified/Unverified

# Program 35 : SMDR Account Code Setup

## 35-06 : Verified Account Code Table

Level:

**IN**

### Description

Use **Program 35-06 : Verified Account Code Table** to enter Account Codes into the Verified Account Code list. You can enter up to 800 codes with 1 ~ 16 digits, using the characters 0 ~ 9 or #. Use the LK1 to enter a wild card. For example, the entry @234 means the user can enter 0234-9234.

### Input Data

Verified Account Code Bin Number	1 ~ 800
----------------------------------	---------

Item No.	Item	Input Data	Description	Default
01	Verified Account Code	1 ~ 9, 0, #, @ (@ = Wild card) (Up to 16 digits)	If PRG 35-05-01 is set to a (3), required and verified, this is where the verified account code list is created in the system. Up to 800 account codes with 1 ~ 16 digits can be entered. Wild cards can be entered by using the @ symbol. For example @234 means the user can enter 0234 ~ 9234 as valid account codes. The digit * cannot be used in the account code because this digit is used to start and end the account code entry.	No Setting

### Conditions

None

### Feature Cross Reference

- Account Codes - Forced/Verified/Unverified

# Program 40 : Voice Recording System

## 40-07 : Voice Prompt Language Assignment for VRS

Level:

**MF**

---

### Description

Use **Program 40-07 : Voice Prompt Language Assignment for VRS** to specify the language to be used for the VRS prompts.

### Input Data

Item No.	Item	Input Data	Default
01	Voice Prompt Language Assignment for VRS	01 = US English 02 = UK English 03 = Australian English 04 = French Canadian 05 = Dutch 06 = Mexican Spanish 07 = Latin America Spanish 08 = Italian 09 = German 10 = Madrid Spanish 11 = Norwegian 12 = Parisian French 13 = Brazilian Portuguese 14 = Japanese 15 = Mandarin Chinese 16 = Korean 17 = Iberian Portuguese 18 = Greek 19 = Danish 20 = Swedish 21 = Thai 22 = Mandarin Chinese (Taiwan) 23 = Flemish 24 = Turkish 25 = Arabic 26 = Russian	1

### Conditions

None

---

### Feature Cross Reference

- Voice Mail Integration (Analog)

# Program 40 : Voice Recording System

## 40-10 : Voice Announcement Service Option

Level:

**IN**

### Description

In **Program 40-10 : Voice Announcement Service Option** define the system options for the Voice Announcement feature.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>VRS Fixed Message</b>	0 = Disable (VRS fixed message will not be played.) 1 = Enable (VRS fixed message will be played.)	Enable (1) or disable (0) the system ability to play the fixed VRS messages (such as You have a message).	0	
02	<b>General Message Number</b>	0 ~ 100 (0 = No General Message Service)	This item assigns the VRS message number to use for the General Message.	0	
03	<b>VRS No Answer Destination</b>	0 ~ 50 (Incoming Ring Group Number)	This item assigns the transferred Ring Group when the VRS is unanswered after Call Forwarding with Personal Greeting Message.	0 (No Setting)	
04	<b>VRS No Answer Time</b>	0 ~ 64800 seconds	If an extension has Personal Greeting enabled and all VRS ports are busy, a DIL or DISA call to the extension waits this time for a VRS port to become free.	0	
05	<b>Park and Page Repeat Timer (VRS Msg Resend)</b>	0 ~ 64800 seconds	If a Park and Page is not picked up during this time, the Paging announcement repeats.	0	
06	<b>Set VRS Message for Private Call Refuse (VRS Msg Private Call)</b>	0 = No Message Played 1 ~ 100 = VRS Message 1 ~ 100 101 = VRS Fixed message (Message will only play if PRG 40-10-01 is enabled.)	This item assigns the VRS Message number to be used as Private Call Refuse. When Fixed message is set, VRS message guidance is: "Your call cannot go through."	0	14-01-27
07	<b>Set VRS Message for Caller ID Refuse (VRS Msg CID)</b>	0 = No Message Played 1 ~ 100 = VRS Message 1 ~ 100 101 = VRS Fixed message (Message will only play if PRG 40-10-01 is enabled.)	This item assigns the VRS Message number to be used as Caller ID Refuse. When Fixed Message is set, VRS message guidance is: "Your call cannot go through."	0	14-01-27
08	<b>Call Attendant Busy Message</b>	0 ~ 100 (0 = No message)		0	15-01-08

Item No.	Item	Input Data	Description	Default	Related Program
09	<b>Call Attendant No Answer Message</b>	0 ~ 100 (0 = No message)		0	15-01-09
10	<b>Call Forward Remainder Announcement</b>	0 = Do not play 1 = Play	Flag that control the playback of the VRS announcements for 'on the forwarded phone'.	1	40-10-01
11	<b>Call Forward Notification Announcement</b>	0 = Do not play 1 = Play	Flag that control the playback of the VRS announcements for 'towards the incoming call'.	1	40-10-01

## Conditions

None

---

## Feature Cross Reference

- Voice Response System (VRS)

# Program 40 : Voice Recording System

## 40-11 : Preamble Message Assignment

Level:

**IN**

---

### Description

In **Program 40-11 : Preamble Message Assignment** to assign the VRS message number to be used as the Preamble Message for each trunk. When the extension user answers the incoming call, the assigned VRS message is sent to the outside caller.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Day/Night Mode	1 ~ 8
----------------	-------

Item No.	Item	Input Data	Default
01	VRS Message Number	0 ~ 100 (0 = No Service)	0

### Conditions

None

---

### Feature Cross Reference

- Voice Response System (VRS)

# Program 41 : ACD Setup

## 41-01 : System Options for ACD

Level:

**IN**

---

### Description

In **Program 41-01 : System Options for ACD** define the system options for the ACD feature.

### Input Data

Item No.	Item	Input Data	Default
01	System Supervisory Extension	Dial (Up to 8 digits)	No Setting
02	Login ID Code Digit	Dial 0 ~ 20 (0 = No ID)	0
03	ACD MIS Connection Ports	0 = No set 1 = -- Reserve -- 2 = -- Reserve -- 3 = LAN (CPU)	0
04	ACD MIS Notification when ACD Call receives Busy	0 = Enabled 1 = Disabled	0
05	ACD MIS Output Format	0 = Classic 1 = 8-digit DDI Field 2 = Extra DDI event 3 = XML Format	0

### Conditions

None

---

### Feature Cross Reference

- Automatic Call Distribution (ACD)



# Program 41 : ACD Setup

## 41-02 : ACD Group and Agent Assignments

**Level:**

**SA**

---

### Description

In **Program 41-02 : ACD Group and Agent Assignments**, to set the name of Speed Dial Group Name. for each ACD extension number, assign an ACD Group (1 ~ 8). An ACD Group number is assigned to each Work Period number (1 ~ 8).

The assigned extension works as an ACD agent extension in the following cases:

- The trunk belonging to an ACD group receives an incoming call while an ACD agent is logged in.
- An extension transfers a call to an ACD group using the ACD group pilot number.
- An incoming call is received with a DUD/DID/DISA number which is assigned as an ACD pilot number.

### Input Data

Extension Number	Up to eight digits
------------------	--------------------

ACD Work Period Mode Number	1 ~ 8
-----------------------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>ACD Group No.</b>	0 ~ 8 0 = No Setting	Designate for each incoming trunk, whether or not Night Announcement Service is assigned.	0

### Conditions

None

---

### Feature Cross Reference

- Automatic Call Distribution (ACD)

## Program 41 : ACD Setup

### 41-03 : Incoming Ring Group Assignment for ACD Group

Level:

**SA**

#### Description

In **Program 41-03 : Incoming Ring Group Assignment for ACD Group** for each incoming trunk group set up in Program 22-05, designate which ACD Group (1 ~ 8) the trunks should ring for each of the eight Work Periods. Also use this program to assign an Incoming Trunk Ring Group as priority or normal. Use Program 41-06 to set up the Work Schedules and Work Periods for trunks. Use Program 41-07 to assign the Work Schedules to the days of the week.

#### Input Data

Incoming Ring Group Number	1 ~ 50
----------------------------	--------

ACD Work Period Mode Number	1 ~ 8
-----------------------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>ACD Group Number</b>	0 ~ 8 0 = No Setting	For each incoming trunk group set up in Program 22-05, designate which ACD Group (1 ~ 8) the trunks should ring for each of the eight Work Periods.	0
02	<b>Night Announcement Service</b>	0 = No 1 = Yes	Designate for each incoming trunk, whether or not Night Announcement Service is assigned.	0
03	<b>Priority Data</b>	0 = No priority 1 = Highest priority : 4 = Low priority	Determine whether or not an incoming call to a trunk ring group should follow a priority assignment.	0

#### Conditions

None

#### Feature Cross Reference

- Automatic Call Distribution (ACD)
- Ring Groups

# Program 41 : ACD Setup

## 41-04 : Group Supervisory Station Setup

*Level:*

**SA**

---

### Description

This program assigns a group supervisory extension and operation type for each ACD group.

### Input Data

ACD Group No.	1 ~ 8
---------------	-------

Item No.	Item	Input Data	Default
01	<b>Group Supervisory Extension</b>	Up to 8 digits	No Setting
02	<b>Operation Type</b>	0 = Supervisor's extension does not receive ACD Group calls. 1 = Supervisor's extension receives ACD Group overflow calls only. 2 = Supervisor's extension receives ACD Group calls just like all other agents.	0

### Conditions

None

---

### Feature Cross Reference

- Automatic Call Distribution (ACD)

# Program 41 : ACD Setup

## 41-05 : ACD Agent Work Schedules

Level:

**SA**

---

### Description

Use **Program 41-05 : ACD Agent Work Schedules** to set up the Work Schedules for ACD Agents and Groups. For each ACD Work Schedule (1~4), designate the start and stop times for each of the eight Work Periods. After you set up the schedules in this program, assign them to days of the week in Program 41-07. (This is the same program used by the Trunk Work Schedules.)

ACD extensions can log in only during their work period. ACD extensions receive the following calls when they are logged in.

- ACD Call on a Trunk  
When the incoming ring group is assigned in the operating time (Programs 41-03 and 41-06).
- ACD Pilot Number Call  
Any time - if ACD extensions are available.

### Input Data

ACD Work Schedule Time Pattern	1 ~ 4
--------------------------------	-------

ACD Operation Mode Number	1 ~ 8
---------------------------	-------

Item No.	Item	Input Data	Default
01	Start Time	0000 ~ 2359	(Start) 0000 (End) 0000
	End Time	0000 ~ 2359	

### Conditions

None

---

### Feature Cross Reference

- Automatic Call Distribution (ACD)

# Program 41 : ACD Setup

## 41-06 : Trunk Work Schedules

Level:

**SA**

---

### Description

Use **Program 41-06 : Trunk Work Schedules** to set up the Work Schedules for trunks. For each Work Schedule (1 ~ 4), designate the start and stop times for each of the eight Work Periods. After you set up the schedules, assign them to days of the week in Program 41-07. (This is the same program used by the ACD Agent Work Schedules.)

### Input Data

ACD Work Schedule Time Pattern Number	1 ~ 4
---------------------------------------	-------

ACD Operation Mode Number	1 ~ 8
---------------------------	-------

Item No.	Item	Input Data	Default
01	Start Time	0000 ~ 2359	(Start) 0000 (End) 0000
	End Time	0000 ~ 2359	

### Conditions

None

---

### Feature Cross Reference

- Automatic Call Distribution (ACD)

# Program 41 : ACD Setup

## 41-07 : ACD Weekly Schedule Setup

Level:

**SA**

---

### Description

Use **Program 41-07 : ACD Weekly Schedule Setup** to assign the four Work Schedules (1 ~ 4) to days of the week. The assignments you make in this program apply to both the ACD Agent Work Schedules (Program 41-05) and the Trunk Work Schedules (Program 41-06).

### Input Data

Item No.	Item	Input Data	Default
01	Day Number	1 = Sunday 2 = Monday 3 = Tuesday 4 = Wednesday 5 = Thursday 6 = Friday 7 = Saturday	0
	Time Pattern	0 ~ 4 0 = No ACD	

### Conditions

None

---

### Feature Cross Reference

- Automatic Call Distribution (ACD)

# Program 41 : ACD Setup

## 41-08 : ACD Overflow Options

Level:  
**SA**

### Description

For each ACD Group (1 ~ 8), use **Program 41-08 : ACD Overflow Options** to assign the overflow mode (0 ~ 9), destination and announcement message types. Delay Announcement functions are not available for ACD pilot number calls. Each ACD Group can have unique overflow options. The table below outlines the entry options.

### Input Data

ACD Group No.		1 ~ 8		
Item No.	Item	Input Data	Description	Default
01	<b>Overflow Operation Mode</b>	0 = No Overflow (None) 1 = Overflow with No Announcement 2 = No Overflow with First Announcement Only 3 = No Overflow with First & Second Announcements 4 = Overflow with First Announcement Only 5 = Overflow with First & Second Announcement 6 = Not Used 7 = Not Used 8 = No Overflow with Second Announcement Only 9 = Overflow with Second Announcement Only	Assign the overflow mode (0 ~ 9), destination and announcement message types. Delay Announcement functions are not available for ACD pilot number calls. Each ACD Group can have unique overflow options.	0
02	<b>Transferred Destination when overflow</b>	0 ~ 8 (0: No Setting) 9 = Extended Table(PRG 41-09) 10 = Voice Mail Integration (In-skin VM) 11 = Speed Dial areas (PRG 41-08-05) 12 = Incoming Ring Group(PRG 41-08-06)	Assign the overflow mode (0 ~ 9), destination and announcement message types. Delay Announcement functions are not available for ACD pilot number calls. Each ACD Group can have unique overflow options.	0
03	<b>Delay Announcement Source Type</b>	1 = VRS 2 = InMail	Assign the overflow mode (0 ~ 9), destination and announcement message types. Delay Announcement functions are not available for ACD pilot number calls. Each ACD Group can have unique overflow options.	1
04	<b>ACD Overflow Transfer Time</b>	0 ~ 64800 (seconds) 0 = Don't transfer	Define the time before ACD overflow occurs. Each ACD Group can have unique overflow options.	30

Item No.	Item	Input Data	Description	Default
05	<b>Speed Dial Area Overflow Destination</b>	0 ~ 999 (Used when 41-08-02 is set to 11)	Assign the speed dial bin to be used as the ACD overflow destination. Using a speed dial bin for ACD Overflow is supported only for off premise calls.	999
06	<b>Incoming Ring Group when Overflow</b>	1 ~ 50 (Used when 41-08-02 is set to 12)	Assign the Ring Group for ACD overflow calls to go to.	1

## Conditions

None

---

## Feature Cross Reference

- Automatic Call Distribution (ACD)



# Program 41 : ACD Setup

## 41-09 : ACD Overflow Table Setting

Level:

**SA**

---

### Description

Use **Program 41-09 : ACD Overflow Table Setting** to define the ACD group to which a call is transferred when overflow occurs.

### Input Data

ACD Group No.	1 ~ 8
---------------	-------

Priority Order No.	1 ~ 4
--------------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>Destination ACD Group</b>	0 ~ 9 0 = No Setting 9 = InMail	Define the ACD group to which a call is transferred when overflow occurs.	0

### Conditions

None

---

### Feature Cross Reference

- Automatic Call Distribution (ACD)

# Program 41 : ACD Setup

## 41-11 : VRS Delay Announcement

Level:

**SA**

### Description

Use **Program 41-11 : VRS Delay Announcement** to assign the VRS message number to use as the message source for the 1st and 2nd Delay Announcement Messages. Refer to Program 41-08 for more on setting up the ACD overflow options.

This program is activated when the delay announcement source and options are assigned as VRS in Program 41-08-03.

### Input Data

ACD Group No.	1 ~ 8
---------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>Delay Message Start Timer</b>	0 ~ 64800 (seconds)	Input the time before the 1st Delay Message Starts.	0
02	<b>1st Delay Message Number</b>	0 ~ 101 0 = No Message 101 = Fixed Message	Input the VRS Message to be played as the 1st Delay Message.	0
03	<b>1st Delay Message Sending Count</b>	0 ~ 255	Input the number of times the 1st Delay Message is sent. If set to 0, the message is not played.	0
04	<b>2nd Delay Message Number</b>	0 ~ 101 0 = No Message 101 = Fixed Message	Input the VRS Message to be played as the 2nd Delay Message.	0
05	<b>2nd Waiting Message Sending Count</b>	0 ~ 255	Input the number of times the 2nd Delay Message is sent. If set to 0, the message is not played.	0
06	<b>Tone Kind at Message Interval</b>	0 = Ring Back Tone 1 = MOH Tone 2 = BGM Source	Input what is heard between the Delay messages.	0
07	<b>ACD Forced Disconnect Time after the 2nd DelayMessage</b>	0 ~ 64800 (seconds) (0 = No Disconnect)	Set the time, after the last 2nd Delay Message is played, before the call is disconnected.	60
08	<b>Queue Depth Announcement</b>	0 = Disable 1 = After 1st (1st) 2 = After 2nd (2nd) 3 = After 1st and 2nd (1st and 2nd)	Input when the Queue Depth Announcement is played.	0

### Conditions

None

---

## Feature Cross Reference

- Automatic Call Distribution (ACD)

# Program 41 : ACD Setup

## 41-12 : Night Announcement Setup

Level:

**SA**

---

### Description

Use **Program 41-12 : Night Announcement Setup** to set Night Announce time for each ACD group. Night announcement availability depends on the setting in Program 41-03-02. The night announcement function is not available for ACD pilot number calls.

### Input Data

ACD Group Number	1 ~ 8
------------------	-------

Item No.	Item	Input Data	Description	Default
03	<b>ACD Night Announce Sending Time</b>	0 ~ 64800 (seconds)	Define the time the ACD night Announcement plays. Night announcement availability depends on the setting in Program 41-03-02.	30

### Conditions

- The Night Announcement function is not available for ACD pilot number call.

---

### Feature Cross Reference

- Automatic Call Distribution (ACD)

## Program 41 : ACD Setup

### 41-13 : VRS Message Number for Night Announcement

Level:

**SA**

---

### Description

Use **Program 41-13 : VRS Message Number for Night Announcement** to define the VRS message number to use as the night announcement. This program is activated when the night announcement source is assigned as VRS in Program 41-12-01.

### Input Data

ACD Group No.	1 ~ 8
---------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>VRS Message Number</b>	0 ~ 100 0 = No Message	Input the VRS message number to be used as the night announcement.	0
02	<b>Tone Kind at Message Interval</b>	0 = Ring Back Tone 1 = MOH Tone 2 = BGM Source	Input what is heard between the Night Announcements.	0

### Conditions

None

---

### Feature Cross Reference

- Automatic Call Distribution (ACD)

# Program 41 : ACD Setup

## 41-14 : ACD Options Setup

Level:

**SA**

### Description

Use **Program 41-14 : ACD Options Setup** to set various options for ACD Groups. When you set an option for an ACD Group, the setting is in force (if applicable) for all agents in the group. The chart below shows each of the ACD options, the entries available, and the default entry.

### Input Data

ACD Group No	1 ~ 8
--------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>EMG call operation mode</b>	0 = Call to system supervisory extension when group supervisory extension is busy. 1 = Not call to system supervisory extension when group supervisory extension is busy.		0
02	<b>Automatic Wrap Up Mode</b>	0 = After wrap up the mode key is pressed. (Manual) 1 = After call is finished automatically. (Auto)	Enable/Disable Automatic Wrap Up mode.	0
03	<b>ACD Priority for Overflow Calls</b>	0 = Own group priority 1 = Priority order by Program 41-03-03	Determines whether the ACD group should use its own priority assignment or if it should follow the priority assigned in Program 41-03-03.	0
04	<b>Automatic Answer at Headset</b>	0 = Off 1 = On	Enable (1)/Disable (0) Automatic Answer for agents using headsets.	0
06	<b>Call Queuing after 2nd Announcement</b>	0 = Enable (Yes) 1 = Disable (No)	Determine whether the caller should hear the 2nd Delay Announcement and then be taken out of queue (1), or be placed back into queue (0).	0
07	<b>Automatic Off Duty for SLT</b>	0 = No change to Off Duty mode 1 = Change to Off Duty mode automatically (Skip)	Enable (1)/Disable (0) Automatic Off Duty (rest) mode for agents with single line telephones.	0
08	<b>ACD Off Duty Mode</b>	0 = Cannot receive internal call 1 = Can receive internal call	Enable (1)/Disable (0) the agent's ability to receive internal calls in ACD Off Duty Mode.	0
09	<b>Automatic Wrap Up End Time</b>	0 ~ 64800 (seconds)	Input the time the agent is in Automatic Wrap Up End Time when Wrap key is pressed, or automatically put into Wrap mode.	0

Item No.	Item	Input Data	Description	Default
10	<b>ACD No Answer Skip Time</b>	0 ~ 64800 (seconds)	Set the time a call to the ACD Group rings an idle extension before routing to the next agent.	10
12	<b>Start Headset Ear Piece Ringing (for SLT)</b>	0 ~ 64800 (seconds)	Set the ringing start time for the headset ear piece on a single line telephone.	0
17	<b>CTI : Operation mode when transfer no login ACD groups</b>	0 = Transfer to ACD group 1 = Error notice	This program allows CTI Server transfers a trunk call to ACD Pilot number which group has no login agent in 3rd Party CTI.	0

## Conditions

None

---

## Feature Cross Reference

- Automatic Call Distribution (ACD)

# Program 41 : ACD Setup

## 41-16 : ACD Threshold Overflow

Level:

**SA**

---

### Description

Use **Program 41-16 : ACD Threshold Overflow** to define the value of the ACD threshold call overflow and the mode for each ACD group.

### Input Data

ACD Group No.	1 ~ 8
---------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>Number of Calls in Queue</b>	0 ~ 128 0 = No Limitation	Define the maximum number of calls allowed in the ACD queue before overflow occurs.	0
02	<b>Operation Mode for ACD Queue</b>	0 = The last waiting call is transferred 1 = The longest waiting call is transferred 2 = Send Busy Tone	Define how the system should handle calls when the number of calls in queue exceeds the threshold.	0

### Conditions

None

---

### Feature Cross Reference

- Automatic Call Distribution (ACD)



# Program 41 : ACD Setup

## 41-17 : ACD Login Mode Setup

Level:

**SA**

---

### Description

Use **Program 41-17 : ACD Login Mode Setup** to define the ACD login mode for each extension. If the AIC Login Mode is enabled, set the AIC Login and AIC Logout service codes for the AIC members in Program 11-13-08 and 11-13-09.

### Input Data

Extension Number	Up to eight digits
------------------	--------------------

Item No.	Item	Input Data	Default	Related Program
01	<b>Login Mode</b>	0 = Normal Login Mode 1 = AIC Login Mode	0	41-18-01

### Conditions

- If set to **1**, note that a supervisor can not log in/out an AIC member as they are not normal ACD agents.

---

### Feature Cross Reference

- ACD (Automatic Call Distribution)

# Program 41 : ACD Setup

## 41-18 : ACD Agent Identity Code Setup

Level:

**SA**

---

### Description

Use **Program 41-18 : ACD Agent Identity Code Setup** to define the ACD Agent Identity Code Table.

### Input Data

AIC Table No.	1 ~ 128
---------------	---------

Item No.	Item	Input Data	Default	Related Program
01	<b>ACD Agent Identity Code</b>	Up to four digits	No Setting	41-17
02	<b>Default ACD Group Number</b>	0 ~ 8 0 = No Setting	0	
03	<b>ACD Group Number in Mode 1</b>	0 ~ 8 0 = No Setting	0	
04	<b>ACD Group Number in Mode 2</b>	0 ~ 8 0 = No Setting	0	
05	<b>ACD Group Number in Mode 3</b>	0 ~ 8 0 = No Setting	0	
06	<b>ACD Group Number in Mode 4</b>	0 ~ 8 0 = No Setting	0	
07	<b>ACD Group Number in Mode 5</b>	0 ~ 8 0 = No Setting	0	
08	<b>ACD Group Number in Mode 6</b>	0 ~ 8 0 = No Setting	0	
09	<b>ACD Group Number in Mode 7</b>	0 ~ 8 0 = No Setting	0	
10	<b>ACD Group Number in Mode 8</b>	0 ~ 8 0 = No Setting	0	

### Conditions

None

---

### Feature Cross Reference

None

# Program 41 : ACD Setup

## 41-19 : ACD Voice Mail Delay Announcement

Level:

**SA**

### Description

Use **Program 41-19 : ACD Voice Mail Delay Announcement** to assign InMail Master Mailboxes (Program 47-03) as ACD Delay Announcement Mailboxes.

### Input Data

ACD Group Number	1 ~ 8
------------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>Delay Message Start Timer</b>	0 ~ 64800 (seconds)	Determine the time the system waits before playing the Delay Message.	0
02	<b>Mailbox Number for 1st Announcement Message</b>	Dial (up to eight digits)	Assign the Voice Mail ACD Announcement Mailbox as the message source for the 1st Announcement Message.	No Setting
03	<b>1st Delay Message Sending Count</b>	0 ~ 255 0 = No message is played.	Determine the 1st Delay Message Sending Count. This entry must be set to 1 or higher for the message to play.	0
04	<b>Mailbox Number for 2nd Announcement Message</b>	Dial (up to eight digits)	Assign the Voice Mail ACD Announcement Mailboxes as the message source for the 2nd Announcement Message.	No Setting
05	<b>2nd Delay Message Sending Count</b>	0 ~ 255 0 = No message is played.	Determine the 2nd Delay Message Sending Count. This entry must be set to 1 or higher for the message to play.	0
06	<b>Wait Tone Type at Message Interval</b>	0 = Ring Back Tone 1 = Music On Hold Tone 2 = Background Music Source	Determine what the caller hears between the messages.	0
07	<b>ACD Forced Disconnect Time after 2nd Announcement</b>	0 ~ 64800 (seconds)	Assign the time the system should wait after the end of the ACD Delay Message before disconnecting.	0
08	<b>Delay Message Interval Time</b>	0 ~ 64800 (seconds)	Set the time for the interval between the Delay Messages.	20

### Conditions

None

### Feature Cross Reference

None

# Program 41 : ACD Setup

## 41-20 : ACD Queue Display Settings

**Level:**

**SA**

---

### Description

Use **Program 41-20 : ACD Queue Display Settings** to assign the options for the ACD Queue Status Display feature. This program allows the Queue Status Display, and causes an alarm to sound, when the parameters in this program are met.

### Input Data

ACD Group No.	1 ~ 8
---------------	-------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Number of Calls in Queue</b>	0 ~ 128 0 = No Display	Set the number of calls that can accumulate in the ACD queue before the Queue Status Display (and optional queue alarm) occurs.	0	
02	<b>Queue Status Display Time</b>	0 ~ 64800 (seconds)	Set the time the Queue Status display remains on the telephone display.	5 (seconds)	
03	<b>Queue Status Display Interval</b>	0 ~ 64800 (seconds)	Determine whether or not an incoming call to a trunk ring group should follow a priority assignment. Set the time that refreshes the Queue Status Alarm time in queue display and causes the optional queue alarm to occur on phones active on a call, logged out, or in wrap-up.	60 (seconds)	
04	<b>ACD Call Waiting Alarm</b>	0 = Disable (Off) 1 = Enable (On)	Enable/Disable the queue alarm.	0	
05	<b>ACD Call Waiting Alarm Hold Time</b>	0 ~ 64800 (seconds)	Set the time the Call Waiting Alarm should sound.	0	
06	<b>Number of calls to switch the state of ACD Queue Alarm Display Key</b>	0 ~ 128 0 = Not switch		0	41-20-01

### Conditions

None

---

### Feature Cross Reference

- Automatic Call Distribution (ACD)

## Program 42 : Hotel Setup

### 42-01 : System Options for Hotel/Motel

Level:

**IN**

#### Description

Use **Program 42-01 : System Options for Hotel/Motel** to assign the system options for Hotel/Motel Service.

#### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>Answering Message Mode for Wake Up Call (Hotel Mode)</b>	0 = MOH (Hold Time) 1 = VAU Message 2 = VAU Message + Time		0
02	<b>Wake Up Call Message Assignment</b>	0 ~ 100 (0 = No Setting)	VAU Message for Wake Up Calls. You must make an entry for this program if you have selected 1 or 2 in Item 01 above.	0
03	<b>Wake Up Call No Answer</b>	0 = No Transfer 1 = Transfer to the Operator		0
04	<b>Setup Message Mode for Wake Up Call (Hotel Mode)</b>	0 = Confirmation Tone 1 = VAU Message 2 = Time Stamp + VAU Message 3 = Play Fixed VRS Message + Time	It sets mode for confirming set up when a user setting the wakeup call. When a user selects 0 (Fixed Message) they should hear "was setting". When a user selects "Play Fixed VRS Message + Time" they should hear the following: "A wakeup call has been set for [the wakeup call time in 12 hour format] " An example of this is: "A wakeup call has been set for 8:30 AM"	0
05	<b>Wake Up Call Message Assignment</b>	0 ~ 100 (0 = No Setting)		0
06	<b>Flexible Room Status</b>	0 = Off 1 = On	When PRG42-01-06 is set to on, any room status change from any status can be made. Ex) Hotel Status Code 4 -> 3 Hotel Status Code 4 -> 4	0
07	<b>Snooze Callback Timer</b>	0 ~ 30 (minute) (0 = Not activated)	After answering to a Wakeup Call, to set the time that Snooze Callback is activated. * If set to 0, Snooze Callback does not activated.	10
08	<b>Snooze Callback Setting Dial</b>	0 ~ 9, *, # Up to 1 digits	After answering to a Wakeup Call, to set the dial of Snooze Callback setup.	1

#### Conditions

None

---

## Feature Cross Reference

- Hotel/Motel

# Program 42 : Hotel Setup

## 42-02 : Hotel/Motel Telephone Setup

Level:

**IN**

### Description

Use **Program 42-02 : Hotel/Motel Telephone Setup** to define the basic operation of the Hotel/Motel extensions.

### Input Data

Extension Number	Up to eight digits
------------------	--------------------

Item No.	Item	Input Data	Description	Default
01	<b>Hotel Mode</b>	0 = Normal 1 = Hotel	If you want an extension to operate in the Hotel/Motel mode, enter 1. If you want the telephone to operate in the business mode, enter 0.	0
02	<b>Toll Restriction Class When Check In</b>	1 ~ 15	Assign an extension Toll Restriction Class when it is checked in. The system has 15 Toll Restriction Classes (1 ~ 15). The entry you make in this option affects the telephone in all Night Service modes. (Refer to Programs 21-05 and 21-06 to set up the Toll Restriction dialing options.) When the extension is checked out, it uses the Toll Restriction Class set in Program 21-04.	1
03	<b>Room Status (Reference Only)</b>	1 = Room Clean (Occupied) 2 = Maid Required 3 = Maid in Room 4 = Inspection Required 5 = Maintenance Request 6 = Out of Order 7 = Reserve 1 8 = Reserve 2 9 = Reserve 3 0 = Room Clean (Vacant) * = Reserve 5 # = Reserve 6	This Program shows the hotel room status of each Hotel extension.	-

### Conditions

None

### Feature Cross Reference

- Hotel/Motel

# Program 42 : Hotel Setup

## 42-03 : Class of Service Options (Hotel/Motel)

Level:

**IN**

### Description

Use **Program 42-03 : Class of Service Options (Hotel/Motel)** to set the Hotel/Motel Class of Service (COS) options. Assign Class of Service to extensions in Program 42-02 : Hotel/Motel Telephone Setup. There are 15 Classes of Service. Refer to the following chart for a description of each COS option, its range and default setting. For additional Class of Service options, refer to Programs 20-06.

### Input Data

Class of Service Number	1 ~ 15
-------------------------	--------

Item No.	Item	Input Data	Description	Default
01	Check-In Operation	0 = Off 1 = On		Class 1 ~ 15 = 1
02	Check-Out Operation	0 = Off 1 = On		Class 1 ~ 15 = 1
03	Room Status Output	0 = Off 1 = On		Class 1 ~ 15 = 1
04	DND Setting for Other Extension	0 = Off 1 = On		Class 1 ~ 15 = 1
05	Wake up Call Setting for Other Extension	0 = Off 1 = On		Class 1 ~ 15 = 1
06	Room Status Change for Other Extension	0 = Off 1 = On		Class 1 ~ 15 = 1
07	Restriction Class Changing for Other Extension	0 = Off 1 = On		Class 1 ~ 15 = 1
08	Room to Room Call Restriction	0 = Off 1 = On		Class 1 ~ 15 = 1
09	DND Setting for Own Extension	0 = Off 1 = On		Class 1 ~ 15 = 1
10	Wake Up Call Setting for Own Extension	0 = Off 1 = On		Class 1 ~ 15 = 1
11	Change Room Status for Own Extension	0 = Off 1 = On		Class 1 ~ 15 = 1
12	SLT Room Monitor	0 = Off 1 = On	Enable (1) or disable (0) a single line telephone ability to use Room Monitor.	Class 1 ~ 15 = 1
13	PMS Restriction Level	0 = Off 1 = On	Determines the PMS Restriction Level.	Class 1 ~ 15 = 1
14	Show guest name on other hotel phone	0 = Disable 1 = Enable	Enable other guest name indication on other hotel room terminal.	0
15	Show this guest name on staff phone	0 = Disable 1 = Enable	Enable guest name indication on staff terminal. (Setting for guest room terminal)	1



Item No.	Item	Input Data	Description	Default
16	Show guest name on this staff phone	0 = Disable 1 = Enable	Enable guest name indication on staff terminal. (Setting for staff terminal)	1

### Conditions

None

---

### Feature Cross Reference

- Class of Service
- Hotel/Motel

# Program 42 : Hotel Setup

## 42-04 : Hotel Mode One-Digit Service Codes

Level:

**IN**

---

### Description

Use **Program 42-04 : Hotel Mode One-Digit Service Codes** to set up the Hotel Mode one-digit service codes which are assigned in 42-02-01. For each Department Calling Group (1 ~ 50), you enter the destination for each single digit code (1 ~ 9, 0, \*, #). The destination can be any code with up to eight digits, such as an extension number or access code.

### Input Data

Department (Extension) Group Number	1 ~ 50
-------------------------------------	--------

Received Dial	1 ~ 9, 0, *, #
---------------	----------------

Item No.	Item	Input Data	Default
01	<b>Hotel Mode One-Digit Service Codes</b>	Destination Number Up to eight digits	No Setting

### Conditions

- The one-digit service codes you assign in this program wait until the interdigit time expires before executing.

---

### Feature Cross Reference

- Hotel/Motel

# Program 42 : Hotel Setup

## 42-05 : Hotel Room Status Printer

Level:

**IN**

---

### Description

Use **Program 42-05 : Hotel Room Status Printer** to set the LAN port to output the Hotel Data (Check-Out sheet, Room Status, etc.) and the output options for the Hotel/ Motel feature.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Output Port Type	0 = No Setting 3 = LAN		0
03	Wake Up Call No Answer Data	0 = Not Output 1 = Output		0
04	Check-Out Sheet	0 = Not Output 1 = Output		0
05	PMS Protocol type	0 = Normal 1 = Fidelio	Determines the PMS Protocol type.	0

### Conditions

- Room Status Reports can be output via LAN port.

---

### Feature Cross Reference

- Hotel/Motel

# Program 42 : Hotel Setup

## 42-06 : PMS Service Setting

Level:

**IN**

### Description

Use PRG 42-06 : PMS Service Setting to set the PMS integration Settings.

### Input Data

Item No.	Item	Input Data	Description	Default
01	PMS Port Number	0 ~ 65535	Determine the TCP port the application should connect to for the integration stream.	5129
02	3:00 AM Auto Room Scan	0 = Off 1 = On	Determine if the system scans the status of Hotel rooms at 3:00 AM.	0
03	CheckIn Message Type	0 = Off 1 = On	Determines whether a check-in or Out Message is sent when the action is performed on the PBX.	0
04	CheckOut Auto Status Change	0 = Off 1 = On	Determines the room status when a room is checked out.	0
05	AREYUTHERE/LINET-EST Send Timing	1 ~ 128 seconds	Defines the time that passes after any PMS message sent from the PBX that the PBX sends an AREYUTHERE message.	10
06	AREYUTHERE/LINET-EST Send Count	0 ~ 20 (times)	This is the retry count for un-acknowledged AREYUTHERE messages.	3
07	Check-Out Auto Flexible Status Change	0 = Off 1 = On	When PRG 42-06-07 and PRG 42-06-04 are set to on, the status programmed with PRG 42-06-08 can be set upon checkout regardless of the previous status.	0
08	Status for Check-Out Auto Flexible Status Change	1 = Room Clean(Occupied) 2 = Maid Required 3 = Maid in Room 4 = Inspection Required 5 = Maintenance Request 6 = Out of Order 7 = Reserve 1 8 = Reserve 2 9 = Reserve 3 0 = Room Clean(Vacant) * = Reserve 5 # = Reserve 6	When PRG 42-06-07 is set to on, the status programmed with PRG 42-06-08 can be set upon checkout.	4

### Conditions

None

---

## Feature Cross Reference

- Hotel/Motel

## Program 42 : Hotel Setup

### 42-07 : PMS Restriction Level Conversion Table

Level:

**IN**

---

#### Description

Use **PRG 42-07 : PMS Restriction Level Conversion Table** to change the default Toll Restriction class on check in for a room (PRG 42-02-02). This command translates the Toll Restriction level received from the hospitality application into a system Toll restriction Class.

#### Input Data

Restriction Level	0 ~ 3
-------------------	-------

Item No.	Item	Input Data	Default
01	PMS Restriction Level Conversion Table	1 ~ 15	Level 0 = 10 Level 1 = 11 Level 2 = 12 Level 3 = 13

#### Conditions

None

---

#### Feature Cross Reference

- Hotel/Motel

# Program 42 : Hotel Setup

## 42-08 : Text Message Setup for Hotel Room Status

Level:

**IN**

### Description

Use **Program 42-08 : Text Message Setup for Hotel Room Status** to define the text message for Hotel Room Status.

### Input Data

Room Status Number	1, 2, 3, 4, 5, 6, 7, 8, 9, 0, *, #
--------------------	------------------------------------

Room Status	0 = Check In 1 = Check Out
-------------	-------------------------------

Item No.	Item	Input Data	Default
01	Fidelio Room Status Number	0 ~ #	Refer below
02	Text Message Data	Maximum 32 characters	Refer below

### Default

No.	Room Status	Fidelio Code	alphanumeric
			12345678901234567890123456789012
1	Check In	6	
	Check Out	5	
2	Check In	2	
	Check Out	1	
3	Check In	2	
	Check Out	1	
4	Check In	4	
	Check Out	3	
5	Check In	4	
	Check Out	3	
6	Check In	4	
	Check Out	3	
7	Check In	4	
	Check Out	3	
8	Check In	4	
	Check Out	3	

No.	Room Status	Fidelio Code	alphanumeric
			12345678901234567890123456789012
9	Check In	4	
	Check Out	3	
0	Check In	6	
	Check Out	5	
*	Check In	4	
	Check Out	3	
#	Check In	4	
	Check Out	3	

**Conditions**

None

---

**Feature Cross Reference**

- Hotel/Motel



## Program 42 : Hotel Setup

### 42-09 : Flexible Setup for Room Status

Level:

**IN**

---

### Description

Use **Program 42-09 : Flexible Setup for Room Status** to enable dial room status codes. Note the code definitions only apply to the system itself.

### Input Data

Room Status	1, 2, 3, 4, 5, 6, 7, 8, 9, 0, *, #
-------------	------------------------------------

Item No.	Item	Input Data	Default
01	<b>Flexible Setup for Room Status</b>	1 = Room Clean (Occupied) 2 = Maid Required 3 = Maid in Room 4 = Inspection Required 5 = Maintenance Request 6 = Out of order 7 = Reserve 1 8 = Reserve 2 9 = Reserve 3 0 = Room Clean (Vacant) * = Reserve 5 # = Reserve 6	1 - # = None

### Conditions

None

---

### Feature Cross Reference

- Hotel/Motel

# Program 44 : ARS/F-Route Setup

## 44-01 : System Options for ARS/F-Route


Level:

**IN**

### Description

Use **Program 44-01 : System Options for ARS/F-Route** to define the system options for the ARS/F-Route feature.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>ARS/F-Route Time Schedule</b>	0 = Not Used 1 = Used	If this option is set to <b>0</b> , the F-Route table selected is determined only by the digits dialed without any relation to the day or time of the call. If this option is set to <b>1</b> , the system first refers to PRG 44-10. If there is a match, the pattern defined in that program is used. If not, the F-Route pattern in PRG 44-09 and time setting in 44-08 are used.	0	44-04 44-05 44-08 44-09 44-10
02	<b>Dial Tone Simulation</b>	1 digit (0 ~ 9)  *, # cant be used	When first dialed digit matches with the data set in this Program, system send simulated DT to calling party after receiving first digit. Numbering plan for the dial needs to configure as F-Route at PRG 11-01.	No Setting	
03	<b>Tone Kind</b>	0 = Internal DT 1 = External DT	Set simulated DT kind which can change the tone used at PRG 44-01-02 and PRG 44-02-04.	0	44-01-02 44-02-04

### Conditions

None

### Feature Cross Reference

- Automatic Route Selection (ARS/F-Route)

# Program 44 : ARS/F-Route Setup

## 44-02 : Dial Analysis Table for ARS/F-Route Access

Level:

**IN**

### Description

Use **Program 44-02 : Dial Analysis Table for ARS/F-Route Access** to set the Pre-Transaction Table for selecting ARS/F-Route.

### Input Data

Dial Analysis Table Number	1 ~ 200
----------------------------	---------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Dial</b>	Up to eight digits (Use line key 1 for a Don't Care digit, @)	Set the number of digits to be analyzed by the system for ARS routing.	No Setting	
02	<b>Service Type</b>	0 = No Setting (None) 1 = Extension Call (Own) 2 = ARS/F-Route Table (F-Route) 3 = Dial Extension Analyze Table (Option)	<ul style="list-style-type: none"> <li>• Service Type 1 (Extension Number) The number goes to an extension after deleting the front digit(s). <i>Additional Data</i> Assign the digit(s) to be deleted on top of the number for extension number usage. At least one digit must be deleted.</li> <li>• Service Type 2 (ARS/F-Route) The number is controlled by ARS/F-Route table. <i>Additional Data:</i> If the ARS/F-Route Time Schedule is not used, assign the ARS/F-Route table number for Program 44-05. If the ARS/F-Route Time Schedule is used, assign the ARS/F-Route selection number for Program 44-04.</li> <li>• Service Type 3 (Dial Extension Analyze Table) The total length of the number exceeds more than 8 digits. <i>Additional Data:</i> Assign the Dial Extension Analysis Table number to be used in Program 44-03.</li> </ul>	0	44-02-01 44-03 44-05

Item No.	Item	Input Data	Description	Default	Related Program
03	<b>Additional Data</b>	Service Type 1 = 0 ~ 255 (Delete digits, 255 = Delete all digits) Service Type 2 = [Not used F-Route Time Schedule] 0 ~ 500 (F-Route Table No.) <PRG 44-05> [Use F-Route Time Schedule] 0 ~ 100 (F-Route Selection No.) <PRG 44-04> Service Type 3 = 0 ~ 4 (Extension Table Area No.) <PRG 44-03>	For the Service Type selected in 44-02-02, enter the additional data required. <ul style="list-style-type: none"> <li>• 1 : Delete Digit = 0 ~ 255 (255 = Delete All Digits)</li> <li>• 2 : [Program 44-01 : 0] ARS/F-Route Table Number = 0 ~ 100 (0 = No Setting) Refer to Program 44-05. [Program 44-01 : 1] ARS/F-Route Select Table Number = 0 ~ 100 (0 = No Setting) Refer to Program 44-04.</li> <li>• 3 : Dial Extension Analyze Table Number = 0 ~ 4 (0 = No Setting) Refer to Program 44-03.</li> </ul>	0	44-02-01 44-02-02 44-04 44-05
04	<b>Dial Tone Simulation</b>	0 = Off 1 = On	If enabled, this option sends dial tone to the calling party after the routing is determined. This may be required if the central office at the destination does not send dial tone.	0	44-01-03

### Conditions

None

---

## Feature Cross Reference

- Automatic Route Selection (ARS/F-Route)

# Program 44 : ARS/F-Route Setup

## 44-03 : Dial Analysis Extension Table

Level:

**IN**

### Description

When Program 44-02-02 is set to type 3, use **Program 44-03 : Dial Analysis Extension Table** to set the dial extension analysis table. These tables are used when the analyzed digits must be more than eight digits. If the received digits do not match the digits set in tables 1 ~ 250, table number 252 is used to refer to the next Extension Table Area (1 ~ 4) to be searched. If the received digits are not identified in tables 1 ~ 250, the F-Route selection table number defined in table 251 is used.

### Input Data

Extension Table Area Number	1 ~ 4
Dial Analysis Table Number	1 ~ 252

### Dial Analysis Table Number : 1 ~ 250

Item No.	Item	Input Data	Default	Related Program
01	Dial	Up to 36 digits Digits = 1 ~ 9, 0, *, #, @ (Press Line Key 1 for wild character @)	No Setting	44-02
02	ARS/F-Route Select Table Number	[Not used F-Route Time Schedule] 0 ~ 100 (F-Route Table No.) <PRG 44-05> [Use F-Route Time Schedule] 0 ~ 100 (F-Route Selection No.) <PRG 44-04>	0	44-01 44-04 44-05

### Dial Analysis Table Number : 251

Item No.	Item	Input Data	Default	Related Program
03	ARS/F-Route Select Table Number	Not used F-Route Time Schedule] 0 ~ 100 (F-Route Table No.) <PRG 44-05> [Use F-Route Time Schedule] 0 ~ 100 (F-Route Selection No.) <PRG 44-04>	0	44-01 44-03-01 44-04 44-05

### Dial Analysis Table Number : 252

Item No.	Item	Input Data	Default	Related Program
04	Next Table Area Number	0 ~ 4	0	44-03-01

**Conditions**

None

---

**Feature Cross Reference**

- Automatic Route Selection (ARS/F-Route)

# Program 44 : ARS/F-Route Setup

## 44-04 : ARS/F-Route Selection for Time Schedule

Level:

**IN**

---

### Description

Use **Program 44-04 : ARS/F-Route Selection for Time Schedule** to assign each ARS/ F-Route Selection number to an ARS/F-Route table number for each ARS/F-Route time mode. There are eight time modes for ARS/F-Route Access.

### Input Data

ARS/F-Route Selection Number	1 ~ 100
------------------------------	---------

ARS/F-Route Time Mode	1 ~ 8
-----------------------	-------

Item No.	Item	Input Data	Default	Related Program
01	ARS/F-Route Table Number	0 ~ 100 (0 = No Service)	0	44-01 44-05

### Conditions

None

---

### Feature Cross Reference

- Automatic Route Selection (ARS/F-Route)

# Program 44 : ARS/F-Route Setup

## 44-05 : ARS/F-Route Table

Level:

**IN**

### Description

Use **Program 44-05 : ARS/F-Route Table** to set the ARS/F-Route table. There are four kinds of order. If the higher priority trunk groups are busy, the next order group is used. If a lower priority route is selected, the caller may be notified with a beep tone.

### Input Data

ARS/F-Route Table Number	1 ~ 100
--------------------------	---------

Priority Number	1 ~ 4
-----------------	-------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Trunk Group Number</b>	0 = No Setting 1 ~ 50 = Trunk group 101 ~ 150 = Network- ing 255 = Intercom	Select the trunk group number to use for the outgoing ARS call.	0	
02	<b>Delete Digits</b>	0 ~ 255 (255 = Delete All)	Enter the number of digits to be deleted from the dialed number.	0	44-05-08
03	<b>Additional Dial Number Table</b>	0 ~ 100	Enter the table number (defined in Program 44-06) for additional digits to be dialed.	0	44-05-08 44-06
04	<b>Beep Tone</b>	0 = Off 1 = On	Select whether or not a beep is heard if a lower priority trunk group is used to dial out.	0	
05	<b>Gain Table Number for Internal Calls</b>	0 ~ 100 0 = No Setting	Select the gain table number to use for the internal call (defined in Program 44-07).	0	44-07-03 44-07-04
06	<b>Gain Table Number for Tandem Connections</b>	0 ~ 100 0 = No Setting	Select the gain table number to use for the tandem call (defined in Program 44-07).	0	44-07-01 : 44-07-04
07	<b>ARS Class of Service</b>	0 ~ 50 0 = No ARS Class (Call Restricted)	Select the ARS Class of Service to use for the table. An extension ARS COS is determined in Program 26-04-01.	0	26-04-01
08	<b>Dial Treatment</b>	0 ~ 15	Select the Dial Treatment to use for the table. If a Dial Treatment is selected, Programs 44-05-02 and 44-05-03 are ignored and the Dial Treatment defined in Program 26-03-01 is used instead.	0	26-03-01
09	<b>Maximum Digit</b>	0 ~ 36	Input the maximum number of digits to send when using the F-Route.	0	
11	<b>Network Specified Parameter Table</b>	0 ~ 16	Enter a table number from Program 26-12.	0	



**Conditions**

None

---

**Feature Cross Reference**

- Automatic Route Selection (ARS/F-Route)

# Program 44 : ARS/F-Route Setup

## 44-06 : Additional Dial Table

Level:

**IN**

---

### Description

Use **Program 44-06 : Additional Dial Table** to set the additional dial table to add prior to the dialed ARS/F-Route number. The Additional Dial Table used is determined in Program 44-05-03.

### Input Data

Additional Dial Table Number	1 ~ 100
------------------------------	---------

Item No.	Item	Input Data	Default	Related Program
01	<b>Additional Dial</b>	Up to 36 digits Enter : 1 ~ 9, 0, *, #, Pause (press LK 1 to enter a pause)	No Setting	44-05-03

### Conditions

None

---

### Feature Cross Reference

- Automatic Route Selection (ARS/F-Route)

# Program 44 : ARS/F-Route Setup

## 44-07 : Gain Table for ARS/F-Route Access

Level:

**IN**

### Description

Use **Program 44-07 : Gain Table for ARS/F-Route Access** to set the gain/PAD table. If an extension dials ARS/F-Route number:

- The Extension Dial Gain Table, assigned in Program 44-05, is activated.
- The Extension Dial Gain Table follows Outgoing transmit and Outgoing receive settings.

If the incoming call is transferred to another line using ARS/F-Route:

- The Tandem Gain Table, assigned in Program 44-05, is activated.
- The Tandem Gain Table follows the Incoming transmit and Incoming receive settings for incoming line, and Outgoing transmit and Outgoing receive settings for the outgoing line.



*For ARS/F-Route calls, the CODEC gains defined in Programs 14-01-02 and 14-01-03 are not activated.*

### Input Data

Gain Table Number	1 ~ 100
-------------------	---------

Item No.	Item	Input Data	Default
01	Incoming Transmit	1 ~ 57 (- 15.5 dB ~ + 12.5 dB)	32 (0 dB)
02	Incoming Receive	1 ~ 57 (- 15.5 dB ~ + 12.5 dB)	32 (0 dB)
03	Outgoing Transmit	1 ~ 57 (- 15.5 dB ~ + 12.5 dB)	32 (0 dB)
04	Outgoing Receive	1 ~ 57 (- 15.5 dB ~ + 12.5 dB)	32 (0 dB)

### Conditions

None

### Feature Cross Reference

- Automatic Route Selection (ARS/F-Route)

# Program 44 : ARS/F-Route Setup

## 44-08 : Time Schedule for ARS/F-Route

Level:

**IN**

### Description

Use **Program 44-08 : Time Schedule for ARS/F-Route** to define the daily pattern of the ARS/F-Route feature. ARS/F-Route has 10 time patterns. These patterns are used in Programs 44-09 and 44-10. The daily pattern consists of 20 time settings.

### Input Data

Schedule Pattern Number	1 ~ 10
-------------------------	--------

Time Number	01 ~ 20
-------------	---------

Item No.	Item	Input Data	Related Program
01	Start Time	0000 ~ 2359	44-01
	End Time	0000 ~ 2359	
	Mode	1 ~ 8	

### Default

All Schedule Patterns = 0 : 00 - 0 : 00, Mode 1

Example :

#### Pattern 1

0:00	8:00	18:00	22:00	0:00
Mode 3	Mode 1	Mode 2	Mode 3	

Time Number 01 = 00 : 00 - 08 : 00 Mode 3

Time Number 02 = 08 : 00 - 18 : 00 Mode 1

Time Number 03 = 18 : 00 - 22 : 00 Mode 2

Time Number 04 = 22 : 00 - 00 : 00 Mode 3

#### Pattern 2

0:00	0:00
Mode 2	

Time Number 01 = 00 : 00 - 00 : 00 Mode 2

**Conditions**

None

---

**Feature Cross Reference**

- Automatic Route Selection (ARS/F-Route)

# Program 44 : ARS/F-Route Setup

## 44-09 : Weekly Schedule for ARS/F-Route

Level:

**IN**

---

### Description

Use **Program 44-09 : Weekly Schedule for ARS/F-Route** to define a weekly schedule for using ARS/F-Route. The pattern number is defined in Program 44-08-01.

### Input Data

Day Number	1 = Sunday 2 = Monday 3 = Tuesday 4 = Wednesday 5 = Thursday 6 = Friday 7 = Saturday
------------	--

Item No.	Item	Input Data	Default	Related Program
01	<b>Schedule Pattern Number</b>	0 ~ 10 (0 = No Setting)	Sunday ~ Saturday = Pattern 1	44-08

### Conditions

None

---

### Feature Cross Reference

- Automatic Route Selection (ARS/F-Route)

# Program 44 : ARS/F-Route Setup

## 44-10 : Holiday Schedule for ARS/F-Route

Level:

**IN**

---

### Description

Use **Program 44-10 : Holiday Schedule for ARS/F-Route** to define a yearly schedule for ARS/F-Route. This schedule is used for setting special days such as national holidays. The pattern number is defined in Program 44-08-01.

### Input Data

Item No.	Item	Input Data	Default	Related Program
01	Schedule Pattern Number	0 ~ 10 (0 = No Setting)	Jan/01 ~ Dec/31 = Pattern 0	44-08

### Conditions

None

---

### Feature Cross Reference

- Automatic Route Selection (ARS/F-Route)

# Program 45 : Voice Mail Integration

## 45-01 : Voice Mail Integration Options

Level:

**IN**

### Description

Use **Program 45-01 : Voice Mail Integration Options** to customize certain voice mail integration options.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	Voice Mail Department Group Number	0 ~ 50 0 = No Voice Mail	Assign which Extension (Department) Group number is to be assigned as the voice mail group.	50	
02	Voice Mail Master Name	Up to 12 Characters	Enter the Voice Mail Master Name.	VOICE MAIL	
03	Voice Mail Call Screening	0 = Off 1 = On	Enable/disable the ability to process the Call Screening commands (1 + extension number) sent from the Voice Mail. You should normally enable this option to allow for Voice Mail Call Screening. Disable this option if your system has been modified so that extensions begin with the digit 1 (e.g., 101, 102, etc.). Also see the "Flexible System Numbering" feature.	0	45-01-11
04	Park and Page	0 = Off 1 = On	Enable/disable the system ability to process the Voice Mail Park and Page (*) commands. You should normally <b>enable</b> this option.	1	45-01-12
05	Message Wait	0 = Off 1 = On	Enable/disable the system ability to process the Voice Mail Message Wait (#) commands. You should normally <b>enable</b> this option. If enabled, be sure that the programmed Message Notification strings don't contain the code for trunk access.	1	45-01-13
06	Record Alert Tone Interval Time	0 ~ 64800 seconds	This time sets the interval between Voice Mail Conversation Record alerts.	30	
07	Centralized Voice mail Pilot No.	Dial (Up to 8 digits)	Assign this number the same as the extension number or pilot number.	No Setting	
08	Centralized Voice Mail Department Group Number	0 ~ 50 0 = No Voice Mail Assigned	Assign which Extension (Department) Group Number is used as the Centralized Voice Mail group.	0	
09	Centralized Voice Mail master Name	Up to 12 characters	Assign the Centralized Voice Mail Master Name.	C.V.M.	
10	New NSL Protocol support	0 = Off (Disable) 1 = On (Enable)		0	



Item No.	Item	Input Data	Description	Default	Related Program
11	<b>Prefix for Call Screening</b>	Dial (One digit)		1	45-01-03
12	<b>Prefix for Park and Page</b>	Dial (One digit)		*	45-01-04
13	<b>Prefix for Message Wait</b>	Dial (One digit)		#	45-01-05
15	<b>Analog Voice Mail Protocol Selection</b>	0 = Fixed 1 = Program	Assigns whether fixed codes are used or the codes used in Program 45-04 are used for analog voice mail protocol.	0	45-04 11-11-50/5 1
16	<b>Voice Mail Fax Digit Add Assignment</b>	<b>Up to four digits</b>	Assign up to four digits in front of the station number sent to the SLT port when a call is forwarded.	No Setting	15-03-16
17	<b>Reply Mailbox Number</b>	0 = No 1 = Yes	Whether or not to include the mailbox number in the analog voice mail protocol.	1	45-04
18	<b>Trunk Number Mapping</b>	2 ~ 3	Assign the digits of trunk number mapping.	2	

## Conditions

None

---

## Feature Cross Reference

- Voice Mail Integration (Analog)

# Program 45 : Voice Mail Integration

## 45-02 : NSL Option Setup

Level:

**SA**

---

### Description

Use **Program 45-02 : NSL Option Setup** to setup the NSL options for Voice Mail integration.

### Input Data

Item No.	Item	Input Data	Default
01	Send DTMF tone or 6KD message	0 = Send DTMF tone to SLT-VM port 1 = Send 6KD message to Serial port	1
02	Forced Send Dial Tone	0 = Normal 1 = Forced	0
03	Send 51A Message	0 = Off 1 = On	1
05	Send 4PM message	0 = Off 1 = On	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 45 : Voice Mail Integration

## 45-04 : Voice Mail Digit Add Assignment

Level:

**IN**

---

### Description

Use Program 45-04 : Voice Mail Digit Add Assignment to define the digits to add.

### Input Data

Item No.	Item	Input Data	Default	Related Program
01	Remote Logon (Internal)	Up to four digits	No Setting	45-01-15
02	Direct Logon	Up to four digits	No Setting	45-01-15
03	Transfer Message	Up to four digits	No Setting	45-01-15
04	Forward-All	Up to four digits	No Setting	45-01-15
05	Forward-Busy	Up to four digits	No Setting	45-01-15
06	Forward RNA	Up to four digits	No Setting	45-01-15
07	Remote Logon	Up to four digits	No Setting	45-01-15
08	Conversation Recording	Up to four digits	No Setting	45-01-15
09	Clear Down String	Up to four digits	No Setting	45-01-15

### Conditions

None

---

### Feature Cross Reference

None

## Program 45 : Voice Mail Integration

### 45-05 : Voice Mail Send Protocol Signal Without Additional Digits

Level:

**IN**

---

#### Description

Use **Program 45-05 : Voice Mail Send Protocol Signal Without Additional Digits** to send trunk number and/or station number information if integrating to Voice Mail when Program 45-04-XX is left blank and 45-01-15 is set to "Program".

#### Input Data

Item No.	Item	Input Data	Default	Related Program
01	Remote Log-On Internal	0 = Off 1 = On	0	45-01-15 45-04-01
02	Direct Log-On	0 = Off 1 = On	0	45-01-15 45-04-02
03	Transfer Message/QVM	0 = Off 1 = On	0	45-01-15 45-04-03
04	Forward-All	0 = Off 1 = On	0	45-01-15 45-04-04
05	Forward-Busy	0 = Off 1 = On	0	45-01-15 45-04-05
06	Forward RNA	0 = Off 1 = On	0	45-01-15 45-04-06
07	Remote Log-On	0 = Off 1 = On	0	45-01-15 45-04-07
08	Conversation Recording	0 = Off 1 = On	0	45-01-15 45-04-08
09	Clear Down String	0 = Off 1 = On	0	45-01-15 45-04-09

#### Conditions

None

---

#### Feature Cross Reference

None

# Program 47 : InMail

## 47-01 : InMail System Options


Level:

**IN**

### Description

Use **Program 47-01 : InMail System Options** to set up the InMail system-wide options.

### Input Data

Item No.	Item	Input Data	Description	Default
02	<b>InMail Master Name</b>	Up to 12 characters	(MasterName) The CPU must be reset for a change to this program to take effect. Use this option to modify the name for all InMail ports. The system briefly displays this name when a display multiline terminal user calls a Voice Mail port (either by pressing <b>Message</b> , their voice mail key, or by dialing the master number). You should always end the name with the <b>##</b> characters. The system substitutes the port number for the last #. Using the default name <b>InMail ##</b> , for example, the telephone display shows <b>InMail #1</b> when calling port 1.	InMail ## (The system substitutes the port number for the # when calling the port.)
03	<b>Incoming Message Length</b>	1 ~ 4095 seconds	(Subs Msg Length) Use this option to set the maximum length of recorded messages for: <ul style="list-style-type: none"> <li>Subscriber Mailbox users dialing <b>RS</b> to record and send a message.</li> <li>Extension users leaving a message in a Subscriber Mailbox.</li> <li>Outside Automated Attendant callers accessing a mailbox via a GOTO command and then dialing <b>RS</b> to record and send a message.</li> <li>Subscriber Mailbox Greetings.</li> <li>Announcement Messages.</li> <li>Call Routing Mailbox Instruction Menus.</li> </ul>  <i>The length of a Conversation Record is 10 times the Subscriber Message Length. Since the Conversation Record time cannot exceed 4095 seconds, any setting in Subscriber Message Length larger than 4095 has no effect on the length of recorded conversations.</i>	120 seconds
04	<b>Non-Subscriber Message Length</b>	1 ~ 4095 seconds	(Mbox Msg Length) Use this option to set the maximum length of recorded messages for: <ul style="list-style-type: none"> <li>Automated Attendant callers leaving a message or Quick Message in a Subscriber Mailbox.</li> <li>Outside callers transferred by an extension user to a Subscriber Mailbox.</li> </ul>	120 seconds

Item No.	Item	Input Data	Description	Default
05	<b>Message Backup/Go Ahead Time</b>	1 ~ 60 seconds	(Msg Bkup/Adv Time) Use this option to set the backup/ go ahead time. This time sets how far InMail backs up when a user dials <b>B</b> while listening to a message. This interval also sets how far InMail jumps ahead when a user dials <b>G</b> while listening to a message.	5 seconds
07	<b>Digital Pager Callback Number</b>	<b>Digits</b> (12 maximum, using 0 ~ 9, # and *) <b>M</b> (Number of messages - entered by pressing <b>LK1</b> ) <b>X</b> (Extension number - entered by pressing <b>LK2</b> ) InMail automatically replaces the X command with the number of the extension that initially received the message.	(Pager Cback) Use this option to set the Digital Pager Callback Number portion of the Message Notification callout number for a digital pager. This is the portion of the callout number that is appended to the pager service telephone number. Normally, this option should be <b>X*M#</b> , where: <ul style="list-style-type: none"> <li>• <b>X</b> is the number of the extension that generated the notification.</li> <li>• <b>*</b> is a visual delimiter (to make the pager display easier to read).</li> <li>• <b>M</b> is the number of new messages in the extension mailbox.</li> <li>• <b>#</b> is the digit normally used by the pager service for positive disconnect.</li> </ul>	X*M#
08	<b>Delay in Dialing Digital Pager Callback Number</b>	0 ~ 99 seconds	(Pager Dial Delay) Use this option to set the delay (0 ~ 99 seconds) that occurs just before InMail dials the Digital Pager Callback Number portion of the Message Notification callout number for a digital pager. Set this delay so the pager service has enough time to connect to the digital pager before sending the callback number. Your pager service may be able to help you determine the best value for this option (0 ~ 99 seconds). By default, this option is 9 seconds. When placing a digital pager notification, the system: Seizes the trunk specified. Dials the user-entered notification number (in <b>Message + OP + N</b> ). Waits the <b>47-01-08: Delay in Dialing Digital Pager Callback Number</b> interval. Dials the number entered in <b>47-01-07: Digital Pager Callback Number</b> . The system assumes that the notification number completes dialing approximately 4 seconds after trunk seizure. This means that, by default, the Digital Pager Callback Number is dialed into the pager service about 13 seconds after trunk seizure.	30 seconds
09	<b>Wait Between Digital Pager Callout Attempts</b>	1 ~ 255 minutes	(Notify Pager Intvl) Use this option to set the minimum time (1 ~ 255 minutes) between unacknowledged or unanswered digital pager Message Notification callouts. (A subscriber acknowledges a digital pager notification by logging onto their mailbox.) After this time expires, InMail tries the callout again (for up to the number of times set in <b>47-01-14: Number of Callout Attempts</b> ). If the system dials the callout number and the pager service is busy, it retries the number in one minute.	15 minutes

Item No.	Item	Input Data	Description	Default
10	<b>Wait Between Non-Pager Callout Attempts</b>	1 ~ 255 minutes	(Notify N-Pgr Intvl) Use this option to set the minimum time (1 ~ 255 minutes) between non-pager Message Notification callouts in which the destination answers, says Hello, dials 1 to acknowledge and then enters the wrong security code.	20 minutes
11	<b>Wait Between Busy Non-Pager Callout Attempts</b>	1 ~ 255 minutes	(Notify Busy Intvl) Use this option to set how long InMail waits (1 ~ 255 minutes) after it dials a busy non-pager callout destination, before retrying the callout number.	15 minutes
12	<b>Wait Between RNA Non-Pager Callout Attempts</b>	1 ~ 255 minutes	(Notify RNA Intvl) Use this option to set how long InMail waits (1 ~ 255 minutes), after it dials an unanswered non-pager callout destination, before retrying the callout number. There are 3 types of unanswered non-pager callouts: <ul style="list-style-type: none"> <li>• If the callout rings the destination longer than the 47-01-13: Wait for Answer Non-Pager Callout Attempts option.</li> <li>• If the destination answers, says Hello (or the system detects answer supervision) and then hangs up without dialing 1 to log onto their mailbox. This typically happens if someone unfamiliar with notification answers the callout, or if the callout is picked up by an answering machine.</li> <li>• If the destination answers and then hangs up without saying Hello. This typically happens if someone unfamiliar with the notification answers the callout (like the above example), or if the call is picked up by an answering machine with insufficient outgoing message volume.</li> </ul>	30 minutes
13	<b>Number of RNA rings</b>	1 ~ 99 rings	If a non-pager callout rings the destination longer than this interval (1 ~ 99 rings), InMail marks the call as unanswered (Ring No Answer) and hangs up.	5 rings
14	<b>Number of Cascading Attempts</b>	1 ~ 99 rings	Use this option to set how many times (1 ~ 99 rings) InMail retries an incomplete Message Notification callout. This total includes unacknowledged callouts, callouts to a busy destination, and callouts to an unanswered destination. This option applies to pager and non-pager callouts.	1 ring
15	<b>Send Pager Callout Until Acknowledged</b>	0 = No (Disabled) 1 = Yes (Enabled)	(Retry Until Ack) When this option is enabled (1), InMail continues to retry a digital pager Message Notification callout until the notification is acknowledged. If this option is disabled (0), InMail retries a digital pager Message Notification the number of times specified in <b>47-01-14 Number of Callout Attempts</b> . This option does not apply to Message Notification callouts to telephone numbers. A digital pager notification is considered acknowledged when the recipient logs onto the mailbox.	0
16	<b>Name Format</b>	0 = First-Last 1 = Last-First	Specify if names are displayed in First-Last format or Last-First.	0

Item No.	Item	Input Data	Description	Default
18	Play PAD Control	1 ~ 57 (- 15.5 dBm ~ + 12.5 dBm)		32
19	Record PAD Control (for Networking)	1 ~ 57 (- 15.5 dBm ~ + 12.5 dBm)		32
20	Delete DTMF Tone when recording mes- sage	0 = Disable 1 = Enable	Restrict Using InMail in a Secondary Sys- tem, when a Secondary System is not con- nected to the Primary System.	1

### Conditions

- When changing 47-01-01 or 47-01-02, a system reset is required for the new setting to take effect.

---

### Feature Cross Reference

None



# Program 47 : InMail

## 47-02 : InMail Station Mailbox Options

Level:

**IN**

### Description

Use **Program 47-02 : InMail Station Mailbox Options** to set up a station/extension mailbox. Station mailboxes are automatically assigned as Subscriber Mailboxes. Normally, InMail Station Mailbox numbers 1 ~ 64 should correspond to extensions 101-164.

 *Station Mailboxes are one of three mailbox categories: Station, Routing, or Master. You can also set up Master Mailboxes as Subscriber Mailboxes.*

### Input Data

Station Mailbox Number	1 ~ 128
------------------------	---------

Item No.	Item	Input Data	Description	Default
01	<b>Mailbox Type</b>	0 = None 1 = Personal 2 = Group	Use this option to enable or disable the mailbox. An extension mailbox is not accessible when it is disabled (even though its stored messages and configuration are retained in memory.) If disabled, a user pressing <b>Message</b> initiates a remote logon and is asked to enter their mailbox number. A voice prompt then announces: "That mailbox does not exist."  To make programming easier, consider associating a mailbox number with a station port. For example, mailbox 1 could correspond to port 1, which in turn corresponds to extension 101.	Mailbox 1 ~ 64 = 1 Mailbox 65 ~ 256 = 0
02	<b>Mailbox Number</b>	<b>Up to eight digits</b>	Use this option to select the extension number associated with the mailbox you are programming. Normally, mailbox 1 should use Mailbox Number 101, mailbox 2 should use Mailbox Number 201, 101 etc.  To make programming easier, consider associating a mailbox number with a station port. For example, mailbox 1 could correspond to port 1, which in turn corresponds to extension 101.	Mailbox 1 = 101 Mailbox 2 ~ 64 = 102 ~ 164 Mailbox 65 ~ 256 = No Setting
03	<b>Number of Messages</b>	0 ~ 99 messages To conserve storage space, enter 0 for all unused mailboxes.	Use this option to set the maximum number of messages that can be left in the Subscriber Mailbox. If a caller tries to leave a message after this limit is reached, they hear : "That mailbox is full." InMail then hangs up.	Mailbox 1 = 99 Mailbox 2 ~ = 20
04	<b>Message Playback Order</b>	0 (FIFO = first-in/ first-out, or oldest messages first). 1 (LIFO = last-in/ first-out, or newest messages first)	Use this option to set the Subscriber Mailbox message playback order. When a subscriber listens to their messages, InMail can play the oldest messages first (first-in/ first-out, or FIFO), or the newest messages first (last-in/first-out, or LIFO).	0

Item No.	Item	Input Data	Description	Default
05	<b>Auto Erase/Save of Messages</b>	0 = Erase After the subscriber listens to the entire new message and hangs up, InMail erases the message. 1 = Save After the subscriber listens to the entire new message and hangs up, InMail saves the message.	Use this option to determine what happens when a Subscriber Mailbox user completely listens to a new message and then exits the mailbox without either saving ( <b>SA</b> ) or erasing ( <b>E</b> ) the message. Depending on the setting of this option, InMail either automatically saves or erases the message. If the mailbox user hangs up before listening to the entire new message, InMail retains the message as a new message.	1
06	<b>Message Retention</b>	0 ~ 99 Days (0 = Indefinite)	Use this option to determine how long a Subscriber Mailbox retains held and saved messages. If a message is left in a Subscriber Mailbox longer than this interval, InMail deletes it.	0
07	<b>Recording Conversation Beep</b>	0 = No (Disabled) 1 = Yes (Enabled)	(Rec Conv Beep) Use this option to enable or disable the Conversation Record beep. If enabled, all parties on a call hear the voice prompt "Recording", followed by a single beep when the extension user initiates Conversation Record. If disabled, the voice prompt and beep do not occur. When you disable the Conversation Record beep, the following voice prompts do not occur while InMail records the conversation: Recording (followed by a beep) That mailbox is full (if the mailbox message storage capacity is reached) You have reached the recording limit (if the recorded message is too long) Provides an additional Conversation Record beep. This beep repeats according to the setting of <b>Program 45-01-06 : Voice Mail Integration Options : Record Alert Tone Interval Time</b> (0 ~ 64800 seconds). To disable the Conversation Record beep, enter 0 for this option.	1
08	<b>Message Waiting Lamp</b>	0 = No (Disabled) 1 = Yes (Enabled)	(Update MW Lamp) Use this option to enable or disable Message Waiting lamping at the extension associated with the Subscriber mailbox. For Subscriber Mailboxes, you should leave this option enabled. For Guest Mailboxes, you should leave this option disabled.	1
09	<b>Auto Attendant Direct to Voice Mail</b>	0 = No (Disabled) 1 = Yes (Enabled)	(Auto-ATT DND) Use this option to enable or disable Auto Attendant Do Not Disturb. When a subscriber enables Auto Attendant Do Not Disturb, an Automated Attendant caller routes directly to the mailbox, hears the greeting, and is asked to leave a message. A subscriber can also enable Auto Attendant Do Not Disturb while recording their mailbox greeting.	0

Item No.	Item	Input Data	Description	Default
10	<b>Forced Unscreened Transfer</b>	0 = No (Disabled) 1 = Yes (Enabled)	(Forced UTRF) Use this option to enable or disable Automated Attendant Forced Unscreened Transfer for the Subscriber Mailbox. If enabled, each Screened Transfer (TRF) to the extension is converted to an Unscreened Transfer (UTRF). If disabled, Screened Transfers from the Automated Attendant occur normally.	0
11	<b>Auto Time Stamp</b>	0 = No (Disabled) 1 = Yes (Enabled)	Use this option to enable or disable Auto Time Stamp for the Subscriber Mailbox. If enabled, after the subscriber listens to a message InMail announces the time and date the message was left. Auto Time Stamp also announces the message sender (if known). A subscriber can also enable Auto Time Stamp from their mailbox.	0
12	<b>System Administrator</b>	0 = No (Disabled) 1 = Yes (Enabled)	Use this option to designate the Subscriber Mailbox as a System Administrator. This allows the subscriber to use the <b>SA</b> options after logging onto their mailbox.	Mailbox 1 = 1 Mailbox 2 ~ = 0
13	<b>Dialing Option</b>	0 = No (Disabled) 1 = Yes (Enabled)	Dialing Option provides additional dialing options for Next Call Routing Mailbox calls (see Next Call Routing Mailbox below). If enabled, a caller who accesses the Subscriber Mailbox to leave a message can dial any of the options in the Next Call Routing Mailbox Dial Action Table. If disabled, the caller can dial only 0 (to use the Next Call Routing Mailbox 0 action).	0
14	<b>Next Call Routing Mailbox</b>	Call Routing Mailbox Number (1 ~ 3 digits, 00 ~ 32) (00 = Undefined) No entry (Entered by pressing CLEAR)	(Next CR Mbox) Use this option to assign a Next Call Routing Mailbox to the Subscriber Mailbox. This provides callers with additional dialing options while listening to a Subscriber Mailbox recorded or default greeting. The digits the caller can dial depend on the setting of the Next Call Routing Mailbox and Alternate Next Call Routing Mailbox options.	1
15	<b>Directory List Number</b>	0 = None 1 ~ 8 = List Number * = All		0
16	<b>Voice Prompt Language</b>	Refer to <a href="#">Table 2-13 47-02-16 Default Table</a> .		Station Mailbox Number 1
17	<b>Enable Paging</b>	0 = No (Disabled) 1 = Yes (Enabled)		0
18	<b>Paging Option</b>	0 = RNA 1 = Immediately		0
19	<b>Telephone User Interface Type</b>	0 = Numeric 1 = Mnemonic		0
20	<b>Enable E-mail Notification</b>	0 = No 1 = Yes		0
21	<b>E-mail Address</b>	Up to 48 characters		No Setting
22	<b>Include Message as Attachment</b>	0 = No 1 = Yes		1
23	<b>All Message Notification Enabled</b>	0 = No 1 = Yes		1

Item No.	Item	Input Data	Description	Default
24	All Find-Me Follow-Me Enabled	0 = No 1 = Yes		0
25	Security Code Option	0 = Always 1 = Remote Logon only		0
26	Auto Play	0 = Disabled 1 = Enable		0
27	Email message Save/Delete Option	0 = No Change 1 = Save 2 = Delete		0
28	Queuing	0 = Disabled 1 = Enable	Use this option to enable or disable Message Notification Queuing. If enabled, Message Notification is stored in queue when there is no active notification destination.	0

Table 2-13 47-02-16 Default Table

Item	Name	Input Data
47-02-16	Voice Prompt Language	01 = US English 02 = UK English 03 = Australian English 04 = French Canadian 05 = Dutch 06 = Mexican Spanish 07 = Latin America Spanish 08 = Italian 09 = German 10 = Madrid Spanish 11 = Norwegian 12 = Parisian French 13 = Brazilian Portuguese 14 = Japanese 15 = Mandarin Chinese 16 = Korean 17 = Iberian Portuguese 18 = Greek 19 = Danish 20 = Swedish 21 = Thai 22 = Mandarin Chinese (Taiwan) 23 = Flemish 24 = Turkish 25 = Arabic 26 = Russian

**Conditions**

None

**Feature Cross Reference**

None

# Program 47 : InMail

## 47-03 : InMail Group Mailbox Options

Level:

**IN**

---

### Description

Use **Program 47-03 : InMail Group Mailbox Options** to set up the 32 Group Mailboxes (1 ~ 32). A Group Mailbox is used for Department Group overflow and can be a Subscriber or Call Routing.

### Input Data

Group Mailbox Number	1 ~ 32
----------------------	--------

Item No.	Item	Input Data	Description	Default
02	<b>Mailbox Number</b>	Up to eight digits	(Mailbox Number) The Group Mailbox Number is the same as the Department Group master (pilot) number. Use this option to select the Department Group master (pilot) number associated with the Group Mailbox you are programming.	Group Mailbox 1-31 = 3101-3131 Group Mailbox 32 = No Setting
03	<b>Mailbox Type</b>	0 = None 1 = Subscriber 2 = Routing	0: Skip Mailbox No. setting 1: Skip Mailbox No. setting 2: Mailbox No. should be 1 ~ 32. Refer to <PRG 47-07>	1
03	<b>Routing Mailbox Number</b>	1 ~ 32		1

### Conditions

None

---

### Feature Cross Reference

None

# Program 47 : InMail

## 47-06 : Group Mailbox Subscriber Options

Level:

**IN**

### Description

Use **Program 47-06 : Group Mailbox Subscriber Options** to set up a Master Mailbox assigned as a Subscriber Mailbox in 47-03-03 : Group Mailbox Type was set Type 31 (Subscriber).

### Input Data

Group Mailbox Number	1 ~ 32
----------------------	--------

Item No.	Item	Input Data	Description	Default
01	<b>Number of Messages</b>	00 ~ 99 messages To conserve storage space, enter 0 for all unused mailboxes.	Use this option to set the maximum number of messages that can be left in the Subscriber Mailbox. If a caller tries to leave a message after this limit is reached, they hear, "That mailbox is full." InMail then hangs up.	20
02	<b>Message Playback Order</b>	0 (FIFO = first-in/ first-out, or oldest messages first). 1 (LIFO = last-in/ first-out, or newest messages first).	Use this option to set the Subscriber Mailbox message playback order. When a subscriber listens to their messages, InMail can play the oldest messages first (first-in/ first-out, or FIFO), or the newest messages first (last-in/first-out, or LIFO).	0
03	<b>Auto Erase/Save of Messages</b>	0 = Erase After the subscriber listens to the entire new message and hangs up, InMail erases the message. 1 = Save After the subscriber listens to the entire new message and hangs up, InMail saves the message.	Use this option to determine what happens when a Subscriber Mailbox user completely listens to a new message and then exits the mailbox without either saving ( <b>SA</b> ) or erasing ( <b>E</b> ) the message. Depending on the setting of this option, InMail either automatically saves or erases the message. If the mailbox user hangs up before listening to the entire new message, InMail retains the message as a new message.	1
04	<b>Message Retention</b>	0 ~ 90 days (0 = Indefinite)	Use this option to determine how long a Subscriber Mailbox retains held and saved messages. If a message is left in a Subscriber Mailbox longer than this interval, InMail deletes it.	0

Item No.	Item	Input Data	Description	Default
05	<b>Recording Conversation Beep</b>	0 = No (Disabled) 1 = Yes (Enabled)	(Rec Conv Beep) Use this option to enable or disable the Conversation Record beep. If enabled, all parties on a call hear the voice prompt "Recording", followed by a single beep when the extension user initiates Conversation Record. If disabled, the voice prompt and beep do not occur. When you disable the Conversation Record beep, the following voice prompts do not occur while InMail records the conversation: Recording (followed by a beep) That mailbox is full (if the mailbox message storage capacity is reached) You have reached the recording limit (if the recorded message is too long) Provides an additional Conversation Record beep. This beep repeats according to the setting of <b>Program 45-01-06 : Voice Mail Integration Options : Record Alert Tone Interval Time</b> (0 ~ 64800 seconds). To disable Conversation Record beep, enter 0 for this option.	1
06	<b>Message Waiting Lamp</b>	0 = No (Disabled) 1 = Yes (Enabled)	(Update MW Lamp) Use this option to enable or disable Message Waiting light at the extension associated with the Subscriber mailbox. For Subscriber Mailboxes, you should leave this option enabled. For Guest Mailboxes, you should leave this option disabled.	1
07	<b>Auto Attendant Direct to Voice Mail</b>	0 = No (Disabled) 1 = Yes (Enabled)	Use this option to enable or disable Auto Attendant Direct to VM. When a subscriber enables Auto Attendant Direct to VM, an Automated Attendant caller routes directly to the mailbox, hears the greeting, and is asked to leave a message. A subscriber can also enable Auto Attendant Direct to VM while recording their mailbox greeting.	0
08	<b>Forced Unscreened Transfer</b>	0 = No (Disabled) 1 = Yes (Enabled)	(Forced UTRF) Use this option to enable or disable Automated Attendant Forced Unscreened Transfer for the Subscriber Mailbox. If enabled, each Screened Transfer (TRF) to the extension is converted to an Unscreened Transfer (UTRF). If disabled, Screened Transfers from the Automated Attendant occur normally.	0
09	<b>Auto Time Stamp</b>	0 = No (Disabled) 1 = Yes (Enabled)	Use this option to enable or disable Auto Time Stamp for the Subscriber Mailbox. If enabled, after the subscriber listens to a message InMail announces the time and date the message was left. Auto Time Stamp also announces the message sender (if known). A subscriber can also enable Auto Time Stamp from their mailbox.	0
10	<b>System Administrator</b>	0 = No (Disabled) 1 = Yes (Enabled)	(System Admin) Use this option to designate the Subscriber Mailbox as a System Administrator. This allows the subscriber to use the options after logging onto their mailbox.	0

Item No.	Item	Input Data	Description	Default
11	<b>Dialing Option</b>	0 = No (Disabled) 1 = Yes (Enabled)	Dialing Option provides additional dialing options for Next Call Routing Mailbox calls (see Next Call Routing Mailbox below). If enabled, a caller who accesses the Subscriber Mailbox to leave a message can dial any option in the Next Call Routing Mailbox Dial Action Table. If disabled, the caller can dial only 0 (to use the Next Call Routing Mailbox 0 action).	0
12	<b>Next Call Routing Mailbox</b>	0 ~ 32 (0 = Undefined)	(Next CR Mbox) Use this option to assign a Next Call Routing Mailbox to the Subscriber Mailbox. This provides callers with additional dialing options while listening to a Subscriber Mailbox recorded or default greeting. The digits the caller can dial depends on the setting of the Next Call Routing Mailbox and Alternate Next Call Routing Mailbox options.	1 (Call Routing Mailbox 01) By default, Call Routing Mailbox numbers are 01 = 16.
13	<b>Directory List Number</b>	0 = None 1 ~ 8 = List Number * = All	Specify the Directory List number to which the Group Mailbox belongs.	0
14	<b>Voice Prompt Language</b>	Refer to <a href="#">Table 2-14 47-06-14 Default Table</a> .		1
15	<b>Enable Paging</b>	0 = No 1 = Yes		0
16	<b>Paging Option</b>	0 = RNA 1 = Immediate		0
17	<b>Telephone User Interface</b>	0 = Numeric interface 1 = Mnemonic interface		0
18	<b>Enable Email Notification</b>	0 = No 1 = Yes		0
19	<b>Email Address</b>	Up to 48 characters		No Setting
20	<b>Include Msg as Attachment</b>	0 = No 1 = Yes		1
21	<b>All Message Notification Enabled</b>	0 = No 1 = Yes		1
22	<b>All Find-Me Follow-Me Enabled</b>	0 = No 1 = Yes		0
23	<b>Security Code Option</b>	0 = Always 1 = Remote Logon only		0
24	<b>Auto Play</b>	0 = Disabled 1 = Enabled		0
25	<b>Email message Save / Delete Option</b>	0 = No Change 1 = Save 2 = Delete		0
26	<b>Queuing</b>	0 = Disabled 1 = Enabled	Use this option to enable or disable Message Notification Queuing. If enabled, Message Notification is stored in queue when there is no active notification destination.	0



**Table 2-14 47-06-14 Default Table**

Item	Name	Input Data
47-06-14	Voice Prompt Language	01 = US English 02 = UK English 03 = Australian English 04 = French Canadian 05 = Dutch 06 = Mexican Spanish 07 = Latin America Spanish 08 = Italian 09 = German 10 = Madrid Spanish 11 = Norwegian 12 = Parisian French 13 = Brazilian Portuguese 14 = Japanese 15 = Mandarin Chinese 16 = Korean 17 = Iberian Portuguese 18 = Greek 19 = Danish 20 = Swedish 21 = Thai 22 = Mandarin Chinese (Taiwan) 23 = Flemish 24 = Turkish 25 = Arabic 26 = Russian

**Conditions**

None

---

**Feature Cross Reference**

None

# Program 47 : InMail

## 47-07 : InMail Routing Mailbox Options

Level:

**IN**

### Description

Use **Program 47-07 : InMail Routing Mailbox Options** to set up the 32 Routing Mailboxes. Routing Mailboxes can be either Announcement or Call Routing Mailboxes.

### Input Data

Routing Mailbox Number	1 ~ 32
------------------------	--------

Item No.	Item	Input Data	Description	Default
02	<b>Routing Mailbox Type</b>	0 = None 1 = Call Routing 2 = Announcement 3 = Directory 4 = Distribution	(Mailbox Type) Use this option to set the Routing Mailbox type.	Mailboxes 1 ~ 8 = 1 (Call Routing) Mailboxes 9 ~ 32 = 2 (Announcement)
03	<b>Prompt Language</b>	Refer to <a href="#">Table 2-15 47-07-03 Default Table</a> .		1
04	<b>Telephone User Interface</b>	0 = Numeric interface 1 = Mnemonic interface		0

**Table 2-15 47-07-03 Default Table**

Item	Name	Input Data
47-07-03	Voice Prompt Language	01 = US English 02 = UK English 03 = Australian English 04 = French Canadian 05 = Dutch 06 = Mexican Spanish 07 = Latin America Spanish 08 = Italian 09 = German 10 = Madrid Spanish 11 = Norwegian 12 = Parisian French 13 = Brazilian Portuguese 14 = Japanese 15 = Mandarin Chinese 16 = Korean 17 = Iberian Portuguese 18 = Greek 19 = Danish 20 = Swedish 21 = Thai 22 = Mandarin Chinese (Taiwan) 23 = Flemish 24 = Turkish 25 = Arabic 26 = Russian

**Conditions**

None

---

**Feature Cross Reference**

None

# Program 47 : InMail

## 47-08 : Call Routing Mailbox Options

Level:

**IN**

### Description

Use **Program 47-08 : Call Routing Mailbox Options** to set the options for mailboxes assigned as Call Routing Mailboxes in 47-07-02 : Mailbox Type was set Type 1 (Call Routing).

### Input Data

Item No.	Item	Input Data	Description	Default
		Routing Mailbox Number		1 ~ 32
01	<b>Dial Action Table</b>	1 ~ 32	Use this option to assign the Dial Action Table to the Call Routing Mailbox. The Dial Action Table defines the dialing options for the call Routing Mailbox.	1 (Dial Action Table 1)
02	<b>Screened Transfer Timeout</b>	0 ~ 255 seconds Entering 0 causes immediate recall.	(Scrn Trf Timeout) Use this option to set how long a Screened Transfer (TRF) from the Automated Attendant rings an unanswered extension before recalling. This option has a similar function as Customize: Mailbox Options: Call Routing: [Call Handling] Options: Delay Rings Before Redirect Transfer in InMail.	15 seconds
03	<b>Time Limit for Dialing Commands</b>	0 ~ 99 seconds Entering 0 causes the Automated Attendant to immediately route callers to the Timeout destination programmed in the active Dial Action Table.	(Dialing Timeout) This option determines how long InMail waits for an Automated Attendant caller to dial before routing the call to the Timeout destination. Be sure your Dial Action Tables have a Timeout action programmed. If the caller waits too long to dial: When the associated Dial Action Table has a Timeout action programmed, the caller routes to that destination. When the associated Dial Action Table does not have a Timeout action programmed, the Instruction Menu repeats three times and then InMail hangs up.	5 seconds
04	<b>Fax Detection</b>	0 = No (Disabled) 1 = Yes (Enabled)	Use this option to enable or disable Fax Detection for the Call Routing Mailbox. In enabled, the InMail Automated Attendant (when using this Call Routing Mailbox) detects incoming fax CNG tone. The fax call then routes to the company fax machine according to the setting of 47-01-06 : Fax Extension. If disabled, the Automated Attendant does not detect incoming fax calls.	0
05	<b>Fax Extension</b>	Up to eight digits		No Setting

**Conditions**

None

---

**Feature Cross Reference**

None

# Program 47 : InMail

## 47-09 : Announcement Mailbox Options

Level:

**IN**

### Description

Use **Program 47-09 : Announcement Mailbox Options** to set the options for mailboxes assigned as Announcement Mailboxes in 47-07-02 : Mailbox Type was set Type 2 (Announcement).

### Input Data

Routing Mailbox Number	1 ~ 32
------------------------	--------

Item No.	Item	Input Data	Description	Default
01	<b>Next Call Routing Mailbox</b>	Call Routing Mailbox Number (1 ~ 32) Next Call Routing Mailbox 0 ~ 32 0 = Undefined	(Next CR Mbox) If you set up an Announcement Mailbox to answer Automated Attendant calls, use this option to provide additional routing options to the Automated Attendant callers. This option interacts with Repeat Count and Hang Up After below. For more detail on this interaction, refer to Direct Announcement Mailbox Routing and Routed Announcement Mailbox Routing in the InMail System Guide.	0
02	<b>Repeat Count</b>	0 ~ 10 (Announcement repeats 1 ~ 10 times) (0 = No Repeats)	Enter the number of times you want the Announcement Mailbox message to repeat to callers. After an Announcement Mailbox caller initially listens to the message, it repeats the number of times specified in this option. This option interacts with Next Call Routing Mailbox and Hang Up After when providing routing options. For more detail on this interaction, refer to Direct Announcement Mailbox Routing and Routed Announcement Mailbox Routing in the InMail System Guide.	0
03	<b>Hang Up After</b>	0 = None 1 = Goodbye 2 = Silent	(HangUp) Use this option along with Next Call Routing Mailbox and Repeat Count above to provide additional routing options to Automated Attendant callers. For more detail on this interaction, refer to Direct Announcement Mailbox Routing and Routed Announcement Mailbox Routing in the InMail System Guide.	0

### Conditions

None

---

## Feature Cross Reference

None

# Program 47 : InMail

## 47-10 : InMail Trunk Options

Level:

**IN**

### Description

Use **Program 47-10 : InMail Trunk Options** to assign InMail options for each trunk. Currently, only 47-10-01 : Answer Table Assignment is available.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Description	Default
01	<b>Answer Table Assignment</b>	Answer Table (1 ~ 16)	(Answer Table) Use this option to assign an InMail Answer Table to each Direct Inward Line (DIL) the Automated Attendant should answer. The Automated Attendant follows the routing specified by the selected Answer Table.	1
02	<b>Record PAD Control</b>	1 ~ 57 (- 15.5 dBm ~ + 12.5 dBm)		32
03	<b>Voice Prompt Language</b>	Refer to <a href="#">Table 2-16 47-10-03 Default Table</a> .		1
04	<b>Telephone User Interface</b>	0 = Numeric interface 1 = Mnemonic interface		0



**Table 2-16 47-10-03 Default Table**

Item	Name	Input Data
47-10-03	Voice Prompt Language	01 = US English 02 = UK English 03 = Australian English 04 = French Canadian 05 = Dutch 06 = Mexican Spanish 07 = Latin America Spanish 08 = Italian 09 = German 10 = Madrid Spanish 11 = Norwegian 12 = Parisian French 13 = Brazilian Portuguese 14 = Japanese 15 = Mandarin Chinese 16 = Korean 17 = Iberian Portuguese 18 = Greek 19 = Danish 20 = Swedish 21 = Thai 22 = Mandarin Chinese (Taiwan) 23 = Flemish 24 = Turkish 25 = Arabic 26 = Russian

**Conditions**

None

---

**Feature Cross Reference**

None

# Program 47 : InMail

## 47-11 : InMail Answer Table Options

Level:

**IN**

---


### Description


Use **Program 47-11 : InMail Answer Table Options** to set options for the Answer Tables. InMail provides eight Answer Tables (1 ~ 16 ). To set up the schedules for each Answer Table, go to 47-12 : InMail Answer Table Schedule.

### Input Data

Answer Table Number	1 ~ 16
---------------------	--------

Item No.	Item	Input Data	Description	Default
01	<b>Answer Schedule Override</b> (Schedule Override) Use this option to enable or disable Answer Schedule Override for the selected Answer Table. If enabled (and you make an entry for Override Mailbox below), the active Answer Table routes calls to the Override Mailbox.	0 = No (Disabled) 1 = Yes (Enabled)		0

Item No.	Item	Input Data	Description	Default
02	<p><b>Override Mailbox Category</b> (Override MB Ctg)</p> <p>Use this option to specify the category of the mailbox where Automated Attendant calls should route when you enable Answer Schedule Override.</p> <ul style="list-style-type: none"> <li>• If the Override Mailbox is a <b>Station Mailbox</b>, the outside caller hears the mailbox greeting (if recorded) and can leave a message.</li> <li>• If the Override Mailbox is a <b>Group Mailbox</b>, the outside caller hears the recorded announcement. Depending on how the Announcement Mailbox is programmed, InMail then hangs up, reroutes the call, or provides additional dialing options.</li> <li>• If the Override Mailbox is a <b>Routing Mailbox</b>, the outside caller hears the instruction menu and can dial any option allowed by the associated Dial Action Table.</li> </ul> <p> <i>If any of the Input Data values are entered, the terminal displays the <b>Override Mailbox Number</b> selection (below).</i></p>	<p>0 = Undefined  1 = Station Mailbox  2 = Group Mailbox  3 = Routing Mailbox</p>	<p>Category 0 = Skip Mailbox No. setting  Category 1 = Mailbox No. should be 1 ~ 128. refer to &lt;<a href="#">47-02 : In-Mail Station Mailbox Options</a>&gt;  Category 2 = Mailbox No. should be 1 ~ 32. refer to &lt;<a href="#">47-03 : In-Mail Group Mailbox Options</a>&gt;  Category 3 = Mailbox No. should be 1 ~ 32. refer to &lt;<a href="#">47-07 : In-Mail Routing Mailbox Options</a>&gt;</p>	0
	<p><b>Override Mailbox Number</b> (Override MB Num)</p> <p>Use this option to specify the mailbox where Automated Attendant calls should route when you enable Answer Schedule Override. The mailbox number you select in this option should match the mailbox category specified in <a href="#">47-11-02 : Override Mailbox Category</a> above.</p>	Up to 3 digits (using 0 ~ 9)	<p>Category 0 = Skip Mailbox No. setting  Category 1 = Mailbox No. should be 1 ~ 128. refer to &lt;<a href="#">47-02 : In-Mail Station Mailbox Options</a>&gt;  Category 2 = Mailbox No. should be 1 ~ 32. refer to &lt;<a href="#">47-03 : In-Mail Group Mailbox Options</a>&gt;  Category 3 = Mailbox No. should be 1 ~ 32. refer to &lt;<a href="#">47-07 : In-Mail Routing Mailbox Options</a>&gt;</p>	No Setting

Item No.	Item	Input Data	Description	Default
03	<p><b>Default Mailbox Category</b>(Default MB Ctg)</p> <p>Use this option to specify the category of mailbox used as the Default Mailbox.</p> <ul style="list-style-type: none"> <li>• If the Default Mailbox is a <b>Station Mailbox</b>, the outside caller hears the mailbox greeting (if recorded) and can leave a message.</li> <li>• If the Default Mailbox is a <b>Group Mailbox</b>, the outside caller hears the recorded announcement. Depending on how the Announcement Mailbox is programmed, InMail then hangs up, reroutes the call, or provides additional dialing options.</li> <li>• If the Default Mailbox is a <b>Routing Mailbox</b>, the outside caller hears the instruction menu and can dial any option allowed by the associated Dial Action Table.</li> </ul> <p> <i>If any of the Input Data values are entered, the terminal displays the <b>Override Mailbox Number</b> selection (below). If any of the Input Data values are entered, the terminal displays the <b>Override Mailbox Number</b> selection (below).</i></p>	0 = Undefined 1 = Station Mailbox 2 = Group Mailbox 3 = Routing Mailbox	Category 0 = Skip Mailbox No. setting Category 1 = Mailbox No. should be 1 ~ 128. refer to < <a href="#">47-02 : In-Mail Station Mailbox Options</a> > Category 2 = Mailbox No. should be 1 ~ 32. refer to < <a href="#">47-03 : In-Mail Group Mailbox Options</a> > Category 3 = Mailbox No. should be 1 ~ 32. refer to < <a href="#">47-07 : In-Mail Routing Mailbox Options</a> >	Answer Table 1 = 3 Answer Table 2 ~ 16 = 0
	<p><b>Default Mailbox Number</b> (Default MB Num)</p> <p>Use this option to set the Answer Table Default Mailbox number. InMail uses the Default Mailbox when an Answer Schedule is not in effect. By default, this occurs at all times other than Monday through Friday from 8:30 AM to 5:00 PM.</p>	Up to 3 digits (using 0 ~ 9)	Category 0 = Skip Mailbox No. setting Category 1 = Mailbox No. should be 1 ~ 128. refer to < <a href="#">47-02 : In-Mail Station Mailbox Options</a> > Category 2 = Mailbox No. should be 1 ~ 32. refer to < <a href="#">47-03 : In-Mail Group Mailbox Options</a> > Category 3 = Mailbox No. should be 1 ~ 32. refer to < <a href="#">47-07 : In-Mail Routing Mailbox Options</a> >	Answer Table 1 = 1 Answer Table 2 ~ 16 = No Setting
04	<p><b>Next Answer Table</b></p> <p>When 10 Answer Schedules in an Answer Table are not sufficient, use this option to link two Answer Tables together. InMail treats the two linked tables as a single 20 entry Answer Table.</p>	Answer Table (0 ~ 16)		0

## Conditions

None

---

## Feature Cross Reference

None

# Program 47 : InMail

## 47-12 : InMail Answer Schedules

Level:

**IN**

---

### Description

Use **Program 47-12 : InMail Answer Schedules** to set up the InMail Automated Attendant Answer Schedules. There are 16 Answer Tables, with up to 10 Answer Schedules in each Answer Table.

### Input Data

Answer Table Number	1 ~ 16
Schedule Entry Number	1 ~ 10

Item No.	Item	Input Data	Default	Description
01	<b>Schedule Type</b>	0 = Undefined 1 = Day of the Week 2 = Range of Days 3 = Date	Answer Table 1/ Schedule 1 = 2 All other schedules = 0	<p>(Entryxx Schedule Type) Use this option to assign a Schedule Type to the selected Answer Schedule. The Schedule Type determines how the Answer Schedule answers calls. The schedule can be one of the following types:</p> <ul style="list-style-type: none"> <li>• <b>1. Day of the Week</b> A Type 1 Answer Schedule runs on a specific day of the week. For this type of schedule, you select: <ul style="list-style-type: none"> <li>- The day of the week the schedule should run:</li> <li>- The schedule start time.</li> <li>- The schedule end time.</li> <li>- The Call Routing or Announcement Mailbox used to answer calls.</li> </ul> </li> <li>• <b>2. Range of Days</b> A Type 2 Answer Schedule runs for a range of days. For this type of schedule, you select: <ul style="list-style-type: none"> <li>- The day of the week the schedule should start.</li> <li>- The day of the week the schedule should stop.</li> <li>- The time on the start day the schedule should start.</li> <li>- The time on the stop day the schedule should stop.</li> <li>- The Call Routing or Announcement Mailbox used to answer the calls.</li> </ul> </li> <li>• <b>3. Date</b> A type 3 Answer Schedule runs only on a specific day of the year. For this type of schedule, you select: <ul style="list-style-type: none"> <li>- The specific date the schedule should run.</li> <li>- On the selected date, the time the schedule should start.</li> <li>- On the selected date, the time the schedule should stop.</li> <li>- The Call Routing or Announcement Mailbox used to answer the calls.</li> </ul> </li> </ul>

Item No.	Item	Input Data	Default	Description
02	<b>Answering Mailbox Category</b> (Entryxx MB Ctg) Use this option to specify the category of mailbox to which Automated Attendant calls should route when the schedule is in effect. If the Answering Mailbox is a <b>Station Mailbox</b> , the outside caller hears the mailbox greeting (if recorded) and can leave a message. If the Answering Mailbox is a <b>Group Mailbox</b> , the outside caller hears the recorded announcement. Depending on how the Announcement Mailbox is programmed, InMail then hangs up, reroutes the call, or provides additional dialing options. If the Answering Mailbox is a <b>Routing Mailbox</b> , the outside caller hears the instruction menu and can dial any option allowed by the associated Dial Action Table.	0 = Undefined 1 = Station Mailbox 2 = Group Mailbox 3 = Routing Mailbox	Answer Table 1/ Schedule 1 = 3 All Other Schedules = 0	Category 0 = Skip Mailbox No. setting Category 1 = Mailbox No. should be 1 ~ 128. refer to <47-02 : InMail Station Mailbox Options> Category 2 = Mailbox No. should be 1 ~ 32. refer to <47-03 : InMail Group Mailbox Options> Category 3 = Mailbox No. should be 1 ~ 32. refer to <47-07 : InMail Routing Mailbox Options>
	<b>Answering Mailbox Number</b> (Entryxx MB Num) Use this option to set the number of the Answering Mailbox the Automated Attendant uses when the selected schedule is in effect. This mailbox is defined in 47-12-02 : Answering Mailbox Category.	Up to 3 digits (using 0 ~ 9)	Answer Table 1/ Schedule 1 = 1 All Other Answer Schedules = No Setting	Category 0 = Skip Mailbox No. setting Category 1 = Mailbox No. should be 1 ~ 128. refer to <47-02 : InMail Station Mailbox Options> Category 2 = Mailbox No. should be 1 ~ 32. refer to <47-03 : InMail Group Mailbox Options> Category 3 = Mailbox No. should be 1 ~ 32. refer to <47-07 : InMail Routing Mailbox Options>
03	<b>Day of the Week</b> (Entryxx Day) For Day of the Week (Type 1) Answer Schedules, use this option to select the day of the week the Answer Schedule should be active.	1 = Sunday 2 = Monday 3 = Tuesday 4 = Wednesday 5 = Thursday 6 = Friday 7 = Saturday	All Schedules = 1	
04	<b>Start Day</b> (Entryxx Start Day) For Range of Days (Type 2) Answer Schedules, use this option to select the day of the week the Answer Schedule should start.	1 = Sunday 2 = Monday 3 = Tuesday 4 = Wednesday 5 = Thursday 6 = Friday 7 = Saturday	Answer Table 1/ Schedule 1 = 2 All Other Schedules = 1	
05	<b>End Day</b> (Entryxx End Day) For Range of Days (Type 2) Answer Schedules, use this option to select the day of the week the Answer Schedule should end.	1 = Sunday 2 = Monday 3 = Tuesday 4 = Wednesday 5 = Thursday 6 = Friday 7 = Saturday	Answer Table 1/ Schedule 1 = 6 All Other Answer Schedules = 1	

Item No.	Item	Input Data	Default	Description
06	<b>Date</b> (Entryxx Date) For Date (Type 3) Answer Schedules, use this option to select the date the Answer Schedule should be active.	MMDD For example : - 0101 = January 1 - 1231 = December 31 (0000 = Undefined)	All Schedule = 0000	
07	<b>Schedule Start Time</b> (Entryxx Start Time) Use this option to specify the time the Answer Schedule should start. It applies to Day of the Week (Type 1), Range of Days (Type 2), and Date (Type 3) schedules. (To make a schedule run continuously, make the same entry for 47-12-07 : Schedule Start Time and 47-12-08 : Schedule End Time.)	HHMM (24-hour clock) For example : - 0130 = 1 : 30 AM - 1700 = 5 : 00 PM (0000 = Undefined)	Answer Table 1/ Schedule 1 = 0830 All other schedules are 0000.	
08	<b>Schedule End Time</b> (Entryxx End Time) Use this option to specify the time the Answer Schedule should end. It applies to Day of the Week (Type 1), Range of Days (Type 2), and Date (Type 3) schedules. (To make a schedule run continuously, make the same entry for 47-12-07 : Schedule Start Time and 47-12-08 : Schedule End Time.)	HHMM (24-hour clock) For example : - 0130 = 1 : 30 AM - 1700 = 5 : 00 PM (0000 = Undefined)	Answer Table 1/ Schedule 1 = 1700 All Other Schedules = 0000	

## Conditions

None

---

## Feature Cross Reference

None



# Program 47 : InMail

## 47-13 : InMail Dial Action Tables

Level:

**IN**

---

### Description

Use **Program 47-13 : InMail Dial Action Tables** to set up the InMail Dial Action Tables. The Dial Action Table defines the options than an Automated Attendant caller can dial. A Dial Action Table is associated with a Call Routing Mailbox, which is in turn associated with an Answer Table. When an Answer Table is active, its associated Call Routing Mailbox selects the Dial Action Table which provides dialing options to callers. The illustration below shows how this works in a default InMail system. There are 32 Dial Action Tables.

### Input Data

Dial Action Table Number	1 ~ 32
Key Number	1 ~ 9: 1 ~ 9 10: 0 11: * 12: # 13: Timeout

Item No.	Name	Input Data	Description
01	Action	0 = UND (Undefined) 1 = TRF (Transfer) 2 = UTRF (Unscreened Transfer) 3 = REC1 4 = REC2 5 = LOGON 6 = Hang Up 7 = GOTO	<ul style="list-style-type: none"> <li>• TRF Action - Screened Transfer (1) (TRF)</li> <li>• UTRF Action - Unscreened Transfer (2) (UTRF)</li> <li>• REC1 Action - Quick Message With Greeting (3) (REC1)</li> <li>• REC2 Action - Quick Message Without Greeting (4) (REC2)</li> <li>• LOGON Action - Log Onto Voice Mail (5) (LOGON)</li> <li>• Hang Up Action (6) (HNGUP)</li> <li>• GOTO Action - Go to Mailbox (7) (GOTO)</li> <li>• UND Action - Undefined Routing (0) (UND)</li> </ul>
	Data	Up to 8 digits (0 ~ 9, *, #) X = Caller Dialed Digits I = Ignore Digits N = No Routing P = Pause	<ul style="list-style-type: none"> <li>• <b>Digits</b>            Entry : 0 ~ 9, #, and * (8 digits max.)            Use Dial Action Table digits to route an Automated Attendant call to a specific location (such as an extension). For example, to set up a TRF Action to route to extension 305, for 3 enter TRF for the Action and 305 for the corresponding Number.</li> <li>• <b>Caller Dialed Digits</b>            Entry : <b>X</b>(Entered by pressing LK2)            Use the X option to route an Automated Attendant call based on digits the caller dials. Each X entry represents one caller dialed digit. For example, to set up a TRF Action to route to any caller dialed extension in the 301 ~ 399 range, for 3 enter TRF for the Action and XXX for the corresponding Number.</li> <li>• <b>Ignore Digits</b>            Entry : <b>I</b>(Entered by pressing LK3)            Use the I option to represent any digit dialed by the Automated Attendant caller that PZ-VM21 InMail ignores for routing. An example of this is REC action assigned to the * key in Dial Action Table 1 by default. The Action is REC2 and the Number is IXXX. This means that a caller can dial * + any mailbox number to leave a Quick Message in that mailbox. InMail ignores the first digit dialed by the caller (*), and routes according to the next 3 digits dialed.</li> <li>• <b>No Routing</b>            Entry : <b>N</b>(Entered by pressing LK1)            Use the N option when you want no Automated Attendant routing to automatically occur. This can be used with the LOGON action when you want to prompt the caller to enter a mailbox number. To do this for the # key (for example), for the # key enter LOGON for the Action and N for the corresponding Number. When the caller dials #, they hear, Please enter the mailbox number. Or, to exit, press the pound key.</li> <li>• <b>Pause</b>            Entry : <b>P</b>(Entered by pressing LK4)            Use the P option when you want the Automated Attendant to pause while dialing.</li> </ul>

## Defaults

Dial Action Table Default Settings				
Key	Dial Action Table 1		Dial Action Table 2 ~ 32	
	Action	Data	Action	Data
1	2 (UTRF)	XXX	0 (UND)	No Setting
2	2 (UTRF)	XXX	0 (UND)	No Setting
3	2 (UTRF)	XXXX	0 (UND)	No Setting
4	0 (UND)	No Setting	0 (UND)	No Setting
5	0 (UND)	No Setting	0 (UND)	No Setting
6	0 (UND)	No Setting	0 (UND)	No Setting
7	0 (UND)	No Setting	0 (UND)	No Setting

Dial Action Table Default Settings				
Key	Dial Action Table 1		Dial Action Table 2 ~ 32	
	Action	Data	Action	Data
8	0 (UND)	No Setting	0 (UND)	No Setting
9	6 (Hang Up)	No Setting	0 (UND)	No Setting
10	2 (UTRF)	101	0 (UND)	No Setting
11	3 (REC1)	IXXX	0 (UND)	No Setting
12	5 (LOGON)	IXXX	0 (UND)	No Setting
13	2 (UTRF)	101	0 (UND)	No Setting



*TIMEOUT provides the routing for rotary dial callers.*

Note
<p>If Action is set 0 or 6 skip Data setting.            "XXX"= change as it fit            The "Data" data needs to follow these rules below.            0 (UND) = none            1 (TRF) = dial data (any), X, I, N, or P            2 (UTRF) = dial data (any), X, I, N, or P            3 (REC1) = mailbox number (subscriber or group)            4 (REC2) = mailbox number (subscriber or group)            5 (LOGON) = mailbox number (subscriber or group)            6 (HANGUP) = none            7 (GOTO) = routing mailbox number index (1 ~ 32)            Otherwise it will not be routed properly.</p>

## Conditions

None

---

## Feature Cross Reference

None

# Program 47 : InMail

## 47-15 : Routing Directory Mailbox Options

Level:

**IN**

---

### Description

Use **Program 47-15 : Routing Directory Mailbox Options** to define the Routing Directory Mailbox Options. This data is referred if Program 47-07-02 (Routing Master Mailbox Type) was set to Type 3 (Directory).

### Input Data

Master Mailbox Number	1 ~ 32
-----------------------	--------

Item No.	Item	Input Data	Default
01	Minimum Number of Letters Required	1 ~ 3	1
02	Directory List Number to Use	1 ~ 8	1
03	Name Match	0 = First 1 = Last	0
04	Transfer Option	0 = TRF 1 = UTRF	0
05	Screened Transfer Timeout	0 ~ 255	15
06	Time Limit for Dialing Commands	0 ~ 99	5
07	Fax Detection	0 = Disable 1 = Enable	0
08	Next Call Routing Mailbox	0 ~ 32	0
09	Fax Extension	Up to eight digits	No Setting

### Conditions

None

---

### Feature Cross Reference

None

# Program 47 : InMail

## 47-17 : Routing Distribution Mailbox Options

Level:

**IN**

---

### Description

Use **Program 47-17 : Routing Distribution Mailbox Options** to assign data when Program 47-07-02 is set to 4 (Distribution).

### Input Data

Routing Mailbox Number	1 ~ 32
------------------------	--------

Entry Number	01 ~ 20
--------------	---------

Item No.	Item	Input Data	Description	Default
01	<b>Distribution Mailbox Category</b> Use Undefined (0) to skip Mailbox Number setting. Use Station Mailbox (1) for setting Mailbox Number to 1 ~ 896 (Program 47-02). Use Group Number (2) for setting Group Mailbox (1 ~ 32) (Program 47-03).	0 = Undefined 1 = Station Mailbox 2 = Group Mailbox	Category 1 = Mailbox No. should be 1 ~ 896. refer to < <a href="#">47-02 : InMail Station Mailbox Options</a> > Category 2 = Mailbox No. should be 1 ~ 32. refer to < <a href="#">47-03 : InMail Group Mailbox Options</a> >	0
	<b>Distribution Mailbox Number</b>	Up to 3 digits	Category 1 = Mailbox No. should be 1 ~ 896. refer to < <a href="#">47-02 : InMail Station Mailbox Options</a> > Category 2 = Mailbox No. should be 1 ~ 32. refer to < <a href="#">47-03 : InMail Group Mailbox Options</a> >	No Setting

### Conditions

None

---

### Feature Cross Reference

None

# Program 47 : InMail

## 47-18 : SMTP Setup

Level:

**IN**

---

### Description

Use Program 47-18 : SMTP Setup to set the SNMP e-mail notification.

### Input Data

Item No.	Item	Input Data	Default
01	SMTP Enabled	0 = No 1 = Yes	0
02	Server Name	Up to 48 characters	No Setting
03	SMTP Port	0 ~ 65535	25
04	Encryption	0 = No 1 = Yes	0
05	Authentication	0 = No 1 = Yes 2 = POP3	0
06	User Name	Up to 48 characters	No Setting
07	Password	Up to 48 characters	No Setting
08	E-mail Address	Up to 48 characters	No Setting
09	Reply to Address	Up to 48 characters	No Setting

### Conditions

None

---

### Feature Cross Reference

None

# Program 47 : InMail

## 47-19 : POP3 Setup

Level:

**IN**

---

### Description

Use Program 47-19 : POP3 Setup to set the InMail e-mail notification.

### Input Data

Item No.	Item	Input Data	Default
01	Server Name	Up to 48 characters	No Setting
02	POP3 Port	0 ~ 65535	110
03	Encryption	0 = No 1 = Yes	0
04	User Name	Up to 48 characters	No Setting
05	Password	Up to 48 characters	No Setting

### Conditions

None

---

### Feature Cross Reference

None

# Program 47 : InMail

## 47-20 : Station Mailbox Message Notification Options

Level:

**IN**

### Description

Use **Program 47-20 : Station Mailbox Message Notification Options** to define the IntraMail Station Mailbox Message Notification Options.

### Input Data

Station Mailbox Number	1 ~ 128
------------------------	---------

Index Number	1 ~ 5
--------------	-------

Item No.	Item	Input Data	Default
01	Notification	0 = Off 1 = On	0
02	Notification Begin Hour	00 ~ 23 (00 (12 : 00 AM) ~ 23 (11 : 00 PM))	00
03	Notification End Hour	00 ~ 23 (00 (12 : 00 AM) ~ 23 (11 : 00 PM))	00
04	Notification Type	0 = Undefined 1 = Voice 2 = Pager	1
05	Notification Number	Up to 16 digits	No Setting
06	Notification Busy Attempts	1 ~ 99 (attempts)	5
07	Notification RNA Attempts	1 ~ 99 (attempts)	5
08	Notification Security	0 = Off 1 = On	1
09	Notification Day of week - Sunday	0 = Disabled 1 = Enabled	1
10	Notification Day of week - Monday	0 = Disabled 1 = Enabled	1
11	Notification Day of week - Tuesday	0 = Disabled 1 = Enabled	1
12	Notification Day of week - Wednesday	0 = Disabled 1 = Enabled	1
13	Notification Day of week - Thursday	0 = Disabled 1 = Enabled	1
14	Notification Day of week - Friday	0 = Disabled 1 = Enabled	1
15	Notification Day of week - Saturday	0 = Disabled 1 = Enabled	1



**Conditions**

None

---

**Feature Cross Reference**

None

## Program 47 : InMail

### 47-21 : Station Mailbox Find-Me Follow-Me Options

Level:

**IN**

---

## Description

Use **Program 47-21 : Station Mailbox Find-Me Follow-Me Options** to define the IntraMail Station Mailbox Find-Me Follow-Me Options.

## Input Data

Station Mailbox Number	1 ~ 128
------------------------	---------

Index Number	1 ~ 3
--------------	-------

Item No.	Item	Input Data	Default
01	Find-Me Follow-Me	0 = Off 1 = On	0
02	Find-Me Follow-Me Begin Hour	00 ~ 23 (00 (12 : 00 AM) ~ 23 (11 : 00 PM))	00
03	Find-Me Follow-Me End Hour	00 ~ 23 (00 (12 : 00 AM) ~ 23 (11 : 00 PM))	00
04	Find-Me Follow-Me Number	Up to 16 digits	No Setting
05	Find-Me Follow-Me Day of week - Sunday	0 = Disabled 1 = Enabled	1
06	Find-Me Follow-Me Day of week - Monday	0 = Disabled 1 = Enabled	1
07	Find-Me Follow-Me Day of week - Tuesday	0 = Disabled 1 = Enabled	1
08	Find-Me Follow-Me Day of week - Wednesday	0 = Disabled 1 = Enabled	1
09	Find-Me Follow-Me Day of week - Thursday	0 = Disabled 1 = Enabled	1
10	Find-Me Follow-Me Day of week - Friday	0 = Disabled 1 = Enabled	1
11	Find-Me Follow-Me Day of week - Saturday	0 = Disabled 1 = Enabled	1

## Conditions

None

---

## Feature Cross Reference

None

# Program 47 : InMail

## 47-22 : Group Mailbox Message Notification Options

Level:

**IN**

### Description

Use **Program 47-22 : Group Mailbox Message Notification Options** to define the IntraMail Group Mailbox Message Notification Options.

### Input Data

Group Mailbox Number	1 ~ 32
----------------------	--------

Index Number	1 ~ 5
--------------	-------

Item No.	Item	Input Data	Default
01	Notification	0 = Off 1 = On	0
02	Notification Begin Hour	00 ~ 23 (00 (12 : 00 AM) ~ 23 (11 : 00 PM))	00
03	Notification End Hour	00 ~ 23 (00 (12 : 00 AM) ~ 23 (11 : 00 PM))	00
04	Notification Type	0 = Undefined 1 = Voice 2 = Pager	1
05	Notification Number	Up to 16 digits	No Setting
06	Notification Busy Attempts	1 ~ 99 (attempts)	5
07	Notification RNA Attempts	1 ~ 99 (attempts)	5
08	Notification Security	0 = Off 1 = On	1
09	Notification Day of week - Sunday	0 = Disabled 1 = Enabled	1
10	Notification Day of week - Monday	0 = Disabled 1 = Enabled	1
11	Notification Day of week - Tuesday	0 = Disabled 1 = Enabled	1
12	Notification Day of week - Wednesday	0 = Disabled 1 = Enabled	1
13	Notification Day of week - Thursday	0 = Disabled 1 = Enabled	1
14	Notification Day of week - Friday	0 = Disabled 1 = Enabled	1
15	Notification Day of week - Saturday	0 = Disabled 1 = Enabled	1

**Conditions**

None

---

**Feature Cross Reference**

None

## Program 47 : InMail

### 47-23 : Group Mailbox Find-Me Follow-Me Options

Level:

**IN**

#### Description

Use **Program 47-23 : Group Mailbox Find-Me Follow-Me Options** to define the IntraMail Group Mailbox Find-Me Follow-Me Options.

#### Input Data

Group Mailbox Number	1 ~ 32
----------------------	--------

Index Number	1 ~ 3
--------------	-------

Item No.	Item	Input Data	Default
01	Find-Me Follow-Me	0 = Off 1 = On	0
02	Find-Me Follow-Me Begin Hour	00 ~ 23 (00 (12 : 00 AM) ~ 23 (11 : 00 PM))	00
03	Find-Me Follow-Me End Hour	00 ~ 23 (00 (12 : 00 AM) ~ 23 (11 : 00 PM))	00
04	Find-Me Follow-Me Number	Up to 16 digits	No Setting
05	Find-Me Follow-Me Day of week - Sunday	0 = Disabled 1 = Enabled	1
06	Find-Me Follow-Me Day of week - Monday	0 = Disabled 1 = Enabled	1
07	Find-Me Follow-Me Day of week - Tuesday	0 = Disabled 1 = Enabled	1
08	Find-Me Follow-Me Day of week - Wednesday	0 = Disabled 1 = Enabled	1
09	Find-Me Follow-Me Day of week - Thursday	0 = Disabled 1 = Enabled	1
10	Find-Me Follow-Me Day of week - Friday	0 = Disabled 1 = Enabled	1
11	Find-Me Follow-Me Day of week - Saturday	0 = Disabled 1 = Enabled	1

#### Conditions

None

#### Feature Cross Reference

None

# Program 80 : Basic Hardware Setup for System

## 80-01 : Service Tone Setup

Level:

**IN**

### Description

Use **Program 80-01 : Service Tone Setup** to define up to 64 Service Tones. Each service tone is defined by the combination of 32 Basic Tones.

### Input Data

Service Tone Number	1 ~ 64
---------------------	--------

Item No.	Item	Input Data	Default
01	Repeat Count	0 ~ 255 (0 = Endless)	Refer below

Unit Number	1 ~ 8
-------------	-------

Item No.	Item	Input Data	Default
02	Basic Tone Number	0 ~ 33 (0 = No Tone) (33 = Default Time Slot)	Refer below
03	Duration Count	0 ~ 255 (0, 50 ~ 12750 ms)	Refer below
04	Gain Level (dB)	0 ~ 57 (0, - 15.5 ~ + 12.5)	Refer below

**Table 2-17 Basic Tones**

Basic Tone No.	Frequency (Hz)	Level (dB)
01	400	- 13
02	520	- 13
03	580	- 13
04	660	- 13
05	700	- 13
06	800	- 13
07	880	- 13
08	1050	- 13
09	350 / 440	1
10	440 / 480	1
11	480 / 620	1
12	440	-16
13	-- Reserve --	-
14	520 / 650	-19 / -13

Basic Tone No.	Frequency (Hz)	Level (dB)
15	650 / 780	-19 / -13
16	780 / 1040	-19 / -13
17	520 / 650	-13 / -19
18	650 / 780	-13 / -19
19	780 / 1040	-13 / -19
20	1040	-13
21	450	-13
22	950	-13
23	1800	-13
24	400 / 450	1
25	-- Reserve --	-
26	-- Reserve --	-
27	-- Reserve --	-
28	-- Reserve --	-
29	-- Reserve --	-
30	-- Reserve --	-
31	-- Reserve --	-
32	-- Reserve --	-

## Default

Service Tone No.	Service Tone Name	Repeat Count	Unit Count	Basic Tone No.	Duration	Gain Level (dB)
1	No tone	0	1	0	20	32 (0 dB)
2	Internal Dial Tone	0	1	9	20	32 (0 dB)
				0	4	32 (0 dB)
				9	2	32 (0 dB)
				0	2	32 (0 dB)
				9	2	32 (0 dB)
				0	2	32 (0 dB)
				9	154	32 (0 dB)
4	Internal Recall Dial Tone	2	2	9	2	32 (0 dB)
				0	2	32 (0 dB)
5	Trunk Dial Tone	0	1	9	20	32 (0 dB)
6	Internal Busy Tone	0	2	0	10	20 (- 6 dB)
				11	10	20 (- 6 dB)
7	DND Busy Tone	0	2	0	4	32 (0 dB)
				1	4	32 (0 dB)
8	B-busy Tone	0	2	0	10	20 (- 6 dB)
				11	10	20 (- 6 dB)
9	Internal Reorder Tone	0	2	11	6	20 (- 6 dB)
				0	4	20 (- 6 dB)
10	Internal Interrupt Tone	0	2	11	6	20 (- 6 dB)
				0	4	20 (- 6 dB)
11	Internal Confirmation Tone	3	2	0	2	32 (0 dB)
				9	2	32 (0 dB)
12	Internal Hold Tone	0	0	0	0	32 (0 dB)
13	External Hold Tone	0	0	0	0	32 (0 dB)

Service Tone No.	Service Tone Name	Repeat Count	Unit Count	Basic Tone No.	Duration	Gain Level (dB)
14	Internal Ring-back Tone (Internal Audible Ring)	0	2	10	20	20 (- 6 dB)
				0	60	20 (- 6 dB)
15	Override Tone	1	1	12	10	32 (0 dB)
16	Lock-out Tone	0	2	0	2	32 (0 dB)
				6	2	32 (0 dB)
17	Clock alarm tone	0	4	6	2	32 (0 dB)
				0	2	32 (0 dB)
				6	2	32 (0 dB)
				0	14	32 (0 dB)
18	BGM	0	0	0	0	32 (0 dB)
19	Doorphone chime 1	3	6	4	4	38 (+ 3 dB)
				4	4	26 (- 3 dB)
				2	6	38 (+ 3 dB)
				2	8	26 (- 3 dB)
				2	12	14 (- 9 dB)
				0	10	32 (0 dB)
20	Doorphone chime 2	3	6	7	4	38 (+ 3 dB)
				7	4	26 (- 3 dB)
				5	6	38 (+ 3 dB)
				5	8	26 (- 3 dB)
				5	12	14 (- 9 dB)
				0	10	32 (0 dB)
21	Doorphone chime 3	3	6	8	4	38 (+ 3 dB)
				8	4	26 (- 3 dB)
				6	6	38 (+ 3 dB)
				6	8	26 (- 3 dB)
				6	12	14 (- 9 dB)
				0	10	32 (0 dB)
22	Doorphone chime 4	3	6	4	2	38 (+ 3 dB)
				4	2	26 (- 3 dB)
				2	4	38 (+ 3 dB)
				2	4	26 (- 3 dB)
				2	6	14 (- 9 dB)
				0	4	32 (0 dB)
23	Doorphone chime 5	3	6	7	2	38 (+ 3 dB)
				7	2	26 (- 3 dB)
				5	4	38 (+ 3 dB)
				5	4	26 (- 3 dB)
				5	6	14 (- 9 dB)
				0	4	32 (0 dB)
24	Doorphone chime 6	3	6	8	2	38 (+ 3 dB)
				8	2	26 (- 3 dB)
				6	4	38 (+ 3 dB)
				6	4	26 (- 3 dB)
				6	6	14 (- 9 dB)
				0	4	32 (0 dB)
25	Service Set Tone	3	2	0	2	32 (0 dB)
				9	2	32 (0 dB)
26	Service Clear Tone	3	2	0	2	32 (0 dB)
				9	2	32 (0 dB)
27	Talk-Back Tone	2	2	0	2	32 (0 dB)
				6	2	32 (0 dB)
28	Speaker Monitor Tone	1	2	0	2	32 (0 dB)
				6	2	32 (0 dB)
29	Door Relay Tone	1	2	0	2	32 (0 dB)
				6	2	32 (0 dB)
30	Doorphone Call Tone	1	2	0	2	32 (0 dB)
				6	2	32 (0 dB)



Service Tone No.	Service Tone Name	Repeat Count	Unit Count	Basic Tone No.	Duration	Gain Level (dB)
31	Paging Tone	2	2	0 6	2 2	32 (0 dB) 32 (0 dB)
32	Splash Tone 1	1	2	0 6	2 2	32 (0 dB) 32 (0 dB)
33	Splash Tone 2	2	2	0 6	2 2	32 (0 dB) 32 (0 dB)
34	Splash Tone 3	3	2	0 6	2 2	32 (0 dB) 32 (0 dB)
35	1 Sec Signal Tone	1	1	6	20	32 (0 dB)
36	External audible ring tone	0	2	10 0	20 60	32 (0 dB) 32 (0 dB)
37	External reorder tone	0	2	0 11	4 6	32 (0 dB) 32 (0 dB)
38	External busy tone	0	2	0 11	10 10	32 (0 dB) 32 (0 dB)
39	Special audible ring- busy tone	0	6	0 11 0 11 10 0	10 10 10 10 20 40	32 (0 dB) 32 (0 dB) 32 (0 dB) 32 (0 dB) 32 (0 dB) 32 (0 dB)
40	Internal Call Waiting Tone	1	1	12	4	32 (0 dB)
41	Intrusion tone	1	1	12	10	32 (0 dB)
42	Conference tone	0	0	0	0	32 (0 dB)
43	Intrusion tone 2	0	0	0	0	32 (0 dB)
44	External Dial Tone	0	1	9	2	26 (- 3 dB)
45	External Ring Back Tone	0	2	10 0	20 60	32 (0 dB) 32 (0 dB)
46	External Busy Tone	0	2	0 11	10 10	32 (0 dB) 32 (0 dB)
47	Number unobtainable tone	0	1	11	0	32 (0 dB)
48	VM message indication tone	0	2	9 0	2 2	32 (0 dB) 32 (0 dB)
49	--Not Used --	0	0	0	0	32 (0 dB)
50	External special audible ring tone	0	3	10 12 0	20 4 60	32 (0 dB) 32 (0 dB) 32 (0 dB)
51	External intercept tone	0	2	12 4	6 4	32 (0 dB) 32 (0 dB)
52	External call waiting tone	1	1	12	6	32 (0 dB)
53	External executive override tone	1	1	12	20	32 (0 dB)
54	ProgressTone	0	2	0 1	12 2	32 (0 dB) 32 (0 dB)
55	Generate tone for TAPI2.1	0	1	3	0	32 (0 dB)
56	Warning Beep Tone Signaling	1	1	2	16	32 (0 dB)
57	Headset Ear Piece Ringing Tone	0	5	0 2 0 2 0	4 2 2 2 40	32 (0 dB) 32 (0 dB) 32 (0 dB) 32 (0 dB) 32 (0 dB)

Service Tone No.	Service Tone Name	Repeat Count	Unit Count	Basic Tone No.	Duration	Gain Level (dB)
58	Opening Chime tone	1	8	2	4	32 (0 dB)
				2	4	26 (- 3 dB)
				14	4	32 (0 dB)
				14	4	26 (- 3 dB)
				15	4	32 (0 dB)
				15	4	26 (- 3 dB)
				16	12	32 (0 dB)
				16	8	26 (- 3 dB)
59	Ending Chime tone	1	8	20	4	32 (0 dB)
				20	4	26 (- 3 dB)
				19	4	32 (0 dB)
				19	4	26 (- 3 dB)
				18	4	32 (0 dB)
				18	4	26 (- 3 dB)
				17	12	32 (0 dB)
				17	8	26 (- 3 dB)
60	Splash tone 1 (Mute)	1	2	0	2	8 (- 12 dB)
				6	2	8 (- 12 dB)
61	Splash tone 2 (Mute)	2	2	0	2	8 (- 12 dB)
				6	2	8 (- 12 dB)
62	Splash tone 3 (Mute)	3	2	0	2	8 (- 12 dB)
				6	2	8 (- 12 dB)
63	EXT SPK Ring- back Tone	0	2	10	20	32 (0 dB)
				0	60	32 (0 dB)
64	Special Hold Tone	0	4	11	4	35 (+ 1.5 dB)
				0	6	32 (0 dB)
				11	4	35 (+ 1.5 dB)
				0	24	32 (0 dB)

### Conditions

- The system must be reset for any changes to these items to take affect.

---

### Feature Cross Reference

- Selectable Ring Tones

# Program 80 : Basic Hardware Setup for System

## 80-02 : DTMF Tone Setup

Level:

**MF**

### Description

Use **Program 80-02 : DTMF Tone Setup** to define the duration (On time) and pause (Off time) for DTMF dialing. This option affects all trunk line calls system wide. Make separate entries for duration and pause. It is also possible to adjust the level of both high and low frequency tone.

### Input Data

Item No.	Item	Input Data	Default
01	Duration	1 ~ 255	5 (100 ms)
02	Pause	1 ~ 255	5 (100 ms)
03	Tone Level (Low) (dB)	1 ~ 97 (- 45.0 ~ 0 = + 3)	65 (- 13 dB)
04	Tone Level (High)	1 ~ 97 (- 45.0 ~ 0 = + 3)	69 (- 11 dB)



### Conditions

None

### Feature Cross Reference

None

# Program 80 : Basic Hardware Setup for System

## 80-03 : DTMF Tone Receiver Setup

Level:

**MF**

### Description

Use **Program 80-03 : DTMF Tone Receiver Setup** to define the various levels and timers for the DTMF Tone Receiver.

DTMF Tone Receiver Type :

- 1 = DTMF Receiver for Extension
- 2 = DTMF Receive for Trunk1
- 3 = DTMF Receive for Trunk2
- 4 = DTMF Receive for Trunk3
- 5 = -- Reserve --

### Input Data

DTMF Tone Receiver Type Number	1 = DTMF Receiver for Extension 2 = DTMF Receive for Trunk1 3 = DTMF Receive for Trunk2 4 = DTMF Receive for Trunk3 5 = -- Reserve --
--------------------------------	---

Item No.	Item	Input Data	Description	Default
01	<b>Detect Level</b>	0 = 0 dBm ~ - 25 dBm 1 = - 5 dBm ~ - 30 dBm 2 = - 10 dBm ~ - 35 dBm 3 = - 15 dBm ~ - 40 dBm 4 = - 20 dBm ~ - 45 dBm 5 = - 25 dBm ~ - 50 dBm 6 = - 30 dBm ~ - 55 dBm	Used to select the systems DTMF tone detection levels.	Refer below
02	<b>Start Delay Time</b>	0 ~ 255 (0.25 ms ~ 64 ms)		Refer below
03	<b>Min. Detect Level</b>	0 ~ 15 DTMF Tone 0 = - 10 dBm (0) to - 25 dBm (15) DTMF Tone 1 = - 15 dBm (0) to - 30 dBm (15) DTMF Tone 2 = - 20 dBm (0) to - 35 dBm (15) DTMF Tone 3 = - 25 dBm (0) to - 40 dBm (15) DTMF Tone 4 = - 30 dBm (0) to - 45 dBm (15) DTMF Tone 5 = - 35 dBm (0) to - 50 dBm (15) DTMF Tone 6 = - 40 dBm (0) to - 55 dBm (15)		Refer below

Item No.	Item	Input Data	Description	Default
04	<b>Max. Detect Level</b>	0 ~ 15 DTMF Tone 0 = 0 dBm (0) to - 15 dBm (15) DTMF Tone 1 = - 5 dBm (0) to - 20 dBm (15) DTMF Tone 2 = - 10 dBm (0) to - 25 dBm (15) DTMF Tone 3 = - 15 dBm (0) to - 30 dBm (15) DTMF Tone 4 = - 20 dBm (0) to - 35 dBm (15) DTMF Tone 5 = - 25 dBm (0) to - 40 dBm (15) DTMF Tone 6 = - 30 dBm (0) to - 45 dBm (15)		Refer below
05	<b>Forward Twist Level</b>	0 ~ 9 (1 dB ~ 10 dB)		Refer below
06	<b>Backward Twist Level</b>	0 ~ 9 (1 dB ~ 10 dB)		Refer below
07	<b>ON Detect Time</b>	1 ~ 255 (15 + 15 ms ~ 3825 ms)		Refer below
08	<b>OFF Detect Time</b>	1 ~ 255 (15 + 15 ms ~ 3825 ms)		Refer below
10	<b>Sensitivity Level</b>	0 ~ 1	sensitivity level 0: normal sensitivity level 1: improve Mis-detection for talking	Refer below

## Default

Item No	Item	Type 1	Type 2	Type 3	Type 4	Type 5
01	<b>Detect Level</b>	0	0	0	0	0
02	<b>Start delay time</b>	0	0	0	0	0
03	<b>Min. detect level</b>	10 (- 20 dBm)	15 (- 25 dBm)	15 (- 25 dBm)	10 (- 20 dBm)	10 (- 20 dBm)
04	<b>Max. detect level</b>	2 (- 2 dBm)	2 (- 2 dBm)	2 (- 2 dBm)	2 (- 2 dBm)	2 (- 2 dBm)
05	<b>Forward twist level</b>	5 (6 dBm)	5 (6 dBm)	5 (6 dBm)	5 (6 dBm)	5 (6 dBm)
06	<b>Backward twist level</b>	0 (1 dBm)	0 (1 dBm)	0 (1 dBm)	0 (1 dBm)	0 (1 dBm)
07	<b>ON detect time</b>	3 (60 ms)	2 (60 ms)	3 (60 ms)	3 (60 ms)	3 (60 ms)
08	<b>OFF detect time</b>	2 (45 ms)	1 (30 ms)	2 (45 ms)	2 (45 ms)	2 (45 ms)
10	<b>Sensitivity Level</b>	0	0	0	0	0

## Conditions

None

---

## Feature Cross Reference

None

# Program 80 : Basic Hardware Setup for System

## 80-04 : Call Progress Tone Detector Setup

Level:

**MF**

### Description

Use **Program 80-04 : Call Progress Tone Detector Setup** to define the various levels and timers for the Call Progress Tone Detector.

Tone Detector Type :

- 1 = Dial Tone for Trunk
- 2 = Busy Tone for Trunk
- 3 = Ring Back Tone for Trunk
- 4 = Reorder Tone for Trunk
- 5 = Stutter Tone for Trunk

### Input Data

Tone Detector Type Number	1 = Dial Tone for Trunk 2 = Busy Tone for Trunk 3 = Ring Back Tone for Trunk 4 = Reorder Tone for Trunk 5 = Stutter Tone for Trunk
---------------------------	--

Item No.	Item	Input Data	Default
01	Detection Level	0 = 0 dBm ~ - 25 dBm 1 = - 5 dBm ~ - 30 dBm 2 = - 10 dBm ~ - 35 dBm 3 = - 15 dBm ~ - 40 dBm 4 = - 20 dBm ~ - 45 dBm 5 = - 25 dBm ~ - 50 dBm 6 = - 30 dBm ~ - 55 dBm	Refer below
02	Min. Detection Level	0 ~ 15 0 = - 10 dBm (0) ~ - 25 dBm (15) 1 = - 15 dBm (0) ~ - 30 dBm (15) 2 = - 20 dBm (0) ~ - 35 dBm (15) 3 = - 25 dBm (0) ~ - 40 dBm (15) 4 = - 30 dBm (0) ~ - 45 dBm (15) 5 = - 35 dBm (0) ~ - 50 dBm (15) 6 = - 40 dBm (0) ~ - 55 dBm (15)	Refer below
03	S/N Ratio	0 ~ 4 (0 dB ~ - 20 dB)	Refer below
04	No Tone Time	0 ~ 255 (30 + 30 ~ 7680 ms) (0 = not detect) 1 ~ 255 = 60 ~ 7680 ms The formula is 30 + 30N When set to N = 1, it means 30 + 30 * 1 = 60. When set to N = 255, it means 30 + 30 * 255 = 7680.	Refer below
05	Pulse Count	0 ~ 255	Refer below
06	ON Minimum Time	0 ~ 255 (30 + 30 ~ 7680 ms)	Refer below
07	ON Maximum Time	0 ~ 255 (30 + 30 ~ 7680 ms)	Refer below

Item No.	Item	Input Data	Default
08	OFF Minimum Time	0 ~ 255 (30 + 30 ~ 7680 ms)	Refer below
09	OFF Maximum Time	0 ~ 255 (30 + 30 ~ 7680 ms)	Refer below
12	Frequency No. 1	1 ~ 8 (Frequency Table No. set by 80-07)	Refer below
13	Frequency No. 2	0 ~ 8 (0 = Not Used) (Frequency Table No. set by 80-07)	Refer below

## Default

Item	Name	Type 1 (DT)	Type 2 (BT)	Type 3 (RBT)	Type 4	Type 5
1	Detect Level	0	0	0	0	0
2	Min. detect level	15 (- 25 dBm)	15 (- 25 dBm)	15 (- 25 dBm)	15 (- 25 dBm)	1
3	S/N ratio	4 (- 20 dB)	4 (- 20 dB)	4 (- 20 dB)	1	0
4	No tone time	132 (3990 ms)	132 (3990 ms)	132 (3990 ms)	132 (3990 ms)	0
5	Pulse Count	1	1	1	2	2
6	ON min. time	45 (1380 ms)	12 (390 ms)	23 (720 ms)	3 (120 ms)	5
7	ON max. time	0	20 (630 ms)	74 (2250 ms)	13 (420 ms)	15
8	OFF min. time	1 (60 ms)	12 (390 ms)	59 (1800 ms)	3 (120 ms)	2
9	OFF max. time	1 (60 ms)	20 (630 ms)	232 (6990 ms)	13 (420 ms)	5
12	Frequency No 1	1	3	2	3	1
13	Frequency No 2	2	4	3	4	2
14	Twist Level	0	0	0	0	0

## Conditions

None

---

## Feature Cross Reference

None

# Program 80 : Basic Hardware Setup for System

## 80-05 : Date Format for SMDR and System

Level:

**MF**

---

### Description

Use **Program 80-05 : Date Format for SMDR and System** to define the date format when printing out the SMDR, alarm report, and system information report.

### Input Data

Item No.	Item	Input Data	Default
01	Date Format	0 = American Format (Month / Day / Year) 1 = Japanese Format (Year / Month / Day) 2 = European Format (Day / Month / Year)	0

### Conditions

None

---

### Feature Cross Reference

None



# Program 80 : Basic Hardware Setup for System

## 80-07 : Call Progress Tone Detector Frequency Setup

Level:

**MF**

---

### Description

Use **Program 80-07 : Call Progress Tone Detector Frequency Setup** to set the frequency of the detection tone set with Program 80-04-12 and Program 80-04-13.

### Input Data

Frequency Table Number	1 ~ 8
------------------------	-------

Item No.	Item	Input Data	Default
01	Frequency	0, 10 ~ 255 (100 ~ 2550 Hz) (0 = Not used)	Frequency Table No. 1 = 35 (350 Hz) Frequency Table No. 2 = 44 (440 Hz) Frequency Table No. 3 = 48 (480 Hz) Frequency Table No. 4 = 62 (620 Hz) Frequency Table No. 5 = 110 (1100 Hz) Frequency Table No. 6 = 0 Frequency Table No. 7 = 0 Frequency Table No. 8 = 0

### Conditions

None

---

### Feature Cross Reference

None

# Program 80 : Basic Hardware Setup for System

## 80-09 : Short Ring Setup

Level:

**IN**

### Description

Use **Program 80-09 : Short Ring Setup** to define the short ring tone for multiline terminals.

### Input Data

Short Ring Number	1 ~ 32
-------------------	--------

Item No.	Item	Input Data	Description	Default
01	Frequency 1	0 = No Setting, 1 ~ 15	Refer to <a href="#">Table 2-18 Frequency 1/2 Table</a> .	Refer below
02	Frequency 2	0 = No Setting, 1 ~ 15	Refer to <a href="#">Table 2-18 Frequency 1/2 Table</a> .	Refer below
03	Ring Cycle	0 = No Setting, 1 ~ 14	Refer to <a href="#">Table 2-19 Ring Cycle Table</a> .	Refer below



*When a single tone is sent, Frequency 1/2 is set to the same value.*

**Table 2-18 Frequency 1/2 Table**

Data	Frequency (Hz)
1	392
2	440
3	494
4	523
5	587
6	659
7	698
8	784
9	880
10	988
11	1046
12	1175
13	1318
14	1397
15	1568

**Table 2-19 Ring Cycle Table**

Data	Ring Cycle (ms)
1	125 (On) / Off
2	125 (On) / 125 (Off) / 125 (On) / Off
3	125 (On) / 125 (Off) / 125 (On) / 125 (Off) / 125 (On) / Off
4	125 (On) / 125 (Off) / 125 (On) / 125 (Off) / 125 (On) / 125 (Off) / 125 (On) / Off
5	250 (On) / Off
6	250 (On) / 250 (Off) / 250 (On) / Off
7	250 (On) / 250 (Off) / 250 (On) / 250 (Off) / 250 (On) / Off
8	250 (On) / 250 (Off) / 250 (On) / 250 (Off) / 250 (On) / 250 (Off) / 250 (On) / Off
9	325 (On) / Off
10	325 (On) / 325 (Off) / 325 (On) / Off
11	325 (On) / 325 (Off) / 325 (On) / 325 (Off) / 325 (On) / Off
12	500 (On) / Off
13	500 (On) / 500 (Off) / 500 (On) / Off
14	1000 (On) / Off

**Table 2-20 Default Table**

Short Ring No.	Short Tone Name	Frequency 1	Frequency 2	Ring Cycle
1	Confirmation Tone	8	8	1
2	Error Tone	8	8	14
3	Alarm Tone for long conversation call	4	4	14
4	Not defined	0	0	0
:	:	:	:	:
32	Not defined	0	0	0

**Conditions**

None

**Feature Cross Reference**

None

# Program 80 : Basic Hardware Setup for System

## 80-10 : MF Tone Receiver Setup

Level:

**MF**

### Description

Use **Program 80-10 : MF Tone Receiver Setup** to define the various level and time for MF Tone Receiver.

### Input Data

MF Tone Receiver Type Number	1 = MF Receiver for Extension 2 = MF Receiver for Trunk 3 = -- Reserve -- 4 = -- Reserve -- 5 = -- Reserve --
------------------------------	---

Item No.	Item	Input Data	Default
01	Detection Level	0 = 0 dBm ~ - 25 dBm 1 = - 5 dBm ~ - 30 dBm 2 = - 10 dBm ~ - 35 dBm 3 = - 15 dBm ~ - 40 dBm 4 = - 20 dBm ~ - 45 dBm 5 = - 25 dBm ~ - 50 dBm 6 = - 30 dBm ~ - 55 dBm	Refer below
02	Start delay time	0 ~ 255 (0.25 step, 0 ms ~ 64 ms)	Refer below
03	Min. detect level	0 ~ 15 detect level 0 = - 10 dBm (0) ~ - 25 dBm (15) detect level 1 = - 15 dBm (0) ~ - 30 dBm (15) detect level 2 = - 20 dBm (0) ~ - 35 dBm (15) detect level 3 = - 25 dBm (0) ~ - 40 dBm (15) detect level 4 = - 30 dBm (0) ~ - 45 dBm (15) detect level 5 = - 35 dBm (0) ~ - 50 dBm (15) detect level 6 = - 40 dBm (0) ~ - 55 dBm (15)	Refer below
04	Max. detect level	0 ~ 15 detect level 0 = 0 dBm (0) ~ - 15 dBm (15) detect level 1 = - 5 dBm (0) ~ - 20 dBm (15) detect level 2 = - 10 dBm (0) ~ - 25 dBm (15) detect level 3 = - 15 dBm (0) ~ - 30 dBm (15) detect level 4 = - 20 dBm (0) ~ - 35 dBm (15) detect level 5 = - 25 dBm (0) ~ - 40 dBm (15) detect level 6 = - 30 dBm (0) ~ - 45 dBm (15)	Refer below
05	twist level	0 ~ 9 (1 dB ~ 10 dB)	Refer below
06	S/N ratio	0 ~ 4 (- 5 step, 0 dB ~ - 20 dB)	Refer below
07	ON detect time	1 ~ 255 (15 + 15 ms ~ 3825 ms)	Refer below
08	OFF detect time	1 ~ 255 (15 + 15 ms ~ 3825 ms)	Refer below

**Default**

Item No.	Item Name	Type 1	Type 2	Type 3	Type 4	Type 5
01	Detect Level	0	0	0	0	0
02	Start delay time	0	0	0	0	0
03	Min. detect level	10 (- 20 dBm)	10 (- 20 dBm)	10 (- 20 dBm)	10 (- 20 dBm)	10 (- 20 dBm)
04	Max. detect level	2 (- 2 dBm)	2 (- 2 dBm)	2 (- 2 dBm)	2 (- 2 dBm)	2 (- 2 dBm)
05	twist level	5 (6 dBm)	5 ( 6 dBm)	5 (6 dBm)	5 (6 dBm)	5 (6 dBm)
06	S/N ratio	2 (- 10 dBm)	2 (- 10 dBm)	2 (- 10 dBm)	2 (- 10 dBm)	2 (- 10 dBm)
07	ON detect time	1 (30 ms)	1 (30 ms)	1 (30 ms)	1 (30 ms)	1 (30 ms)
08	OFF detect time	1 (30 ms)	1 (30 ms)	1 (30 ms)	1 (30 ms)	1 (30 ms)

**Conditions**

None

**Feature Cross Reference**

None

# Program 80 : Basic Hardware Setup for System

## 80-12 : Caller ID Receiver Setup

Level:

**IN**

---

### Description

Use **Program 80-12 : Caller ID Receiver Setup** defines the type and level for Caller ID detection of DSP.

### Input Data

Item No.	Item	Input Data	Default
01	Type	0 = NTT 1 = Other 2 = Korea	1
02	Level (Mark)	0 ~ 32766	50
03	Level (Space)	0 ~ 32766	50
04	Bit Sampling Type	0 = Other 1 = Malaysia	0
05	1st Bit Offset	0 ~ 32766	10
06	Minimum Seizure Count	0 ~ 32766	10
07	Guard Time when Mark	0 ~ 32766	1
08	CAS detect time	0 = 20 ms 1 = 25 ms 2 = 30 ms 3 = 35 ms 4 = 40 ms 5 = 45 ms 6 = 50 ms 7 = 55 ms 8 = 60 ms 9 = 65 ms 10 = 70 ms 11 = 75 ms 12 = 80 ms	0 = 20 ms

### Conditions

None

---

### Feature Cross Reference

None

# Program 80 : Basic Hardware Setup for System

## 80-13 : DTMF Tone Receiver Setup 2

Level:

**MF**

---

### Description

Use **Program 80-13 : DTMF Tone Receiver Setup 2** defines the various level and timer for DTMF Tone Receiver.

### Input Data

Received dial	1 ~ 9, 0, *, #, A, B, C, D
---------------	----------------------------

Item No.	Item	Input Data	Default
01	Detect Level	1 ~ 15 = - 7 ~ + 7	8

### Conditions

None

---

### Feature Cross Reference

None

# Program 80 : Basic Hardware Setup for System

## 80-14 : DTMF Tone Receiver Setup 3

Level:

**MF**

---

### Description

Use **Program 80-14 : DTMF Tone Receiver Setup 3** defines the various level and timer for DTMF Tone Receiver.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Detect Level	1 ~ 13 = - 6 ~ + 6		7
02	Detect Type	0 = Type1 1 = Type2	Type1: normal Type2: improvement of DTMF misdetection.	0

### Conditions

None

---

### Feature Cross Reference

None



# Program 81 : Basic Hardware Setup for Trunk

## 81-01 : CO Initial Data Setup

Level:

**IN**

### Description

Use **Program 81-01 : CO Initial Data Setup** to define the various basic data parameters for the COIU.

### Input Data

Item No.	Item	Input Data	Default
01	PCM Encoding Method Specification	0 = $\mu$ -law 1 = A-law	0 ( $\mu$ -law)
02	Loop Current Detection Time	1 ~ 255 (10 ~ 2550 ms)	60 (600 ms)
03	Clear Signal (Open Loop) Detection Time	1 ~ 255 (5 ~ 1275 ms)	61 (305 ms)
04	Ringling Signal Detection Minimum Time	1 ~ 255 (10 ~ 2550 ms)	10 (100 ms)
05	Single Ringing Detection Minimum Time	0 ~ 255 (0, 10 ~ 2550 ms)	66 (660 ms)
06	Double Ringing Detection Minimum Off Time	0 ~ 255 (0, 10 ~ 2550 ms)	10 (100 ms)
07	Double Ringing Detection Maximum Off Time	0 ~ 255 (0, 10 ~ 2550 ms)	40 (400 ms)
08	Ringling Signal not Detection Minimum	1 ~ 255 (10 ~ 2550 ms)	70 (700 ms)
09	Time Ringing Signal Stop Detection Time	1 ~ 255 (100 ~ 25500 ms)	60 (6000 ms)
10	Continuous Ringing Minimum Time	0 ~ 255 (0, 10 ~ 2550 ms)	30 (300 ms)
11	Continuous Ringing Maximum Time	0 ~ 255 (0, 10 ~ 2550 ms)	70 (700 ms)
14	Hook Flash 1 Time	1 ~ 255 (10 ~ 2550 ms)	80 (800 ms)
15	Hook Flash 2 Time	1 ~ 255 (100 ~ 25500 ms)	25 (2500 ms)
16	Pause Time	1 ~ 255 (100 ~ 25500 ms)	10 (1000 ms)
17	PFT Idle Detection Time	1 ~ 255 (100 ~ 25500 ms)	30 (3000 ms)
20	Loop Reverse Detect Minimum Time	1 ~ 255 (10 ~ 2550 ms)	10 (100 ms)
21	Loop Reverse Detect Maximum Time	1 ~ 255 (10 ~ 2550 ms)	86 (860 ms)
22	Loop Disconnect Detect Minimum Time	1 ~ 255 (10 ~ 2550 ms)	40 (400 ms)

Item No.	Item	Input Data	Default
23	Loop Disconnect Detect Maximum Time	1 ~ 255 (10 ~ 2550 ms)	64 (640 ms)
27	Dial Pulse Break Time (10pps)	1 ~ 255 (5 ~ 1275 ms)	12 (60 ms)
28	Dial Pulse Make Time (10pps)	1 ~ 255 (5 ~ 1275 ms)	8 (40 ms)
29	DP Inter-digit Time (10pps)	1 ~ 255 (10 ~ 2550 ms)	80 (800 ms)
36	Long Ringing Detection Minimum Time	1 ~ 255 (100 ~ 25500 ms)	24 (2400 ms)

### Conditions

None

---

### Feature Cross Reference

None

# Program 81 : Basic Hardware Setup for Trunk

## 81-05 : ISDN BRI & PRI Layer 2 (T-Point) Initial Data Setup

Level:

**MF**

---

### Description

Use **Program 81-05 : ISDN BRI & PRI Layer 2 (T-Point) Initial Data Setup** to define the various basic data for layer 2 of ISDN BRI and PRI.

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>Timer T200</b>	1 ~ 255 (100 ~ 25500 ms)	Specify the timer value in 1/100ths of a second at the end of which transmission of a frame may be initiated.	10 (1 sec)
02	<b>Timer T201</b>	1 ~ 255 (100 ~ 25500 ms)	Specify the minimum time in 1/100ths of a second between retransmissions of the TEI Identity check messages.	10 (1 sec)
03	<b>Timer T202</b>	1 ~ 255 (100 ~ 25500 ms)	Specify the minimum time in 1/100ths of a second between retransmissions of the TEI Identity check messages.	20 (2 sec)
04	<b>Timer T203</b>	1 ~ 255 (100 ~ 25500 ms)	Specify the maximum time in 1/100ths of a second allowed without exchanging frames.	250 (25 sec)
05	<b>N200</b>	1 ~ 255	Specify the retransmission count.	3
06	<b>N201</b>	1 ~ 65535 (Byte)	Specify the frame lengths in octets.	260
07	<b>N202</b>	1 ~ 255	Specify the maximum number of transmissions from a TEI identity request message when the user requests a TEI.	3

### Conditions

None

---

### Feature Cross Reference

None

# Program 81 : Basic Hardware Setup for Trunk

## 81-06 : ISDN BRI & PRI Layer 3 (T-Point) Timer Setup

Level:

**IN**

### Description

Use **Program 81-06 : ISDN BRI & PRI Layer 3 (T-Point) Timer Setup** to define the various basic timers for layer 3 of ISDN BRI/PRI (defined in Program 10-03-04).

### Input Data

Layer 3 Timer Type Number	1 ~ 5
---------------------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>T301</b>	0, 180 ~ 254 seconds	Specifies the timer value in 1/100ths of a second of the timer to be started when the ALERT message is received.	180
02	<b>T302</b>	1 ~ 254 seconds	Specifies the timer value in 1/100ths of a second of the timer to be started when the SETUP ACK is sent. Timer is also restarted when INFO is received.	15
03	<b>T303</b>	1 ~ 254 seconds	Specifies the timer value in 1/100ths of a second of the timer to be started when SETUP is sent.	4
04	<b>T304</b>	0 ~ 254 seconds	Specifies the timer value in 1/100ths of a second of the timer to be started when the SETUP ACK is received. Timer is also restarted when INFO is received.	30
05	<b>T305</b>	1 ~ 254 seconds	Specifies the timer value in 1/100ths of a second of the timer to be started when DISC without progress No. 8 is sent.	30
06	<b>T306</b>	0 ~ 254 seconds	Specifies the timer value in 1/100ths of a second of the timer to be started when DISC with progress indicator No. 8 is sent. This timer is valid for Network side use only.	30
07	<b>T307</b>	1 ~ 254 seconds	Specifies the timer value in 1/100ths of a second of the timer to be started when SUSPEND ACK is sent. This timer is valid only for Network side use only.	180
08	<b>T308</b>	1 ~ 254 seconds	Specifies the timer value in 1/100ths of a second of the timer to be started when REL is sent.	4
09	<b>T309</b>	1 ~ 254 seconds	Specifies the timer value in 1/100ths of a second upon data link disconnection.	90
10	<b>T310</b>	0 ~ 180 seconds	Specifies the timer value in 1/100ths of a second of the timer to be started when CALL PROC is sent.	180

Item No.	Item	Input Data	Description	Default
11	T311	1 ~ 254 seconds	Specifies the timer value in 1/100ths of a second of the timer to be started when SETUP is sent or re-sent on broadcast data link. This timer is only valid for Network side use only.	6
12	T312	1 ~ 254 seconds	Specifies the timer value in 1/100ths of a second of the timer to be started when connection request is sent. Valid range 1 ~ 4 seconds in 1 second increments. Value of 0 indicates timer not used.	4
13	T313	1 ~ 254 seconds	Specifies the timer value in 1/100ths of a second of the timer to be started when message segment is received.	4
14	T314	(T317 + 1) ~ 254 seconds	Specifies the timer value in 1/100ths of a second of the timer to be started when RE-START is sent.	120
15	T315	1 ~ (T316-1)	Specifies the timer value in 1/100ths of a second of the timer to be started when RE-START is received.	60
16	T316	1 ~ 254 seconds	Specifies the timer value in 1/100ths of a second of the timer to be started when RES is sent. This timer is valid for user side use only.	4
17	T317	1 ~ 254 seconds	Specifies the timer value in 1/100ths of a second of the timer to be started when SUSPEND is sent. This timer is valid for user side use only.	4
18	T318	1 ~ 254 seconds	Specifies the timer value in 1/100ths of a second when B-channel access: connection is received or D-channel access: DL-ESTABLISH confirmation or indication is received.	30
19	T319	1 ~ 254 seconds	Specifies the timer value in 1/100ths of a second of the timer to be started when STATUS ENQ is received.	30
20	T320	1 ~ 254 seconds	Specifies the timer value in 1/100ths of a second upon D-channel failure.	4

## Conditions

None

---

## Feature Cross Reference

- ISDN Compatibility

# Program 81 : Basic Hardware Setup for Trunk

## 81-07 : CODEC Filter Setup for Analog Trunk Port

Level:

**IN**

### Description

Use **Program 81-07 : CODEC Filter Setup for Analog Trunk Port** to define the CODEC (QSLAC) Filter for each analog trunk port.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Default
01	CODEC Filter Type	0 = No filter 1 = Type 1: Line loss 0dB 2 = Type 2: Line loss 4dB 3 = Type 3: Line loss 8dB 4 = Type 4: Not Used 5 = Type 5: Line loss 2dB 6 = Type 6: Line loss 10dB 7 = Type 7: Not Used 8 = Type 8: North America 9 = Type 9: Not Used 10 = Type 10: Not Used 11 = Type 11: Not Used 12 = Type 12: Not Used 13 = Type 13: Not Used 14 = Type 14: 600 ohms 0dB 15 = Type 15: Not Used	2(: Type 2: Line loss 4dB)

### Conditions

- When the Side Tone level was so loud or small on the default, check the Side Tone by a customer site using the following data and establish something best for the side tone.
- Do not change the data from the default when the side tone is no problem.

### Feature Cross Reference

None

# Program 81 : Basic Hardware Setup for Trunk

## 81-08 : T1 Trunk Timer Setup

Level:

**IN**

### Description

Use **Program 81-08 : T1 Trunk Timer Setup** to define the basic timer setting of each T1 Trunk type.

### Input Data

Item No.	Item	Input Data	Default
01	Answer Signal Detection Time (Loop)	1 ~ 250 (4 ms ~ 1000 ms)	15 (60 ms)
02	Answer Signal Detection Time (Ground)	1 ~ 250 (4 ms ~ 1000 ms)	15 (60 ms)
03	Answer Signal Detection Time (DID)	1 ~ 250 (4 ms ~ 1000 ms)	15 (60 ms)
04	Answer Signal Detection Time (E&M)	1 ~ 250 (4 ms ~ 1000 ms)	15 (60 ms)
05	Answer Signal Detection Time (OPX)	1 ~ 250 (4 ms ~ 1000 ms)	15 (60 ms)
06	Clear Signal Detection Time (Loop)	1 ~ 255 (100 ms ~ 25500 ms)	6 (600 ms)
07	Clear Signal Detection Time (Ground)	1 ~ 255 (100 ms ~ 25500 ms)	6 (600 ms)
08	Clear Signal Detection Time (DID)	1 ~ 255 (100 ms ~ 25500 ms)	6 (600 ms)
09	Answer Signal Detection Time (E&M)	1 ~ 255 (100 ms ~ 25500 ms)	6 (600 ms)
10	Clear Signal Detection Time (OPX)	1 ~ 255 (100 ms ~ 25500 ms)	6 (600 ms)
11	Ringing Signal Detection Time (Loop)	1 ~ 250 (8 ms ~ 2000 ms)	10 (80 ms)
12	Ringing Signal Detection Time (Ground)	1 ~ 250 (8 ms ~ 2000 ms)	10 (80 ms)
13	Ringing Signal Detection Time (DID)	1 ~ 250 (8 ms ~ 2000 ms)	10 (80 ms)
14	Ringing Signal Detection Time (E&M)	1 ~ 250 (8 ms ~ 2000 ms)	10 (80 ms)
15	Ringing Signal Detection Time (OPX)	1 ~ 250 (8 ms ~ 2000 ms)	10 (80 ms)
16	Ringing Signal Stop Detection Time (Loop)	1 ~ 255 (100 ms ~ 25500 ms)	50 (5000 ms)
17	Ringing Signal Stop Detection Time (Ground)	1 ~ 255 (100 ms ~ 25500 ms)	50 (5000 ms)
18	Ringing Signal Stop Detection Time (DID)	1 ~ 255 (100 ms ~ 25500 ms)	50 (5000 ms)
19	Ringing Signal Stop Detection Time (E&M)	1 ~ 255 (100 ms ~ 25500 ms)	50 (5000 ms)

Item No.	Item	Input Data	Default
20	Ringing Signal Stop Detection Time (OPX)	1 ~ 255 (100 ms ~ 25500 ms)	50 (5000 ms)
21	Loop Current Detection Time (Loop)	1 ~ 250 (4 ms ~ 1000 ms)	40 (160 ms)
22	Loop Current Detection Time (Ground)	1 ~ 250 (4 ms ~ 1000 ms)	40 (160 ms)
23	Loop Current Detection Time (DID)	1 ~ 250 (4 ms ~ 1000 ms)	40 (160 ms)
24	Loop Current Detection Time (E&M)	1 ~ 250 (4 ms ~ 1000 ms)	40 (160 ms)
25	Loop Current Detection Time (OPX)	1 ~ 250 (4 ms ~ 1000 ms)	40 (160 ms)
26	DP Break Send Time (ALL)	1 ~ 250 (4 ms ~ 1000 ms)	15 (60 ms)
27	DP Make Send Time (ALL)	1 ~ 250 (4 ms ~ 1000 ms)	10 (40 ms)
28	DP InterDigit Send Time (ALL)	1 ~ 255 (100 ms ~ 25500 ms)	7 (700 ms)
29	HookFlash Send Time (Loop)	1 ~ 255 (100 ms ~ 25500 ms)	5 (500 ms)
30	HookFlash Send Time (Ground)	1 ~ 255 (100 ms ~ 25500 ms)	5 (500 ms)
31	HookFlash Send Time (DID)	1 ~ 255 (100 ms ~ 25500 ms)	5 (500 ms)
32	HookFlash Send Time (E&M)	1 ~ 255 (100 ms ~ 25500 ms)	5 (500 ms)
33	HookFlash Send Time (OPX)	1 ~ 255 (100 ms ~ 25500 ms)	5 (500 ms)
34	Pause Send Time (ALL)	1 ~ 255 (1 sec ~ 255 sec)	3 (3 sec)
35	Wink Send Duration Time (DID)	1 ~ 250 (8 ms ~ 2000 ms)	25 (200 ms)
36	Delay Send Duration Time (DID)	1 ~ 250 (8 ms ~ 2000 ms)	25 (200 ms)
37	Incoming-Wink Send Time (DID)	1 ~ 255 (100 ms ~ 25500 ms)	3 (300 ms)
38	Wink Send Duration Time (E&M)	1 ~ 250 (8 ms ~ 2000 ms)	25 (200 ms)
39	Delay Send Duration Time (E&M)	1 ~ 250 (8 ms ~ 2000 ms)	25 (200 ms)
40	Incoming-Wink Send Time (E&M)	1 ~ 255 (100 ms ~ 25500 ms)	3 (300 ms)
41	Seizure-WINK/DELAY Receive Max. Time (DID)	1 ~ 255 (100 ms ~ 25500 ms)	48 (4800 ms)
42	Receive Wink Duration Min. Time (DID)	1 ~ 250 (8 ms ~ 2000 ms)	12 (96 ms)
43	Receive Wink Duration Max. Time (DID)	1 ~ 250 (8 ms ~ 2000 ms)	45 (360 ms)
44	Seizure-WINK/DELAY Receive Max. Time (E&M)	1 ~ 255 (100 ms ~ 25500 ms)	48 (4800 ms)
45	Receive Wink Duration Min. Time (E&M)	1 ~ 250 (8 ms ~ 2000 ms)	12 (96 ms)
46	Receive Wink Duration Max. Time (E&M)	1 ~ 250 (8 ms ~ 2000 ms)	45 (360 ms)
47	Receive DP Make Min. Time (ALL)	1 ~ 250 (4 ms ~ 1000 ms)	3 (12 ms)
48	Receive DP Make Max. Time (ALL)	1 ~ 250 (4 ms ~ 1000 ms)	19 (76 ms)
49	Receive DP Break Min. Time (ALL)	1 ~ 250 (4 ms ~ 1000 ms)	3 (12 ms)
50	Receive DP Break Max. Time (ALL)	1 ~ 250 (4 ms ~ 1000 ms)	25 (100 ms)
51	Receive DP InterDigit Min. Time (ALL)	1 ~ 250 (4 ms ~ 1000 ms)	125 (500 ms)
52	Receive HookFlash Duration Min. Time (E&M)	1 ~ 255 (100 ms ~ 25500 ms)	3 (300 ms)
53	Receive HookFlash Duration Max. Time (E&M)	1 ~ 255 (100 ms ~ 25500 ms)	6 (600 ms)



Item No.	Item	Input Data	Default
54	Receive HookFlash Duration Min. Time (OPX)	1 ~ 255 (100 ms ~ 25500 ms)	3 (300 ms)
55	Receive HookFlash Duration Max. Time (OPX)	1 ~ 255 (100 ms ~ 25500 ms)	6 (600 ms)
56	Loop Off Guard Time (Loop)	1 ~ 255 (100 ms ~ 25500 ms)	20 (2000 ms)
57	Loop Off Guard Time (Ground)	1 ~ 255 (100 ms ~ 25500 ms)	20 (2000 ms)
58	Loop Off Guard Time (DID)	1 ~ 255 (100 ms ~ 25500 ms)	20 (2000 ms)
59	Loop Off Guard Time (E&M)	1 ~ 255 (100 ms ~ 25500 ms)	20 (2000 ms)
60	Loop Off Guard Time (OPX)	1 ~ 255 (100 ms ~ 25500 ms)	20 (2000 ms)
61	Double Ringing Send Time 1 (OPX)	1 ~ 255 (100 ms ~ 25500 ms)	5 (500 ms)
62	Double Between Ringing Send Time 1 (OPX)	1 ~ 255 (100 ms ~ 25500 ms)	5 (500 ms)
63	Double Ringing Send Time 2 (OPX)	1 ~ 255 (100 ms ~ 25500 ms)	25 (2500 ms)
64	Double Between Ringing Send Time 2 (OPX)	1 ~ 255 (100 ms ~ 25500 ms)	30 (3000 ms)
65	Single Ringing Send Time (OPX)	1 ~ 255 (100 ms ~ 25500 ms)	10 (1000 ms)
66	Single Between Ringing Send Time (OPX)	1 ~ 255 (100 ms ~ 25500 ms)	9 (900 ms)
67	Guard Time 1 (LOOP)	1 ~ 255 (100 ms ~ 25500 ms)	9 (900 ms)
68	Guard Time 1 (GROUND)	1 ~ 255 (100 ms ~ 25500 ms)	9 (900 ms)
69	Guard Time 1 (DID)	1 ~ 255 (100 ms ~ 25500 ms)	9 (900 ms)
70	Guard Time 1 (E&M)	1 ~ 255 (100 ms ~ 25500 ms)	9 (900 ms)
71	Guard Time 1 (OPX)	1 ~ 255 (100 ms ~ 25500 ms)	9 (900 ms)
72	Guard Time 2 (ALL)	1 ~ 250 (4 ms ~ 1000 ms)	3 (12 ms)
73	Dial Sending Complete Time	1 ~ 255 (100 ms ~ 25500 ms)	20 (2000 ms)
74	ON-HOOK bit Send Time	1 ~ 255 (100 ms ~ 25500 ms)	40 (4000 ms)
75	Open Loop Time (LOOP)	1 ~ 255 (100 ms ~ 25500 ms)	6 (600 ms)
76	Open Loop Time (GROUND)	1 ~ 255 (100 ms ~ 25500 ms)	6 (600 ms)
77	Open Loop Time (DID)	1 ~ 255 (100 ms ~ 25500 ms)	6 (600 ms)
78	Open Loop Time (E&M)	1 ~ 255 (100 ms ~ 25500 ms)	6 (600 ms)
79	Open Loop Time (OPX)	1 ~ 255 (100 ms ~ 25500 ms)	6 (600 ms)
80	Close Loop Time (LOOP)	1 ~ 250 (4 ms ~ 1000 ms)	13 (52 ms)
81	Close Loop Time (DID)	1 ~ 250 (4 ms ~ 1000 ms)	13 (52 ms)
82	Ring GND Time (GROUND)	1 ~ 250 (4 ms ~ 1000 ms)	13 (52 ms)

## Conditions

None

---

## Feature Cross Reference

None

# Program 81 : Basic Hardware Setup for Trunk

## 81-09 : COT CODEC (QSLAC) Filter Setting

Level:

**IN**

### Description

Use **Program 81-09 : COT CODEC (QSLAC) Filter Setting** to define the filter setting data (when Program 81-07 is set to 4).

### Input Data

Item No.	Item	Input Data	Default
01	B1 Filter Setup (1)	0 ~ 255	43
02	B1 Filter Setup (2)	0 ~ 255	102
03	B1 Filter Setup (3)	0 ~ 255	228
04	B1 Filter Setup (4)	0 ~ 255	58
05	B1 Filter Setup (5)	0 ~ 255	75
06	B1 Filter Setup (6)	0 ~ 255	189
07	B1 Filter Setup (7)	0 ~ 255	58
08	B1 Filter Setup (8)	0 ~ 255	194
09	B1 Filter Setup (9)	0 ~ 255	45
10	B1 Filter Setup (10)	0 ~ 255	194
11	B1 Filter Setup (11)	0 ~ 255	219
12	B1 Filter Setup (12)	0 ~ 255	45
13	B1 Filter Setup (13)	0 ~ 255	178
14	B1 Filter Setup (14)	0 ~ 255	208
15	B2 Filter Setup (1)	0 ~ 255	178
16	B2 Filter Setup (2)	0 ~ 255	208
17	AIN and Analog Gains	0 ~ 255	17
18	Z Filter Coefficients (1)	0 ~ 255	250
19	Z Filter Coefficients (2)	0 ~ 255	173
20	Z Filter Coefficients (3)	0 ~ 255	50
21	Z Filter Coefficients (4)	0 ~ 255	165
22	Z Filter Coefficients (5)	0 ~ 255	59
23	Z Filter Coefficients (6)	0 ~ 255	70
24	Z Filter Coefficients (7)	0 ~ 255	106
25	Z Filter Coefficients (8)	0 ~ 255	175
26	Z Filter Coefficients (9)	0 ~ 255	163
27	Z Filter Coefficients (10)	0 ~ 255	79
28	Z Filter Coefficients (11)	0 ~ 255	179
29	Z Filter Coefficients (12)	0 ~ 255	83

Item No.	Item	Input Data	Default
30	Z Filter Coefficients (13)	0 ~ 255	84
31	Z Filter Coefficients (14)	0 ~ 255	31
32	Z Filter Coefficients (15)	0 ~ 255	1
33	R Filter Coefficients (1)	0 ~ 255	170
34	R Filter Coefficients (2)	0 ~ 255	192
35	R Filter Coefficients (3)	0 ~ 255	187
36	R Filter Coefficients (4)	0 ~ 255	32
37	R Filter Coefficients (5)	0 ~ 255	203
38	R Filter Coefficients (6)	0 ~ 255	42
39	R Filter Coefficients (7)	0 ~ 255	171
40	R Filter Coefficients (8)	0 ~ 255	165
41	R Filter Coefficients (9)	0 ~ 255	42
42	R Filter Coefficients (10)	0 ~ 255	35
43	R Filter Coefficients (11)	0 ~ 255	67
44	R Filter Coefficients (12)	0 ~ 255	91
45	R Filter Coefficients (13)	0 ~ 255	43
46	R Filter Coefficients (14)	0 ~ 255	37
47	X Filter Coefficients (1)	0 ~ 255	202
48	X Filter Coefficients (2)	0 ~ 255	48
49	X Filter Coefficients (3)	0 ~ 255	37
50	X Filter Coefficients (4)	0 ~ 255	187
51	X Filter Coefficients (5)	0 ~ 255	170
52	X Filter Coefficients (6)	0 ~ 255	189
53	X Filter Coefficients (7)	0 ~ 255	162
54	X Filter Coefficients (8)	0 ~ 255	163
55	X Filter Coefficients (9)	0 ~ 255	165
56	X Filter Coefficients (10)	0 ~ 255	204
57	X Filter Coefficients (11)	0 ~ 255	164
58	X Filter Coefficients (12)	0 ~ 255	165
59	GR Filter Coefficients (1)	0 ~ 255	202
60	GR Filter Coefficients (2)	0 ~ 255	160
61	GX Filter Coefficients (1)	0 ~ 255	58
62	GX Filter Coefficients (2)	0 ~ 255	178

### Conditions

- This is used if Program 81-07 is set to 4 (Specified data).

---

## Feature Cross Reference

None

# Program 81 : Basic Hardware Setup for Trunk

## 81-19 : Operation For Market Setup

Level:

**MF**

### Description

This program defines the various basic data for the market function of PKG.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	ISDN BRI&PRI Operation for market	0 = Normal 1 = China 2 = Taiwan 3 = Hong kong 4 = Italy 5 = Russia 6 = EU1 7 = EU2 8 = EU3 9 = EU4	The setting for market is including from 81-19-01 to 81-19-20. Refer to the following chart.	0	81-19-01 ~ 81-19-20

81-18-01	81-19-																			
	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
1	1	0	0	0	0	0	0	0	0	0	0	1	0	1	0	0	0	0	0	0
2	1	1	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0
3	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0
4	0	0	1	1	1	1	1	0	1	1	1	0	0	0	0	0	0	1	0	0
5	0	0	0	0	0	0	0	1	0	0	0	0	1	0	0	0	0	0	0	0
6	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	0	0	0
7	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	0	0	1
8	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	0	0	2
9	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	0	0	3

### Conditions

None

### Feature Cross Reference

None

# Program 81 : Basic Hardware Setup for Trunk

## 81-20 : ISDN PRI Function Setup

Level:

**MF**

### Description

This program defines the various basic data for the function of ISDN PRI.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	Layer3 information element check	0 = normal 1 = special		0	81-18-01
02	Setup information element check	0 = normal 1 = special		0	81-18-01
03	The sending of information message	0 = disable 1 = enable		0	81-18-01
04	Restart detection operation	0 = normal 1 = special		0	81-18-01
05	Setup detection operation	0 = normal 1 = special		0	81-18-01
06	Notify detection operation	0 = normal 1 = special		0	81-18-01
07	Setuppack detection operation	0 = normal 1 = special		0	81-18-01
08	Layer3 message detection operation	0 = normal 1 = special	special: The Layer3 message detection operation in abnormal state.	0	81-18-01
09	T301 timeout extension	0 = disable 1 = enable	enable: 10 times value of T301 is set.	0	81-18-01 81-06-01
10	T304 timeout extension	0 = disable 1 = enable	enable: 10 times value of T304 is set.	0	81-18-01 81-06-04
11	T303 timeout operation	0 = normal 1 = special	special: In case of the T303 timeout, the release message is sent to system.	0	81-18-01
12	T305 timeout operation	0 = normal 1 = special	special: In case of the T305 timeout, the release message with CAUSE102 is sent to outside.	0	81-18-01
13	T203 enable (T-point)	0 = disable 1 = enable		0	81-18-01
14	PRI Layer2 error detection operation	0 = normal 1 = special		0	81-18-01
15	PRI outstanding pluse one operation	0 = normal 1 = special		0	81-18-01
16	BRI CRC error detection operation	0 = normal 1 = special		0	81-18-01

Item No.	Item	Input Data	Description	Default	Related Program
17	PRI l frame reception operation(SA-PI64)	0 = normal 1 = special		0	81-18-01
18	BRI Bch disconnection disable	0 = disable 1 = enable		0	81-18-01
19	Bch loopback	0 = disable 1 = enable		0	81-18-01
20	PRI Layer1 parameter	0 = normal 1 = type1 2 = type2 3 = type3	type1 : test parameter1 type2 : test parameter2 type3 : test parameter3	0	81-18-01

### Conditions

None

---

### Feature Cross Reference

None

# Program 82 : Basic Hardware Setup for Extension

## 82-01 : Incoming Ring Tone

Level:

**MF**

### Description

Use **Program 82-01 : Incoming Ring Tone** to set the incoming ring tones, which are the tones a user hears when a call rings an extension. These tones are grouped into four ring tone *Ranges* (1 ~ 4), also called patterns, that consist of a combination of frequencies. (You assign a specific *Range* to trunks in Program 22-03 and to extensions in Program 15-02.) Within each range there are three frequency *Types* : High, Middle and Low. (Service Code 720 allows users to choose the *Type* for their incoming calls.) Each *Type* in turn consists of two frequencies and the modulation played simultaneously to make up the tone. These frequencies are determined by their Frequency Number selected in Items 1 and 2 (see below). In this program, you assign the two *Frequency Numbers* and *Modulation* for each Type, for each of the four *Ranges*. The chart below shows the default *Frequency Numbers* for each *Type* in each *Range*.

### Input Data

Incoming Ringing Tone Number	1 = Trunk Ring Tone Range 1 2 = Trunk Ring Tone Range 2 3 = Trunk Ring Tone Range 3 4 = Trunk Ring Tone Range 4 5 = Extension Ring Tone Range 6 = Sensor Tone Range 7 = Trunk Ring Tone Range 5 8 = Trunk Ring Tone Range 6 9 = Trunk Ring Tone Range 7 10 = Trunk Ring Tone Range 8
------------------------------	---

Ring Tone Type Number	1 = High 2 = Middle 3 = Low
-----------------------	-----------------------------------

Item No.	Item	Input Data	Default
01	Frequency 1	1 = 520 Hz 2 = 540 Hz 3 = 660 Hz 4 = 760 Hz 5 = 1100 Hz 6 = 1400 Hz 7 = 2000 Hz	Refer below
02	Frequency 2	1 = 520 Hz 2 = 540 Hz 3 = 660 Hz 4 = 760 Hz 5 = 1100 Hz 6 = 1400 Hz 7 = 2000 Hz	Refer below

Item No.	Item	Input Data	Default
03	<b>Modulation</b>	0 = No Modulation 1 = 8 Hz Modulation 2 = 16 Hz Modulation 3 = Envelope	Refer below

## Default

**Table 2-21 82-01 Default Table**

Incoming Ringing Tone Number	Tone Type	Frequency 1 (Hz)	Frequency 2 (Hz)	Modulation
Pattern 1 (Trunk Incoming)	High Mid Low	1100 Hz 660 Hz 520 Hz	1400 Hz 760 Hz 660 Hz	16 Hz Modulation 16 Hz Modulation 16 Hz Modulation
Pattern 2 (Trunk Incoming)	High Mid Low	1100 Hz 660 Hz 520 Hz	1400 Hz 760 Hz 660 Hz	8 Hz Modulation 8 Hz Modulation 8 Hz Modulation
Pattern 3 (Trunk Incoming)	High Mid Low	2000 Hz 1400 Hz 1100 Hz	760 Hz 660 Hz 540 Hz	16 Hz Modulation 16 Hz Modulation 16 Hz Modulation
Pattern 4 (Trunk Incoming)	High Mid Low	2000 Hz 1400 Hz 1100 Hz	760 Hz 660 Hz 540 Hz	8 Hz Modulation 8 Hz Modulation 8 Hz Modulation
Pattern 5 (Intercom Incoming Pattern)	High Mid Low	1100 Hz 660 Hz 520 Hz	1400 Hz 760 Hz 660 Hz	8 Hz Modulation 8 Hz Modulation 8 Hz Modulation
Pattern 6 (Alarm Sensor Pattern)	High Mid Low	760 Hz 760 Hz 760 Hz	760 Hz 760 Hz 760 Hz	No Modulation No Modulation No Modulation
Pattern 7 (Trunk Incoming)	High Middle Low	1400Hz 760Hz 660Hz	540Hz 540Hz 540Hz	16Hz Modulation 16Hz Modulation 16Hz Modulation
Pattern 8 (Trunk Incoming)	High Middle Low	1400Hz 760Hz 660Hz	540Hz 540Hz 540Hz	8Hz Modulation 8Hz Modulation 8Hz Modulation
Pattern 9 (Trunk Incoming)	High Middle Low	2000Hz 2000Hz 1100Hz	1100Hz 540Hz 760Hz	16Hz Modulation 16Hz Modulation 16Hz Modulation
Pattern 10 (Trunk Incoming)	High Middle Low	2000Hz 2000Hz 1100Hz	1100Hz 540Hz 760Hz	8Hz Modulation 8Hz Modulation 8Hz Modulation

## Conditions

None

## Feature Cross Reference

- Distinctive Ringing Tones and Flash Patterns
- Selectable Ring Tones



# Program 82 : Basic Hardware Setup for Extension

## 82-04 : SLIU Initial Data Setup

Level:

**MF**

---

### Description

Use Program 82-04 : SLIU Initial Data Setup to set the basic data of the SLT.

### Input Data

Item No.	Item	Input Data	Default
01	Companding Method Type	0 = $\mu$ -law 1 = A-law	0
02	Ringing Frequency	0 = 25 Hz 1 = 20 Hz 2 = 16 Hz	1 (20 Hz)
03	Minimum Break Time	1 ~ 255 (5 ms ~ 1275 ms)	2 (10 ms)
04	Maximum Break Time	1 ~ 255 (5 ms ~ 1275 ms)	20 (100 ms)
05	Minimum Make Time	1 ~ 255 (5 ms ~ 1275 ms)	2 (10 ms)
06	Maximum Make Time	1 ~ 255 (5 ms ~ 1275 ms)	20 (100 ms)
07	Minimum Hook Flash Time	1 ~ 255 (5 ms ~ 1275 ms)	21 (105 ms)
08	Maximum Hook Flash Time	1 ~ 255 (5 ms ~ 1275 ms)	132 (660 ms)
09	Minimum Ground Flash Time	1 ~ 255 (5 ms ~ 1275 ms)	21 (105 ms)
10	Minimum Off-Hook Time	1 ~ 255 (5 ms ~ 1275 ms)	21 (105 ms)
11	No Detection Time after Off-Hook	1 ~ 255 (5 ms ~ 1275 ms)	60 (300 ms)
12	No Detection Time after Pulse Dial Detection	1 ~ 255 (5 ms ~ 1275 ms)	70 (350 ms)
13	Loop Disconnect Time, Reversal Time	1 ~ 255 (10 ms ~ 2550 ms)	60 (600 ms)
14	Ring, Message Wait Period Time	1 ~ 255 (5 ms ~ 1275 ms)	150 (750 ms)
15	Door Phone button ON time	1 ~ 255 (5ms ~ 1275 ms)	50 (250 ms)
16	Door Phone button OFF time	1 ~ 255 (5ms ~ 1275 ms)	20 (100 ms)

### Conditions

None

---

### Feature Cross Reference

None

# Program 82 : Basic Hardware Setup for Extension

## 82-05 : ISDN PRI Layer2 (S-Point) Initial Data Setup

Level:

**MF**

---

### Description

Use **Program 82-05 : ISDN PRI Layer2 (S-Point) Initial Data Setup** to set the basic data for the Layer 2 of ISDN PRI S-Point.

### Input Data

Item No.	Item	Input Data	Default
01	Timer T200	1 ~ 255 (100 ~ 25500 ms)	10 (1 sec)
02	Timer T201	1 ~ 255 (100 ~ 25500 ms)	10 (1 sec)
03	Timer T202	1 ~ 255 (100 ~ 25500 ms)	20 (2 sec)
04	Timer T203	1 ~ 255 (100 ~ 25500 ms)	30 (3 sec)
05	N200	1 ~ 255	3
06	N201	1 ~ 65535 (Byte)	260
07	N202	1 ~ 255	3

### Conditions

None

---

### Feature Cross Reference

None

# Program 82 : Basic Hardware Setup for Extension

## 82-06 : ISDN PRI Layer3 (S-point) Timer Setup

Level:

**IN**

### Description

Use **Program 82-06 : ISDN PRI Layer3 (S-Point) Timer Setup** to set the basic timer for the layer 3 of ISDN PRI S-Point.

### Input Data

Layer3 Timer Type No.	1 ~ 5
-----------------------	-------

Item No.	Item	Input Data	Default
01	T301	0, 180 ~ 254 (sec)	180 (sec)
02	T302	1 ~ 254 (sec)	10 (sec)
03	T303	1 ~ 254 (sec)	4 (sec)
04	T304	0 ~ 254 (sec)	20 (sec)
05	T305	1 ~ 254 (sec)	30 (sec)
06	T306	0 ~ 254 (sec)	30 (sec)
07	T307	1 ~ 254 (sec)	180 (sec)
08	T308	1 ~ 254 (sec)	4 (sec)
09	T309	1 ~ 254 (sec)	90 (sec)
10	T310	0 ~ 180 (sec)	30 (sec)
11	T312	1 ~ 254 (sec)	6 (sec)
12	T313	1 ~ 254 (sec)	4 (sec)
13	T314	1 ~ 254 (sec)	4 (sec)
14	T316	(T317 + 1) ~ 254 (sec)	120 (sec)
15	T317	1 ~ (T316 - 1) (sec)	60 (sec)
16	T318	1 ~ 254 (sec)	4 (sec)
17	T319	1 ~ 254 (sec)	4 (sec)
18	T320	1 ~ 254 (sec)	30 (sec)
19	T321	1 ~ 254 (sec)	30 (sec)
20	T322	1 ~ 254 (sec)	4 (sec)

### Conditions

None

---

## Feature Cross Reference

None

# Program 82 : Basic Hardware Setup for Extension

## 82-07 : CODEC Filter Setup for Analog Station Port

Level:

**IN**

---

### Description

Use **Program 82-07 : CODEC Filter Setup for Analog Station Port** to set the filter value of the CODEC (QSLAC) filter of each analog port.

### Input Data

Station Port Number	1 ~ 128
---------------------	---------

Item No.	Item	Input Data	Default
01	CODEC Filter Type	0 = No filter 1 = Type 1: Line loss 0dB 2 = Type 2: Line loss 4dB 3 = Type 3: Line loss 8dB 4 = Type 4: Not Used 5 = Type 5: Not Used 6 = Type 6: Not Used 7 = Type 7: Not Used 8 = Type 8: 600 ohms North America 9 = Type 9: Not Used 10 = Type 10: Not Used 11 = Type 11: Not Used 12 = Type 12: Not Used 13 = Type 13: Not Used 14 = Type 14: 600 ohms 0dB 15 = Type 15: Not Used	2 (: Type 2: Line loss 4dB)

### Conditions

- When the Side Tone level was so loud or small on the default, check the Side Tone by a customer site using the following data and establish something best for the side tone.
- Do not change the data from the default when the side tone is no problem.

---

### Feature Cross Reference

- Direct Station Selection (DSS)

# Program 82 : Basic Hardware Setup for Extension

## 82-08 : Sidetone Volume Setup

Level:

**MF**

---

### Description

Use **Program 82-08 : Sidetone Volume Setup** for adjusting the telephone sidetone volume. There are two levels, based on whether the connected trunk is a digital trunk or analog trunk.

### Input Data

Item No.	Item	Input Data	Default
01	<b>Sidetone Volume</b>	Input Data ( Digital Sidetone Level : Analog Sidetone Level ) 0 ( - 54 dB : - 54 dB ) 1 ( - 48 dB : - 54 dB ) 2 ( - 42 dB : - 54 dB ) 3 ( - 36 dB : - 48 dB ) 4 ( - 30 dB : - 42 dB ) 5 ( - 24 dB : - 36 dB ) 6 ( - 18 dB : - 30 dB ) 7 ( - 12 dB : - 24 dB ) 8 ( - 12 dB : - 18 dB ) 9 ( - 12 dB : - 12 dB )	6

### Conditions

None

---

### Feature Cross Reference

- Central Office Calls, Answering
- Central Office Calls, Placing

# Program 82 : Basic Hardware Setup for Extension

## 82-09 : SLIU CODEC Filter Data Setup

Level:

**IN**

### Description

Use **Program 82-09 : SLIU CODEC Filter Data Setup** to define the filter setting data (when Program 82-07 is set to 4).

### Input Data

Item No.	Item	Input Data	Default
01	B1 Filter Setup (1)	0 ~ 255	105
02	B1 Filter Setup (2)	0 ~ 255	122
03	B1 Filter Setup (3)	0 ~ 255	166
04	B1 Filter Setup (4)	0 ~ 255	42
05	B1 Filter Setup (5)	0 ~ 255	227
06	B1 Filter Setup (6)	0 ~ 255	46
07	B1 Filter Setup (7)	0 ~ 255	169
08	B1 Filter Setup (8)	0 ~ 255	242
09	B1 Filter Setup (9)	0 ~ 255	151
10	B1 Filter Setup (10)	0 ~ 255	41
11	B1 Filter Setup (11)	0 ~ 255	122
12	B1 Filter Setup (12)	0 ~ 255	135
13	B1 Filter Setup (13)	0 ~ 255	168
14	B1 Filter Setup (14)	0 ~ 255	112
15	B2 Filter Setup (1)	0 ~ 255	45
16	B2 Filter Setup (2)	0 ~ 255	1
17	AIN and Analog Gains	0 ~ 255	14
18	Z Filter Coefficients (1)	0 ~ 255	178
19	Z Filter Coefficients (2)	0 ~ 255	162
20	Z Filter Coefficients (3)	0 ~ 255	53
21	Z Filter Coefficients (4)	0 ~ 255	83
22	Z Filter Coefficients (5)	0 ~ 255	42
23	Z Filter Coefficients (6)	0 ~ 255	171
24	Z Filter Coefficients (7)	0 ~ 255	194
25	Z Filter Coefficients (8)	0 ~ 255	43
26	Z Filter Coefficients (9)	0 ~ 255	106
27	Z Filter Coefficients (10)	0 ~ 255	163

Item No.	Item	Input Data	Default
28	Z Filter Coefficients (11)	0 ~ 255	43
29	Z Filter Coefficients (12)	0 ~ 255	169
30	Z Filter Coefficients (13)	0 ~ 255	166
31	Z Filter Coefficients (14)	0 ~ 255	159
32	Z Filter Coefficients (15)	0 ~ 255	1
33	R Filter Coefficients (1)	0 ~ 255	220
34	R Filter Coefficients (2)	0 ~ 255	1
35	R Filter Coefficients (3)	0 ~ 255	58
36	R Filter Coefficients (4)	0 ~ 255	32
37	R Filter Coefficients (5)	0 ~ 255	35
38	R Filter Coefficients (6)	0 ~ 255	202
39	R Filter Coefficients (7)	0 ~ 255	195
40	R Filter Coefficients (8)	0 ~ 255	174
41	R Filter Coefficients (9)	0 ~ 255	74
42	R Filter Coefficients (10)	0 ~ 255	51
43	R Filter Coefficients (11)	0 ~ 255	170
44	R Filter Coefficients (12)	0 ~ 255	171
45	R Filter Coefficients (13)	0 ~ 255	74
46	R Filter Coefficients (14)	0 ~ 255	197
47	X Filter Coefficients (1)	0 ~ 255	1
48	X Filter Coefficients (2)	0 ~ 255	17
49	X Filter Coefficients (3)	0 ~ 255	1
50	X Filter Coefficients (4)	0 ~ 255	144
51	X Filter Coefficients (5)	0 ~ 255	1
52	X Filter Coefficients (6)	0 ~ 255	144
53	X Filter Coefficients (7)	0 ~ 255	1
54	X Filter Coefficients (8)	0 ~ 255	144
55	X Filter Coefficients (9)	0 ~ 255	1
56	X Filter Coefficients (10)	0 ~ 255	144
57	X Filter Coefficients (11)	0 ~ 255	1
58	X Filter Coefficients (12)	0 ~ 255	144
59	GR Filter Coefficients (1)	0 ~ 255	1
60	GR Filter Coefficients (2)	0 ~ 255	17
61	GX Filter Coefficients (1)	0 ~ 255	35
62	GX Filter Coefficients (2)	0 ~ 255	32

### Conditions

- This is used if Program 82-07 is set to 4 (Specified data).



---

## Feature Cross Reference

None

# Program 82 : Basic Hardware Setup for Extension

## 82-14 : Handset/Headset Gain Setup for Multiline Telephone

Level:

**IN**

---

### Description

Use **Program 82-14: Handset/Headset Gain Setup for Multiline Telephone** to define the Handset/Headset Gain Level for Multiline Telephone.

### Input Data

Extension Number	Up to eight digits
------------------	--------------------

Item No.	Item	Input Data	Default
01	Handset/Headset Transmit Gain level	0 = Fixed (+ 12.5 dB) (9 = + 12.5 dB) 1 ~ 32 (- 3.5 dB ~ + 58.5 dB) 2 dB basis	0
02	Handset/Headset Receive Gain level	0 = Fixed (+ 12.5 dB) (13 = 0 dB) 1 ~ 32 (- 3.5 dB ~ + 58.5 dB) 2 dB basis	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 82 : Basic Hardware Setup for Extension

## 82-21 : Sensor Setup

Level:

**IN**

---

### Description

Use Program 82-21 : **Sensor Setup** to setup the Sensor for SL2100.

### Input Data

Sensor Number	1 ~ 6
---------------	-------

Item No.	Item	Input Data	Description	Default
01	<b>Sensor Type</b>	0 = Close Detect 1 = Open Detect	Set sensor type.	0
02	<b>Sensor Alarm Detect Minimum Level</b>	1 ~ 255 (5 ms ~ 1275 ms)	Set minimum level for Alarm detection.	24 (120 ms)
03	<b>Sensor Idle Detect Minimum Level</b>	1 ~ 255 (5 ms ~ 1275 ms)	Set minimum level for Idle detection.	24 (120 ms)

### Conditions

None

---

### Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-02 : H.225 and H.245 Information Basic Setup

Level:

**IN**

### Description

Use **Program 84-02 : H.225 and H.245 Information Basic Setup** to define the basic setup information of H.225 and H.245.

### Input Data

Item No.	Item	Input Data	Default
01	H.225 Alerting Time	0 ~ 255 seconds	180
02	H.225 Setup Acknowledge Timer	0 ~ 255 seconds	9
03	H.225 Setup Timer	0 ~ 255 seconds	4
04	H.225 Info Ack Timer	0 ~ 255 seconds	9
05	H.225 Call Proceeding Timer	0 ~ 255 seconds	10
07	H.245 Master Slave Determination Timer	0 ~ 255 seconds	5
08	H.245 Master Slave Determination Retry Count	0 ~ 255 seconds	3
09	H.245 Capability Exchange Timer	0 ~ 255 seconds	5
10	H.245 Logical Channel Establishment Timer	0 ~ 255 seconds	50
11	H.245 Mode Request Procedures Timer	0 ~ 255 seconds	50
12	H.245 Close Logical Channel Timer	0 ~ 255 seconds	50
13	H.245 Round Trip Delay Timer	0 ~ 255 seconds	50
14	H.245 Maintenance Loop	0 ~ 255 seconds	50
15	RAS GRQ Timer	0 ~ 255 seconds	5
16	GRQ Retry Count	0 ~ 255	2
17	RAS RRQ Timer	0 ~ 255 seconds	5
18	RRQ Retry Count	0 ~ 255	3
19	RAS URQ Timer	0 ~ 255 seconds	3
20	URQ Retry Count	0 ~ 255	1
21	RAS ARQ Timer	0 ~ 255 seconds	5
22	ARQ Retry Count	0 ~ 255	2
23	RAS BRQ Timer	0 ~ 255 seconds	5
24	BRQ Retry Count	0 ~ 255	2
25	RAS IRR Timer	0 ~ 255 seconds	5
26	IRR Retry Count	0 ~ 255	2
27	RAS DRQ Timer	0 ~ 255 seconds	8
28	DRQ Retry Count	0 ~ 255	2

Item No.	Item	Input Data	Default
29	RAS LRQ Timer	0 ~ 255 seconds	5
30	LRQ Retry Count	0 ~ 255	2
31	RAS RAI Timer	0 ~ 255 seconds	3
32	RAI Retry Count	0 ~ 255	2
33	Call Signaling Port Number	0 ~ 65535 : 0 ~ 1719, 1721 ~ 65535	1730
35	Fast Start Mode	0 = Disable 1 = Enable	1
36	RAS Unicast Port Number	0 ~ 65535	20001
37	Terminal Type setting	0 ~ 255	60

### Conditions

None

---

### Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-07 : Firmware Download Setup

Level:

**IN**

---

### Description

Use **Program 84-07 : Firmware Download Setup** to configure the settings related to Central Firmware Download for IP Phones.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Server Mode	0 = TFTP 1 = FTP		0
02	File Server IP Address	0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.254.254		0.0.0.0
03	Login Name	Up to 20 Characters	Enable only 84-07-01 is 1	None
04	Password	Up to 20 Characters	Enable only 84-07-01 is 1	None

### Conditions

None

---

### Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-09 : VLAN Setup

Level:

**IN**

---


### Description

Use **Program 84-09 : VLAN Setup** to set up the VLAN data.

### Input Data

Interface Number	1 ~ 2
------------------	-------

Item No.	Item	Input Data	Default
01	VLAN	0 = Disable (Off) 1 = Enable (On)	0
02	VLAN ID	0 ~ 4094	0
03	Priority	0 ~ 7	0

 *Interface No.2: The packets send from LAN I/F on VoIPDB is set the VLAN Tag (VoIPDB 32ch/64ch/128ch).*

### Conditions

- System programming must be exited before these program options take affect.

---

### Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-10 : ToS Setup

Level:

**IN**

### Description

Use Program 84-10 : ToS Setup to set up the Type of Service data.

### Input Data

Protocol Type	1 = Not Used 2 = Not Used 3 = Reserved 4 = H.323 5 = RTP/RTCP 6 = SIP 7 = Reserved 8 = SIP MLT 9 = SIP Trunk 10 = Reserved 11 = Reserved
---------------	--

Item No.	Item	Input Data	Description	Default
01	<b>ToS Mode</b>	0 = Disable (Invalid) 1 = IP Precedence 2 = Diffserv	When Input Data is set to 1, Item No. 07 is invalid. When Data is set to 2, Item No. 02 ~ 05 are invalid.	0
02	<b>Priority, IP Precedence</b>	0 ~ 7 0 = Low 7 = High	1 = Router queuing priority	0
03	<b>Low Delay</b>	0 ~ 1 0 = Normal Delay 1 = Low Delay	1 = Optimize for low delay routing	0
04	<b>Wideband (Throughout)</b>	0 ~ 1 0 = Normal Throughput 1 = High Throughput	1 = Optimize for high bandwidth routing	0
05	<b>High Reliability</b>	0 ~ 1 0 = Normal Reliability 1 = Low Reliability	1 = Optimize for reliability routing	0
07	<b>Priority (D.S.C.P. - Differentiated Services Code Point)</b>	0 ~ 63	DSCP (Differentiated Services Code Point)	0

### Conditions

- The system must be reset for these program options to take affect.

### Feature Cross Reference

None



# Program 84 : Hardware Setup for VoIPDB

## 84-12 : Networking CODEC Information Basic Setup

Level:

**IN**

### Description

Use **Program 84-12 : Networking CODEC Information Basic Setup** to set voice (RTP packet) encoding parameters.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Number of G.711 Audio Frames	1 = 10 ms 2 = 20 ms 3 = 30 ms 4 = 40 ms		3
02	G.711 VAD mode	0 = Disable 1 = Enable		0
03	G.711 Type	0 = A-law 1 = $\mu$ -law		1
04	G.711 Jitter Buffer (min)	0 ~ 300 ms (for VoIPDB mode)		30
05	G.711 Jitter Buffer (average)	10 ~ 300 ms* (for Built-In VoIP mode)		60
06	G.711 Jitter Buffer (max)			120
07	Number of G.729 Audio Frames	1 = 10 ms 2 = 20 ms 3 = 30 ms 4 = 40 ms 5 = 50 ms 6 = 60 ms		3
08	G.729 VAD mode	0 = Disable 1 = Enable		0
09	G.729 Jitter Buffer (min)	0 ~ 300 ms (for VoIPDB mode)		30
10	G.729 Jitter Buffer (average)	10 ~ 300 ms* (for Built-In VoIP mode)		60
11	G.729 Jitter Buffer (max)			120
17	Jitter Buffer Mode	1 = Fixed 3 = Self adjusting		3

Item No.	Item	Input Data	Description	Default
18	VAD Threshold	0 ~ 30 (-20 dB ~ + 10 dB) (for VoIPDB mode) 7 ~ 20 (-13 dB ~ 0 dB) (for Built-In VoIP mode) 0 = -20 dB (-50 dBm) 1 = -19 dB (-49 dBm) : 7 = -13 dB (-43 dBm) : 20 = 0 dB (-30 dBm) : 29 = 9 dB (-21 dBm) 30 = 10 dB (-20 dBm)		20
28	Audio Capability Priority	0 = G.711_PT 1 = Not Used 2 = G.729_PT 3 = G.722		0
33	Number of G.722 Audio Frame	1 = 10 ms 2 = 20 ms 3 = 30 ms 4 = 40 ms		3
35	G.722 Jitter Buffer (min)	0 ~ 300 ms (for VoIPDB mode)		30
36	G.722 Jitter Buffer (average)	10 ~ 300 ms* (for Built-In VoIP mode)		60
37	G.722 Jitter Buffer (max)			120
38	RTP Filter	0 = Disable 1 = Enable 2 = Enable (include SSRC)	To avoid incorrect voice pass connection, this Program checks the sending side address from received RTP packet at VoIPDB.	1

## Conditions

None

---

## Feature Cross Reference

- Voice Over Internet Protocol (VoIP)

# Program 84 : Hardware Setup for VoIPDB

## 84-13 : SIP Trunk CODEC Information Basic Setup

Level:

**IN**

### Description

Use **Program 84-13 : SIP Trunk CODEC Information Basic Setup** to set up the basic CODEC options for SIP trunks.

### Input Data

Profile	1 ~ 6
---------	-------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Number of G.711 Audio Frame</b>	1 = 10 ms 2 = 20 ms 3 = 30 ms 4 = 40 ms	Maximum number of G711 Audio Frames. When the voice is encoded using the PCM (Pulse Code Modulation) method, a unit is a frame of 10ms.	2	
02	<b>G.711 Silence Detection (VAD) Mode</b>	0 = Disable 1 = Enable	Select whether to compress silence with G.711. When there is silence, the RTP packet is not sent.	0	
03	<b>G.711 Type</b>	0 = A-law 1 = $\mu$ -law	Set the type of G.711.	1	
04	<b>G.711 Jitter Buffer - Minimum</b>	0 ~ 300 ms (for VoIPDB mode)	Set the minimum value of the G.711 Jitter Buffer.	20	
05	<b>G.711 Jitter Buffer - Minimum</b>	10 ~ 300 ms* (for Built-In VoIP mode)	Set the average value of the G.711 Jitter Buffer.	40	
06	<b>G.711 Jitter Buffer - Maximum</b>		Set the maximum value of the G.711 Jitter Buffer.	80	
07	<b>G.729 Audio Frame</b>	1 ~ 6 (1 = 10 ms, 2 = 20 ms, etc.)	Maximum number of G729 Audio Frames. G.729 assumes the audio signal made by a specimen by 8 kHz and the frame of 10 ms is assumed to be a unit to 8 kbps by the encoding compressed method.	2	
08	<b>G.729 Silence Compression (VAD) Mode</b>	0 = Disable 1 = Enable	Select whether to compress silence with G.729. When there is silence, the RTP packet is not sent.	0	
09	<b>G.729 Jitter Buffer - Minimum</b>	0 ~ 300 ms (for VoIPDB mode) 10 ~ 300 ms* (for Built-In VoIP mode)	Set the minimum value of the Jitter Buffer of G.729 is set. Jitter is the variation in the time between packets arriving and the buffer allows this variation to be absorbed.	20	
10	<b>G.729 Jitter Buffer - Average</b>		Set the average G.729 Jitter Buffer.	40	
11	<b>G.729 Jitter Buffer - Maximum</b>		Set the maximum G.729 Jitter Buffer.	80	

Item No.	Item	Input Data	Description	Default	Related Program
17	<b>Jitter Buffer Mode</b>	1 = Static 3 = Self adjusting	Set the mode of the Jitter Buffer. 1 = Size set to the fixed amount for the codec. 3 = The minimum/maximum range for the codec is used and adjusts at any time, regardless of silence.	3	
18	<b>Silence Compression (VAD) Threshold</b>	0 ~ 30 (Self-adjustment and -20 dB ~ + 10 dB) (for VoIPDB mode) 7 ~ 20 (Self-adjustment and -13 dB ~ 0 dB)(for Built-In VoIP mode) 0 = -20 dB (-50 dBm) 1 = -19 dB (-49 dBm) : 7 = -13 dB (-43 dBm) : 20 = 0 dB (-30 dBm) : 29 = 9 dB (-21 dBm) 30 = 10 dB (-20 dBm)	Set the voice level judged to be silence. Change value based 0dB (-30 dBm). This entry is ignored if silence compression is disabled in 84-01-03 with G.711 or 84-01-06 with G.729.	20	
28	<b>Priority Codec Setting</b>	0 = G.711 PT 1 = Not Used 2 = G.729 PT 3 = G.722 4 = G.726 5 = Not Used 6 = G.711 Only 7 = G.729 Only	The option selected here determines what other codec options are applied by priority.	0	
33	<b>G.722 Audio Frame</b>	1 = 10 ms 2 = 20 ms 3 = 30 ms 4 = 40 ms	Maximum number of G.722 Audio Frames. G.722 assumes the audio signal made by a specimen by 16 kHz and the frame of 10 ms is assumed to be a unit to 64 kbps by the encoding compressed method.	3	
35	<b>G.722 Jitter Buffer - Minimum</b>	0 ~ 300 ms (for VoIPDB mode) 10 ~ 300 ms* (for Built-In VoIP mode)	Set the minimum value of the Jitter Buffer of G.722 is set. Jitter is the variation in the time between packets arriving and the buffer allows this variation to be absorbed.	30	
36	<b>G.722 Jitter Buffer - Average</b>		Set the average G.722 Jitter Buffer.	60	
37	<b>G.722 Jitter Buffer - Maximum</b>		Set the maximum G.722 Jitter Buffer.	120	
38	<b>G.726 Audio Frame</b>	1 = 10 ms 2 = 20 ms 3 = 30 ms 4 = 40 ms	Maximum number of G.726 Audio Frames. G.726 assumes the audio signal made by a specimen by 16 kHz and the frame of 10 ms is assumed to be a unit to 32 kbps by the encoding compressed method.	3	
39	<b>G.726 Voice Activity Detection</b>	0 = Disable 1 = Enable	Select whether to compress silence with G.726. When there is silence, the RTP packet is not sent.	0	

Item No.	Item	Input Data	Description	Default	Related Program
40	<b>G.726 Jitter Buffer - Minimum</b>	0 ~ 300 ms (for VoIPDB mode) 10 ~ 300 ms* (for Built-In VoIP mode)	Set the minimum value of the Jitter Buffer of G.726 is set. Jitter is the variation in the time between packets arriving and the buffer allows this variation to be absorbed.	30	
41	<b>G.726 Jitter Buffer - Average</b>		Set the average G.726 Jitter Buffer.	60	
42	<b>G.726 Jitter Buffer - Maximum</b>		Set the maximum G.726 Jitter Buffer.	120	
49	<b>RTP Filter</b>	0 = Disable 1 = IP 2 = IP + SSRC		1	
65	<b>VAD Negotiation on SDP</b>	0 = Disable 1 = Enable	This PRG is used to determine the VAD determination method setting VAD information on SDP. This PRG is effective when VAD is enabled on each codec.  <i>G.711 and G.729 are targets at this time.</i>	0	
66	<b>Voice Band Data (VBD)</b>	0 = Disable 1 = Enable	This PRG is used for setting VBD to is "Enable/Disable". This PRG is necessary to set the 1: Special in PRG15-03-03 for target terminal.	0	15-03-03
67	<b>VBD Payload Type</b>	96 ~ 127	This PRG is specifies the Payload Type number used by VBD.	97	15-03-03

## Conditions

None

---

## Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-14 : SIP Trunk Basic Information Setup

Level:

**IN**

### Description

Use Program 84-14 : SIP Trunk Basic Information Setup to define the basic setup for SIP trunks.

### Input Data

Profile	1 ~ 6
---------	-------

Item No.	Item	Input Data	Description	Default
06	SIP Trunk Port Number	1 ~ 65535		5060 (Profile 1) 5062 (Profile 2) 5090 (Profile 3) 5092 (Profile 4) 5094 (Profile 5) 5096 (Profile 6)
07	Session Timer Value	0 ~ 65535		0
08	Minimum Session Timer Value	0 ~ 65535		1800
09	Called Party Information	0 = Request URI 1 = To Header		0
10	URL Type	0 = SIP-URL 1 = TEL-URL		0
11	URL/To HeaderSetting Information	0 = Proxy Server Domain 1 = SIP UA Domain		0
13	SIP Trunk Incoming/Outgoing via E164SIP_URI	0 = Off 1 = Mode 1 2 = Mode 2 3 = Mode 3		0
15	100rel Settings	0 = Use default Settings 1 = Use opposite Default Setting		0
16	SIP Trunk SIP-URI E.164 Incoming Mode	0 = OFF 1 = Mode 1 2 = Mode 2		0
17	Call Forward Moved Temporarily Support	0 = Disabled 1 = 302 Return	When enabled a 302 Moved temporarily response is sent for external call forward destinations.	0
18	Keep Alive by OPTION Interval Timer	60 ~ 3600 (s)	Set the interval between receiving 200 ok response of option message.	180
19	Keep Alive by OPTION Fail Limit	1 ~ 5 times	Failure Limit before PBX SIP trunks to destination are unavailable (busy).	1
20	Option Keep Alive User ID	Max 32 Strings	This parameter is set in SIP URL of option message.	ping

Item No.	Item	Input Data	Description	Default
21	<b>SIP Trunk TLS Port Number</b>	1 ~ 65535	Set the SIP UA (User Authorized) Trunk port number (Receiving Transport for SL2100 SIP) for TLS.	5061 (Profile 1) 5063 (Profile 2) 5091 (Profile 3) 5093 (Profile 4) 5095 (Profile 5) 5097 (Profile 6)
22	<b>TLS Certificate</b>	Up to 32 characters	This parameter is set in SIP URL of option message.	No Setting
23	<b>DNS Query</b>	0 = Follow Request-URI 1 = Proxy Server Domain (Program 10-29) 2 = SIP UA Domain (Program 10-28)	Perform DNS query in the domain specified in the input value. 0 = DNS query on domains configured at Request-URI. 1 = DNS query in domains Program 10-29-12 and Program 10-29-13. If Program 10-29-12 and Program 10-29-13 is not setting, the value of Program 10-29-11 is placed in the URL/TO header. 2 = DNS query in domains Program 10-28-01 and Program 10-28-02.	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-15 : H.323/SIP Phone Keep Alive Setup

Level:

**IN**

---

### Description

Use **Program 84-15 : H.323/SIP Phone Keep Alive Setup** to set the Keep Alive Configuration of the H.323/SIP phone.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Registration Information Automatic Deletion	0 = Disable 1 = Enable	When set to 1 (Enable), the registration information is automatically deleted (for H.323).	0
02	Keep Alive Message Interval	1 ~ 10 minutes	Time interval that system sends a Ping to the terminal.	1
03	Keep Alive Message Timeout	1 ~ 10 seconds	Time that system waits for a Ping response from the terminal.	5
04	Keep Alive Timeout	1 ~ 5 times	How many times the system waits for a non response before determining the terminal is down.	3

### Conditions

None

---

### Feature Cross Reference

None



# Program 84 : Hardware Setup for VoIPDB

## 84-16 : VoIPDB Limiter Control Gain Setup

Level:

**SA**

### Description

Use **Program 84-16 : VoIPDB Limiter Control Gain Setup** to set the Limiter Control Gain configuration of VoIPDB.

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>RX Limiter Control Gain</b>	0 ~ 30 (- 15 dBm ~ + 15 dBm) 0 = - 15 dBm 1 = - 14 dBm : 15 = 0 dBm : 29 = 14 dBm 30 = 15 dBm	Gain setting to control limiter in the direction of IP → PCM. This option adds gain to the voice input from the LAN and removes it from the voice output to highway.	15 (0 dBm)
02	<b>TX Limiter Control Gain</b>	0 ~ 30 (- 15 dBm ~ + 15 dBm) 0 = - 15 dBm 1 = - 14 dBm : 15 = 0 dBm : 29 = 14 dBm 30 = 15 dBm	Gain setting to control limiter in the direction of PCM → IP. This option adds the gain to the voice input from highway and removes it from the voice output to the LAN.	15 (0 dBm)
03	<b>RX Limiter Control Gain (COIU)</b>	0 ~ 30 (- 15 dBm ~ + 15 dBm) 0 = - 15 dBm 1 = - 14 dBm : 15 = 0 dBm : 29 = 14 dBm 30 = 15 dBm	This option controls the limiter gain for a COIU call in the IP to PCM direction.	15 (0 dBm)
04	<b>TX Limiter Control Gain (COIU)</b>	0 ~ 30 (- 15 dBm ~ + 15 dBm) 0 = - 15 dBm 1 = - 14 dBm : 15 = 0 dBm : 29 = 14 dBm 30 = 15 dBm	This option controls the limiter gain for a COIU call in the PCM to IP direction.	15 (0 dBm)

### Conditions

None

---

## Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-19 : SIP Extension CODEC Information Basic Setup

Level:

**IN**

### Description

Use **Program 84-19 : SIP Extension CODEC Information Basic Setup** to define the CODEC information for the SIP extensions.

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>Number of G.711 Audio Frame</b>	1 = 10 ms 2 = 20 ms 3 = 30 ms 4 = 40 ms	Maximum number of G711 Audio Frames. When the voice is encoded using the PCM (Pulse Code Modulation) method, a unit is a frame of 10ms.	2
02	<b>G.711 Silence Detection (VAD) Mode</b>	0 = Disable 1 = Enable	Select whether to compress silence with G.711. When there is silence, the RTP packet is not sent.	0
03	<b>G.711 Type</b>	0 = A-law 1 = $\mu$ -law	Set the type of G.711.	1
04	<b>G.711 Jitter Buffer - Minimum</b>	0 ~ 300 ms (for VoIPDB mode) 10 ~ 300 ms* (for Built-In VoIP mode)	Set the minimum value of the G.711 Jitter Buffer.	20
05	<b>G.711 Jitter Buffer - Average</b>		Set the average value of the G.711 Jitter Buffer.	40
06	<b>G.711 Jitter Buffer - Maximum</b>		Set the maximum value of the G.711 Jitter Buffer.	80
07	<b>G.729 Audio Frame</b>	1 ~ 6 (1 = 10 ms, 2 = 20ms, etc.)	Maximum number of G729 Audio Frames. G.729 assumes the audio signal made by a specimen by 8 kHz and the frame of 10 ms is assumed to be a unit to 8 kbps by the encoding compressed method.	2
08	<b>G.729 Silence Compression (VAD) Mode</b>	0 = Disable 1 = Enable	Select whether to compress silence with G.729. When there is silence, the RTP packet is not sent.	0
09	<b>G.729 Jitter Buffer - Minimum</b>	0 ~ 300 ms (for VoIPDB mode) 10 ~ 300 ms* (for Built-In VoIP mode)	Set the minimum value of the Jitter Buffer of G.729 is set. Jitter is the variation in the time between packets arriving and the buffer allows this variation to be absorbed.	20
10	<b>G.729 Jitter Buffer - Average</b>		Set the average G.729 Jitter Buffer.	40
11	<b>G.729 Jitter Buffer - Maximum</b>		Set the maximum G.729 Jitter Buffer.	80
17	<b>Jitter Buffer Mode</b>	1 = Fixed 3 = Self adjusting	Set the mode of the Jitter Buffer. 1 = Size set to the fixed amount for the codec. 3 = The minimum/maximum range for the codec is used and adjust at any time, regardless of silence.	3

Item No.	Item	Input Data	Description	Default
18	<b>Silence Compression (VAD) Threshold</b>	0 ~ 30 (Self-adjustment and -20 dB ~ + 10 dB) (for VoIPDB mode) 7 ~ 20 (Self-adjustment and -13 dB ~ 0 dB) (for Built-In VoIP mode) 0 = -20 dB (-50 dBm) 1 = -19 dB (-49 dBm) : 7 = -13 dB (-43 dBm) : 20 = 0 dB (-30 dBm) : 29 = 9 dB (-21 dBm) 30 = 10 dB (-20 dBm)	Set the voice level judged to be silence. Change value based 0dB (-30 dBm). This entry is ignored if silence compression is disabled in 84-01-03 with G.711 or 84-01-06 with G.729.	20
28	<b>Priority Codec Setting</b>	0 = G.711 PT 1 = Not Used 2 = G.729 PT 3 = G.722 4 = G.726 5 = Not Used	The option selected here determines what other codec options are applied by priority.	0
33	<b>G.722 Audio Frame</b>	1 = 10 ms 2 = 20 ms 3 = 30 ms 4 = 40 ms	Maximum number of G.722 Audio Frames. G.722 assumes the audio signal made by a specimen by 16 kHz and the frame of 10 ms is assumed to be a unit to 64 kbps by the encoding compressed method.	3
35	<b>G.722 Jitter Buffer - Minimum</b>	0 ~ 300 ms (for VoIPDB mode) 10 ~ 300 ms* (for Built-In VoIP mode)	Set the minimum value of the Jitter Buffer of G.722 is set. Jitter is the variation in the time between packets arriving and the buffer allows this variation to be absorbed.	30
36	<b>G.722 Jitter Buffer - Average</b>		Set the average G.722 Jitter Buffer.	60
37	<b>G.722 Jitter Buffer - Maximum</b>		Set the maximum G.722 Jitter Buffer.	120
38	<b>G.726 Audio Frame</b>	1 = 10 ms 2 = 20 ms 3 = 30 ms 4 = 40 ms	Maximum number of G.726 Audio Frames. G.726 assumes the audio signal made by a specimen by 16 kHz and the frame of 10 ms is assumed to be a unit to 32 kbps by the encoding compressed method.	3
39	<b>G.726 Silence Compression (VAD) Mode</b>	0 = Disable 1 = Enable	Select whether to compress silence with G.726. When there is silence, the RTP packet is not sent.	0
40	<b>G.726 Jitter Buffer - Minimum</b>	0 ~ 300 ms (for VoIPDB mode) 10 ~ 300 ms* (for Built-In VoIP mode)	Set the minimum value of the Jitter Buffer of G.726 is set. Jitter is the variation in the time between packets arriving and the buffer allows this variation to be absorbed.	30
41	<b>G.726 Jitter Buffer - Average</b>		Set the average G.726 Jitter Buffer.	60
42	<b>G.726 Jitter Buffer - Maximum</b>		Set the maximum G.726 Jitter Buffer.	120
49	<b>RTP Filter</b>	0 = Disable 1 = Enable 2 = Enable (include SSRC)	To avoid incorrect voice pass connection, this Program checks the sending side address from received RTP packet at VoIPDB.	1

## Conditions

None

---

## Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-20 : SIP Extension Basic Information Setup

Level:

**IN**

---

### Description

Use **Program 84-20 : SIP Extension Basic Information Setup** to set up proxy information, session timers, called party information and expire value of invite.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Registrar/Proxy Port	1 ~ 65535		5070
02	Session Timer Value	0 ~ 65535		180 seconds
03	Minimum Session Timer Value	065535		180 seconds
04	Called Party Info	0 = Request URI 1 = To Header		0
05	Expire Value of Invite	0 ~ 256 seconds	Arrival of a message is ended when this time expires and there is no cut from the caller.	180 seconds
06	Expire Value of Invite (send)	1 ~ 3600 seconds	The expiration time is set for the Invite message.	180 seconds
07	TLS Registrar/Proxy Port Number	0 ~ 65535	To assign a TLS port number on the standard SIP telephone. If set as "0", then the TLS port number does not open.	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-22 : IP MLT Logon Information Setup

Level:

**SA**

---

### Description

Use **Program 84-22 : IP MLT Logon Information Setup** to set the IP MLT logon information.

### Input Data

Personal ID Index	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Description	Default
01	<b>User ID</b>	Up to 32 characters	Input the User ID when using manual or auto registration (10-46-01).	No Setting
02	<b>Password</b>	Up to 16 characters	Input the Password when using manual or auto registration (10-46-01). Web pro indicates password as * mark.	No Setting
03	<b>User ID Omission</b>	0 = Off 1 = On	Input the Personal ID from terminal automatically when log on again.	0
04	<b>Log Off</b>	0 = Off 1 = On	Input the Personal ID from terminal automatically when log on again.	1
05	<b>Nick Name</b>	Up to 32 characters	Input the Personal ID from terminal automatically when log on again.	No Setting

### Conditions

None

---

### Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-23 : IP MLT Basic Information Setup

Level:

**IN**

### Description

Use **Program 84-23 : IP MLT Basic Information Setup** to set the basic information for the IP Multiline Terminal.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Registration Expire Timer	60 ~ 65535 seconds	The Expires value of the REGISTER message which received from IP MLT terminal is out of range or when the Expire value is not set up, in case it assigns the effective time to the IP MLT terminal. The timer for supervising whether IP MLT is connected or not.	180 seconds
02	Subscribe Expire Timer	60 ~ 65535 seconds	The subscribe Expire timer to transmit and receive the terminal operation instructions between the Main Device and IP MLT.	3600 seconds
03	Session Expire Timer	0 ~ 65535 seconds	Set effective time for supervising the Voice Path.	180 seconds
04	Minimum Session Expire Timer	0 ~ 65535 seconds	Set minimum value of effective time for supervising the Voice Path.	180 seconds
05	Invite Expire Timer	0 ~ 65535 seconds	Set effective time for Incoming/Outgoing call when the Expire value is not set in the INVITE message received from IP MLT.	180 seconds
06	Signal Type of Service	0x00 ~ 0xFF (0 ~ 9, A ~ F)	Set Type of Service value which applied to send SIP Message Packet from IP MLT to Main Device.	00
07	Error Display Timer	0, 60 ~ 65535 seconds		0
08	Digest Authorization Registration Expire Timer	0 ~ 4294967295 seconds		0
10	Number of Password Retries	0 ~ 255 (0 = No Limit)	Input the number of times an incorrect password can be entered when the security key is pressed.	0
11	Password Lock Time	0 ~ 120 (0 = No Limit)		0
12	Reference Number	Up to 32 digits (0 ~ 9, *, #, P, R, @)		No Setting
13	Media Type of Service	0x00 ~ 0xFF (0 ~ 9, A ~ F)		00
14	Refer Expire Timer	0 ~ 65535 seconds		60 seconds



**Conditions**

None

---

**Feature Cross Reference**

None

# Program 84 : Hardware Setup for VoIPDB

## 84-24 : IP MLT CODEC Basic Information Setup

Level:

**IN**

### Description

Use **Program 84-24 : IP MLT CODEC Basic Information Setup** to set the codec of each type of IP Multiline Terminal.

### Input Data

Type	1 = Type 1 2 = Type 2 3 = Type 3 4 = Type 4 5 = Type 5
------	--

Item No.	Item	Input Data	Description	Default
01	<b>Number of G.711 Audio Frame</b>	1 = 10 ms 2 = 20 ms 3 = 30 ms 4 = 40 ms	Maximum number of G711 Audio Frames. When the voice is encoded using the PCM (Pulse Code Modulation) method, a unit is a frame of 10ms. The Audio Frame size setting is only from IP phone to IP phone. When the IP phone communicates to a TDM device it will always use a 20 ms frame size.	2
02	<b>G.711 Silence Detection (VAD) Mode</b>	0 = Disable 1 = Enable	Select whether to compress silence with G.711. When there is silence, the RTP packet is not sent. When VAD is enabled the CPU will stop sending silence packets but the IP phone will continue to transmit silence packets.	0
03	<b>G.711 Type</b>	0 = A-law 1 = $\mu$ -law	Set the type of G.711.	1
04	<b>G.711 Jitter Buffer - Minimum</b>	0 ~ 300 ms (for VoIPDB mode) 10 ~ 300 ms* (for Built-In VoIP mode)	Set the minimum value of the G.711 Jitter Buffer.	20
05	<b>G.711 Jitter Buffer - Average</b>		Set the average value of the G.711 Jitter Buffer.	40
06	<b>G.711 Jitter Buffer - Maximum</b>		Set the maximum value of the G.711 Jitter Buffer.	80
07	<b>G.729 Audio Frame</b>	1 ~ 4 (1 = 10 ms, 2 = 20 ms, etc.)	Maximum number of G.729 Audio Frames. G.729 assumes the audio signal made by a specimen by 8 kHz and the frame of 10 ms is assumed to be a unit to 8 kbps by the encoding compressed method. The Audio Frame size setting is only from IP phone to IP phone. When the IP phone communicates to a TDM device it will always use a 20 ms frame size.	2

Item No.	Item	Input Data	Description	Default
08	<b>G.729 Silence Compression (VAD) Mode</b>	0 = Disable 1 = Enable	Select whether to compress silence with G.729. When there is silence, the RTP packet is not sent. When VAD is enabled the CPU will stop sending silence packets but the IP phone will continue to transmit silence packets.	0
09	<b>G.729 Jitter Buffer - Minimum</b>	0 ~ 300 ms (for VoIPDB mode) 10 ~ 300 ms* (for Built-In VoIP mode)	Set the minimum value of the Jitter Buffer of G.729 is set. Jitter is the variation in the time between packets arriving and the buffer allows this variation to be absorbed.	20
10	<b>G.729 Jitter Buffer - Average</b>		Set the average G.729 Jitter Buffer.	40
11	<b>G.729 Jitter Buffer - Maximum</b>		Set the maximum G.729 Jitter Buffer.	80
17	<b>Jitter Buffer Mode Set the mode of the Jitter Buffer.</b>	1 = static 3 = Self adjusting	1 = Size set to the fixed amount for the codec. 3 = The minimum/maximum range for the codec is used and adjust at any time, regardless of silence.	3
18	<b>Silence Compression (VAD) Threshold</b>	0 ~ 30 (Self-adjustment and -20 dB ~ + 10 dB) (for VoIPDB mode) 7 ~ 20 (Self-adjustment and -13 dB ~ 0 dB) (for Built-In VoIP mode) 0 = -20 dB (-50 dBm) 1 = -19 dB (-49 dBm) : 7 = -13 dB (-43 dBm) : 20 = 0 dB (-30 dBm) : 29 = 9 dB (-21 dBm) 30 = 10 dB (-20 dBm)	Set the voice level judged to be silence. Change value based .30 This entry is ignored if silence compression is disabled in 84-01-03 with G.711, or 84-01-06 with G.729.	20
28	<b>Priority Codec Setting</b>	0 = G711 PT 2 = G729 PT 3 = G.722 PT	The option selected here determines what other codec options are applied by priority.	0
32	<b>G.722 Audio Frame</b>	1 = 10 ms 2 = 20 ms 3 = 30 ms 4 = 40 ms	Maximum number of G.722 Audio Frames. G.722 assumes the audio signal made by a specimen by 16kHz and the frame of 10ms is assumed to be a unit to 64kbps by the encoding compressed method. The Audio Frame size setting is only from IP phone to IP phone. When the IP phone communicates to a TDM device it will always use a 20 ms frame size.	3
34	<b>G.722 Jitter Buffer - Minimum</b>	0 ~ 300 ms (for VoIPDB mode) 10 ~ 300 ms* (for Built-In VoIP mode)	Set the minimum value of the Jitter Buffer of G.722 is set. Jitter is the variation in the time between packets arriving and the buffer allows this variation to be absorbed.	30
35	<b>G.722 Jitter Buffer - Average</b>		Set the average G.722 Jitter Buffer.	60
36	<b>G.722 Jitter Buffer - Maximum</b>		Set the maximum G.722 Jitter Buffer.	120
37	<b>RTP Filter</b>	0 = Disable 1 = Enable 2 = Enable (include SSRC)		1

**Conditions**

None

---

**Feature Cross Reference**

None

# Program 84 : Hardware Setup for VoIPDB

## 84-26 : VoIP Basic Setup (DSP)

Level:

**IN**

---

### Description

Use **Program 84-26 : VoIP Basic Setup** to set the IP address and the port of VoIP.

### Input Data

Slot Number	0
-------------	---

Item No.	Item	Input Data	Default
01	IP Address	0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254	172.16.0.20
02	RTP Port Number	0 ~ 65534	10020
03	RTCP Port Number	RTP Port Number + 1 ~ 65535	10021
15	IP Address for Browser Phone Communication (V1.5 added)	0.0.0.0 ~ 126.255.255.254 128.0.0.1 ~ 191.255.255.254 192.0.0.1 ~ 223.255.255.254	0.0.0.0

### Conditions

None

---

### Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-27 : VoIP Basic Setup

Level:

**IN**

---

### Description

Use **Program 84-27 : VoIP Basic Setup** to set the DTMF Relay and the SRTP mode of the VoIPDB.

### Input Data

Slot Number	0
-------------	---

Item No.	Item	Input Data	Default
03	SRTP Mode Setup	0 = Disable 1 = Enable	0
04	SRTP Mode Select	0 = Mode1	0
06	H.245 Port Number	0 ~ 65535	10100
07	Preparation Completion Response Port Number	0 ~ 65535	4000
14	ICMP REDIRECT	0 = Enabled, Voice packets will follow ICMP redirect messages. 1 = Disabled, Voice packets will NOT follow the ICMP redirect message.	1

### Conditions

None

---

### Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-28 : IP MLT Firmware Name Setup

Level:

**IN**

---

### Description

Use **Program 84-28 : IP MLT Firmware Name Setup** to set the firmware name to download for the IP Phone.

### Input Data

Terminal Type	1 ~ 3 = Not uUsed 4 = IP4WW-24TIXH 5 ~ 7 = Not used 8 = ITZ-*-*D 9 = ITZ-**CG 10 = ITY-6D 11 = Not used 12 = IP7WW-8IPLD-C1
---------------	--

Item No.	Item	Input Data	Default
01	Firmware Directory	Maximum 64 characters	No Setting
02	Firmware File Name	Maximum 30 characters	No Setting

### Conditions

None

---

### Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-29 : IP MLT Multicast Codec Setup

Level:

**IN**

---

### Description

Use **Program 84-29 : IP MLT Multicast Codec Setup** to set the CODEC data of the IP Multiline Terminal when it uses Multicast.

### Input Data

Type	1 = Type 1 (Multicast) 2 = Type 2 (reserved) 3 = Type 3 (reserved) 4 = Type 4 (reserved) 5 = Type 5 (reserved)
------	--

Item No.	Item	Input Data	Default
01	Audio Capability	1 = G.711 A-law 2 = G.711 $\mu$ -law 3 = G.729 4 = Not Used 5 = G.722	2
02	Number of Audio Frames	1 ~ 6	2
03	RTP Filter	0 = Disable 1 = Enable	1

### Conditions

None

---

### Feature Cross Reference

None



# Program 84 : Hardware Setup for VoIPDB

## 84-31 : VoIPDB Echo Canceller Setup

Level:

**IN**


### Description




Use Program 84-31 : VoIPDB Echo Canceller Setup to sets VoIPDB echo canceller value.


### Input Data

Type	1 = H323 Trunk 2 = Networking 3 = SIP Trunk 4 = SIP Extension 5 = Reserved 6 = Reserved 7 = IP-MLT
------	--

Profile	1 ~ 6
---------	-------

Item No.	Item	Input Data	Description	Default	Related Program
01	TDM Echo Canceller mode	0 = Disable 1 = Enable	Select echo Canceller on/off at receiving (TDM) side.	1	
02	TDM Echo Canceller NLP mode(2W)	0 = Disable 1 = Enable	Select Echo Compression Mode for remaining echo. Effective when PRG 84-31-01 = 1	1	
03	TDM Echo Canceller ComfortNoise mode	0 = Disable 1 = Enable	Normally not used. Do not change the setting unless asked to change by engineer. Select comfort noise as background noise. Effective when PRG 84-31-01 = 1	1	84-31-01
04	TDM Echo Canceller NLP Threshold	0 ~ 15 (for VoIPDB mode) 0 ~ 12 (for Built-In VoIP mode)	Normally not used. Do not change the setting unless asked to change by engineer. Set Residual Echo suppression threshold value. When this value is set smaller, the echo suppression control is getting stronger but the sound drop-out may occurred. This program is effective when PRG 84-31-02 = 1.  This program is only effective when a Built-In VoIP is used.	12	
05	TDM Echo Canceller Tail Displacement	0 ~ 87 (0 ms ~ 870 ms)	Normally not used. Do not change the setting unless asked to change by engineer. Effective when PRG 84-31-01 = 1	0	84-31-01

Item No.	Item	Input Data	Description	Default	Related Program
06	<b>TDM Echo canceller tail length</b>	1 = 32 ms 2 = 48 ms 3 = 64 ms 4 = 80 ms 5 = 96 ms 6 = 112 ms 7 = 128 ms	Normally not used. Do not change the setting unless asked to change by engineer. Select length of echo. Effective when PRG 84-31-01 = 1	7	84-31-01
07	<b>TDM Echo Canceller Default ERL Level</b>	0 ~ 6 (-9 dB ~ +9 dB) 0 = -9 dB 1 = -6 dB 2 = -3 dB : 5 = 6 dB 6 = 9 dB	Normally not used. Do not change the setting unless asked to change by engineer. Select length of echo. Effective when PRG 84-31-01 = 1  This program is invalid when a Built-In VoIP is used.	5	84-31-01
08	<b>TDM Echo Canceller Echo Type</b>	1 = Line Echo Canceller 2 = Acoustic Echo Canceller	Select echo canceller type: 1: Based upon ITU-T G.168 2: Based upon ITU-T G.167 Effective when PRG 84-31-01 = 1	1	
10	<b>TDM TX Level Control</b>	0 = Disable 1 = TX Control Mode 2 = TX Automatic Level Control Mode 3 = TX HLC (high Level)	Select transmit level control mode. Input Data [2] is only available when you use VoIPDB. It is unavailable when you use Built-in VoIP, which is set to [0].	3	
11	<b>TDM TX Voice Level Control Mode</b>	0 ~ 16 (-24 dB ~ +24 dB) (for VoIPDB mode) 2 ~ 14 (-18 dB ~ +18dB) (for Built-In VoIP mode) 0 = -24 dB (for VoIPDB mode only) 1 = -21 dB (for VoIPDB mode only) 2 = -18 dB : 8 = 0 dB : 14 = 18 dB 15 = 21 dB (for VoIPDB mode only) 16 = 24 dB (for VoIPDB mode only)	Effective when PRG 84-31-10 = 1  When the system used for Built-In VoIP (on the CPU) feature, the Voice Control level range will be changed to 2-14 (-18dB ~ +18dB) instead of 0-16 (-24dB ~ +24dB).	8	
12	<b>TDM TX Automatic Level Control Level</b>	0 ~ 12 (-42 dBm ~ -6 dBm) 0 = -42 dBm 1 = -39 dBm : 7 = -21 dBm : 11 = -9 dBm 12 = -6 dBm	Normally not used. Select target gain. Effective when PRG 84-31-10 = 2 This program is only effective when a VoIPDB is used.	7	
13	<b>TDM TX HLC Threshold</b>	0 ~ 42 (-42 dBm ~ 0 dBm) 0 = -42 dBm 1 = -41 dBm : 41 = -1 dBm 42 = 0 dBm	Select HLC threshold level. Effective when PRG 84-31-10 = 3  When the system used for Built-In VoIP (on the CPU) feature, the HLC Threshold level range will be change to 22-42 (-20dBm ~ 0dBm) instead of 0-42 (-42dBm ~ 0dBm).	41	
14	<b>TDM TX Gain Compression Mode</b>	0 = Disable 1 = Enable	Transmit Gain Compression on or off. Effective when PRG 84-31-10 = 3 This program is only effective when a VoIPDB is used.	1	

Item No.	Item	Input Data	Description	Default	Related Program
15	<b>TDM TX Gain Compression Threshold</b>	0 ~ 42 (-42 dBm ~ 0 dBm) 0 = -42 dBm 1 = -41 dBm : 41 = -1 dBm 42 = 0 dBm	Transmit Gain Compression threshold. Effective when PRG 84-31-14 = 1 This program is only effective when a VoIPDB is used.	41	
16	<b>TDM RX Level Control</b>	0 = Disable 1 = RX Level Control Mode 2 = RX Automatic Level Control Flag	Normally not used. Select receive level control mode. Input Data [2] is only available when you use VoIPDB. It is unavailable when you use Built-in VoIP, which is set to [0].	0	
17	<b>TDM RX Level Control Level</b>	0 ~ 16 (-24 dB ~ +24 dB) (for VoIPDB mode) 2 ~ 14 (-18 dB ~ +18dB) (for Built-In VoIP mode) 0 = -24 dB (for VoIPDB mode only) 1 = -21 dB (for VoIPDB mode only) 2 = -18 dB : 8 = 0 dB : 14 = 18 dB 15 = 21 dB (for VoIPDB mode only) 16 = 24 dB (for VoIPDB mode only)	Normally not used. Select receive voice level. Effective when PRG 84-31-16 = 1  <i>When the system used for Built-In VoIP (on the CPU) feature, the Voice Control level range will be changed to 2-14 (-18dB - +18dB) instead of 0-16 (-24dB - +24dB).</i>	8	
18	<b>TDM RX Automatic Level Control Level</b>	0 ~ 12 (-42 dBm ~ -6 dBm) 0 = -42 dBm 1 = -39 dBm : 7 = -21 dBm : 11 = -9 dBm 12 = -6 dBm	Normally not used. Select target gain. Effective when PRG 84-31-16 = 2 This program is only effective when a VoIPDB is used.	7	
37	<b>TDM Echo Canceller NLP mode (4W)</b>	0 = Disable 1 = Enable	Select Echo Compression Mode for remaining echo. Effective when PRG 84-31-01 = 1	1	

### Conditions

- Following Item No are only available when you use VoIPDB.  
It is unavailable when you use Built-in VoIP.  
84-31-07, -12, -14, -15, -18

### Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-33 : FAX over IP Setup

Level:

**IN**

### Description




This program sets the parameter of FAX over IP Function.

### Input Data

Type	1 = H323 Trunk 2 = Networking 3 = SIP Trunk 4 = SIP Extension 5 = Reserved 6 = Reserved
------	--

Profile	1 ~ 6
---------	-------

Item No.	Item	Input Data	Description	Default
01	FAX Relay Mode	0 = Disable 1 = Enable 2 = Each Port Mode		0
02	T.38 Protocol mode	0 = R/U 1 = U/R 2 = RTP 3 = UDPTL		1
04	Maximum Jitter Buffer	0 ~ 300 ms (for VoIPDB mode) 10 ~ 300 ms* (for Built-In VoIP mode)		160
05	T.38 RTP Format Payload Number	96 ~ 127		100
06	T.38 FAX Max Speed	0 = V.27ter; 4800 bps 1 = V.29; 9600 bps 2 = V.17; 14400 bps		2
07	T.38 Data Error Correction Mode	0 = Redundancy 1 = FEC		0
08	T.38 Error protection depth for Signaling	0 ~ 2	This item is only available when you use VoIPDB. It is unavailable when you use Built-in VoIP, which depends on the data of Item No. 09.	0
09	T.38 Error protection depth for Data	0 ~ 2		0
10	T.38 TCF Method	1 = VOIPDB 2 = G3FE		1
11	T.38 ECM(Error Correction Mode) Mode	0 = Disable 1 = Enable		1

Item No.	Item	Input Data	Description	Default
12	FAX Codec	1 = G.711 a-law 2 = G.711 u-law 3 = G726		2
13	Payload Size	1 ~ 4 (10ms base)		2
14	Jitter Buffer Mode	1 = Static 2 = Self adjusting		1
15	Minimum Jitter Buffer	0 ~ 300 ms (for VoIPDB mode)		80
16	Average Jitter Buffer	10 ~ 300 ms* (for Built-In VoIP mode)		120
17	Maximum Jitter Buffer			160
18	FAX RTP Payload Type	96 ~ 127 (Not Sip Trunk) 0, 2, 8, 96 ~ 127 (SIP Trunk)	 When the G,711 a-law is selected in Item 12, it is possible to set "8" in Item 18  When the G,711 u-law is selected in Item 12, it is possible to set "0" in Item 18  When the G,726 is selected in Item 12, it is possible to set "2" in Item 18	103
19	FAX over IP Type	0 = Type 1 1 = Type 2	SIP Trunk : Type 1 : T.38 Type 2 : Path through	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-34 : VoIPDB DTMF Setup

Level:

**IN**

---

### Description

This program sets the basic parameter of DTMF.

### Input Data

Type	1 = H323 Trunk 2 = Networking 3 = SIP Trunk 4 = SIP Extension 5 = Reserved 6 = Reserved
------	--

Profile	1 ~ 6
---------	-------

Item No.	Item	Input Data	Default	Related Program
01	DTMF Relay Mode : DTMF Relay	0 = Disable 1 = RFC2833 2 = H.245	0	
02	DTMF Payload Number : DTMF Payload No.	96 ~ 127	110	
03	DTMF Detection Type : DTMF Detect Type	1 ~ 5	1	84-37
04	DTMF Transmit Type : DTMF Transmit Type	1 ~ 5	1	84-36
05	DTMF Relay (inband) Retransmit Type : DTMF ReTrans Type	1 ~ 5	1	84-35

### Conditions

None

---

### Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-35 : VoIPDB RFC2833 Payout Setup

Level:

**IN**

---

### Description

This program sets the DTMF payout parameter of reception RFC2833 packet from network side.

### Input Data

Type	1 = Type 1 2 = Type 2 3 = Type 3 4 = Type 4 5 = Type 5
------	--

Item No.	Item	Input Data	Default	Related Program
01	RFC2833 Payout Level	0 = depend on RFC2833 1 = configuration	0	84-34-01
02	RFC2833 Payout Level High	1 = -33 dBm : 28 = -6 dBm	28	84-35-01
03	RFC2833 Payout Level Low	1 = -33 dBm : 28 = -6 dBm	28	84-35-01
04	RFC2833 Payout Transmit Duration	0 = depend on RFC2833 25 ~ 2000 (ms)	0	84-34-01
05	RFC2833 Payout Pause Duration	0 = depend on RFC2833 25 ~ 2000 (ms)	0	84-34-01

### Conditions

None

---

### Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-36 : VoIPDB DTMF Transmit Setup

Level:

**IN**

### Description

This program sets the DTMF transmit parameter.

### Input Data

Type	1 = Type 1 2 = Type 2 3 = Type 3 4 = Type 4 5 = Type 5
------	--

Item No.	Item	Input Data	Default	Related Program
01	DTMF Transmit Level	1 ~ 61 (-36 dB ~ 24 dB) (for VoIPDB mode) 1 ~ 37 (-36 dB ~ 0 dB) (for Built-In VoIP mode) 1 = -36 dB 2 = -35 dB : 37 = 0 dB : 60 = 23 dB 61 = 24 dB	25 (-12 dB)	84-34-01
02	DTMF Transmit Duration	30 ~ 2000(ms)	100	84-34-01
03	DTMF Transmit Twist Level	1 ~ 49 (-24 dB ~ 24 dB) 1 = -24 dB 2 = -23 dB : 25 = 0dB : 48 = 23 dB 49 = 24 dB	25	84-34-01

### Conditions

None

### Feature Cross Reference

None



# Program 84 : Hardware Setup for VoIPDB

## 84-37 : VoIPDB DTMF Detection Setup

Level:

**IN**

### Description

This program sets the DTMF detection parameter.

### Input Data

Type	1 = Type 1 2 = Type 2 3 = Type 3 4 = Type 4 5 = Type 5
------	--

Item No.	Item	Input Data	Default
01	DTMF Detect Minimum Level	1 ~ 61 (-40 dB ~ -9 dB) (for VoIPDB mode) 10 ~ 30 (-30 dB ~ -9 dB) (for Built-In VoIP mode) 0 = -40 dBm 1 = -39 dBm 2 = -38 dBm : 10 = -30dBm : 31 = -9 dBm	2 (-38 dBm)
02	DTMF Detect Twist Positive Level	0 ~ 24 (dB) (for VoIPDB mode)	5
03	DTMF Detect Twist Negative Level	0 ~ 10 (dB) (for Built-In VoIP mode)	5
04	DTMF Detect Minimum Duration	23 ~ 2000 (ms) (for VoIPDB mode) 35 ~ 100 (ms) (for Built-In VoIP mode)	30
05	DTMF Detect Minimum SN Ratio	0 = -9 dB 1 = -8 dB : 6 = -3 dB 7 = -2 dB 8 = -1 dB 9 = 0 dB	6 (-3 dB)

### Conditions

None

### Feature Cross Reference

None

# Program 84 : Hardware Setup for VoIPDB

## 84-38 : VoIPDB Network Side Echo Canceller Setup

Level:

**MF**

### Description

Use Program **84-38 : VoIPDB Network Side Echo Canceller Setup** to set up the echo canceller parameters.

 *This program is only effective when a VoIPDB is used.*

### Input Data

Type	1 = H.323 Trunk 2 = Networking 3 = SIP Trunk 4 = SIP Extension 5 = Reserved 6 = Reserved 7 = IP-MLT
------	---

Profile	1 ~ 6
---------	-------

Item No.	Item	Input Data	Default
01	<b>Echo Canceller Mode</b>	0 = Disable 1 = Enable	0
02	<b>Echo Canceller NLP Mode</b>	0 = Disable 1 = Enable	0
03	<b>Echo Canceller Comfort Noise Mode</b>	0 = Disable 1 = Enable	1
05	<b>Echo Canceller Tail Displacement</b>	0 ~ 87 (0ms ~ 870ms)	0
06	<b>Echo Canceller Tail Length</b>	1 = 32ms 2 = 48ms 3 = 64ms 4 = 80ms 5 = 96ms 6 = 112ms 7 = 128ms	7
07	<b>Echo Canceller Default ERL Level</b>	0 ~ 6 (-9dB ~ 9dB) 0 = -9dB 1 = -6dB 2 = -3dB : 5 = 6dB 6 = 9dB	5
08	<b>Echo Canceller Echo Type</b>	1 = Line E. C. 2 = Accoustic E.C.	1
10	<b>TX Level Control</b>	0 = Disable 1 = Manual 2 = Auto 3 = HLC	0

Item No.	Item	Input Data	Default
11	<b>TX Level Control Level</b>	0 ~ 16 (-24dB ~ 24dB) 0 = -24dB 1 = -21dB 2 = -18dB : 8 = 0dB : 14 = 18dB 15 = 21dB 16 = 24dB	8
12	<b>TX Automatic Level Control Level</b>	0 ~ 12 (-42dBm ~ -6dBm) 0 = -42dBm 1 = -39dBm : 7 = -21dBm : 11 = -9dBm 12 = -6dBm	7
13	<b>TX HLC Threshold</b>	0 ~ 42 (-42dBm ~ -0dBm) 0 = -42dBm 1 = -41dBm : 42 = -0dBm	41
14	<b>TX Signal Limiter Mode</b>	0 = Disable 1 = Enable	0
15	<b>TX Signal Limiter Threshold</b>	0 ~ 42 (-42dBm ~ -0dBm) 0 = -42dBm 1 = -41dBm : 42 = -0dBm	41
16	<b>RX Level Control</b>	0 = Disable 1 = Enable 2 = Auto	0
17	<b>RX Level Control Level</b>	0 ~ 16 (-24dB ~ 24dB) 0 = -24dB 1 = -21dB 2 = -18dB : 8 = 0dB : 14 = 18dB 15 = 21dB 16 = 24dB	8
18	<b>RX Automatic Level Control Level</b>	0 ~ 12 (-42dBm ~ -6dBm) 0 = -42dBm 1 = -39dBm : 7 = -21dBm : 11 = -9dBm 12 = -6dBm	7

## Conditions

None

---

## Feature Cross Reference

Voice Over Internet Protocol (VoIP)

# Program 84 : Hardware Setup for VoIPDB


## 84-39 : SIP Trunk message customize

Level:

**IN**

---

### Description


 This program is not available for Web Programming or Telephone Programming. You can only change setting using Script Function of PC Programming.

Use **Program 84-39 : SIP Trunk message customize** to check the Message customize.

### Input Data

Profile	1 ~ 6
---------	-------

Item No.	Item	Input Data	Default
01	Option 1	0 ~ 255	0
:	:	:	:
99	Option 99	0 ~ 255	0

 There are Items from 01 to 99. This chart only shows the beginning and end but Default, Input Data they are all same.

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-01 : Installation Date

Level:

**IN**

---

### Description

Use Program 90-01 : Installation Date to define the installation date of the system.

### Input Data

Item No.	Item	Input Data	Default
01	Year	00 ~ 99	00 (No Setting)
02	Month	00 ~ 12	00 (No Setting)
03	Day	00 ~ 31	00 (No Setting)

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-02 : Programming Password Setup

Level:

**IN**

### Description

Use **Program 90-02 : Programming Password Setup** to set the system passwords. For password entry, the system allows eight users to be defined. Each user can have a:

- Unique alphanumeric name (up to 10 alphanumeric characters)
- Password entry of up to eight digits (using 0 ~ 9, # and \*)
- Password level

The IN level password is used by the System Installer for system programming. The SA or SB level password cannot access the IN level programs. The reverse type (white on black) just beneath the Description heading is the program access level. You can only use the program if your access level meets or exceeds the level the program requires. (SA level password can access to SA or SB programs, and SB level password can access to SB programs only.)



***NEC Strongly recommended that the User Name and Password should change regularly to prevent your personal information from being stolen and misused.***



***Before changing your numbering plan, use the PC Programming or WebPro Programming to make a backup copy of your system data.***

### Input Data

User Number	2 ~ 8
-------------	-------

Item No.	Item	Input Data	Default
01	User Name	Maximum 10 characters	Refer below
02	Password	Up to eight digits	Refer below
03	User Level	0 = Prohibited User 2 = IN (Installer Level) 3 = SA (System Administrator A) 4 = SB (System Administrator B) 5 = UA (User Administrator)	Refer below

### Default

User No.	User Name	Password	Level	Level Description
2	tech	12345678	2 (IN)	Installer Level - Access to all IN level programs.
3	ADMIN1	0000	3 (SA)	System Administrator Level 1 - Restricted Access
4	ADMIN2	9999	4 (SB)	System Administrator Level 2 - More Restricted Access

User No.	User Name	Password	Level	Level Description
5	USER1	1111	5 (UA)	User Programming Administer Mode Level 1
6	No Setting	No Setting	0 (PU)	-
7	No Setting	No Setting	0 (PU)	-
8	No Setting	No Setting	0 (PU)	-

### Conditions

- More than one extension can be in the programming mode.

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-03 : Save Data

Level:

**SA**

---

### Description



*This program is available only via telephone programming and not through PC Programming.*

Use **Program 90-03 : Save Data** to save the programmed data on the SD card. This program should be used after changing the programmed data.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Save Data	1 → Hold	-	-
02	Save DIM log	1 → Hold	-	-
03	Save Statistical Information of RTP	1 → Hold	-	-

\* If only **Hold** key is pressed, then saving is canceled.

### Conditions

None

---

### Feature Cross Reference

None



# Program 90 : Maintenance Program


## 90-04 : Load Data

Level:

**SA**

---

### Description

 This program is available only via telephone programming and not through PC Programming.

Use **Program 90-04 : Load Data** to load the system data from the inserted SD card to the Flash ROM in the system.

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>Load Data</b>	1→Hold	-	-
02	<b>LCD External File</b>	1→Hold	-	-
03	<b>License Name File</b>	1→Hold	-	-

\* If only **Hold** key is pressed, then this copy is canceled.

### Conditions

- After uploading the programming, reset the system and wait a few minutes for the system to reset completely before accessing any line or special system feature. Otherwise, some unusual LED indications may be experienced.

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program


## 90-05 : Slot Control

Level:

**IN**

---

### Description

 This program is available via telephone programming and WebPro not through PC Programming.

Use **Program 90-05 : Slot Control** to reset or delete (uninstall) Boards (slots 0 ~ 12).

Delete allows you to completely uninstall the board. You should do this if you want to remove a interface board and plug it into a different slot and still retain the port assignments. If a different type of interface board is being installed in a slot previously used, the slot should be deleted (option 1) first before installing the new interface board.

Reset allows you to send a reset code.

### Input Data

Menu Number	1 = Delete 2 = Reset 3 = Set Busy Out 4 = Reset Busy Out 5 = Shutdown
-------------	---

Item No.	Item	Input Data	Default
01	Slot Control	Slot Number 0 ~ 12 Slot Number Slot No.0 apply to VoIPDB or Built-in VoIP.	-

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-06 : Trunk Control

Level:

**SA**

---

### Description



*This program is available via telephone programming and WebPro not through PC Programming.*

This command is used for the trunk maintenance.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Default
01	Trunk Control	0 = Set Busy Out 1 = Reset Busy Out (idle)	-

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-07 : Station Control

Level:

**SA**

---

### Description



*This program is available via telephone programming and WebPro not through PC Programming.*

Use **Program 90-07 : Station Control** for extension maintenance.

### Input Data

Menu Number	1 = Hardware Reset 2 = Software Reset
-------------	--

Item No.	Item	Input Data	Default
01	<b>Extension Control</b>	Up to eight digits	-

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-08 : System Reset

Level:

**IN**

---

### Description



*This program is available only via telephone programming and not through PC Programming.*

Use **Program 90-08 : System Reset** to perform a system reset.

### Input Data

Item No.	Item	Input Data	Default
01	System Reset	Dial 1 + press <b>Hold</b> (Press <b>Hold</b> key only to cancel.)	-

### Conditions

- After restoring a customer database, the system must be reset using Program 90-08 or by powering down/powering up before all the restored programming takes affect.

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-09 : Automatic System Reset Time Setup



Level:

**IN**

### Description

Use **Program 90-09 : Automatic System Reset Time Setup** to define the time for the system to automatically reset.

### Input Data

Item No.	Item	Input Data	Description	Default
01	<b>Automatic System Reset</b>	0 = Disable 1 = Enable	-	0
02	<b>Month</b>	00 ~ 12  <i>If the Month is set to 00 and Day is set, the system is automatically reset every month on the predefined day.</i>	-	0
03	<b>Day</b>	00 ~ 31  <i>If the Day is set to 00 and the Time (Hour and Minute) is set, the system automatically resets every day at the predefined time.</i>	-	0
04	<b>Week</b>	0 = No Setting 1 = Monday 2 = Tuesday 3 = Wednesday 4 = Thursday 5 = Friday 6 = Saturday 7 = Sunday	-	0
05	<b>Hour</b>	00 ~ 23	-	0
06	<b>Minute</b>	0 ~ 59	-	0

### Conditions

None

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-10 : System Alarm Setup

Level:

**IN**

### Description

Use **Program 90-10 : System Alarm Setup** to assign a status to system alarms. You can designate an alarm as Major or Minor. This program also assigns whether or not the alarm information is reported to the predefined destination.

### Input Data

Alarm Number		1 ~ 200	
Item No.	Item	Input Data	Default
01	Alarm Type	0 = Not Set 1 = Major Alarm 2 = Minor Alarm	*1
02	Report	0 = Not Report (No autodial) 1 = Report (autodial)	*1

**Table 2-22 Description of Alarm**

Alarm No.	Name	Item No.01 default	Item No.02 default	Content of alarm < generation timing >	Cause	Measures	Recovery	Alarm Status
1	PKG Initialize Error	2	0	It failed in the initialization of the package. The package was not able to be started normally. <The package starts >	<ol style="list-style-type: none"> <li>The unit doesn't insert firmly.</li> <li>The unit is taken out once, and it doesn't insert it again firmly.</li> <li>Because information on the unit that had been mounted before remains, a unit different from the information doesn't do the initialization completion.</li> </ol>	<ol style="list-style-type: none"> <li>Please insert the unit firmly.</li> <li>Please insert the unit firmly.</li> <li>Please delete slot information with PRG90-05 and insert the unit again.</li> </ol>	It doesn't recover it automatically. When the unit is recognized again, the error is recovered.	ERR REC

Alarm No.	Name	Item No.01 default	Item No.02 default	Content of alarm < generation timing >	Cause	Measures	Recovery	Alarm Status
2	<b>PKG mounting Error</b>	2	0	The unit did not step on a regular procedure and it was pulled out. Or, it is not normally inserted. <b>&lt;The unit starts and operate it &gt;</b>	<ol style="list-style-type: none"> <li>1. The package is half.</li> <li>2. The package is out of order.</li> </ol>	<ol style="list-style-type: none"> <li>1. Please insert the package firmly.</li> <li>2. Please try again after initializing the system data once when LED doesn't blink normally.</li> <li>3. Exchange of packages.</li> </ol>	When the unit is re-confirmed, the error is recovered.	ERR REC
3	<b>Communication fault between CPU and other PKGs</b>	2	0	The error occurred when communicating with the package. When the package is broken, it recognizes it as a communication fault. <b>&lt;The unit starts and operate it &gt;</b>	<ol style="list-style-type: none"> <li>1. The unit is half.</li> <li>2. The power-supply voltage of the system is outside ratings.</li> <li>3. The equipment that generates the noise in the same power supply system as the power supply origin of the system is connected, and it malfunctions because of the power supply noise.</li> <li>4. The equipment to which it is adjacent to Tai of a main device, and has put out the radiation noise exists, and it malfunctions because of the radiation noise.</li> <li>5. The earth of the case is not correctly taken.</li> </ol>	<ol style="list-style-type: none"> <li>1. Please insert the unit firmly.</li> <li>2. The power-supply voltage must use another power supply when is in the range of ratings or measuring with the voltmeter, and deviating from the rated range.</li> <li>3. Please use the power supply besides the equipment with the possibility of the noise source.</li> <li>4. Please separate as much as possible and use a main device from the equipment by which you seem may generate the radiation noise.</li> <li>5. Please ground the earth of the case correctly.</li> </ol>	When the unit is re-confirmed, the error is recovered.	ERR REC



Alarm No.	Name	Item No.01 default	Item No.02 default	Content of alarm < generation timing >	Cause	Measures	Recovery	Alarm Status
4	<b>PKG S/W Download Error</b>	2	0	The unit program was not able to be downloaded normally. The unit was not able to be started normally. <b>&lt;The unit starts &gt;</b>	<ul style="list-style-type: none"> <li>The package software is not stored in the downloaded SD card.</li> <li>The stored package software is illegal.</li> <li>Package information that had been installed before remains.</li> </ul>	Delete slot information that corresponds by PRG90-05-01 to delete package information that had been installed before. There is a possibility that the unit program is broken though an external factor of the noise etc. is thought. Please load into the SD card and try again when you back up the unit program. Please inquire of the manufacturer when not restoring it.	Please exchange units though it is likely to restore by mounting the unit again. When the unit program is normally downloaded, the error is recovered.	ERR REC
5	<b>Reserved</b>	0	0					
6	<b>Blocking</b>	0	0	The link of terminals connected with the ESI package came off. <b>&lt;It starts and operate it &gt;</b>	<ul style="list-style-type: none"> <li>Breakdown of terminal</li> <li>Faulty wiring and wiring determination</li> <li>External noise</li> <li>Breakdown of ESI package</li> </ul>	Confirm the terminal connected with same ESI. If they work normally, confirm the breakdown or the wiring for the terminal. Exchange the terminal that doesn't work and the working terminal, and confirm its working. An external factor of the noise etc. is thought. Please reconfirm wiring and the installation, etc. Please inquire of the manufacturer when the problem occurs after it confirms it.	The error is recovered when reconnecting or exchanging it.	ERR REC
7	<b>Power failure</b>	1	0	The supply of the commercial power stopped. <b>&lt;Operate it &gt;</b>	<ul style="list-style-type: none"> <li>The power cable came off.</li> <li>Power failure</li> <li>The power supply unit broke down.</li> </ul>	Confirm the power supply outlet when the commercial power has not stopped. Please inquire of the manufacturer when the problem occurs after it confirms it.	When the commercial power is restored, the error is recovered.	ERR REC
8	<b>Memory backup battery error</b>	1	0	The battery for the backup of the memory on the CPU was consumed or it comes off. <b>&lt;Operate it &gt;</b>	<ul style="list-style-type: none"> <li>The battery for the backup of the memory on the CPU board was consumed or it comes off.</li> </ul>	Confirm the normal insertion of the battery. If it is no problem, change the battery that has consumed. The battery longevity is five years.	The error is recovered when changing a battery.	ERR REC
9	<b>Reserved</b>	0	0					

Alarm No.	Name	Item No.01 default	Item No.02 default	Content of alarm < generation timing >	Cause	Measures	Recovery	Alarm Status
10	ISDN Link Error	0	0	Layer1 link of ISDN lines came off. <Operate it >	<ul style="list-style-type: none"> <li>• Connected determination of main device and ISDN line.</li> <li>• Breakdown of DSU.</li> <li>• The setting of PRG10-03 is not corresponding to an actual line.</li> </ul>	Confirm the data of PRG10-03. Reconfirm wiring and the installation of DSU. Please inquire of the manufacturer when the problem occurs after it confirms it.	When the connection returns normally, the error is recovered.	ERR REC
11	CTI Link Error	0	0	The link with the CTI server came off. <Operate it >	<ul style="list-style-type: none"> <li>• LAN cable cuts it.</li> <li>• Connected HUB broke.</li> <li>• The CTI server doesn't start normally.</li> </ul>	Please reconfirm the CTI server, wiring, and the connection. Please inquire of the manufacturer when the problem occurs after it confirms it.	When the connection returns normally, the error is recovered.	ERR REC
12	ACD MIS Link Error	0	0	The link with ACD MIS client PC came off. <Operate it >	<ul style="list-style-type: none"> <li>• LAN cable cuts it.</li> <li>• Connected HUB broke.</li> <li>• ACD MIS client PC doesn't start normally.</li> </ul>	Please confirm ACD MIS client PC and connected part. Please inquire of the manufacturer when the problem occurs after it confirms it.	When the connection returns normally, the error is recovered.	ERR REC
13	Charge management link error	0	0	The link with the charge management device came off. <Operate it >	<ol style="list-style-type: none"> <li>1. Problem of wiring to connect main device with charge management device.</li> <li>2. Problem of PC.</li> </ol>	<ol style="list-style-type: none"> <li>1. It is confirmed that there is no problem in wiring to connect a main device with the charge management device. (Whether ping passes for LAN connection is confirmed.)</li> <li>2. Restart the charge management software.</li> <li>3. Reboot PC, and start the charge management software.</li> </ol>	When the connection returns normally, the error is recovered.	ERR REC
14	LAN Link Error	0	0	The link with LAN on CPU came off. <Operate it >	<ul style="list-style-type: none"> <li>• LAN cable cuts it.</li> <li>• Connected HUB broke.</li> <li>• Defect of CPU.</li> </ul>	Confirm the operation of LAN connector, LAN cable, and HUB again.	When the connection returns normally, the error is recovered.	ERR REC

Alarm No.	Name	Item No.01 default	Item No.02 default	Content of alarm < generation timing >	Cause	Measures	Recovery	Alarm Status
15	Network Keep Alive	0	0	1. The network connection has been cut. 2. Network Keep Alive restoration. 3. Response notification on network Keep Alive. <b>&lt;Operate it &gt;</b>	<ul style="list-style-type: none"> <li>LAN cable cuts it.</li> <li>Net side trouble.</li> <li>Packet block by firewall.</li> <li>Repetition of IP address.</li> </ul>	Confirm whether to find abnormality on the net side. Confirm be unquestionable for the settings of HUB and the router, etc. HUB and the router, etc. operate correctly, and it is confirmed that it is unquestionable for wiring.	When the connection returns normally, the error is recovered.	ERR REC WAR
16	Reserved	0	0					
17	Denial of service	1	0	The System received illegal packet.	Service outage (DoS Attack)	Confirm whether to find abnormality on the net side.		WAR
18	(Draco exclusive use)	1	0					
19	Reserved	2	0					
20	Reserved	0	0					
21	Reserved	0	0					
22	Reserved	0	0					
23	Reserved	0	0					
24	VMTS Resync	1	0	Resync the Voice Mail timeslot. <b>&lt;Operate it &gt;</b>	<ul style="list-style-type: none"> <li>Memory bus congestion occurred.</li> </ul>	Especially, anything need not be done.		WAR
25	DSP Resource Busy	2	0	The system couldn't get DSP resources such as DTMF Receiver, TONE Detector, and so on.	DSP resources are used by other ports.	Check the parameter (CPU or EXIFU) of this alarm. If the service which use DSP resources (such as SLT, COI, InMail, and so on) concentrate to one side, please move them the other.		WAR
26	TSP Compatibility Error	1	0	Incompatible TSP was connected.	The PC which TSP for SL2100 was installed in is connected.	Please install TSP for SL2100.	The error is canceled when connected to TSP for SL2100.	WAR
27	Reserved	1	0					
28	Reserved	0	0					

Alarm No.	Name	Item No.01 default	Item No.02 default	Content of alarm < generation timing >	Cause	Measures	Recovery	Alarm Status
29	Charge management buffer full	0	0	The temporary buffer for the charge management in main device was overflow, and a part of unoutput charge data disappeared because it was not able to output the charge management data. <Operate it >	<ol style="list-style-type: none"> <li>The charge data is printed and not deleted at the simple charge management.</li> <li>The charge data is not output to PC for the charge management software.</li> </ol>	<ol style="list-style-type: none"> <li>Please print and delete the charge data at the simple charge management.</li> <li>Please connect the charge management software for the charge management software and output the charge data.</li> </ol>	When the output is restarted, the error is recovered. However, the charge management data after the error occurs is not recorded.	ERR REC
30	SMDR buffer full	2	0	The temporary buffer for SMDR in main device was overflow, and a part of unoutput SMDR data disappeared because it was not able to output SMDR data. <Operate it >	<ol style="list-style-type: none"> <li>Problem of wiring to connect main device with PC.</li> <li>Problem of PC.</li> </ol>	<ol style="list-style-type: none"> <li>Please confirm whether there is problem in wiring to connect a main device with PC.</li> <li>Please execute the reactivation of PC.</li> </ol>	When the output is restarted, the error is recovered. However, the SMDR data after the error occurs is not recorded.	ERR REC
31	Sensor Auto Dial	1	0					INF
32	Confirm Dial NoAns	1	0					INF
33	Reserved	1	0					
34	Reserved	0	0					
35	Reserved	0	0					
36	Reserved	0	0					
37	Reserved	0	0					
38	Reserved	0	0					
39	Reserved	0	0					
40	Reserved	0	0					
41	License Name File Load error	1	0	Can't show License Name, because System fails to load license name file with system boot up.	License Name File is broken or file format is invalid.	Execute PRG90-04-03 after copy valid license name file to SD Card again.	Canceled after valid license name file is loaded.	ERR REC
42	4W terminals does not start up.	2	0	308U or 008U (WW) install to Slot-4.	308U or 008U (WW) install to Slot-4.	Especially, anything need not be done.		INF
43	2W terminals does not start up.	2	0	082U install to Slot-4.	082U install to Slot-4.	Especially, anything need not be done.		INF
44	Reserved	2	0					
45	Reserved	0	0					

Alarm No.	Name	Item No.01 default	Item No.02 default	Content of alarm < generation timing >	Cause	Measures	Recovery	Alarm Status
46	Reserved	0	0					
47	Reserved	0	0					
48	Reserved	0	0					
49	Reserved	0	0					
50	System start notification	1	0	The system started. <system re-starts>	• The system was started.	Especially, anything need not be done.		WAR
51	System data change	0	0	The system data was changed. <Operate it >	• The system data was changed.	Especially, anything need not be done.		WAR
52	Reserved	0	0					
53	Reserved	0	0					
54	license management table full	2	0	A new TCP/IP terminal and the DSP board were not able to be added to the application license management table. • The license management table is registering full. <Operate it >	• Maximum 512 license information on the TCP/IP terminal is registered, and a new terminal cannot be registered.	Please delete license information on an unnecessary TCP/IP terminal with PRG90-44.		WAR
55	Regular maintenance exchange notification	2	0	The regular maintenance exchange day has passed. <Operate it >	• The regular maintenance exchange day that had been set with PRG90-51 exceeded it.	Please do the maintenance exchanges of pertinent parts, and set the next regular maintenance exchange day with PRG90-51.	The excess on the regular maintenance exchange day is canceled by changing PRG90-51 or when the function is invalidated, the error is recovered.	ERR REC
56	Reserved	0	0					
57	IP Collision	2	0	The device which is set the same IP address as PRG 10-12-01/10-12-09/84-26 in the same network exists in the same network as SL2100.	An IP address programmed in either 10-12-01, 10-12-09 or 84-26 is duplicated somewhere on the same segment of the network. The system will check every 5 minutes and is not a programmable increment.	Confirm that the addresses assigned in 10-12-01, 10-12-09, and 86-26 are not duplicated anywhere else on the network.		WAR

Alarm No.	Name	Item No.01 default	Item No.02 default	Content of alarm < generation timing >	Cause	Measures	Recovery	Alarm Status
58	Outbound IP connection for programming	0	0	Failure of Connection Adding Parameter : 01 = when connecting it by other 02 = Not setting IP Address (PRG90-69-01.02) 03 = when caller ID is not match 10 = Failure of get IP Address 11 = Socket Open Error 12 = Socket Port setting Error 13 = TCP session Timeout				
59	Reserved	2	0					
60	SIP registration error notification	2	0	<ol style="list-style-type: none"> <li>The registration of the SIP trunk to the SIP server failed.</li> <li>The registration of the SIP trunk to the SIP server failed in the authentication.</li> <li>There is no response from the SIP server to the SIP registration request.</li> </ol> <p>&lt;Operate it &gt;</p>	<ul style="list-style-type: none"> <li>The setting of the system data is wrong.</li> <li>The setting of the router is wrong.</li> <li>It is an error to the link of LAN.</li> <li>Net side trouble.</li> </ul>	<ol style="list-style-type: none"> <li>Reconfirm the following system data setting -- PRG10-12, 10-28, 10-29, 10-30, and 10-36.</li> <li>Confirm the setting of routers.</li> <li>Confirm whether abnormality occurs on the net side.</li> <li>Reconfirm the authentication system data setting.</li> <li>Reconfirm wiring and the system data setting.</li> </ol> <p>Please inquire an uncertain point of the maker.</p>	The error is recovered when normally connecting it.	ERR REC

Alarm No.	Name	Item No.01 default	Item No.02 default	Content of alarm < generation timing >	Cause	Measures	Recovery	Alarm Status
61	<b>SIP extension trouble information</b>	0	0	It failed in the registration of the SIP extension terminal. The SIP extension terminal was not able to acquire DSP. <ul style="list-style-type: none"> <li>At Resist to SL2100 of the SIP extension terminal.</li> <li>When you cannot acquire the DSP resource when it sends it.</li> </ul> <b>&lt;Operate it &gt;</b>	<ul style="list-style-type: none"> <li>The registered port is used by other extension.</li> <li>The license is insufficient.</li> <li>DSP of VoIPDB was not able to be acquired.</li> </ul>	Reconfirm wiring and the system data setting. Confirm whether each equipment such as access points works normally.		ERR REC
62	<b>DtermIP trouble information</b>	0	0	The error occurred by the DtermIP relation. <ul style="list-style-type: none"> <li>When the error occurs while communicating with VoIPU or DtermIP.</li> <li>When it becomes impossible to do the communication between Asprie and DtermIP.</li> <li>When failing in the acquisition of DSP.</li> </ul> <b>&lt;Operate it &gt;</b>	<ul style="list-style-type: none"> <li>The packet loss occurred on the network or the wiring cutting occurred.</li> <li>DSP of VoIP was not able to be acquired.</li> </ul>	Confirm whether each equipment such as wirings and HUB is normal.		ERR REC
63	<b>SIP-MLT trouble information</b>	0	0	The trouble occurred by the SIP-MLT relation. <ul style="list-style-type: none"> <li>The DSP resource was not able to be acquired at incoming/outgoing.</li> <li>The negotiation with VoIPDB failed.</li> </ul> <b>&lt;Operate it &gt;</b>	<ul style="list-style-type: none"> <li>The packet loss occurred on the network or the wiring cutting occurred.</li> <li>DSP of VoIP was not able to be acquired.</li> </ul>	Check network cable and connections, as well as Network switch port functionality.		WAR
64	<b>VoIPDB LAN Link Error</b>	1	0	The link of LAN of VoIPDB came off. <b>&lt;Operate it &gt;</b>	<ul style="list-style-type: none"> <li>LAN cable cuts it.</li> <li>Connected HUB broke.</li> <li>Defect of CPU.</li> </ul>	Check the LAN Connections and Wiring.	When the connection returns normally, the error is recovered.	ERR REC

Alarm No.	Name	Item No.01 default	Item No.02 default	Content of alarm < generation timing >	Cause	Measures	Recovery	Alarm Status
65	VoIPDB trouble information	0	0	When DSP of VoIPDB notifies Error <Operate it >	• Defect of VOIPDB.	There is a defective possibility of hardware. Please inquire an uncertain point of the maker.		WAR
66	SIP extension License Error	2	0	More than the number of licenses to which the SIP extension terminal was turned on at REGISTER. <Operate it >	• Lack of number of licenses.	Confirm the number of licenses of SIP extension terminals. Please inquire an uncertain point of the maker.	When the number of registration of SIP extension terminals falls below the number of licenses.	WAR
67	SIP Illegal Packet received	0	0	The System received SIP illegal packet.	• A Client or network was illegal state.	Please inquire an uncertain point of the maker, when happening frequently when operating it.		INF
68	VoIP ALL DSP Busy	2	0	• The DSP resource was not able to be acquired at incoming/outgoing.	• DSP of VoIPDB was not able to be acquired.	Reconfirm wiring and the system data setting. Please inquire an uncertain point of the maker.		WAR
69	Reserved	0	0					
70	SIP Stack Reconfig Alarm	2	0	The SIP stack was initialized.	The memory of SIP Stack might be leaked.	Please inquire an uncertain point of the maker.		WAR
71	ACD CID BUFF FULL	0	0	Alarm of ACD CID buffer was exceeded.	• Alarm of ACD buffer was exceeded.	• Please wait for a buffer clear timer of CID to pass. • Please change the CID Buffer clear timer.	When less than buffer size of ACD CID, the error is recovered.	ERR



Alarm No.	Name	Item No.01 default	Item No.02 default	Content of alarm < generation timing >	Cause	Measures	Recovery	Alarm Status
74	TLS SIP Error Information	2	0	<ol style="list-style-type: none"> <li>1. License is insufficient</li> <li>2. Error in CA Certificate.</li> <li>2. Error in CA Certificate. (PRG 84-14-22)</li> <li>3. Error in Server Certificate (PRG 10-72-01)</li> <li>4. Error in Private Key (PRG 10-72-02)</li> <li>5. Error in Server Authentication               <ol style="list-style-type: none"> <li>a. The cert. not yet valid.</li> <li>b. The cert. has expired.</li> <li>c. Self-signed cert.</li> <li>d. Can't prove server.</li> </ol> </li> </ol>	<ol style="list-style-type: none"> <li>1. Encryption license is not installed.</li> <li>2. Failed to validate CA Certificate.</li> <li>3. Failed to validate Server Certificate.</li> <li>4. Failed to validate Private Key.</li> <li>5. Failed to authenticate Server.               <ol style="list-style-type: none"> <li>a and b. The certificate of PRG 84-14-22 is not yet valid or is expired.</li> <li>or the certificate received from SIP server is not yet valid or is expired.</li> <li>c. The certificate received from SIP server is Self-Signed certificate and same certificate is not set at PRG 84-14-22.</li> <li>d. Can't prove server with using a certificate of PRG 84-14-22.</li> </ol> </li> </ol>			<ol style="list-style-type: none"> <li>1. ERR/REC</li> <li>2. WAR</li> <li>3. WAR</li> <li>4. WAR</li> <li>5. WAR</li> </ol>
75	Update Error	1	0	Confirming or downloading the New update software was failed.	The system may not connect to the internet correctly.	Confirm as follows: <ul style="list-style-type: none"> <li>• Connection of LAN cable</li> <li>• HUB, Router Settings</li> <li>• DNS Setting</li> </ul>		INF
76	Option Keep Alive Error	0	0	<ol style="list-style-type: none"> <li>1. The network connection has been cut.</li> <li>2. Network Keep Alive restoration.</li> <li>3. Response notification on network Keep Alive.</li> </ol> <p>&lt;Operate it &gt;</p>	<ul style="list-style-type: none"> <li>• LAN cable cuts it.</li> <li>• Net side trouble.</li> <li>• Packet block by firewall.</li> <li>• Repetition of IP address.</li> </ul>	Confirm whether to find abnormality on the net side. Confirm be unquestionable for the settings of HUB and the router, etc. HUB and the router, etc. operate correctly, and it is confirmed that it is unquestionable for wiring.	When the connection returns normally, the error is recovered.	ERR REC

Alarm No.	Name	Item No.01 de-fault	Item No.02 de-fault	Content of alarm < generation timing >	Cause	Measures	Recovery	Alarm Status
78	<b>SIP Deny Table Full</b>	0	0	Auto registration of IP Address blacklist has been reached to the limit of table.	The system is under attack.	Check the blacklist registration in PRG 90-82-01 and delete unnecessary records. (Last updated date information in PRG 90-82-02 is useful to judge the records necessary.)		WAR
79	<b>SIP Deny Table Reg</b>	0	0	The IP Address has been registered in blacklist (PRG 90-82-01) by detecting fraud.	The system is under attack.	There is suspicious of unknown IP Terminal registration. Check the registered IP Address blacklist in PRG 90-82 and search IP terminal IP address. If there is unauthorized registration, remove the cause of fraud.		WAR
80 ~ 200	<b>Reserved</b>	0	0					

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-11 : System Alarm Report Setup

Level:

**IN**

### Description

Use Program 90-11 : System Alarm Report Setup to define the details of the system alarm report.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
02	Report Method	0 = No Report 1 = E-mail Address	When alarm reports are e-mailed, set this option to 1. E-mail address set in 90-11-08.	0	
06	SMTP Host Name	Up to 255 Characters	When alarm reports are e-mailed, set the SMTP name (ex : smtp.your-isp.com). Contact your ISP (internet service provider) for the correct entry if needed.	No Setting	
07	SMTP Host Port Number	0 ~ 65535	When alarm reports are e-mailed, set the SMTP host port number. Contact your ISP (internet service provider) for the correct entry if needed.	25	
08	To E-mail Address	Up to 255 Characters	When alarm reports are e-mailed, set this e-mail address to which the report should be sent.	No Setting	
09	Reply Address	Up to 255 Characters	When alarm reports are e-mailed, set the e-mail address where replies should be e-mailed.	No Setting	
10	From Address	Up to 255 Characters	When alarm reports are e-mailed, set this e-mail address for the station sending the report.	No Setting	
13	Customer Name	Up to 255 Characters	When alarm reports are e-mailed, enter a name to identify the particular system.	No Setting	
14	Change SMTP Client	0 = No 1 = Yes	When enabled the system uses the programs in 47-18-xx for email server integration.	0	90-11-08 90-25-01 47-18 47-19 90-11
15	DIMLOG Notification	0 = No 1 = Yes	When enabled, the system will send an email notification when a system fault occurs and DIMLast/DIMDump files are generated. If PRG 90-11-14 is also enabled the logs files will be attached to the email.	0	90-11-14

### Conditions

None

---

## Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-12 : System Alarm Output

Level:

**IN**

---

### Description

Use **Program 90-12 : System Alarm Output** to set the options for the alarm report. This program has two separate menu options. Define the output port to be used as the output for system alarm report and set the system alarm options. The system can have up to 50 reports.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Output Port Type	0 = No Setting 5 = SD	Indicate the type of connection used for the System Alarms.	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-16 : Main Software Information

Level:

**SA**

---

### Description

Use **Program 90-16 : Main Software Information** to display the main software information on the CPU.

### Input Data

Item No.	Item	Input Data	Default
01	Version	xx.xx.xx	-
02	Release Date	MMM dd yyyy hh:mm:ss	-

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-17 : Firmware Information

Level:

**IN**

---

### Description

Use **Program 90-17 : Firmware Information** to display the firmware versions of the various system boards.

### Input Data

Item No.	Item	Input Data	Default
01	DSP Firmware Version No.	00.00.00.00 ~ 15.15.15.15	-

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-19 : Dial Block Release

Level:

**SA**

---

### Description



*This program is available via telephone programming and WebPro not through PC Programming.*

When the extension number is entered in **Program 90-19 : Dial Block Release**, the extension is released from the Dial Block restriction.

### Input Data

Extension Number	Up to eight digits
------------------	--------------------

Item No.	Item	Input Data	Description	Default
01	Dial Block Release	1→Hold	-	-

### Conditions

None

---

### Feature Cross Reference

- Code Restriction/Toll Restriction



# Program 90 : Maintenance Program

## 90-20 : Traffic Report Data Setup

Level:

**IN**

### Description

Use Program 90-20 : Traffic Report Data Setup to define the details of the traffic report.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Call Traffic Output	0 = Not Measured 1 = Measure		0
03	All Line Busy Output	0 = Not Detected 1 ~ 256 (Report when the data reaches the defined value)		0
04	DTMF Receiver Busy Output	0 = Not Detected 1 ~ 256 (Report when the data reaches the defined value)		0
05	Dial Tone Detector Busy Output	0 = Not Detected 1 ~ 256 (Report when the data reaches the defined value)		0
06	Caller ID Receiver Busy Output	0 = Not Detected 1 ~ 256 (Report when the data reaches the defined value)		0
07	Voice Mail Channel All Busy Output	0 = Not Detected 1 ~ 256 (Report when the data reaches the defined value)		0
09	Attendant Channel All Busy Output	0 = Not Detected 1 ~ 256 (Report when the data reaches the defined value)		0
11	Security Sensor Dial Record	0 = Not Recorded 1 = Recorded	Record Security sensor dialing and Remote Inspection dialing to security report	1

### Conditions

None

---

## Feature Cross Reference

- Traffic Reports

# Program 90 : Maintenance Program

## 90-21 : Traffic Report Output

Level:

**IN**

---

### Description

Use **Program 90-21 : Traffic Report Output** to define the output port to be used as the traffic report output.

### Input Data

Item No.	Item	Input Data	Default
01	Output Port Type	0 = No Setting 3 = LAN	0

### Conditions

None

---

### Feature Cross Reference

- Traffic Reports

# Program 90 : Maintenance Program


## 90-23 : Deleting Registration of IP Telephones

Level:

**IN**

---

### Description

 This program is available via telephone programming and not through PC Programming.

Use **Program 90-23 : Deleting Registration of IP Telephones** to delete the registered IP telephone from the system.

### Input Data

Extension Number	Up to eight digits
------------------	--------------------

Item No.	Item	Input Data	Description	Default
01	<b>Delete IP Telephone</b>	1→Hold	This assignment removes the station number association with the MAC address of the IP station. [Del.IP-Phone] : Dial <b>1</b> + press <b>Hold</b> (Press <b>Hold</b> only to cancel.)	-

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-24 : System Alarm Report Notification Time Setup

Level:

**IN**

---

### Description

Use **Program 90-24 : System Alarm Report Notification Time Setup** to set the date and time for the alarm report to print.

### Input Data

Notification Number	1 ~ 12
---------------------	--------

Item No.	Item	Input Data	Default
01	Month	00 ~ 12 (0 = Not Set)	0
02	Day	00 ~ 31 (0 = Not Set)	0
03	Hour	00 ~ 23	0
04	Minute	00 ~ 59	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-25 : System Alarm Report CC Mail Setup

Level:

**IN**

---

### Description

Use **Program 90-25 : System Alarm Report CC Mail Setup** to define the mail address to receive the system alarm report CC Mail setup.

### Input Data

CC Number	1 ~ 5
-----------	-------

Item No.	Item	Input Data	Default
01	CC Mail Address	Up to 255 Characters	No Setting

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-26 : Program Access Level Setup

Level:

**IN**

---

### Description

Use **Program 90-26 : Program Access Level Setup** to define the password access level required to change a system program.

### Input Data

Program Numbers	1001 ~ 9903
-----------------	-------------

Item No.	Item	Input Data	Default
01	Maintenance Level	Level 1 = MF Level Level 2 = IN Level Level 3 = SA Level Level 4 = SB Level	Refer to the Level indication for each individual program (located in the upper left corner at the beginning of each program).

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-28 : User Programming Password Setup

Level:

**IN**

---

### Description

Use **Program 90-28 : User Programming Password Setup** to set the password used to enter the user programming mode.

### Input Data

Extension Numbers	Maximum eight digits
-------------------	----------------------

Item No.	Item	Input Data	Default
01	Password	Fixed four digits	1111

### Conditions

None

---

### Feature Cross Reference

None



# Program 90 : Maintenance Program

## 90-31 : DIM Access over Ethernet

Level:

**IN**

---

### Description

Use **Program 90-31 : DIM Access over Ethernet** to enable DIM (Diagnostic Information Maintenance) access over the LAN, and to define the user name and password. DIM is a maintenance tool used by engineering to extract trace level information.

### Input Data

Item No.	Item	Input Data	Default
01	Access Enabling	0 = Disable 1 = Enable	0 (Disable)
02	Username	20 characters (alphanumeric)	SL2100
03	Password	20 characters (alphanumeric)	12345678

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-34 : Firmware Information

Level:

**IN**

---

### Description

Use **Program 90-34 : Firmware Information** to list the package type and firmware boards installed in the system.

### Input Data

Slot Number	00 ~ 12
-------------	---------

Item No.	Item	Input Data	Default
01	<b>Package Name</b>	PKG Name (Up to 15 characters)	-
02	<b>Firmware Version Number</b>	00.00 ~ 15.15	-
03	<b>VOIPDB Software Version</b>	DEV/PR/REL - 00.00.00.00.00.00 DEV/PR/REL - FF.FF.FF.FF.FF.FF	-
04	<b>DSP Project Number</b>	00000000 - FFFFFFFF	-
05	<b>Vocoder Firmware Version</b>	00.00.00.00 - FF.FF.FF.FF	-
06	<b>OCT1010ID Version</b>	00.00.00.00 - FF.FF.FF.FF	-

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-36 : Software Update Time Setting

Level:

**IN**

### Description




Use **Program 90-36 : Software Update Time Setting** to define the data for the firmware update feature. This data is available to set from the PC Programming FW update feature.

The following firmware is available to update with this feature:

- main.bin
- Dspdbu.bin
- dsp.bin
- intradbu.bin is not supported

### Input Data

Item No.	Item	Input Data	Default	Description
01	<b>Automatic Update</b>	0 = Disable 1 = Enable	0	Enable or Disable the Automatic Upgrade Feature.
04	<b>Day of Week</b>	1 = Monday 2 = Tuesday 3 = Wednesday 4 = Thursday 5 = Friday 6 = Saturday 7 = Sunday	2	Assign the day of the week that the Automatic Update should take place.
05	<b>Hour</b>	0 ~ 23 = Hour (Default = 0)	23	Assign the hour of the day the Automatic Upgrade to run.
06	<b>Minute</b>	0 ~ 59 = Minute (Default = 0)	0	Assign the minute of the hour for the Automatic update to run.
08	<b>Manual Update</b>	0 = Disable 1 = Enable	0	Enable or Disable the Manual Update.
09	<b>Month</b>	1 = January 2 = February 3 = March 4 = April 5 = May 6 = June 7 = July 8 = August 9 = September 10 = October 11 = November 12 = December	1	Assign the month for the system reboot in case of manual update.
10	<b>Day</b>	1 ~ 31	1	Assign the day of the month for the system to reboot to update the software.
12	<b>Hour</b>	0 ~ 23	0	Assign the hour of the day for the system to reboot to update the software.
13	<b>Minute</b>	0 ~ 59	0	Assign the Minute of the Hour for the system to reboot.

Item No.	Item	Input Data	Default	Description
14	<b>Automatic Update Check</b>	0 = Disable 1 = Enable	1	Enable or Disable the Automatic Update check.
16	<b>Day</b>	1 ~ 31	xx	Assign the day of month at which system check the server for new software every month.  <i>Default value is system specific.</i>
18	<b>Hour</b>	0 ~ 23	xx	Assign the hour of the day at which system check the server for new software every month.  <i>Default value is system specific.</i>
19	<b>Minute</b>	0 ~ 59	xx	Assign the minute of the hour of the day at which system check the server for new software every month.  <i>Default value is system specific.</i>

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-38 : User Programming Data Level Setup

Level:

**IN**

### Description

Use Program 90-38 : User Programming Data Level Setup sets system data to turn on/off each User Programming Feature.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Time setting	0 = Off 1 = On	PRG10-01 (UA only)	1 = On
02	Change of music on hold tone	0 = Off 1 = On	PRG10-04 (UA only)	1 = On
03	Automatic Night Service Pattern	0 = Off 1 = On	PRG12-02 (UA only)	1 = On
04	Weekly Night Service Switching	0 = Off 1 = On	PRG12-03 (UA only)	1 = On
05	Text Data for Night Mode	0 = Off 1 = On	PRG12-07 (UA only)	1 = On
06	Holiday Night Service Switching	0 = Off 1 = On	PRG12-04 (UA only)	1 = On
07	DISA User ID Setup	0 = Off 1 = On	PRG25-08 (UA only)	1 = On
08	Mail Box Setup	0 = Off 1 = On	PRG40-02 (UA only)	1 = On
09	Text Messages Setup	0 = Off 1 = On	PRG20-16 (UA only)	1 = On
10	Incoming Ring Group Setup	0 = Off 1 = On	PRG22-04 (UA only)	1 = On
11	Speed Dial Number and Name	0 = Off 1 = On	PRG13-04 (UA only)	1 = On
12	Night-mode switching Other Group	0 = Off 1 = On	PRG11-10-12 (UA only)	1 = On
13	DSS Key Assignment	0 = Off 1 = On	PRG30-03 (UA only)	1 = On
14	Doorphone Ringing Assignment	0 = Off 1 = On	PRG32-02 (UA only)	1 = On
15	Extension Numbering	0 = Off 1 = On	PRG11-02 (UA only)	1 = On
16	Extension Name	0 = Off 1 = On		1 = On
17	Night-mode switching Own Group	0 = Off 1 = On	PRG11-10-01	1 = On

Item No.	Item	Input Data	Description	Default
18	Call Forward-Immediate/No Answer /Both Ring	0 = Off 1 = On	PRG11-11	1 = On
19	Call Forward-Busy	0 = Off 1 = On	PRG11-11	1 = On
20	Trunk Incoming Ring Tone	0 = Off 1 = On	PRG15-02-02	1 = On
21	Internal Incoming Ring Tone	0 = Off 1 = On	PRG11-11 PRG15-02-03	1 = On
22	Display Language Selection	0 = Off 1 = On	PRG15-02-01	1 = On
23	Toll Restriction Override Password	0 = Off 1 = On	PRG21-07	1 = On
24	User Programming Password	0 = Off 1 = On	PRG90-28	1 = On
25	Programmable Function Key	0 = Off 1 = On	PRG15-07	1 = On
26	Virtual Extension Ring Assignment	0 = Off 1 = On	PRG15-09	1 = On
27	One Touch Key Assignment	0 = Off 1 = On	PRG15-14	1 = On
28	Trunk Name	0 = Off 1 = On	PRG14-01	1 = On
29	Automatic Transfer per Trunk	0 = Off 1 = On	PRG11-10-06 PRG11-10-07	1 = On
30	SPD Area No.	0 = Off 1 = On	PRG24-04	1 = On
31	Telephone Data Copy	0 = Off 1 = On	(UA only)	1 = On
32	Dial in Name	0 = Off 1 = On	PRG22-11-03	1 = On
33	LCD Line Key Name Assignment	0 = Off 1 = On	PRG15-20	1 = On
34	IntraMail Station Mailbox Options	0 = Off 1 = On	PRG47-02	1 = On
35	UC User Information Setting	0 = Off 1 = On	Settable PRG20-57	1 = On
36	Reserved			
37	Multi-Device Group Setup	0 = Off 1 = On	Settable PRG20-63	1 = On
38	Ten key Backlit Control	0 = Off 1 = On	Settable PRG15-02-01	1 = On

## Conditions

- Switch reset is required for changes to take effect.

---

## Feature Cross Reference

- Maintenance

# Program 90 : Maintenance Program


## 90-39 : Virtual Loop Back Port Reset

Level:

**IN**

---

### Description

 This program is available only via telephone programming and not through PC Programming.

Use **Program 90-39 : Virtual Loop Back Port Reset** to reset to initial status.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Virtual Loop Back Re-set	1→Hold	[VLP-Reset] : Dial 1 + press <b>Hold</b> (Press <b>Hold</b> only to cancel.)	-

### Conditions

None

---

### Feature Cross Reference

- PC Programming

# Program 90 : Maintenance Program

## 90-41 : Server Setting to Update Terminal Local Data

Level:

**IN**

### Description

This program defines the following server information.

1. DNS server
2. Data roming server
3. Data storage server to be downloaded / uploaded such a terminal local data that an address book and a call history and etc.
4. Tone Files storage server to be downloaded some call progress tones in the terminal.
5. Update information and programs storage server to be auto-updated soft phone application version by network use.
6. Server information for terminal menu to be downloaded
7. Presence Server information
8. XML Server information
9. FTP Server information
10. TFTP Server information

### Input Data

Server Information		1 ~ 13	
Item No.	Item	Input Data	Default
01	Server Address Type	0 = IPv4 1 = IPv6 2 = FQDN	0
02	Server Address	IPv4 form (xxx.xxx.xxx.xxx) IPv6 form (xxxx : xxxx : xxxx : xxxx : xxxx) FQDN form → Max. 256 character Ex) ftp.aaa.com	None
03	Port Number	0 ~ 65535	0

### Conditions



*Do not set the following characters to "Server address", "Server account" and "Server password".*

- back slash
- yen symbol
- Character that starts by "http://'" and "ftp://".
- Em-size character
- platform dependent characters

*The following characters can be used as a delimiter of the directory for "Remote directory".*

- yen symbol
- back slash
- slash

*Do not set the following characters to "File name" and directory name of "Remote directory".*



- *yen symbol, back slash, slash (uses it as a delimiter)*
- *double quart, semicolon, colon, question*

---

## Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-42 : IP MLT Version Information

Level:

**IN**

---

### Description

Use **Program 90-42 : IP MLT Version Information** to set the hardware version and firmware version of the IP Multiline Terminal.

### Input Data

Terminal Type	1 ~ 3 = Not Used 4 = IP4WW-24TIXH 5 ~ 7 = Not used 8 = ITZ-*-*D 9 = ITZ-**CG 10 = ITY-6D 11 = Not used 12 = IP7WW-8IPLD-C1
---------------	---

Item No.	Item	Input Data	Default
01	Software Version	00.00.00.00 ~ FF.FF.FF.FF	00.00.00.00
02	Hardware Version	00.00.00.00 ~ FF.FF.FF.FF	00.00.00.00

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-43 : Deleting Terminal License of IP MLT

Level:

**IN**

---

### Description



*This program is available only via telephone programming and not through PC Programming.*

Use **Program 90-43 : Deleting Terminal License of IP MLT** to delete the terminal license information delivered to the IP MLT terminal.

### Input Data

Extension Number	Up to eight digits
------------------	--------------------

Item No.	Item	Input Data	Default
01	<b>Delete Terminal License</b>	[Delete?] : Dial 1 + press <b>Hold</b> (Press <b>Hold</b> only to cancel.)	-

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-44 : Deleting Terminal License of TCP Interface

Level:

**IN**

---

### Description



*This program is available only via telephone programming and not through PC Programming.*

Use **Program 90-44 : Deleting Terminal License of TCP Interface** to delete the terminal license information delivered to the terminal with a TCP interface.

### Input Data

License Delete Code	000-000-000 ~ 999-999-999
---------------------	---------------------------------

Item No.	Item	Input Data	Default
01	<b>Delete Terminal License</b>	[Delete?] : Dial <b>1</b> + press <b>Hold</b> (Press <b>Hold</b> only to cancel.)	-

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program


## 90-45 : Temporary Password Change for Multiline Telephone

Level:

**IN**

---

### Description

 *This program is available via telephone programming and WebPro not through PC Programming.*

Use **Program 90-45 : Temporary Password Change for Multiline Telephone** to change the Temporary Password that is set in the Encryption function.

### Input Data

Item No.	Item	Input Data	Default
01	Temporary Password Change Request	Change? (1: Yes)	-

### Conditions

- This Program is activated when the Program 10-46-07 set to "1".

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-50 : System Alarm Display Setup

Level:

**IN**

---

### Description

Use Program 90-50 : System Alarm Display Setup to set the system alarm report display.

### Input Data

Index Number	1 ~ 50
--------------	--------

Item No.	Item	Input Data	Default
01	System Alarm Display Telephone	Up to eight digits	No Setting

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-51 : Alarm Setup for Maintenance Exchange

Level:

**IN**

### Description

Use **Program 90-51 : Alarm Setup for Maintenance Exchange** to set the day for the maintenance exchange of parts that need regular maintenance.

### Input Data

Index	1 ~ 10
-------	--------

Item No.	Item	Input Data	Default
01	Display Name	Up to 16 characters	Refer below
02	Year	0 ~ 99	0
03	Month	0 = No Setting 1 ~ 12	0
04	Day	0 = No Setting 1 ~ 31	0

Index	Default
1	--- No Setting ---
2	Backup battery
3	--- No Setting ---
4 ~ 10	--- No Setting ---

### Conditions



When the date of PRG90-01 is input, the date when the following periods passed at the date of PRG90-01 is automatically set as an exchange date.

Index	Exchange time limit
1	2 years and 6 months
2	3 years
3	5 years
4	No Setting
5	No Setting
6	No Setting
7	No Setting
8	No Setting
9	No Setting

---

Index	Exchange time limit
10	No Setting

---

### Feature Cross Reference

None



# Program 90 : Maintenance Program


## 90-52 : System Alarm Save

Level:

**IN**

---

### Description

 This program is available only via telephone programming and not through PC Programming.

Use **Program 90-52 : System Alarm Save** for the system alarm output operation.

### Input Data

Item No.	Item	Input Data	Default
01	Save All Alarm Reports	[PrnAll?(1:Yes)] : Dial 1 + press <b>Hold</b> (Press <b>Hold</b> only to cancel.)	-
02	Save New Alarm Reports	[PrnNew?(1:Yes)] : Dial 1 + press <b>Hold</b> (Press <b>Hold</b> only to cancel.)	-

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-53 : System Alarm Clear

Level:

**IN**

---

### Description



*This program is available only via telephone programming and not through PC Programming.*

Use **Program 90-53 : System Alarm Clear** to clear the system alarm.

### Input Data

Item No.	Item	Input Data	Default
01	Clear All Alarm Reports	[All Clear?(1:Yes)] : Dial 1 + press <b>Hold</b> (Press <b>Hold</b> only to cancel.)	-

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-54 : PC/Web Programming Setting

Level:

**IN**

---

### Description

Use **Program 90-54 : PC/Web Programming Setting** sets parameters for PC and Web Programming.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	Web Pro TCP port number	0 ~ 65535	The port number of TCP of the Web programming is set. The port number of new TCP is not reflected from the Web Pro to the logout of all users of the Web Pro who is logging in the system after data is changed in the setting.	80	
02	PC Pro TCP port Number	0 ~ 65535	The port number of TCP of the PC programming is set. The port number of new TCP is not reflected from the PCPro to the logout of all users of the PCPro who is logging in the system after data is changed in the setting.	8000	
03	Web Programming TCP Port(HTTPS)	0 ~ 65535	-	443	
04	Certificate	0 = Use default 1 = Use uploaded certificate	Select the server certificate for HTTPS on WebProgramming and UC Web Application. When it is set "0: Use default", system uses default self-signed certificate. When it is set "1: Use uploaded certificate", system uses an uploaded certificate set on PRG10-72. System reboot is needed to apply this setting.	0	10-72

### Conditions

None

---

### Feature Cross Reference

- PC Programming

# Program 90 : Maintenance Program

## 90-55 : Free License Select

Level:

**IN**

---

### Description

Use Program 90-55 : Free License Select to validate the Free License.

### Input Data

Item No.	Item	Input Data	Default
01	Start Free License	0 = Stop 1 = Start	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-56 : NTP Setup

Level:

**IN**

---

### Description

Use Program 90-56 : NTP Setup to set the NTP.

### Input Data

Item No.	Item	Input Data	Default
01	NTP Synchronize	0 = No 1 = Yes	0
02	Server Address	Up to 39 Characters	No Setting

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-60 : T1/ISDN Layer Status Information

Level:

**IN**

---

### Description

Use **Program 90-60 : T1/ISDN Layer Status Information** to display layer status information for T1/PRI/E1/BRI/CCH boards.

### Input Data

Slot No.	0 ~ 12
----------	--------

Item No.	Item	Input Data	Default
01	Link Status	- = No Link 0 = Link n/a = No board seen in slot	None

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-62 : Security ID Information

Level:

**IN**

---

### Description



*This program is available only via telephone programming and not through PC Programming.*

Use **Program 90-62 : Security ID Information** to view the information for Security ID.

### Input Data

Item No.	Item	Input Data	Default
01	Security ID	0 ~ 9, A ~ F (Maximum 32 characters)	-

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-63 : IP MLT Control

Level:

**IN**

---

### Description

Use Program 90-63 : IP MLT Control to adjust settings of the IP Multiline Terminal.

### Input Data

Item No.	Item	Input Data	Default
01	Priority Timer	0 ~ 255	80

### Conditions

None

---

### Feature Cross Reference

None



# Program 90 : Maintenance Program

## 90-64 : SNMP Setup

Level:

**IN**

---

### Description

Use Program 90-64 : **SNMP Setup** to configure the SNMP function.

### Input Data

Item No.	Item	Input Data	Default
01	SNMP	0 = ON 1 = OFF	0
02	Community Name	Up to 12 characters	public
03	Target hosts 1 (IP Address)	** . ** . ** . ** (** = figure)	0.0.0.0
04	Target hosts 2 (IP Address)	** . ** . ** . ** (** = figure)	0.0.0.0
05	Target hosts 3 (IP Address)	** . ** . ** . ** (** = figure)	0.0.0.0
06	Target hosts 4 (IP Address)	** . ** . ** . ** (** = figure)	0.0.0.0
07	Target hosts 5 (IP Address)	** . ** . ** . ** (** = figure)	0.0.0.0

### Conditions

The Ether Port on the VoIPDB does not support the TRAP message detection on the LAN link.

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-65 : 1st Party CTI Authentication Password Setup

Level:

**SA**

---

### Description

Use **Program 90-65 : 1st Party CTI Authentication Password Setup** to set the authentication password.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Password	Up to 16 characters	Sets the authentication password when the 1st Party CTI application is connected to the system via a NAT router. If a password is not set, the system does not certify it.	nec-i

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-67 : Backup Data Auto-save Interval Time Set

Level:

**IN**

---

### Description

Use **Program 90-67 : Backup Data Auto-save Interval Time Set** to set time interval D-RAM data that is saved in F-ROM memory.

D-RAM memory : Configuration information such as call transfer and Do Not Disturb.

### Input Data

Item No.	Item	Input Data	Default
01	Interval time	0 ~ 255 0 = Do not Auto-save 1 = 30 min 2 = 60 min 3 = 90 min : 255 = 127 hr 30 min	48 (24 hr)

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-68 : Side Tone Auto Setup

Level:

**IN**

---

### Description



*This program is available only via telephone programming and not through PC Programming.*

Use Program **90-68 : Side Tone Auto Setup** to setup the volume level of Side Tone for each Analog Trunk Port.

This program will change the setting of "PRG 81-07 CODEC Filter Setup for analog Trunk Port" If the Analog Port is in used or if it is other than a Analog Trunk Port then it will give out the error message.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Adjustment Start</b>	Trunk Port Number 1 ~ 128	This will start the Adjustment of Side Tone for each Analog Trunk Port. If it is successful it will change the PRG 81-07. If it is successful it will ask to change it for all Analog Trunk Port.. If you select to change the Setting All Analog Trunk Port it will change all the Port in 81-07.	No Setting	81-07-01 81-17-01 21-01-05 21-01-06 14-01-07 21-06-06 21-05-07
02	<b>1 digit data</b>	Dial (1 digit)	This setting will ask to use the digit after Line is retrieved.	0	-

### Conditions

- All phones and trunks must be idle in order to perform the Side Tone Auto Setup test. If any phone or trunk is in use, "Busy" will be displayed when trying to run 90-68-01.
- All phones will become unresponsive while the Side Tone Auto Setup tests are running.

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-77 : LAN Link Speed Information

Level:

**IN**

---

### Description

This command is used for LAN Link Speed Information.

### Input Data

Item No.	Item	Input Data	Description	Default
01	LAN Link Speed of CPU	0 = No Link 1 = 1Gbps - Full Duplex 2 = 1Gbps - Half Duplex 3 = 100Mbps - Full Duplex 4 = 100Mbps - Half Duplex 5 = 10Mbps - Full Duplex 6 = 10Mbps - Half Duplex	This command is used for LAN Link Speed Information of CPU. This PRG is changed only when a Link state has change.	0
02	LAN Link Speed of Voip	0 = No Link 1 = 1Gbps - Full Duplex 2 = 1Gbps - Half Duplex 3 = 100Mbps - Full Duplex 4 = 100Mbps - Half Duplex 5 = 10Mbps - Full Duplex 6 = 10Mbps - Half Duplex	This command is used for LAN Link Speed Information of Voip. This PRG is changed only when a Link state has change.	0

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program


## 90-81 : SIP Access Reject Setting

Level:

**IN**

---

### Description

 *Version 3.00 or higher required*

Use Program **90-81 : SIP Access Reject Setting** to assign a SIP Access Reject function from an invalid SIP extension.

### Input Data

Item No.	Item	Input Data	Description	Default	Related Program
01	Reject Function	0 = Disable 1 = Enable		0	
02	Maximum Authentication Error Times	1~10	If the Rejection Function is set to 1 (Enable), this specifies a maximum authentication error time. If an error is counted more than the set times, the SIP extension's IP address will record to the Reject Table on PGR 90-82.	3	90-82

### Conditions

None

---

### Feature Cross Reference

None

# Program 90 : Maintenance Program

## 90-82 : SIP Access Reject Table

Level:

**IN**

### Description



*Version 3.00 or higher required*

*The items highlighted in gray are read only and cannot be changed.*

Use Program **90-82 : SIP Access Reject Table** to configure an invalid SIP extension IP address on the table. If the IP address on this table is accessed, the SL2100 will not respond to the SIP IP address.

### Input Data

Table Number	1 ~ 100
--------------	---------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>IP Address</b>	0.0.0.0~126.255.255.254 128.0.0.1~191.255.255.254 192.0.0.1~223.255.255.254		0.0.0.0	
02	<b>Day/Time Verification</b>	Year: 0~99 Month: 0~12 Day: 00~31 Hour: 00~23 Minute: 00~59 Second: 00~59 Appearance Format: MM/DD/YY hh:mm:ss	When a request from a SIP IP address in this table is received, the date and time is automatically saved. This PRG displays the saved data and time for each table number. (This is a read only program)	No Setting	90-82-01

### Conditions

None

### Feature Cross Reference

None

# Program 92 : Copy Program

## 92-01 : Copy Program

Level:

**IN**

### Description



*This program is available only via telephone programming and not through PC Programming.*

Use **Program 92-01 : Copy Program** to copy the data for one program to another multiline terminal, port, group, or other number. Refer to the following charts to see which programs can be copied.

### Input Data

Program Number	XX ~ XX
----------------	---------

Item No.	Item	Input Data	Description
01	Source Number	<ul style="list-style-type: none"> <li>For Trunk Base : Trunk Port Number 1 ~ 128</li> <li>For Trunk Group Base : Trunk Group Number 1 ~ 50</li> </ul>	Enter the extension, trunk, group or other number from which the data is to be copied.
	Destination Number (From)	<ul style="list-style-type: none"> <li>For Extension Base : Extension Number Maximum eight digits</li> <li>For Department Group Base : Department Group Number 1 ~ 50</li> </ul>	Enter the first extension, trunk, group or other number to which the information is to be copied.
	Destination Number (To)	<ul style="list-style-type: none"> <li>For DSS : DSS Console Number 1 ~ 12</li> <li>For Door Phone: Door phone number : 1 ~ 6</li> </ul>	Enter the last extension, trunk, group or other number to which the information is to be copied. If the information is being copied only to one extension, trunk, group or other number, enter the information entered in the Destination Number (From) entry.

The Copy Program is applicable only for the following programs :


### Trunk Port Base

Program No.	Program Name
14-01	<b>Trunk Basic Data Setup</b> <i>Copy all data except Trunk Name (Item 01).</i>
14-02	<b>Analog Trunk Data Setup</b>
14-04	<b>Behind PBX Setup</b>
14-08	<b>Music on Hold Source for Trunks</b>
14-09	<b>Conversation Recording Destination for Trunk</b>
20-30	<b>Timer Class for Trunk</b>
21-03	<b>Trunk Group Routing for Trunks</b>
21-12	<b>ISDN Calling Party Number Setup for Trunk</b>
21-21	<b>Toll Restriction for Trunks</b>
21-22	<b>CO Message Waiting Indication</b>




Program No.	Program Name
22-02	Incoming Service Type Setup
22-03	Trunk Ring Tone Setup
22-05	IRG Assignment for Normal Ring Trunk
22-08	Second IRG Setup for Unanswered DIL / IRG
31-05	Incoming Ring Tone Audible on External Speaker
81-07	Codec Filter Setup for Analog Trunk Port

### Extension Base

Program No.	Program Name
15-01	<b>Extension Basic Data Setup (include Virtual Extension)</b>  <i>Copy all data except extension name (item 01).</i>
15-02	Multiline Telephone Basic Data Setup
15-03	Single Line Telephone Basic Data Setup
15-06	Trunk Access Map for Extension
15-07	Programmable Function Key
15-08	Incoming Virtual Extension Ring Tone Setup
15-09	Virtual Extension Ring Assignment
15-10	Incoming Virtual Extension Ring Tone Order Setup
15-11	Virtual Extension Delayed Ring Assignment
15-12	Conversation Recording Destination for Extension
15-17	CO Message Waiting Indication
15-18	Virtual Extension Key Enhancement Options
15-20	LCD Line Key Name Assignment
15-25	DESI-less Page Setup
20-06	Class of Service for Extension
20-29	Timer Class for Extension
21-02	Trunk Group Routing for Extensions
21-04	Toll Restriction Class for Extensions
21-11	Hotline Assignment
23-02	Call Pickup Groups
23-03	Ringling Line Preference
23-04	Ringling Line Preference for Virtual Extensions
24-03	Park Group Assignment
31-02	Internal Paging Group Assignment
82-14	Handset/Headset Gain Setup for Multi-Line Telephone

### Department Base

Program No.	Program Name
16-01	<b>Department (Extension) Group Basic Data Setup</b>  <i>Copy all data except Group Name (Item 01).</i>

**DSS Console Base**

<b>Program No.</b>	<b>Program Name</b>
30-01	<b>DSS Console Operation Mode</b>
30-03	<b>DSS Key Assignment</b>

**Door Box Base**

<b>Program No.</b>	<b>Program Name</b>
32-02	<b>Door Box Ring Assignment</b>

**Conditions**

- Using this program to copy a multiline terminal Programmable Function Keys, copies all keys whether or not they exist on the terminal to which the programming is being copied. This may cause confusion when trying to define a key which is already defined but which does not exist on the terminal (displays as DUPLICATE DATA). It is recommend to either clear these non-existent keys or copy only from an extension which has the same or fewer numbers of keys than the extension to which the programming is being copied.

---

**Feature Cross Reference**

None

# Program 92 : Copy Program

## 92-02 : Delete All Extension Numbers

Level:

**IN**

---

### Description



*This program is available only via telephone programming and not through PC Programming.*

Use **Program 92-02 : Delete All Extension Numbers** to delete all extension numbers <Program 11-02>, <Program 11-04>. However, the extension number of the first port is not deleted.

### Input Data

Item No.	Item	Input Data	Description	Default
01	Extension Number	Delete Yes : 1	[Dial 1] + <b>Hold</b> key (Only press <b>Hold</b> key is canceled.)	-

### Conditions

None

---

### Feature Cross Reference

None

# Program 92 : Copy Program

## 92-03 : Copy Program by Port Number

**Level:**

**IN**

---

### Description



*This program is available only via telephone programming and not through PC Programming.*

Use **Program 92-03 : Copy Program by Port Number** to copy extension and the data of each outside line.

### Input Data

Program Number	XX-XX
----------------	-------

Item No.	Item	Input Data	Description
01	<b>Source Number</b>	<ul style="list-style-type: none"> <li>• For Trunk Base : Trunk Port Number 1 ~ 128</li> <li>• For Trunk Group Base : Trunk Group Number 1 ~ 50</li> <li>• For Extension Number : 1 ~ 128</li> <li>• For Department Group Base : Department Group Number 1 ~ 50</li> <li>• For DSS : (DSS Console Number 1 ~ 12</li> </ul>	Enter the port number from where the data is to be copied.
02	<b>Destination Number (From)</b>		Enter the first port number to where the information is to be copied
03	<b>Destination Number (To)</b>		Enter the last port number to where the information is to be copied. If the information is to be copied only to one port, enter the information entered in the Destination Number (From) entry.



*Refer to Program 92-01 Copy Program for program that can be copied.*

### Conditions

None

---

### Feature Cross Reference

None

# Program 92 : Copy Program

## 92-04 : Extension Data Swap

Level:

**IN**

### Description



*This program is available only via telephone programming and not through PC Programming.*

Use **Program 92-04 : Extension Data Swap** to swap data between two extensions.

### Input Data

Item No.	Item	Input Data	Default
01	1st Extension Number	Up to eight digits.	-
02	2nd Extension Number		-

The following table lists Programs that use the Extension Data Swap function.

Program Number	Program Name
11-02	Extension Numbering
12-05	Night Mode Group Assignment for Extensions
13-03	Speed Dial Group Assignment for Extensions
13-06	Station Speed Dial Number and Name
15-01	Extension Basic Data Setup
15-02	Multi-Line Telephone Basic Data Setup
15-03	Single Line Telephone Basic Data Setup
15-06	Trunk Access Map for Extension
15-07	Programmable Function Key
15-08	Incoming Virtual Extension Ring Tone Setup
15-09	Virtual Extension Ring Assignment
15-10	Incoming Virtual Extension Ring Tone Order Setup
15-11	Virtual Extension Delayed Ring Assignment
15-12	Conversation Recording Destination for Extension
15-14	Programming One-Touch Keys
15-17	CO-Message Waiting Indication
15-18	Virtual Extension Key Enhance Options
15-20	LCD Line Key Name Assignment
15-25	DESI-less Page Setup
16-02	Department Group Assignment for Extensions
20-06	Class of Service for Extension
20-29	Timer Class for Extensions
21-02	Trunk Group Routing for Extension

<b>Program Number</b>	<b>Program Name</b>
21-04	Toll Restriction Class for Extension
21-07	Toll Restriction Override Password Setup
21-10	Dial Block Restriction Class per Extensions
21-11	Hotline Assignment
21-13	ISDN Calling Party Number Setup for Extension
21-15	Individual Trunk Group Routing for Extensions
21-18	IP Trunk (H.323) Calling Party Number Setup for Extension
21-19	IP Trunk (SIP) Calling Party Number Setup for Extension
21-20	SIP Trunk Call Discernment Setup for Extension
22-04	Incoming Ring Group Setup
22-06	Normal Incoming Ring Mode
23-02	Call Pickup Group
23-03	Ring Line Preference
23-04	Ring Line Preference of Virtual Extension
24-03	Park Hold Group Assignment
24-09	Call Forward Split Settings
26-04	ARS Class of Service
26-07	LCR Cost Center Code Table
31-02	Internal Paging Group Assignment
41-02	ACD Agent Extension Assignment for ACD Group
41-17	ACD Login Mode Setup
42-02	Hotel Extension Basic Data Setup
82-14	Handset/Headset Gain Setup for Multi-Line Telephone
90-28	User Programming Password Setup
92-05	Data Swap Password of each Extension Setup

### Conditions

None

---

### Feature Cross Reference

None

# Program 92 : Copy Program

## 92-05 : Extension Data Swap Password

**Level:**

**IN**

---

### Description

Use **Program 92-05 : Extension Data Swap Password** to define the 4-digit password for each extension to allow Extension Data Swap.

### Input Data

Extension Number	Up to eight digits.
------------------	---------------------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Password</b>	Fixed four digits (No Setting at default)	Password required on a per station basis when utilizing the station swap feature.	No Setting	11-15-12

### Conditions

None

---

### Feature Cross Reference

None

# Program 92 : Copy Program

## 92-06 : Fill Command

Level:

**IN**

### Description



*This program is available only via telephone programming and not through PC Programming.*

Use **Program 92-06 : Fill Command** to allocate the data of each extension number of each extension group or each table.

### Input Data

Program Number	XX - XX
----------------	---------

Item No.	Item	Input Data
01	Source Number	Each extension port = 1 ~ 128 (Program 11-02) Each virtual extension port = 1 ~ 50 (Program 11-04) Each extension group = 1 ~ 50 (Program 11-07) Each ACD Group = 1 ~ 8
	Destination Number (From)	
	Destination Number (To)	

The following table lists Programs that use the Fill Command function.

Program Number	Program Name
11-02	Extension Numbering
11-04	Virtual Extension Numbering
11-07	Extension (Department) Group Pilot Number
11-17	ACD Group Pilot Number

### Conditions

None

### Feature Cross Reference

None




# Program 92 : Copy Program

## 92-07 : Delete Command

Level:

**IN**

### Description

 This program is available only via telephone programming and not through PC Programming.

Use **Program 92-07 : Delete Command** to delete the data of each extension number of each extension group or each table.

### Input Data

Program Number		XX - XX
Item No.	Item	Input Data
01	Destination Number (From)	Each extension port = 1 ~ 128 Each virtual extension port = 1 ~ 50 (Program 11-04) Each extension group = 1~50 (Program 11-07) Each ACD Group = 1 ~ 8
	Destination Number (To)	

The following table lists Programs that use the Delete Command function.

Program Number	Program Name
11-02	Extension Numbering
11-04	Virtual Extension Numbering
11-06	ACI Extension Numbering
11-07	Extension (Department) Group Pilot Number
11-08	ACI Group Pilot Number
11-17	ACD Group Pilot Number

### Conditions

None

### Feature Cross Reference

None

# Program 93 : System Information

## 93-01 : Day/Night Mode Information

Level:

**SA**


### Description

Use **Program 93-01 : Day/Night Mode Information** to display day/night mode for night mode service group.

### Input Data

Night Mode Service Group No.	1 ~ 4
------------------------------	-------

Item No.	Item	Input Data	Description	Default	Related Program
01	Day/Night mode	1 = Mode 1 2 = Mode 2 3 = Mode 3 4 = Mode 4 5 = Mode 5 6 = Mode 6 7 = Mode 7 8 = Mode 8	Indicates current day/night mode per night mode service group.	*1	12-XX

 To indicate the present mode, there are no concepts as defaults.

### Conditions

None

### Feature Cross Reference

- Maintenance

# Program 93 : System Information

## 93-02 : Trunk Information

Level:

**SA**

---

### Description

Use **Program 93-02 : Trunk Information** to display the setting of each trunk.

### Input Data

Trunk Port Number	1 ~ 128
-------------------	---------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Set Automatic Transfer to Transfer</b>	0 = Disable 1 = Enable	Indicates Automatic Trunk Transfer setting status.	0	11-10-06
02	<b>Trunk Port Disable by Service code</b>	0 = Disable 1 = Enable	Indicates Trunk Port Disable (Busy out) status.	0	11-10-27

### Conditions

None

---

### Feature Cross Reference

- Maintenance

# Program 93 : System Information

## 93-03 : Extension Information

Level:

**SA**



### Description

Use **Program 93-03 : Extension Information** to display the settings of each extension.

### Input Data

Extension	Up to 8 digits
-----------	----------------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Call Forward-All/No Answer/BothRing</b>	0 = Call Forwarding off 1 = Call Forwarding with Both Ringing 2 = Call Forwarding when No Answer 3 = Call Forwarding All Call	Indicates Call Forward-All/No Answer/BothRing setting status per extension.	0	11-11-01 11-11-03 11-11-04 11-11-05 20-01-15 24-09-01
02	<b>Call Forwarding Destination for Both Ring, All Call, No Answer</b>	0 ~ 9, *, #, P, R, @ (Up to 24 digits)	Indicates Call Forward-All/No Answer/BothRing destination number set per extension.	No Setting	11-11-01 11-11-03 11-11-04 11-11-05 24-09-02
03	<b>Call Forward-Busy</b>	0 = Call Forward-Off 1 = Call Forward-Busy or No answer 2 = Call Forward-Busy	Indicates Call Forward-Busy setting status per extension.	0	11-11-02 11-11-04 20-01-15 24-09-01
04	<b>Call Forwarding Busy destination</b>	0 ~ 9, *, #, P, R, @ (Up to 24 digits)	Indicates Call Forward-Busy destination number set per extension.	No Setting	11-11-02 11-11-04 24-09-04
05	<b>Call Forwarding - Follow-Me</b>	0 = Disable 1 = Enable	Indicates Call Forward-Follow-Me setting status per extension.	0	11-11-07
06	<b>Call Forwarding Follow-Me destination</b>	Extension Number (Up to 8 digits)	Indicates Call forwarding follow-me extension number set per extension.	No Setting	11-11-07
07	<b>Do Not Disturb</b>	0 = No Setting 1 = DND External 2 = DND intercom 3 = DND Transfer 4 = DND All	Indicates DND setting status per extension.	0	11-11-08
08	<b>Message Waiting (Set)</b>	Extension Number (Up to 8 digits)	Indicates extension number which you set Message Waiting.	No Setting	11-11-09
09	<b>Message Waiting (Rec)</b>	Extension Number (Up to 8 digits)	Indicates extension number when left Message Waiting.	No Setting	11-11-09
10	<b>Alarm Clock 1</b>	0 = Disable 1 = Enable	Indicates Alarm Clock 1 setting status.	0	11-11-12

Item No.	Item	Input Data	Description	Default	Related Program
11	<b>Preset time at Alarm 1</b>	Time set in Alarm Clock 1.  When PRG93-03-11 is "0", 「00 : 00」 is indicated.	Indicates the time set in Alarm Clock 1.	0	11-11-12
12	<b>Alarm Clock 2</b>	0 = Disable 1 = Enable	Indicates Alarm Clock 2 setting status.	0	11-11-12
13	<b>Preset Time at Alarm 2</b>	Time set in Alarm Clock 2.  When PRG93-03-11 is "0", 「00 : 00」 is indicated.	Indicates the time set in Alarm Clock 2.	0	11-11-12
14	<b>Forced Intercom Ring (ICM Call Type)</b>	0 = Disable(Voice1) 1 = Enable(Signal)	Indicates ICM Call Type per extension.	0	11-11-15 11-11-16
15	<b>BGM</b>	0 = Disable 1 = Enable	Indicates BGM setting status per extension.	0	11-11-18
16	<b>Key Touch Tone</b>	0 = Disable 1 = Enable	Indicates Key Touch Tone setting status per extension.	0	11-11-19
17	<b>Dial Block</b>	0 = Disable 1 = Enable	Indicates Dial Block setting status per extension.	0	11-11-33
18	<b>Repeat Dial</b>	0 = Disable 1 = Enable	Indicates Repeat Dial setting status per extension.	0	
19	<b>Headset Mode Switching</b>	0 = Disable 1 = Enable	Indicates Headset Mode Switching setting status per extension.	0	11-11-65
20	<b>Headset Ringing Mode Switching</b>	0 = Disable 1 = Enable	Indicates Headset Ringing Mode Switching setting status per extension.	0	11-11-43

## Conditions

None

---

## Feature Cross Reference

- Maintenance

# Program 93 : System Information

## 93-04 : Redial List

Level:

**SA**

---

### Description

Use **Program 93-04 : Redial List** to display the redial list of each extension.

### Input Data

Extension Number	Up to 8 digits
------------------	----------------

Redial Last Number	1 ~ 10
--------------------	--------

Item No.	Item	Input Data	Description	Default	Related Program
01	<b>Redial Data</b>	Dial Data 1 ~ 9, 0, *, #, P, R, @ (Up to 24 digits)	Indicates the number stored in Outgoing call history.	No Setting	15-02-13 15-02-39
02	<b>Name</b>	Up to 12 characters	Indicates the name stored in Outgoing call history.	No Setting	15-01-01 13-04-02

### Conditions

None

---

### Feature Cross Reference

- Maintenance

# Program 93 : System Information

## 93-05 : Department Group Information

Level:

**SA**

### Description

Use **Program 93-05 : Department Group Information** to display the settings of each department group.

### Input Data

Department Group Number	1 ~ 50
-------------------------	--------

Item No.	Item	Input Data	Description	Default	Related Program
01	Set Automatic transfer at Department Group call	0 = Disable 1 = Enable	Indicates Automatic transfer setting status per Department Group.	0	11-11-25
02	Set Delayed transfer at Department Group call	0 = Disable 1 = Enable	Indicates Delayed transfer setting status per Department Group.	0	11-11-28
03	Set DND at Department Group call	0 = Disable 1 = Enable	Indicates DND setting status per Department Group.	0	11-11-30

### Conditions

None

### Feature Cross Reference

- Maintenance

# Program 93 : System Information

## 93-06 : IP Address list for 1st Party CTI connection

Level:

**SA**

---

### Description

1st Party Connection list can be checked on this command.

### Input Data

Extension Number	Up to 8digits
------------------	---------------

Item No.	Item	Input Data	Default
01	IP Address on the 1st Party CTI Client	IP Address : XXX.XXX.XXX.XXX	0.0.0.0
02	Availabilbity of 1st Party CTI connection	0 = Not Available 1 = Available	0

### Conditions

None

---

### Feature Cross Reference

None



*MEMO*

***SL2100***

**Programming Manual**

NEC Platforms, Ltd.

ISSUE 4.1